

SECTION 1 GENERAL

Note) The layout, etc., will be slightly different from the operating instructions packed with the units.

1-1. FIRST OF ALL

- 1 Connect the aerial to the  socket on the rear of the set.
This socket receives the standard 75-ohm aerial plug.
- 2 Plug in the set.
- 3 Preset the available channels.

Use the buttons inside the panel. To open the panel, push the  mark.

To tune in all channels automatically :

- 1 Press  (Preset)
- 2 Press PROGR to select the program position from which tuning is to start.
- 3 Press  (Auto programing).

Up to 29 receivable channels can be preset in numerical sequence beginning from program number 1.
When tuning has been completed, the set returns to program position 1.

To tune in a channel in any desired program position.
(e. g. to preset a channel in its corresponding program position : channel 1 in position 1) :

- 1 Press  (Preset).
- 2 Select the desired program position by using PROGR + or -.
- 3 Press C (Clear).
- 4 Press  (Search) repeatedly until the desired channel appears.
- 5 Press  (Preset) again.

To skip the unused program positions skipped (when using the PROGR + or - buttons to scan available channels.)

- 1 Press  (Preset).
- 2 Select an unused position by using PROGR + or -.
- 3 Press C (Clear).
- 4 Repeat steps 2 and 3 for all unused position.
- 5 Press  (Preset) again.


Move the VTR away from the TV, if the picture or sound is distorted. Only one of the VTRs should be turned on at one time. It is also possible to connect a VTR using the  socket.

Note

If the set is to be used in an area with poor reception preset the program numbers between 1 and 19 for TV program use.


When watching a video with the VTR connected to the  connector, set the channel for the video to program number 0 or any empty channel between 20 and 29.

On-screen display while tuning

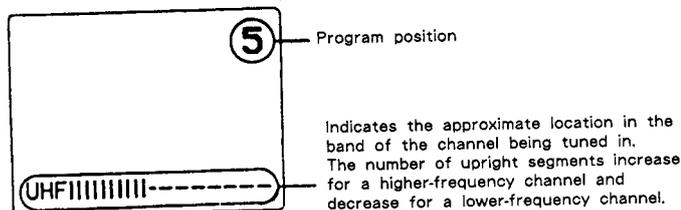

1-2. CONNECTING OTHER EQUIPMENT

connectors on rear set

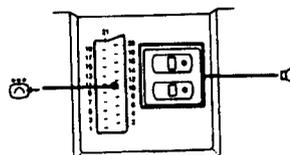

L/G/S	Left external speaker terminal (2-pin DIN)	Connect to external speakers. The TV speakers will be disconnected. Speakers 8-16 Ω.
	Right external speaker terminal (2-pin DIN)	
R/D/D	21-pin connector (CENELEC standard)	Connect to a VTR micro computer, etc. using an optional connection cord. The picture of the TV channel being received is always output.

VTR operation using the supplied Commander. Remote operation of the VTR (8mm only) is limited to the features and functions of the VTR. For further details, refer to the VTR manual.