


1-3. FUNCTION OF CONTROLS

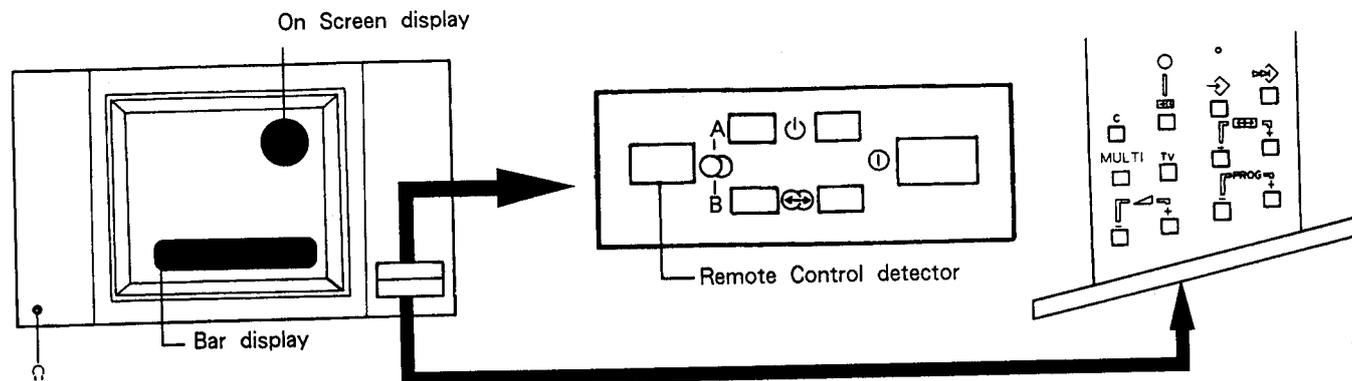

On the set

On-screen display and button

Indicates program numbers and input modes ; 1, 2.
Press this button to make the display appear on the screen, and again to make it disappear. See also "On the Remote Commander."

Bar display

Indicates the level of the user controls when they are adjusted.

Ⓛ Power switch

To cut off the main electricity supply, press this switch. Ensure correct operation by pressing this switch fully.

Ⓛ standby indicator

Ⓛ space sound indicator

Lights up when Ⓛ on the Remote Commander is pressed.

Ⓛ / A, B stereo/bilingual indicator

Both indicators light up when a stereo program is received. The A or B indicator lights up when a bilingual program is received.

Remote control detector

Point the Remote Commander toward this detector.

Inside the panel

Ⓛ headphones jack (stereo minijack)

Ⓛ PRESET button

Press to preset the channels. Press again to memorize the preset channel.

Ⓛ Auto Programing button

Press to preset all the receivable channels automatically.

C Clear button

Press to restore the memory of all channels to the lowest receivable frequency.

Ⓛ AFT button and indicator

 
Normally press Ⓛ so that the indicator lights up. The AFT circuit automatically fine tunes the channels for the best possible picture.

Ⓛ SEARCH buttons

Press to fine tune a weak channel manually, if required. When Ⓛ is pressed, the Ⓛ indicator (AFT) goes off and the AFT circuit does not function on the selected channel. To restore the AFT circuit on the channel, press Ⓛ so that the indicator lights up.

TV button

Press this button to change TV system.



Ⓛ volume buttons

PROGR buttons

MULTI button

Press when you see the video with NTSC 3.58 system input from 1 or 2 (rear of the set) and broadcasts are seen in black and white color (usually color system is selected automatically). The indication NTSC 3.58 will appear at the bottom of the screen.