

THE STEPS FOR CHANGE THE OPTION CODE

Note : This procedure must be done when IC304(On digital Board) or Digital Board assy is replaced.

Push Switch POWER ON/ OFF
at remocon or timer keyborad

Select DVD MODE at the set
use remocon or timer keyborad

Push REC+ PLAY
at timer keyboard

Use remocon and push ENTER

Use Direction Key at
remocon (LEFT/ RIGHT)
for select the position of option

Use Direction Key
at remocon (UP/ DOWN)
for change the option

After finish edit code of option
push ENTER at remocon

For finishing and intialized
the option code push
REC+ FF at remocon

DETECT NEW EEPROM (OPTION EDIT SCREEN)

DVDR630VR/14

NAME	HEX
OPT1	22
OPT2	48
OPT3	55
OPT4	95
OPT5	26
OPT6	9E
OPT7	D6
OPT8	D3

DVDR630VR/05

NAME	HEX
OPT1	12
OPT2	47
OPT3	42
OPT4	95
OPT5	26
OPT6	9E
OPT7	F6
OPT8	D1

DVDR630VR/00

NAME	HEX
OPT1	12
OPT2	44
OPT3	45
OPT4	95
OPT5	26
OPT6	9E
OPT7	F6
OPT8	30

DVDR630VR/02

NAME	HEX
OPT1	02
OPT2	46
OPT3	52
OPT4	95
OPT5	26
OPT6	9E
OPT7	FE
OPT8	68

Press "Enter" key
to Save and Exit