


# THOMSON TX807 C/CS

## Adjustments

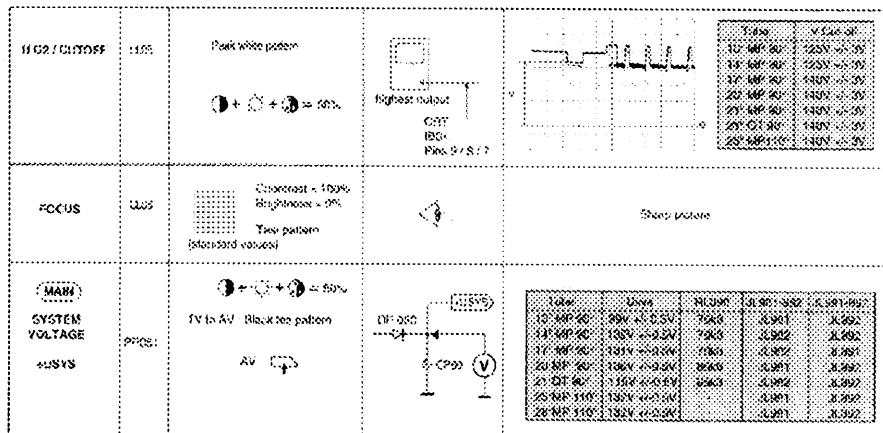


## Service Mode

It is necessary to enter the Service Mode in order to carry out alignment of the TV set. Most adjustments can be made with the RCU, except the Focus and Screen voltages.

### 1. Service Mode Access

- 1.1 With the RCU, switch the TV set into the "Standby" mode.
- 1.2 Switch "Off" the TV set by mains supply switch (wait until LED is dark).
- 1.3 Whilst pressing the "Magenta (text)" button on the RCU switch "On" the TV set using the mains switch.

Continue to press the "Magenta (text)" button until the Service-setup Sub-menu appears.

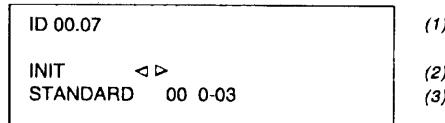

### 2. Service Menu

#### 2.1 Navigation

- Press the  $\Delta$  /  $\nabla$  buttons to select the menu line.
- Press the  $\ll$  /  $\gg$  buttons to make adjustments or selection of a menu item.

#### 2.2 Service Sub-Menus

Set-up lines (INIT, STANDARD, OSDCONTR) -  
Geometry lines (HS, VS, VA, SC, VSH)   
Video lines (CL, BLORS/BLОРР, BLOGS/  
BLOGP, WPPRS/WPRP, WPGS/WPGP, WPBS/  
WPBP, PWS/PWP, BKS, YD) -  
IF lines (TOP) -  
Video Processor (CD0, CD1, SYN0, SYN1,  
DEF, V10, V11, SOUND, CONTO, CONT1,  
FEATO).

#### 2.3 Activation of a line:

The first line (1) is continuously displayed.  
Sequential selection of the others is possible by  
pressing the  $\Delta$  /  $\nabla$  buttons on the RCU. The  
selected line will be highlighted in YELLOW text.

3. Alignment and storing new function value
- 3.1 The current value of the selected function is displayed in a hexadecimal form to the right of the function name. This value is adjusted by means of the RCU  $\ll$  /  $\gg$  buttons.

3.2 The values will be stored in the non-volatile memory when leaving the service menu.

3.3 To leave the service menu press the "Exit" button on the RCU.

#### 4. Temporary exit from Service Mode

- 4.1 To temporarily leave the Service Mode, press the "Exit" button on the RCU. To access the everyday menus, press the "Menu" button on the RCU.
- 4.2 To return to the Service Menu, press the "Magenta" button on the RCU.

#### 5. Leaving the Service Mode

- 5.1 To leave the Service mode either, switch the TV set into "Standby" or switch "Off" the mains supply.

