


10 WIRING DIAGRAM

GB

10.1 WIRING DIAGRAM

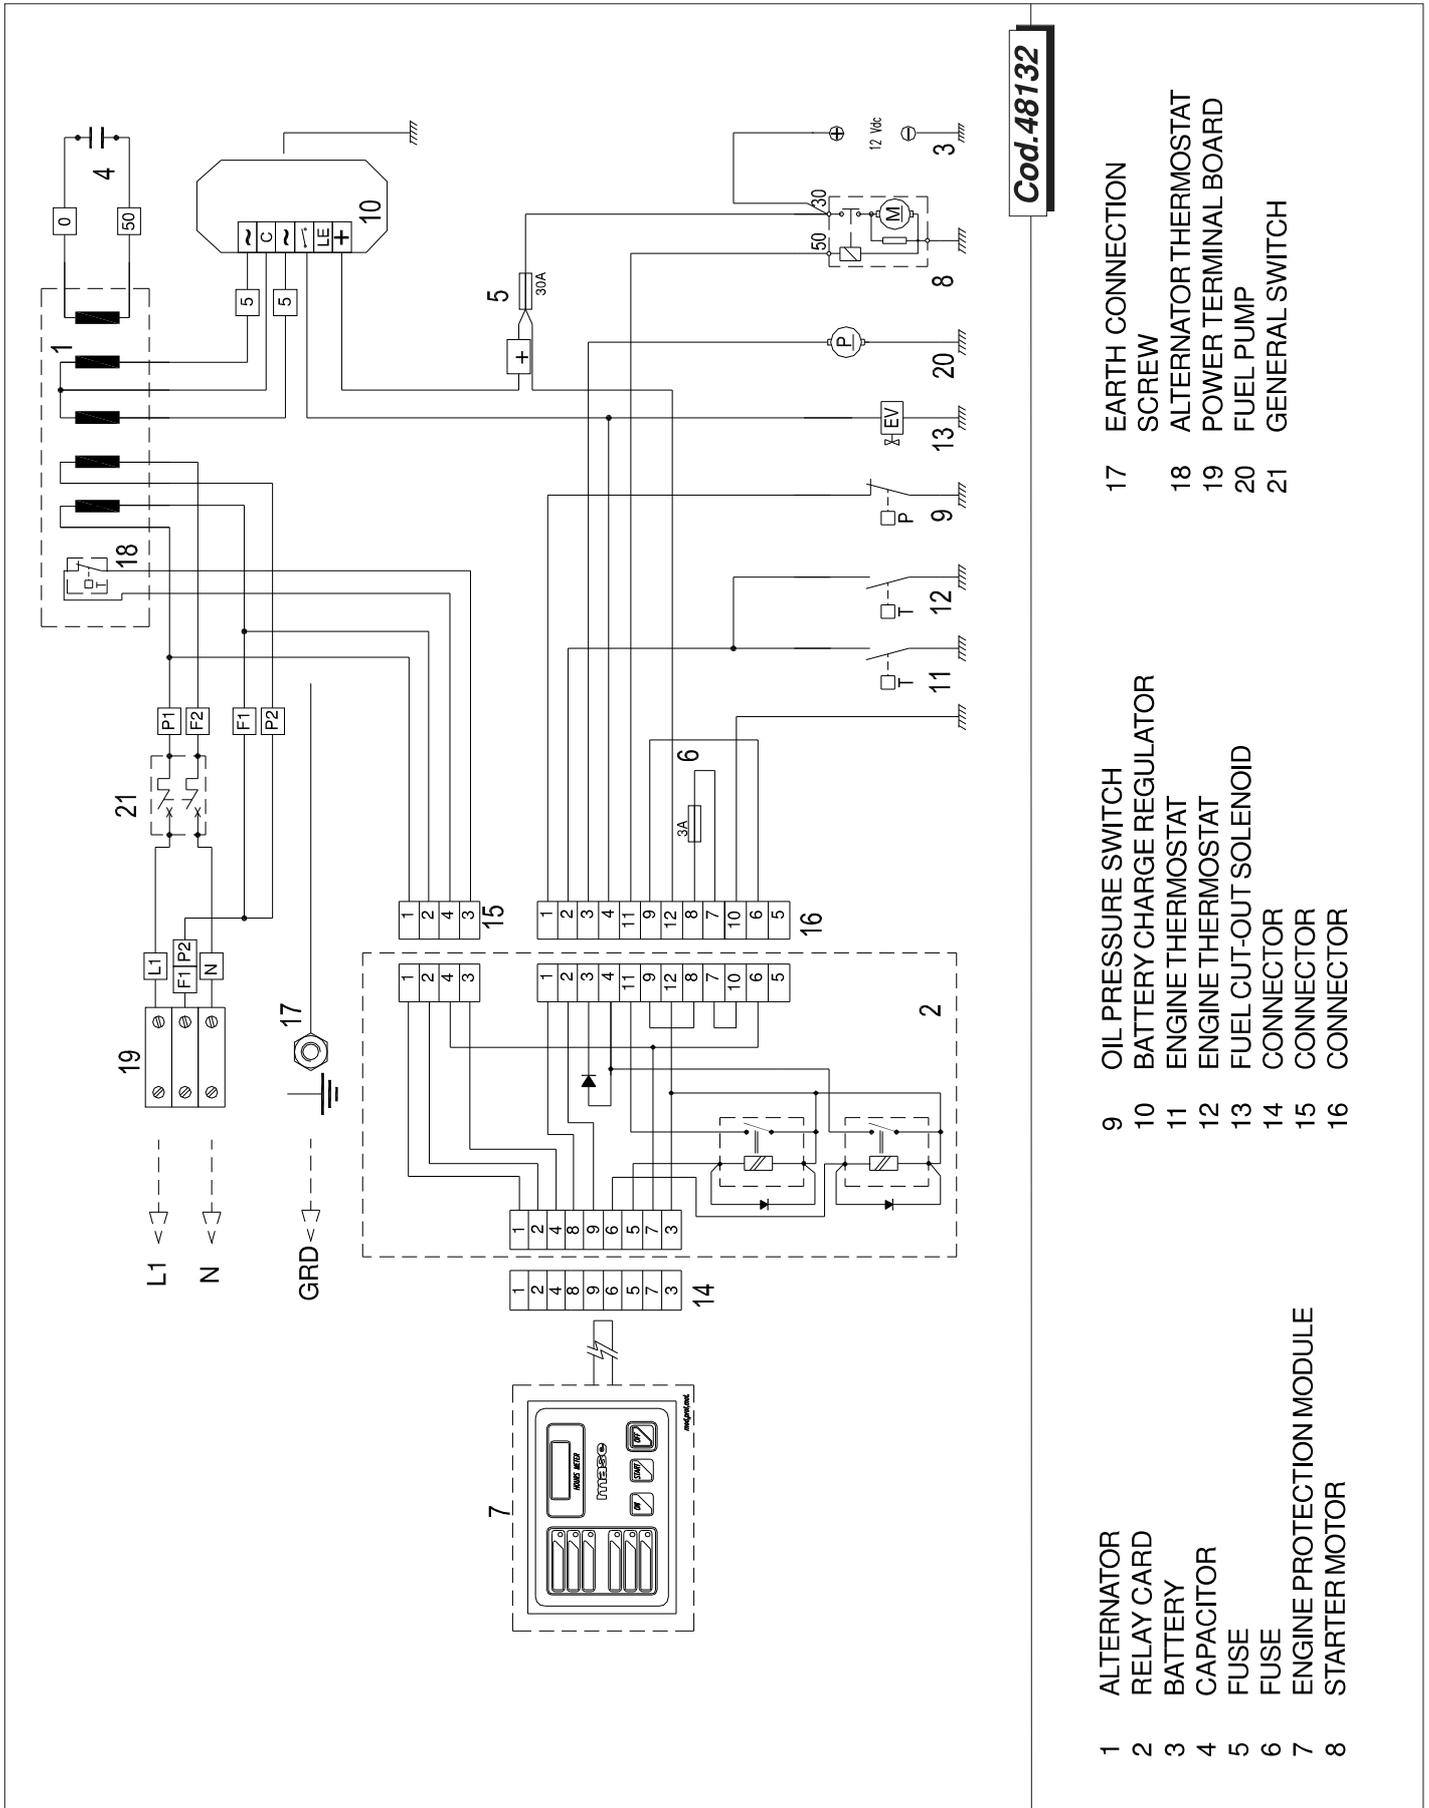

Cod.48132

- | | | | |
|----|--------------------------|----|--------------------------|
| 1 | ALTERNATOR | 9 | OIL PRESSURE SWITCH |
| 2 | RELAY CARD | 10 | BATTERY CHARGE REGULATOR |
| 3 | BATTERY | 11 | ENGINE THERMOSTAT |
| 4 | CAPACITOR | 12 | ENGINE THERMOSTAT |
| 5 | FUSE | 13 | FUEL CUT-OUT SOLENOID |
| 6 | FUSE | 14 | CONNECTOR |
| 7 | ENGINE PROTECTION MODULE | 15 | CONNECTOR |
| 8 | STARTER MOTOR | 16 | CONNECTOR |
| 17 | EARTH CONNECTION SCREW | 17 | EARTH CONNECTION SCREW |
| 18 | ALTERNATOR THERMOSTAT | 18 | ALTERNATOR THERMOSTAT |
| 19 | POWER TERMINAL BOARD | 19 | POWER TERMINAL BOARD |
| 20 | FUEL PUMP | 20 | FUEL PUMP |
| 21 | GENERAL SWITCH | 21 | GENERAL SWITCH |