


LOCATION OF CUSTOMER CONTROLS


TOP AND FRONT PANELS

MODEL: GHV-1242I

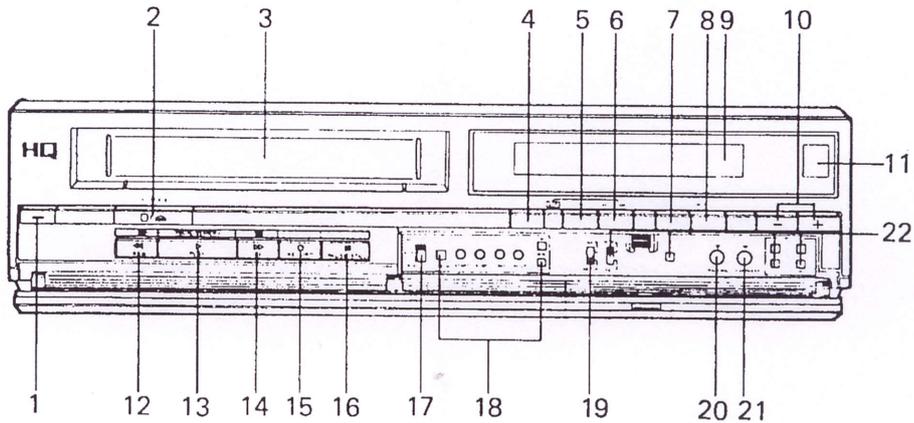

TOP AND FRONT PANELS

MODEL: GHV-1248I

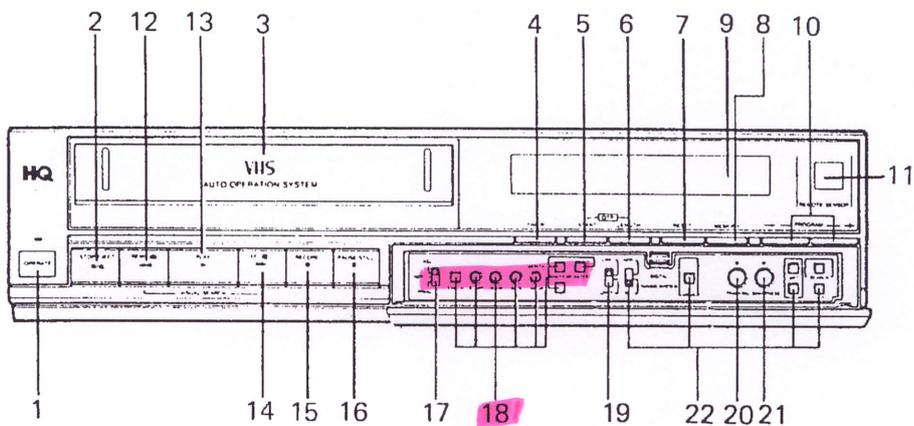

- | | |
|---|--|
| 1. OPERATE BUTTON AND INDICATOR | 13. PLAY BUTTON |
| 2. STOP/EJECT BUTTON | 14. FAST FORWARD/CUE BUTTON |
| 3. CASSETTE COMPARTMENT | 15. RECORD BUTTON |
| 4. TIMER BUTTON | 16. PAUSE/STILL BUTTON |
| 5. QTR START BUTTON | 17. TIMER MODE SELECTOR (ADJ/NOR/PROG) |
| 6. QTR (QUICK TIMER RECORD) REC TIME BUTTON | 18. CLOCK/TIMER BUTTONS |
| 7. TAPE COUNTER RESET BUTTON | 19. TUNER/LINE SELECTOR |
| 8. TAPE COUNTER MEMORY BUTTON | 20. TRACKING CONTROL |
| 9. MULTI FUNCTION DISPLAY | 21. SHARPNESS CONTROL |
| 10. CHANNEL PROGRAMME SELECTORS (UP/DOWN) | 22. CHANNEL PRESET BUTTONS |
| 11. REMOTE SENSOR WINDOW | |
| 12. REWIND/REVIEW BUTTON | |