

ANOMALIE : AIDE AU DIAGNOSTIC

○ ALLUMÉ			● ETEINT			☐ CLIGNOTE			● ETAT INDIFFÉRENT					
●●	●	stop	●●●	●●●	●●●	●●●	●●●	●	●	●	●	●	●	Défaut de configuration
●●	●	stop	●●●	●●●	●●●	●●●	●●●	○	AUTO	●	●	●	●	Défaut régulation RIF 5000
●●	●	stop	●●●	●●●	●●●	●●●	●●●	●	●	●	●	●	●	Défaut sonde départ
●●	●	stop	●●●	●●●	●●●	●●●	●●●	●	●	●	●	●	●	Défaut sonde corps de chauffe
●●	●	stop	●●●	●●●	●●●	●●●	●●●	●	●	●	●	●	●	Sonde sanitaire court circuit
●●	●	stop	●●●	●●●	●●●	●●●	●●●	●	●	●	●	●	●	Défaut sonde sanitaire
●●	●	stop	●●●	●●●	●●●	●●●	●●●	○	●	●	●	●	●	Manque d'eau
●●	●	stop	●●●	●●●	●●●	●●●	●●●	○	●	●	●	●	●	Excès pression d'eau
●●	●	stop	●●●	●●●	●●●	●●●	●●●	☐	●	●	●	●	●	Défaut capteur de pression
●●	●	stop	●●●	●●●	●●●	●●●	●●●	●	●	●	●	●	●	Défaut vanne régulation
●●	●	stop	●●●	●●●	●●●	●●●	●●●	☐	AUTO	●	●	●	●	Pas de réception radio
●○	●	stop	●●●	●●●	●●●	●●●	●●●	●	●	●	●	●	●	Surchauffe
☐●	●	stop	●●●	●●●	●●●	●●●	●●●	●	●	●	●	●	●	Evacuation gaz brûlés
●○	●	stop	●●●	●●●	●●●	●●●	●●●	●	●	●	●	●	●	Sécurité brûleur
●●	●	stop	●●●	●●●	●●●	●●●	●●●	●	●	●	●	●	●	Radio non initialisée
●●	●	stop	●●●	●●●	●●●	●●●	●●●	●	●	●	●	●	●	Mode installation
●●	●	stop	●●●	●●●	●●●	●●●	●●●	●	●	●	●	●	●	ANOMALIE

Codes défaut Frisquet