

## 1-2. TO PRESET CHANNELS

The control buttons to preset channels are located on the Remote Commander. (Up to 60 programme positions are at your disposal.)

- 1 Press the power switch on the set to switch it on.
- 2 Press both the  $\uparrow$  (shift) button and the  $\Rightarrow$  (preset) button simultaneously. You are now in the preset mode.
- 3 Use either button PROGR + (upwards) or PROGR - (downwards) to select the required programme position.
- 4 Press both the  $\uparrow$  button and the  $\square$ + or - button repeatedly until the desired TV station is found.
- 5 Repeat steps 3 and 4 for all other channels.
- 6 Press once more both the  $\uparrow$  button and the  $\Rightarrow$  (preset) button in order to return to the TV mode and to store the channels.

### Skipping of programme positions

Using both the button C and the  $\uparrow$  button you have the possibility to skip unused programme positions (e.g. without a stored station) when pressing the PROGR +/- buttons.

- 1 Press both the  $\uparrow$  button and the  $\Rightarrow$  (preset) button to select the preset mode.
- 2 Select the programme position to be skipped by pressing the + or - PROGR button.
- 3 Press the C button.
- 4 Press both the  $\Rightarrow$  (preset) button and the  $\uparrow$  button to return to the TV mode.

### Manual Fine Tuning

If the reception of a channel is not satisfactory you have the possibility to deactivate the Automatic Fine Tuning which usually tunes in the best possible picture during presetting.

Press both the  $\uparrow$  button and the  $\square$ + or - button to fine tune the channel. By pressing the respective programme number the automatic Fine Tuning will be restored.

