



 







# Adjusting the Sound

 

 

FE 1

Although the sound is adjusted at the factory, you can modify it to suit your own requirement.

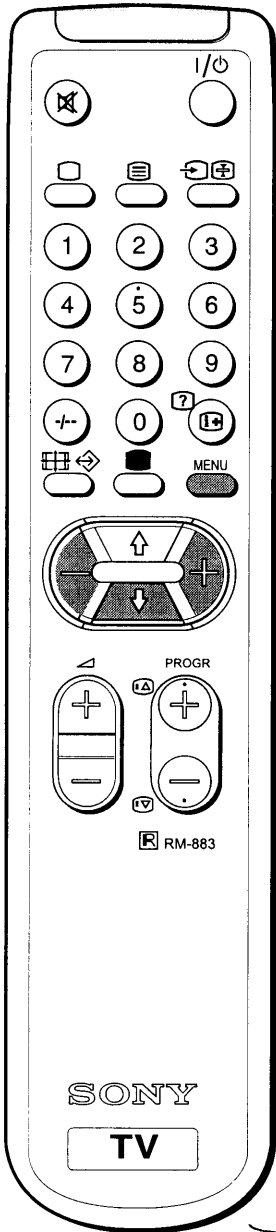

- 1** Press the  button on the remote control to display the three different modes on the TV screen.
- 2** Press the  button to highlight the user mode symbol  as shown.
- 3** Press the MENU button to display the menu on the TV screen.
- 4** Press the blue button to select the  symbol on the TV screen then press the yellow button.
- 5** Press the blue button to select the item you wish to change (see below).
- 6** Press the red or yellow button to alter the selected item.
- 7** Press the MENU button to remove the menu display from the TV screen.

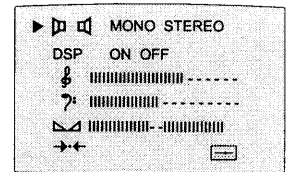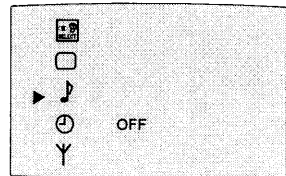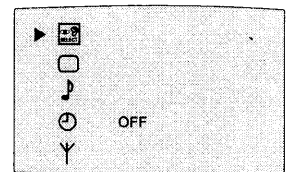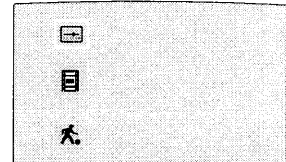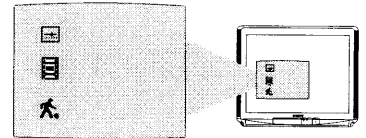

Symbol	Item
	<ul style="list-style-type: none"> <li>• Mono sound/Stereo sound</li> <li>A: Channel 1 sound/B: Channel 2 sound (to select your desired language from a dual sound broadcast)</li> </ul>
	<ul style="list-style-type: none"> <li>• On/Off (digital sound processor)</li> <li>• Treble</li> <li>• Bass</li> <li>• Balance</li> </ul>
	<ul style="list-style-type: none"> <li>• Reset (resets to factory preset sound level)</li> </ul>
	<ul style="list-style-type: none"> <li>• Represents the mode selected in the "Using Select Mode" section of the manual.</li> </ul>