## 11 Disassembly and Reassembly

This section of the service manual describes the disassembly and reassembly procedures for the TFT-LCD TV.

 $\triangle$  WARNING : This monitor contains electrostatically sensitive devices. Use caution when handling these components.

## 11-1 Disassembly

Cautions : 1. Disconnect the monitor from the power source before disassembly.
 2. Follow these directions carefully; never use metal instruments to pry apart the cabinet.

Description	Picture Description
<ol> <li>Place monitor face down on cushioned table. Remove 20 screws from the rear cover. Lift up the rear cover.</li> </ol>	

Description	Picture Description
2. Remove 3 screws from the stand.	
3. Remove 5 screws from the Main PCB. Lift up the shield-cover.	

Description	Picture Description
4. Disonnect cable from the boards. Remove 13 screws from the boards.	
5. Lift up the boards. Remove 7 screws from the stand BRKT.	

Description	Picture Description
6. Lift up the stand BRKT. Remove screws from the Lcd panel.	
7. Lift up the Lcd panel. Remove 5 screws from the BRKT.	

Description	Picture Description
8. Lift up the BRKT.	

## 11-2 Reassembly

Reassembly procedures are in the reverse order of disassembly procedures.

11 Disassembly and Reassembly

## Memo