

(3) Take out 1 screw (A), spring (C) and slit washer.

(4) Remove the sub brake (SUP).

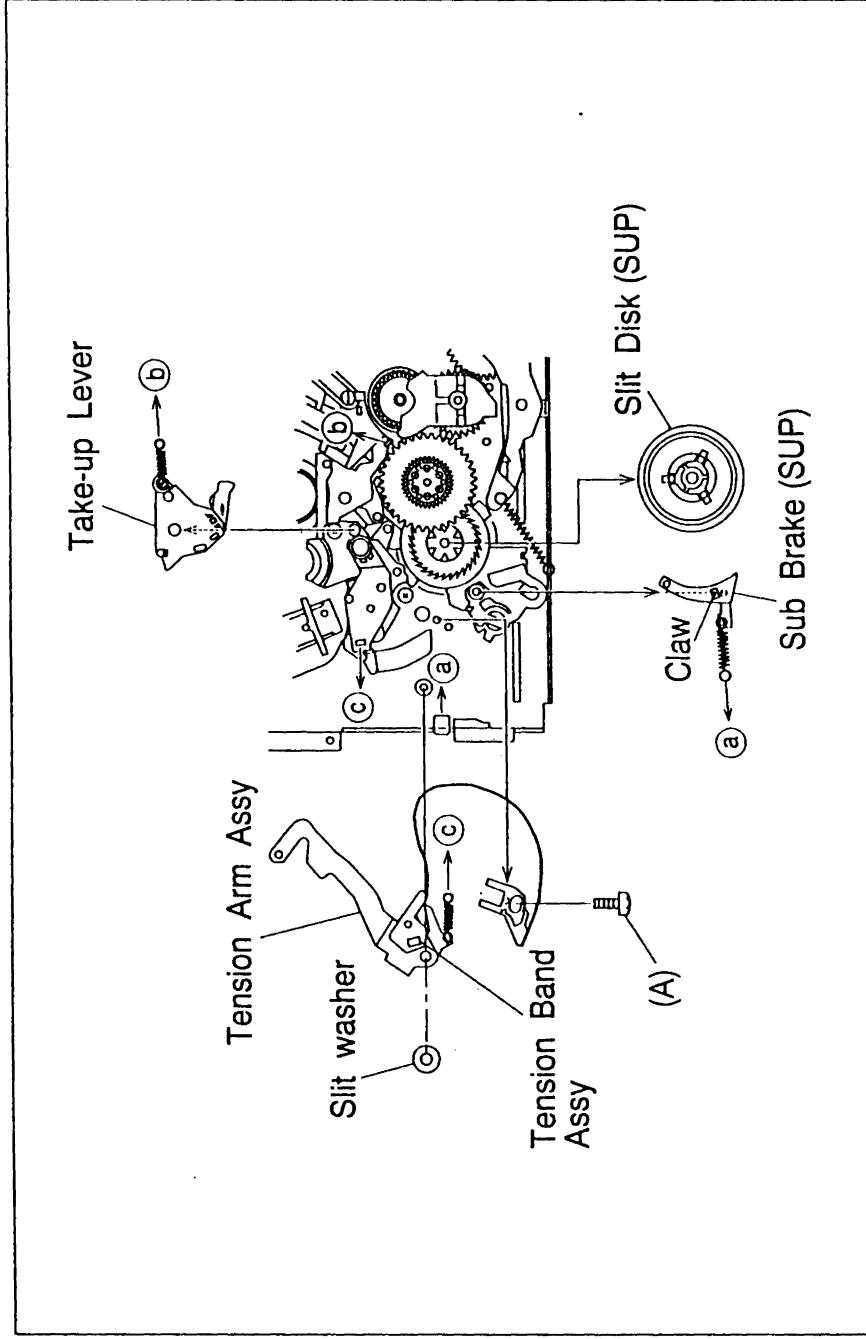


Fig. 2-5-19

2.5.13 Take-up Head, Tension Arm Lever

(1) Remove the take-up head and tension arm lever.

