


ITT INSTRUMENTS

OX 710 D

matrox

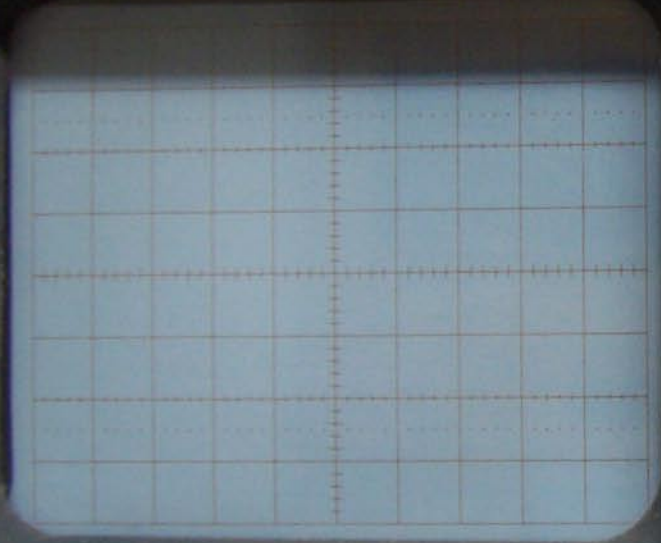

Control panel of the oscilloscope featuring various knobs, buttons, and switches:

- Top Left:** Calibration controls including CAL 10kHz and CAL 1kHz potentiometers, an INTENS knob, and a FOC potentiometer.
- Top Center:** LEVEL NIVEAU knob and TRIG AUTO / DECL switch.
- Top Right:** Time base selector knob with scales for ms (0.1, 0.2, 0.5, 1, 2, 5, 10, 20, 50) and μ s (0.1, 0.2, 0.5, 1, 2, 5, 10, 20, 50), and an EXT input.
- Middle:** TRIG MODE buttons (AUTO, TV, EXT, YB, YA), TV NOR / INT switch, and a row of display mode buttons (YA, XY, DUAL, ADD, YB).
- Bottom:** Input sensitivity knobs for Channel 1 (0.1, 0.2, 0.5, 1, 2, 5, 10, 20, 50 mV) and Channel 2 (0.1, 0.2, 0.5, 1, 2, 5, 10, 20, 50 mV), TEST buttons, and 1M Ω impedance indicators.