

Table of Contents

Introduction	15
Preface	15
SwitcherCAD III Overview	17
Hardware Requirements	18
Software Installation	19
License Agreement/Disclaimer	19
Modes of Operation	21
Overview	21
Synthesized Circuits	22
Application Note Circuits	24
Example Circuits	25
General Purpose Schematic Driven SPICE	25
Externally Generated Netlists	26
Efficiency Report	27
Schematic Capture	29
Basic Schematic Editing	29
Label a node name	33
Schematic Colors	34
Placing New Components	35
Programming Keyboard Shortcuts	36
PCB Netlist Extraction	37
Editing Components	37
Editing Components	37
Edit a visible attribute	38
Specialized Component Editors	39
General Attribute Editor	40
Creating New Symbols	42
Symbol Editing Overview	42
Drawing the body	43
Adding the Pins	44
Adding Attributes	45
Attribute Visibility	46
Hierarchy	48
Hierarchy Overview	48
Rules of Hierarchy	48
Navigating the Hierarchy	49
Waveform Viewer	51
Overview	51
Trace Selection	51
Zooming	56
Waveform Arithmetic	56
User-Defined Functions	62
Axis Control	63
Plot Panes	63
Color Control	64
Attached Cursors	65
Save Plot Configurations	69
Fast Access File Format	70

LTspice 71

Introduction.....	72
Circuit Description.....	72
General Structure and Conventions.....	73
Circuit Element Quick Reference.....	76
Dot Commands.....	77
C. Simulator Directives -- Dot Commands.....	77
.AC -- Perform an Small Signal AC Analysis Linearized About the DC Operating Point.....	77
.BACKANNO -- Annotate the Subcircuit Pin Names to the Port Currents.....	78
.DC -- Perform a DC Source Sweep Analysis.....	78
.END -- End of Netlist.....	79
.ENDS -- End of Subcircuit Definition.....	79
.FOUR -- Compute a Fourier Component after a .TRAN Analysis.....	79
.FUNC -- User Defined Functions.....	80
.GLOBAL -- Declare Global Nodes.....	81
.IC -- Set Initial Conditions.....	81
.INCLUDE -- Include Another File.....	82
.LIB -- Include a Library.....	83
.LOADBIAS -- Load a Previously Solved DC Solution.....	87
.MEASURE -- Evaluate User-Defined Electrical Quantities.....	87
.MODEL -- Define a SPICE Model.....	91
.NET -- Compute Network Parameters in a .AC Analysis.....	92
.NODESET -- Supply Hints for Initial DC Solution.....	93
.NOISE -- Perform a Noise Analysis.....	94
.OP -- Find the DC Operating Point.....	95
.OPTIONS -- Set Simulator Options.....	95
.PARAM -- User-Defined Parameters.....	99
.SAVE -- Limit the Quantity of Saved Data.....	100
.SAVEBIAS -- Save Operating Point to Disk.....	101
.STEP -- Parameter Sweeps.....	102
.SUBCKT -- Define a Subcircuit.....	103
.TEMP -- Temperature Sweeps.....	104
.TF -- Find the DC Small Signal Transfer Function.....	105
.TRAN -- Perform a Nonlinear Transient Analysis.....	105
.WAVE -- Write Selected Nodes to a .Wav File.....	106
Transient Analysis Options.....	107
.TRAN Modifiers.....	107
UIC.....	107
startup.....	108
steady.....	108
nodiscard.....	109
step.....	109
Circuit Elements.....	110
A. Special Functions.....	110
B. Arbitrary behavioral voltage or current sources.....	112
C. Capacitor.....	116
D. Diode.....	118
E. Voltage Dependent Voltage Source.....	121
F. Current Dependent Current Source.....	123
G. Voltage Dependent Current Source.....	123
H. Current Dependent Voltage Source.....	125
I. Current Source.....	126
J. JFET transistor.....	130
K. Mutual Inductance.....	132

L. Inductor	133
M. MOSFET	138
O. Lossy Transmission Line.....	147
Q. Bipolar transistor	149
Parameters	153
Unit	153
Default	153
References:	158
R. Resistor	158
S. Voltage Controlled Switch	159
T. Lossless Transmission Line.....	161
U. Uniform RC-line	161
V. Voltage Source	162
W. Current Controlled Switch.....	166
X. Subcircuit.....	167
Z. MESFET transistor.....	169
Control Panel	170
Accessing the Control Panel	170
Compression.....	170
Operation	172
Save Defaults	174
SPICE	176
Netlist Options	177
Hacks.....	179
Drafting Options.....	180
Internet Option	182
FAQs	184
Program Updates	184
Transformer Models	185
Third-party Models.....	186
Inductor Models	189
MOSFET Models.....	190
License and Distribution	191
Circuit Efficiency Calculation	192
Custom Symbol	193
Memory Problems	194
Model Compatibility	195
SPICE Netlist.....	196
Exporting/Merging Waveform Data	196
Running Under Linux.....	197
What about a Paper Manual?.....	198
What about a Users' Group?	198
Appendixes	199
Symbols	199
Symbol Overview	199
Power Products.....	199
Overview.....	199
LT1308A	199
LTC1435A	201
LTC1735.....	201
LTC1628	201
LTC1624.....	202
LTC1622.....	202

LT1026.....	202
LT1054.....	202
LT1054L.....	202
LT1070.....	202
LT1070HV	203
LT1071.....	203
LT1071HV	203
LT1072.....	203
LT1072HV	203
LT1073.....	203
LT1073-5	203
LT1073-12	203
LT1074.....	203
LT1074HV	203
LT1076.....	203
LT1082.....	204
LT1084.....	204
LT1085.....	204
LT1103.....	204
LT1105.....	204
LT1106.....	204
LT1107.....	204
LT1107-5	204
LT1107-12	204
LT1108.....	204
LT1108-12	204
LT1109.....	204
LT1109-12	205
LT1109-5	205
LT1110-5	205
LT1110-12	205
LT1111.....	205
LT1111-5	205
LT1170.....	205
LT1170HV	205
LT1171.....	205
LT1171HV	205
LT1172.....	206
LT1172HV	206
LT1173.....	206
LT1173-5	206
LT1173-12	206
LT1176.....	206
LT1176-5	206
LT1182.....	206
LT1183.....	206
LT1184.....	206
LT1184F	207
LT1186F	207
LT1242.....	207
LT1243.....	207
LT1245.....	207
LT1246.....	207
LT1247.....	207
LT1248.....	207
LT1249.....	207

LT1269.....	207
LT1268.....	208
LT1268B.....	208
LT1270.....	208
LT1270A.....	208
LT1271.....	208
LT1300.....	208
LT1301.....	208
LT1302.....	208
LT1302-5.....	208
LT1303.....	209
LT1303-5.....	209
LT1304.....	209
LT1304-3.3.....	209
LT1304-5.....	209
LT1305.....	209
LT1306.....	210
LT1307.....	210
LT1307B.....	210
LT1309.....	210
LT1316.....	210
LT1317.....	210
LT1317B.....	210
LT1336.....	210
LT1370.....	211
LT1371.....	211
LT1372.....	211
LT1372HV.....	211
LT1373.....	211
LT1373HV.....	211
LT1374.....	211
LT1374-5.....	211
LT1375.....	212
LT1375-5.....	212
LT1376.....	212
LT1376-5.....	212
LT1377.....	212
LT1339.....	213
LT1424-5.....	213
LT1424-9.....	213
LT1425.....	213
LT1432.....	213
LT1432-3.3.....	213
LT1500.....	213
LT1501.....	213
LT1501-3.3.....	213
LT1501-5.....	213
LT1505.....	214
LT1505-1.....	214
LT1506.....	214
LT1506-3.3.....	214
LT1500-3.....	214
LT1507.....	214
LT1507-3.3.....	214
LT1508.....	214
LT1509.....	215

LT1510-5	215
LT1510.....	215
LT1512.....	215
LT1529.....	215
LT1533.....	215
LT1534.....	215
LT1572.....	215
LT1576.....	215
LT1578.....	215
LT1576-5	215
LT1612.....	216
LT1613.....	216
LT1614.....	216
LT1615.....	216
LT1617.....	216
LT1618.....	216
LT1610.....	216
LT1611.....	216
LT1615-1	216
LT1616.....	217
LT1617.....	217
LT1617-1	217
LT1619.....	217
LT1620.....	217
LT1620S8	217
LT1621.....	217
LT1676.....	217
LT1680.....	217
LT1725.....	217
LT1735.....	217
LT1737.....	217
LT1761-1.8	218
LT1761-2.5	218
LT1761-3	218
LT1761-5	218
LT1761-BYP	218
LT1761-SD	218
LT1761-3.3	218
LT1762.....	218
LT1762-1.5	218
LT1762-1.8	218
LT1762-2.5	219
LT1762-3.3	219
LT1762-3	219
LT1762-5	219
LT1763.....	219
LT1763-1.5	219
LT1763-1.8	219
LT1763-2.5	219
LT1763-3.3	219
LT1763-3	219
LT1763-5	220
LT1764.....	220
LT1764-1.5	220
LT1764-1.8	220
LT1764-2.5	220

LT1764-3.3	220
LT1767	220
LT1776	220
LT1777	220
LT1786F	220
LT1930	221
LT1930A	221
LT1931	221
LT1931A	221
LT1949	221
LT1956	221
LT1959	221
LT1962	221
LT1962-1.5	221
LT1962-1.8	221
LT1962-2.5	221
LT1962-3	222
LT1962-5	222
LT1963	222
LT1963-1.5	222
LT1963-1.8	222
LT1963-2.5	222
LT1963-3.3	222
LT1956-5	222
LTC660	222
LTC1044	222
LTC1044A	223
LTC1046	223
LTC1142	223
LTC1142HV	223
LTC1142HV-ADJ	223
LTC1142L-ADJ	223
LTC1143	223
LTC1143L	223
LTC1143L-ADJ	223
LTC1144	223
LTC1147-3.3	223
LTC1148L	224
LTC1148L-3.3	224
LTC1149	224
LTC1149-3.3	224
LTC1149-5	224
LTC1159	224
LTC1159-3.3	224
LTC1626	224
LTC1159-5	224
LTC1174	225
LTC1174-3.3	225
LTC1174-5	225
LTC1174HV	225
LTC1174HV-3.3	225
LTC1174HV-5	225
LTC1261	225
LTC1261CS8	225
LTC1261LCS8	225
LTC1261LCS8-4	225

LTC1261LCS8-4.5.....	226
LTC1262.....	226
LTC1263.....	226
LTC1265.....	226
LTC1265-3.3.....	226
LTC1265-5.....	226
LTC1266.....	226
LTC1266-3.3.....	226
LTC1266-5.....	226
LTC1267.....	226
LTC1267-ADJ.....	226
LTC1267-ADJ5.....	227
LTC1430.....	227
LTC1430A.....	227
LTC1433.....	227
LTC1434.....	227
LTC1436A.....	227
LTC1436A-PLL.....	227
LTC1437A.....	227
LTC1438-ADJ.....	227
LTC1438.....	228
LTC1439.....	228
LTC1474.....	228
LTC1475.....	228
LTC1475-5.....	228
LTC1502-3.3.....	228
LTC1503-1.8.....	228
LTC1503-2.....	228
LTC1504.....	228
LTC1504-3.3A.....	228
LTC1504A.....	229
LTC1504-3.3.....	229
LTC1514-3.3.....	229
LTC1514-5.....	229
LTC1515.....	229
LTC1515-3.3/5.....	229
LTC1515-3/5.....	229
LTC1516.....	229
LTC1517-3.3.....	229
LTC1517-5.....	229
LTC1522.....	230
LTC1530.....	230
LTC1530-1.9.....	230
LTC1530-2.5.....	230
LTC1530-3.3.....	230
LTC1530-2.8.....	230
LTC1538-AUX.....	230
LTC1539.....	230
LTC1550.....	230
LTC1550L.....	230
LTC1550LCS8.....	231
LTC1550LCS8-2.....	231
LTC1550LCS8-2.5.....	231
LTC1550LCS8-4.1.....	231
LTC1550CS8-4.1.....	231
LTC1553.....	231

LTC1553L.....	231
LTC1574.....	231
LTC1574-3.3.....	231
LTC1574-5.....	231
LTC1625.....	232
LTC1625-5.....	232
LTC1626-3.3.....	232
LTC1627.....	232
LTC1628-PG.....	232
LTC1629.....	232
LTC1629-PG.....	232
LTC1649.....	232
LTC1682.....	232
LTC1682-3.3.....	232
LTC1682-5.....	233
LTC1693-1.....	233
LTC1693-2.....	233
LTC1693-3.....	233
LTC1701.....	233
LTC1701B.....	233
LTC1702.....	233
LTC1703.....	233
LTC1706-19.....	233
LTC1707.....	233
LTC1709.....	233
LTC1735-1.....	234
LTC1736.....	234
LTC1753.....	234
LTC1754-5.....	234
LTC1771.....	234
LTC1772B.....	234
LTC1772.....	234
LTC1773.....	234
LTC1775.....	234
LTC1778.....	234
LTC1779.....	235
LTC1871.....	235
LTC1872.....	235
LTC1872B.....	235
LTC1874.....	235
LTC1873.....	235
LTC1877.....	235
LTC1878.....	235
LTC1922-1.....	235
LTC1929.....	235
LTC1929-PG.....	236
LTC1986.....	236
LTC3200.....	236
LTC3200-5.....	236
LTC3401.....	236
LTC3402.....	236
LTC3404.....	236
LTC3405.....	236
LTC3716.....	236
LTC3711.....	236
LTC3713.....	237

LTC3714.....	237
Operational Amplifiers.....	237
Miscellaneous	260
Voltage.....	260
OR	260
SCHMITT.....	261
SCHMTINV.....	261
XOR.....	262
SCHMTBUF.....	262
AND	262
BI	263
BI2	263
BV	263
BUF.....	263
BUF1.....	264
INV.....	264
CAP	264
POLCAP.....	264
CAPMETER.....	264
SCHOTTKY	264
ZENER.....	264
DIODE	265
DFLOP.....	265
E2	265
G2.....	265
CURRENT	266
LOAD	266
LOAD2.....	266
NJF	266
PJF	266
IND.....	266
IND2.....	266
NMOS.....	266
NMOS4.....	266
PMOS	267
PMOS4.....	267
LTLINE.....	267
NPN	267
NPN2	267
PNP	267
PNP2	268
RES	268
RES2	268
SW	268
TLINE.....	268
SIGNAL.....	268
CSW	268
OPAMP.....	268
OPAMP2.....	269
MESFET	269
XTAL.....	269
CELL.....	269
DIP10.....	269
DIP14.....	270
DIP16.....	270
DIP20.....	270

DIP8.....	270
JUMPER.....	270
SIGNAL.....	270
URC.....	271
URC2.....	271
BATTERY.....	271
Opto Isolators.....	271
Special Functions.....	273
Filter Products.....	273
LTC1562.....	274
LTC1562A.....	274
Digital.....	274
OR.....	276
SCHMITT.....	276
SCHMTBUF.....	277
SCHMTINV.....	277
SRFLOP.....	278
XOR.....	278
Diffschmtinv.....	278
Diffschmtbuf.....	278
Diffschmitt.....	279
Comparators.....	279
LT1016.....	279
LT1116.....	279
LT1394.....	280
LT1671.....	280
LT1720.....	280
LT1721.....	280
LTC1041.....	280
LTC1042.....	280
LTC1441.....	280
LTC1442.....	281
LTC1443.....	281
LTC1444.....	281
LTC1445.....	281
LTC1540.....	281

SPICE Error Log Command	281
Web Update	282
1107	282
1173	282
E	282
F	283
G	283
H	283
LT1071	283
LT1072	283
LT1074	283
LT1083	283
LT1109	283
LT1109-12	283
LT1109-5	283
LT1109A	283
LT1109A-12	284
LT1109A-5	284
LT1170	284
LT1170HV	284
LT1171	284
LT1171HV	284
LT1172	284
LT1172HV	284
LT1241	284
LT1300	284
LT1301	284

LT1302	284	
LT1303	285	
LT1303-5	285	
LT1304	285	
LT1304-3.3	285	
LT1304-5	285	
LT1305	285	
LT1307	285	
LT1307B	285	
LT1308A	285	
LT1308B	285	
LT1309	286	
LT1316	286	
LT1375	286	
LT1375-5	286	
LT1108	286	
LT1111-12	286	
LT1110	286	
LTC1261CS8-4		286
LTC1551CS8-4.1		286
LTC1551LCS8		286
LTC1551LCS8-4.1		286
LT1962-3.3	287	
LT1761-2	287	
LTC1475-3.3		287
LT1615	287	
LTC1147-5	287	

LTC1147L	287	
LTC1147L-3.3		287
LTC1148	287	
LTC1148-3.3		287
LTC1148-5	287	
LTC1148HV	287	
LTC1148HV-3.3		288
LTC1148HV-5		288
LT1244	288	
misc symbols		288

Introduction

Preface

Do we need another SPICE?

Analog circuit simulation has been inseparable from analog IC design. SPICE simulators are the only way to test circuitry prior to integration onto a chip. Further, the SPICE simulation allows measurements of currents and voltages that are virtually impossible to do any other way. The success of these analog circuit simulators has made circuit simulation spread to board level circuit design. It is easier in many cases to simulate rather than breadboard, and the ability to analyze the circuit in the simulation for performance and problems speeds the design of well-understood, robust circuits.

Given the number of commercially available SPICE simulators why should a new simulator be written? Because certain analog functions are extremely difficult to simulate with commercially available SPICE simulators. Switch-mode power supplies have fast high frequency switching square waves as well as slow overall loop response. This means simulations must run for thousands to hundreds of thousands of cycles in order to see the overall response of a switching regulator. Commercially available SPICE's simply take too long for this to be a useful simulation method. Simulation times for a switch-mode power supply must be in minutes not hours for a simulator to be useful.

There have been analog circuit simulation methods that have shown some success in speeding up switch mode power supply simulation but at a cost of making simplifying assumptions which don't allow arbitrary control logic and fully simulate the complexity of the switching waveforms. A new SPICE with integrated logic primitives that perform the switch mode control provides a better answer. It can give fast simulation times, yield detailed waveforms, and still allows the flexibility for arbitrary circuit modifications.

SwitcherCAD III is a new SPICE that was developed for modeling board level switching regulator systems. Incorporated into the new SPICE are circuit elements to model practical board level components. Capacitors and inductors can be modeled with series resistance and other parasitic aspects of their behavior without using sub-circuits or internal nodes. Also, a simulation circuit element was developed for power MOSFET's that accurately

exhibits their usual gate charge behavior without using sub-circuits or internal nodes. Reducing the number of nodes the simulator needs to solve significantly reduces the computation required for a given simulation without compromising the accuracy or detail of the switching waveforms. Another benefit of these new simulation devices is that convergence problems are easier to avoid since they, like the board level component the model, have finite impedance at all frequencies.

Modern switch mode power supplies include controller logic with multiple modes of operation. For example, devices may change from pulse switch modulation to burst-mode or to cycle skipping depending on the circuit's operation. An original new mixed-mode compiler and simulator were written into SwitcherCAD III that allows these products to be realistically modeled in a computationally fast manner.

There are currently approximately seven hundred Linear Technology products modeled in SwitcherCAD III. The program is freely downloadable from the Linear Technology website and is a high-performance general-purpose SPICE simulator. Included are demonstration files that allow you to watch step-load response, start-up and transient behavior on a cycle-by-cycle basis. Included with the SPICE is a full-featured schematic entry program for entering new circuits.

SwitcherCAD III is designed to be used by three different types of design engineers: those who know what they're doing, those who think they know, and those who are sure they know absolutely nothing about switching regulator design. The experienced designer needs a "what if" program that allows him to quickly alter aspects of a circuit to find an optimum design. The neophyte needs a cookbook approach that yields a reliable design based on the simplest of inputs. The "loose cannon" designer needs a program that will allow him to exercise his free will, but will be intelligent enough to alert him to fatal design flaws.

To that end, we made SwitcherCAD III an extremely flexible "what if" electronic design tool that has warning labels when things are getting out of hand. We designed the program to have a complete initial design cycle based only on the essential inputs of voltage and power requirements. This allows the terrified designer to start with a working circuit, permits the experienced designer to have unlimited

fun changing things, and, we hope, provides enough safeguards to prevent bad designs.

Please be aware, however, that SwitcherCAD III is not intended as a total solution. It is only a tool to ease the design procedure, which must also include breadboarding and testing. Use common sense with the results obtained from simulation.


SwitcherCAD III Overview

SwitcherCAD III is the third generation switching regulator design program by Linear Technology. The program consists of a high performance SPICE simulator extended with a mixed mode simulation capability that includes new intrinsic SPICE devices for macromodeling Switch Mode Power Supply(SMPS) controllers and regulators. The program includes an integrated hierarchical schematic capture program that allows users to edit example SMPS circuits or design new circuits. An integrated waveform viewer displays the simulated waveforms and allows further analysis of the simulation data. There is a built-in database for most of Linear Technology's power ICs and many passive components. The device database, schematic editing, simulation control and waveform analysis are integrated into one program.

Due to the mixed mode simulation capability and many other enhancements over previous SPICE programs, the simulation speed is greatly improved while simulation accuracy is retained. Detailed cycle-by-cycle SMPS simulations can be performed and analyzed in minutes. A user can get a detailed analysis of power systems with a few mouse clicks without knowing anything about the device, SPICE or the schematic capture program. Synthesized or pre-drafted demo circuits can be used as a starting point to build the custom circuit to fit different power supply requirements. After the new schematic is created, the system can be simulated and a report generated.

The program's integrated hierarchical schematic capture and SPICE simulator are completely available for general use. The improved performance of the SPICE simulation engine is

a benefit for simulating general analog circuits and should be of interest to all electronic engineers. With over 500,000 copies distributed so far, many users have reported that LTspice/SwitcherCAD III is their main simulation/schematic capture tool. We hope you enjoy the program and find it useful.

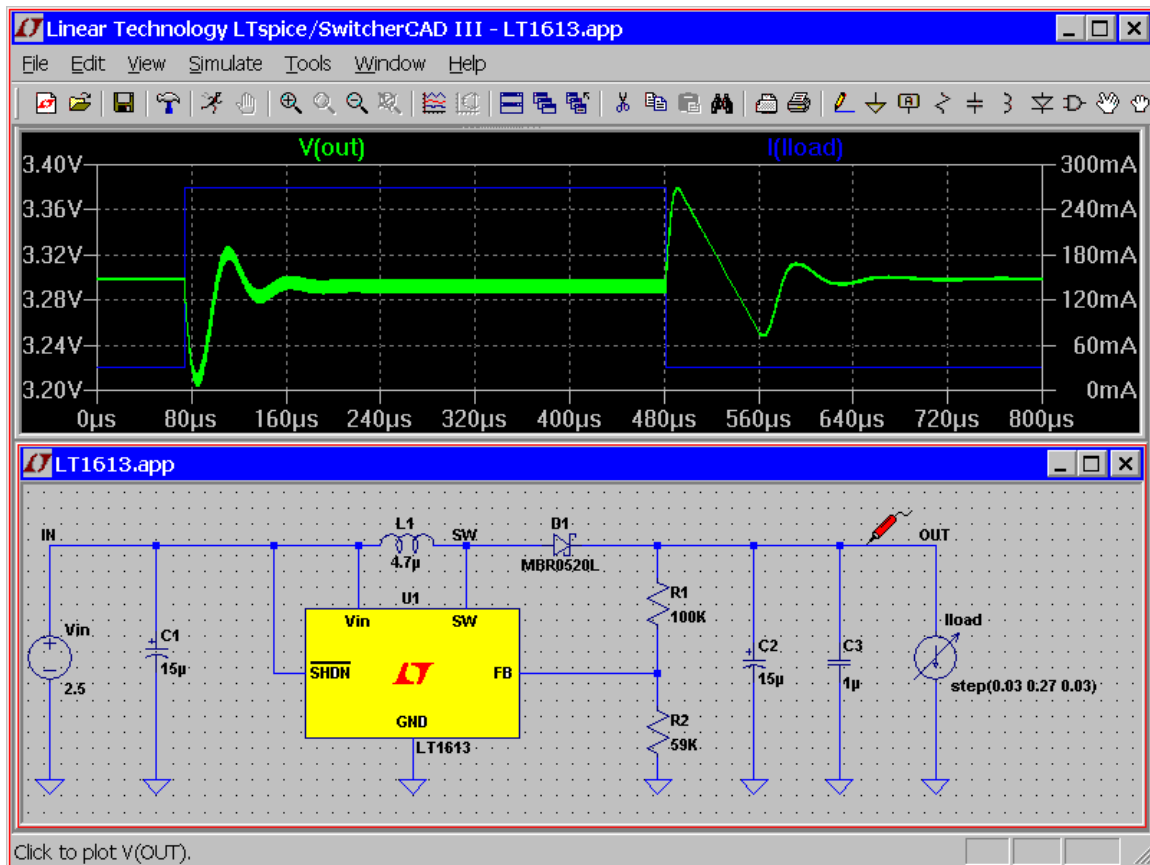

Hardware Requirements

LTspice/SwitcherCAD III runs on PC's running Windows 95, 98, 2000, NT4.0, Me, or XP. It doesn't work under Windows 3.1 or DOS. Since a simulation can generate many megabytes of data in a few minutes, free hard disk space (>200MB) and large amount of RAM (>128MB) are highly recommended. Basically, the program can run on any PC with Windows 95 or above, but the simulation may not finish if there is not enough hard disk space.

LTspice/SwitcherCAD III will also run on Linux. The program has been tested on Linux RedHat 8.0 with WINE version 20030219.

Software Installation

SwitcherCAD III can be downloaded from the LTC website, <http://www.linear.com/software>. A direct link to the distributed file is <http://ltspice.linear.com/software/swcadiii.exe>. The file swcadiii.exe is a self-extracting gzipped file that installs SwitcherCAD III as it extracts.

SwitcherCAD III is updated often. After SwitcherCAD III is initially installed, you can use a built-in `update` menu command that will bring your installation to the current revision level if you have access to the web. The update process will first download a master index file from Linear's website that has the size and checksum of each file in the distribution. If there is a file missing, of a different size, or a difference between the local checksum and the one from the index file, then that file will be updated automatically. Component databases are merged in the update process so if you've added devices to your installation, those additions won't be lost when you run the automatic update utility.

License Agreement/Disclaimer

SwitcherCAD III -- License Agreement/Disclaimer

Copyright © 2001, Linear Technology Corporation

All rights reserved.

SwitcherCAD III is Linear Technology Corporation's switch mode power supply synthesis and analog circuit simulation software.

This software is copyrighted. You are granted a non-exclusive, non-transferable, non-sublicenseable, royalty-

free right solely to evaluate LTC products and also to perform general circuit simulation. Linear Technology Corporation owns the software. You may not modify, adapt, translate, reverse engineer, decompile, or disassemble the software executable(s) or models of LTC products provided. We take no responsibility for the accuracy of third party models used in the simulator whether provided by LTC or the user.

While we have made every effort to ensure that SwitcherCAD III operates in the manner described, we do not guarantee operation to be error free. Upgrades, modifications, or repairs to this program will be strictly at the discretion of LTC. If you encounter problems installing or operating SwitcherCAD III for the purpose of selecting and evaluating LTC products, you may obtain technical assistance by calling our Applications Department at (408) 432-1900, between 8:00 am and 5:00 pm Pacific time, Monday through Friday. We do not provide such technical support for general circuit simulations that are not for the evaluation of LTC products. Because of the great variety of PC-compatible computer systems, operating system versions, and peripherals currently in use, we do not guarantee that you will be able to use SwitcherCAD III successfully on all such systems. If you are unable to use SwitcherCAD III, LTC does provide design support for LTC switching regulator ICs by whatever means necessary.

The software and related documentation are provided "AS IS" and without warranty of any kind and Linear Technology Corporation expressly disclaims all other warranties, express or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose. Under no circumstances will LTC be liable for damages, either direct or consequential, arising from the use of this product or from the inability to use this product, even if we have been informed in advance of the possibility of such damages.

Redistribution of this software is permitted as long as it is distributed in its entirety, with all documentation, example files, symbols, and models without modification or additions.

This program is specifically not licensed for use by semiconductor manufacturers in the promotion, demonstration or sale of their products. Specific permission must be obtained from Linear Technology for the use of SwitcherCAD III for these applications.

Modes of Operation

Overview

SwitcherCAD III has five basic modes of driving the simulator:

1. Run a circuit synthesized by SwitcherCAD III from your power supply specification. Menu command File=>Switch Selector Guide.
2. Run an application note circuit. Menu command File=>Demo SMPS Circuits.
3. Run an example circuit distributed with the program. Menu command File=>Open, and then open one of the examples directory examples\SMPS*
4. Use the program as a general-purpose schematic capture program with an integrated simulator. Menu commands File=>New, and File=>Open(file type .asc)
5. Feed the simulator with a handcrafted netlist or a foreign netlist generated with a different schematic capture tool. Menu command File=>Open(file type .cir)

The first two modes, application note circuits and sample circuits, require no knowledge of SPICE syntax to run. One simply selects one of three types of simulations; steady state, start-up transient, and step load response. The circuits contain hidden information about appropriate initial conditions for each simulation type. The circuits can be edited by the user and re-simulated, but extensive edits may impair the success of the simulation. These simulations each require automatic detection of the switch mode power supply's steady state. This is written into the models and is usually detected by noting when the error amp current drops to near zero and stays there. Schematic


files meant to run in this mode have a file extension of ".app".

In the next two modes, all the SPICE commands are visible by the user. There is a menu item, Edit simulation command, which helps you write the SPICE directive to run a simulation. Schematic files meant to run in this mode have a file extension of ".asc".

All four modes ultimately convert the circuit file to a textual SPICE netlist. The netlist is usually extracted from a graphical schematic. Alternately, an imported netlist can be run directly without having a schematic. This has several uses: (i) Linear Technology's filter synthesis program, FilterCAD, can synthesize a netlist for LTspice to simulate the time domain or frequency response of a filter. (ii) it simplifies benchmarking LTspice against other SPICE programs (iii) professionals historically experienced with SPICE circuit simulators are familiar with working directly with the textual netlists because schematic capture was not integrated with SPICE simulators in older systems.

Synthesized Circuits

SwitcherCAD III can automatically design a SMPS from your specification. Use the menu command File=>Switch Selector Guide.

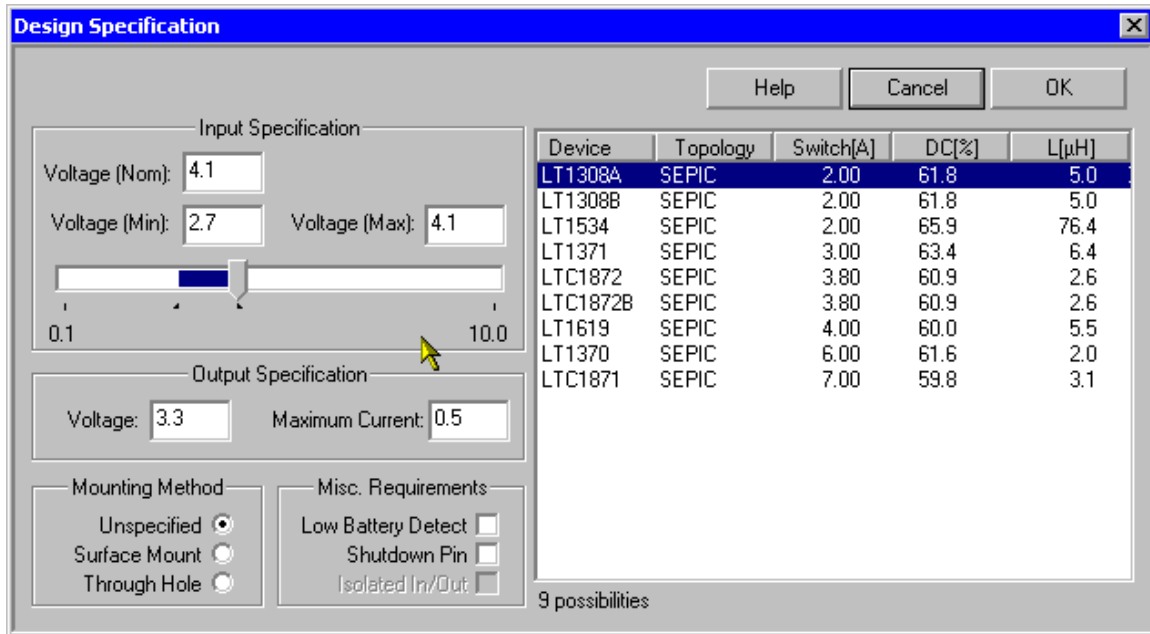

If a design can be found for your specification, it should work for the worst case part. Note that the macromodels are based on typical performance. That means that if the synthesizer finds a solution and you then increase the output power, the design may not work at that load over the product distribution. Also, no temperature considerations are made. All circuits designed by the synthesizer will keep the output voltage in regulation even down to zero output current. Hence only a maximum output current is required in the specification.

The design that comes out of the synthesizer is not optimized. It just tries to find a solution with the lowest possible current rating switch.


Three types of analyses appear under the simulate menu command for circuits out of the synthesizer: steady-state, start-up transient, and step-load response. No knowledge of SPICE syntax is required to perform these analyses.

It is possible to edit the circuits, however, if extensive edits are performed the circuit may no longer function.

Circuits designed by the synthesizer can be saved. By default, they will be saved with a file extension of ".app" but can also be saved with a file extension of ".asc"

Application Note Circuits


There is a library of demo SMPS Circuits that you can run with the menu command File=>Demo SMPS Circuits.

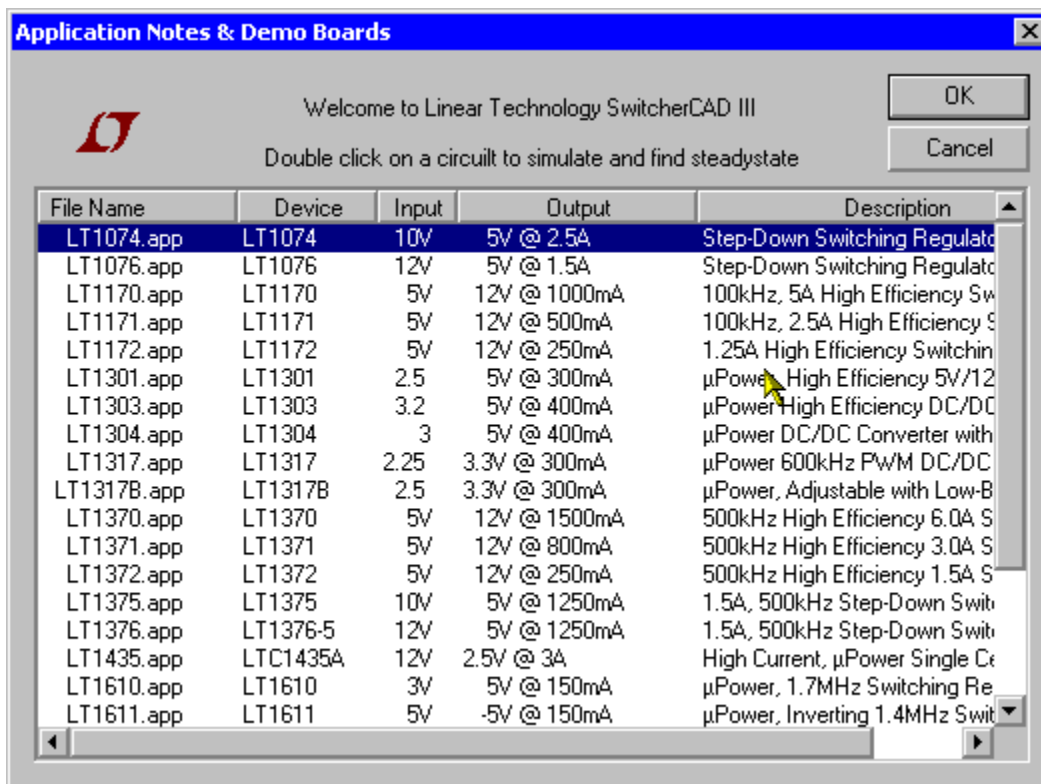

Analysis of these circuits is the same as for the synthesized circuits. This mode of operation is basically obsolete and has been replaced by the synthesized circuit mode. These circuits can be edited and modified. By default, they will be saved with a file extension of ".app" but can also be saved with a file extension of ".asc"


Example Circuits

LTspice/SwitcherCAD III ships with many example SMPS circuits. These are typically installed in the directory C:\Program Files\LTC\SwCADIII\examples\SMPS\{buck,boost, etc.} and have a file extension of ".asc". The SPICE commands are clearly visible on the schematic.

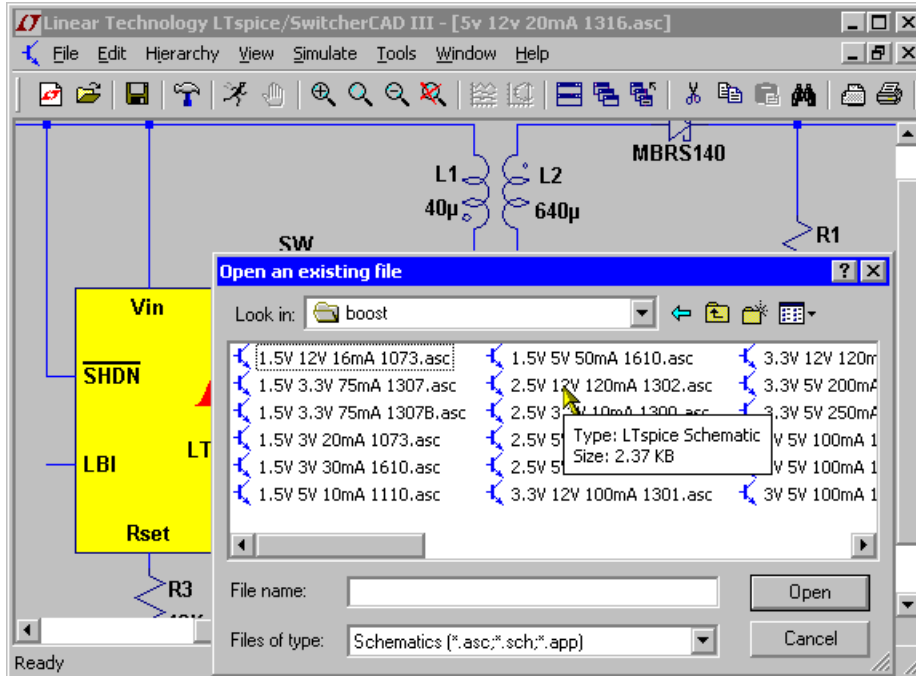

General Purpose Schematic Driven SPICE

You are free to use LTspice/SwitcherCAD III as a general-purpose schematic capture/SPICE program. This is useful not only for SMPS design, but many aspects of analog engineering. The example circuits typically installed in the directory C:\Program Files\LTC\SwCADIII\examples\Educational\ illustrate various LTspice capabilities.

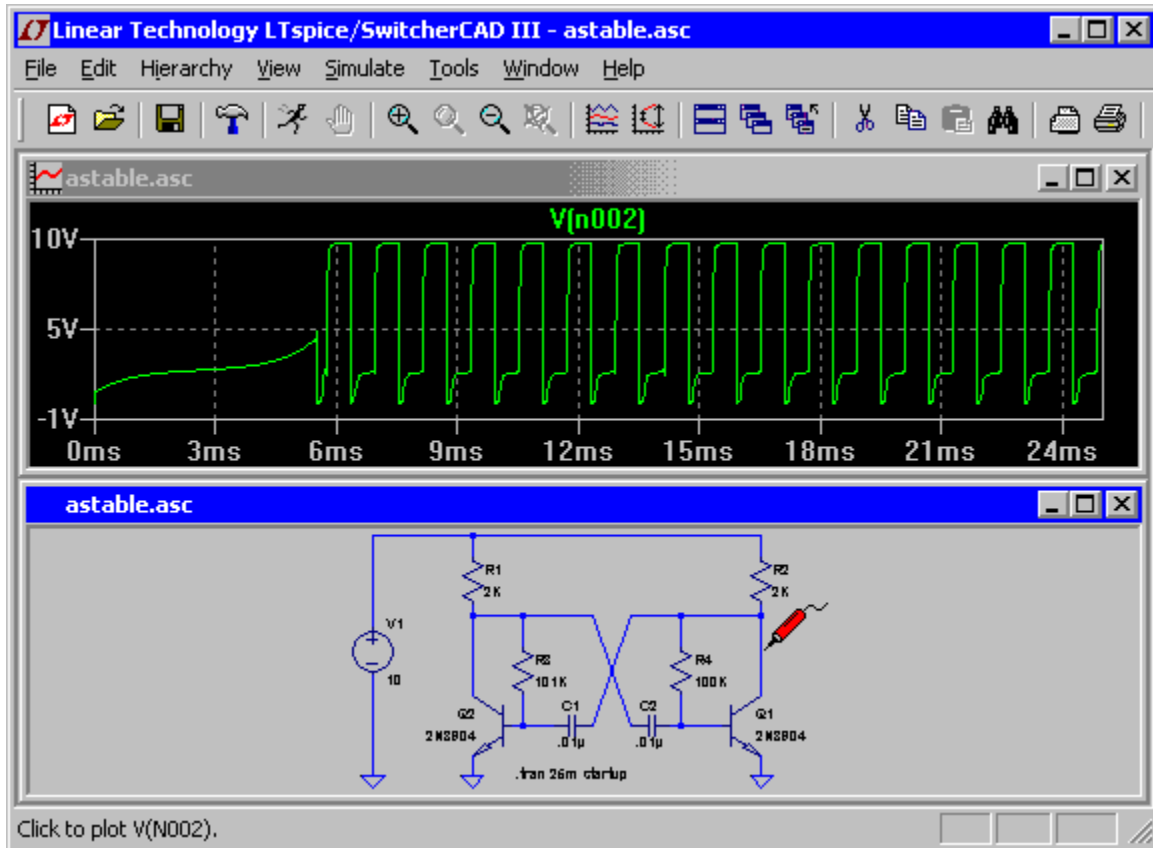

Externally Generated Netlists

You can open netlists generated either by hand or by other schematic capture programs. These files usually have a filename extension of ".cir". The ASCII editor used for netlist files supports unlimited file size and unlimited undo/redo. The menu command Tools=>Color Preferences can be used to adjust the colors used in the ASCII editor.

```

Linear Technology LTspice/SwitcherCAD III - [tube.cir]
File Edit View Simulate Tools Window Help
* triode.asc
U1 A 0 0
U2 G 0 0
X1 A G 0 SU3CX300


.dc U1 0 500 1 U2 -50 -10 10

.subckt SU3CX300 A G K
Emu mu 0 VALUE={PWRS(U(G,K),0.98)}
Eshape shape 0 VALUE={{(280+U(G,K))/280}
Egs gs 0 VALUE={LIMIT(U(A,K)+U(G,K)*7.5,0,1E6)}
Egs2 gs2 0 VALUE={PWRS(U(gs)*U(shape),1.5)*135E-6}
Ecath cc 0 VALUE={U(gs2)}
Ga A K VALUE={U(cc)}
Cgk G K 25p
Cga A G 10p
Cak A K 1p
.ends
.end
Run LTspice

```

Efficiency Report

It is possible to obtain an efficiency report from a DC-DC converter from every mode of operation. It is automatically generated in the first two modes, synthesized circuits and application note circuits. After a steady state simulation, an efficiency report will be visible on the schematic as a block of comment text:

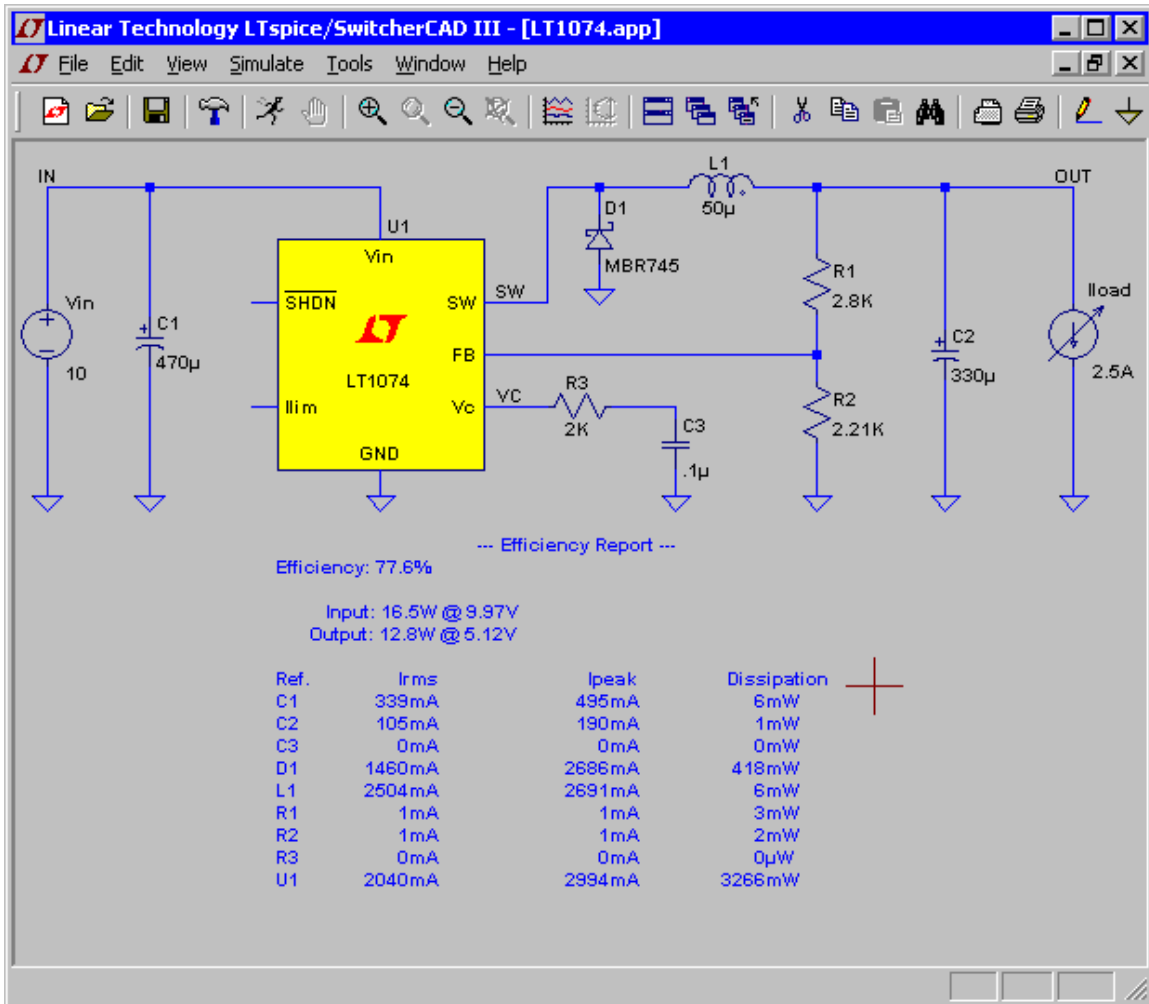

The efficiency of the DC-DC converter is derived in the following manner. In order to identify the input and output, there must be exactly one voltage source and one current source. The voltage source is assumed to be the input while the current source is assumed to be the output. The circuit is run until steady state is sensed by the simulator. This requires the SMPS macromodels to be written with information on how to detect steady state. Usually this is detected by noting when the error amp current, averaged over a clock cycle, diminishes to a small value for several cycles. Then at a clock edge, the energy stored in each reactance is noted and the simulation is run for another ten clock cycles but now integrating the dissipation in every device. At the clock edge of the last cycle, the energy stored in every reactance is noted again and the simulation is stopped. The efficiency is reported as the ratio of output power delivered to the load by the

input power sourced by the input voltage after making an adjustment for the change in energy stored in the reactances. Since the dissipation of each device was also noted, it is possible to look how close the energy checksum is to zero.

You can usually compute efficiency of SMPS circuits you draft yourself by using checking the "Stop simulating if steady state is detected" on the Edit Simulation Command editor. After the simulation, use the menu command View=>Efficiency Report.


Automatic detection of steady state doesn't always work. Sometimes the criteria for steady state detection is too strict and sometimes too lenient. You then either adjust the option parameter sstol or simply interactively set the limits for the efficiency integration.

Schematic Capture

Basic Schematic Editing

The schematic capture program is used to create new schematics or modify the example circuits provided. The circuit size and depth of hierarchy is limited only by computer resources.

The program ships with approximately 800 symbols. These symbols cover most of LTC's power ICs, opamps, comparitors, and many general-purpose devices for circuit design. You can also draw your own symbols for devices you wish to import into the program.

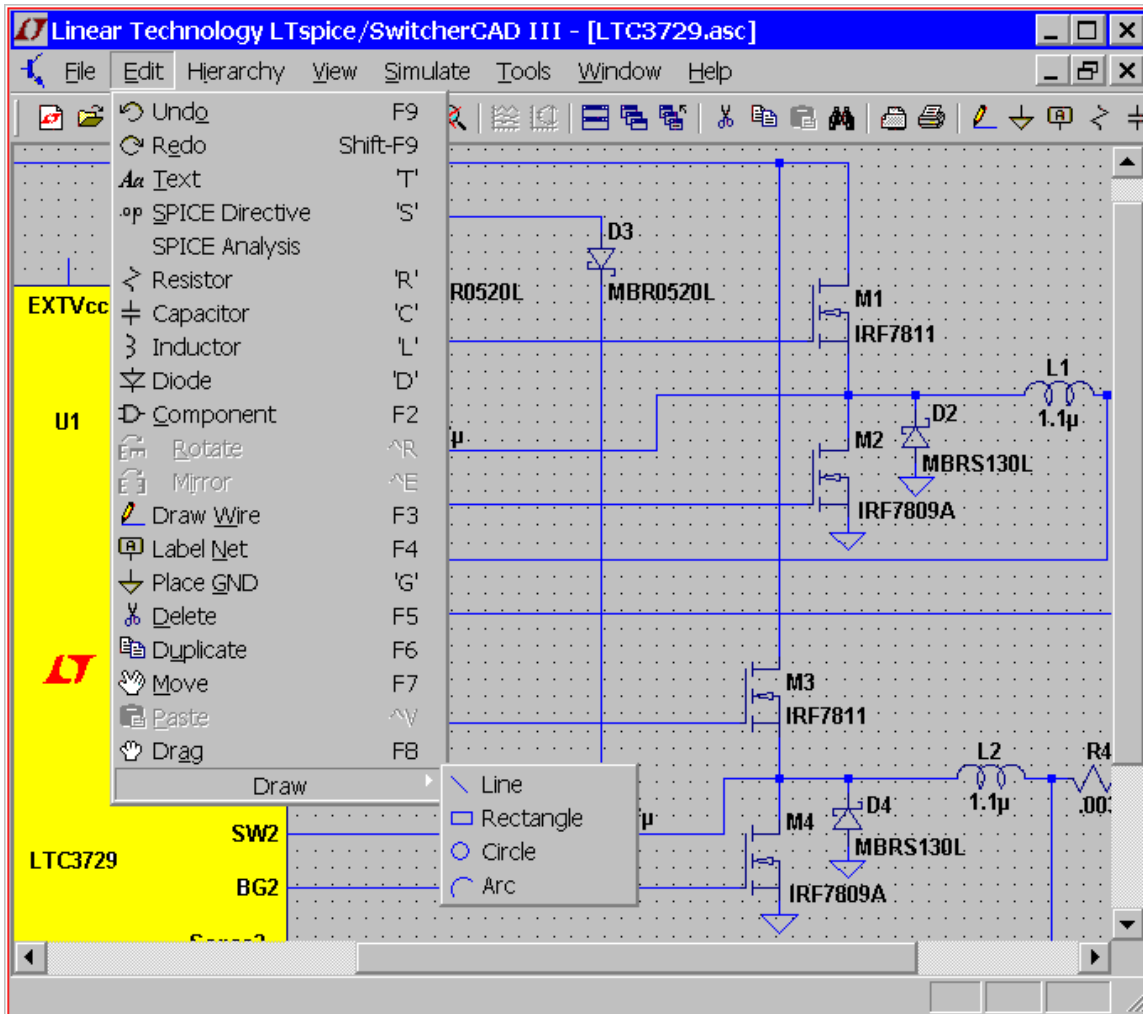

Unlike many schematic capture programs, this one was written explicitly for running SPICE simulations. This means that if you click on an object, the default behavior is to plot the voltage on that wire or current through that component, not select the object for editing or some other editing behavior which would then invalidate the simulation just performed. Hence, when you wish to move, mirror, rotate, drag or delete objects, first select the move, drag or delete command. Then you can select an object by clicking on it. You can select multiple objects by dragging a box about them. The program will stay in the move, drag, or delete mode until the right mouse button is clicked or the Esc key is pressed. All schematic edits can be undone or redone.

Undo: Undo the last command.

Redo: Redo the last Undo command.

Text: Place text on the schematic. This merely annotates the schematic with information. This text has no electrical impact on the circuit.

SPICE Directive: Place text on the schematic that will be included in the netlist. This lets you mix schematic capture with a SPICE netlist. It lets you set simulation options, include files that contain models, define new models, or use any other valid SPICE commands. You can even use it to run a subcircuit that you don't have a symbol for by stating an instance of the model (a SPICE command that begins with and 'X') on the schematic and including the definition.

SPICE Analysis: Enter/edit the simulation command. This command is not available for circuits run directly from the synthesizer. You must first save the circuit with a ".asc" file extension and then reopen it to edit the simulation command.

Resistor: Place a new resistor on the schematic.

Capacitor: Place a new capacitor on the schematic.

Inductor: Place a new inductor on the schematic.

Diode: Place a new diode on the schematic.

Component: Place a new component on the schematic. The command brings up a dialog that lets you browse and preview the symbol database. This is a more general form of the Resistor, Capacitor, Inductor, and Diode commands.

Rotate: Rotate the sprited objects. Note this is greyed out when there are no objected sprited.

Mirror: Mirror the sprited objects. Note this is greyed out when there are no objected sprited.

Draw Wire: Click the left mouse button to start a wire. Each mouse click will define a new wire segment. Click on an existing wire segment to join the new wire with an existing one. Right click once to cancel the current wire. Right click again to quit this command. You can draw wires through components such as resistors. The

wire will automatically be cut such that the resistor is now in series with the wire.

Label Net: Specify the name of a node so an arbitrary one isn't generated by the netlister for this node.

Place GND: Place a GROUND symbol. This is node "0", the global circuit common.

Delete: Delete objects by clicking on them or dragging a box around them.

Duplicate: Duplicate objects by clicking on them or dragging a box around them. You can copy from one schematic to another if they are both opened in the same invocation of LTspice/SwitcherCAD III. Start the Duplicate command in the window of the first schematic. Then make the second schematic the active window and type Ctrl-V.

Move: Click on or drag a box around the objects you wish to move. Then you can move those objects to a new location.

Paste: It is enabled in a new schematic window when objects were already selected with the 'Duplicate' command.

Drag: Click on or drag a box around the objects you wish to drag. Then you can move those objects to a new location and the attached the wires are rubber-band with the new location.

Draw=>Line: Draw a line on the schematic. Such lines have no electrical impact on the circuit, but can be useful for annotating the circuit with notes.

Draw=>Rectangle: Draw a rectangle on the schematic. This rectangle has no electrical impact on the circuit, but can be useful for annotating the circuit with notes.

Draw=>Circle: Draw a circle on the schematic. This circle has no electrical impact on the circuit, but can be useful for annotating the circuit with notes.

Draw=>Arc: Draw an arc on the schematic. This arc has no electrical impact on the circuit, but can be useful for annotating the circuit with notes.


NOTE: The graphical annotations to the schematic; lines, rectangles, circles, and arcs; snap by default to the same grid as the used for electrical contacts of wires and pins. Hold down the control key while positioning these to defeat this snap.

Label a node name


Each node in the circuit requires a unique name. You can specify the name of a node so an arbitrary one isn't generated by the netlister. Node "0" is the circuit global ground and is drawn with a special graphical symbol instead of the name "0".

There is also a graphical symbol defined for node "COM", but this node has no special significance. That is, it's not the SPICE global common and it's not even a global node. It's just sometimes convenient to have a graphical symbol associated with a node distinct from ground.

If you give a node a name starting with the characters "\$G_"; as in for example, "\$G_VDD"; then that node is global no matter where the name occurs in the circuit hierarchy.

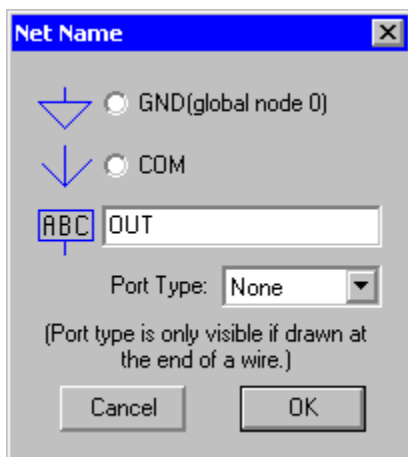


It is possible to indicate that a node is a port of type input, output, or bi-directional. These port types will be drawn differently but have no significance to the netlister. Indicating a port type can make circuit more readable. Global nodes are also drawn differently in that a box is drawn around the name.

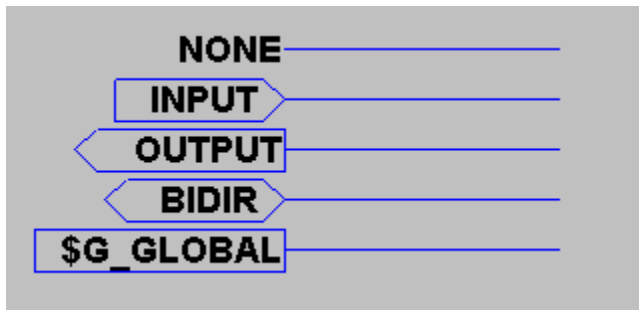

Schematic Colors

The menu command Tools=>Color Preferences colors allows you to set the colors used in displaying the schematics. You click on an object in the sample schematic and use the red, green and blue sliders to adjust the colors to your preferences.

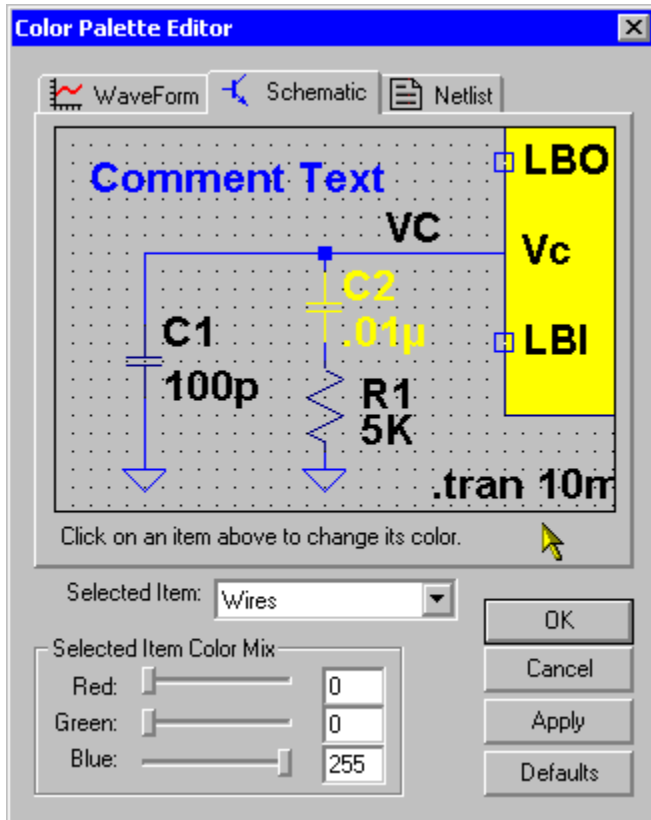


Note: Non-electrical graphical annotations made to schematics such as lines and circles will be draw in the same color as a component body.

Placing New Components


Certain frequently used components; such as resistors, capacitors, and inductors; can be selected for placing on the schematic with a toolbar button.

For most symbols, use the menu command Edit=>Component to start a dialog to browse for the device you wish.

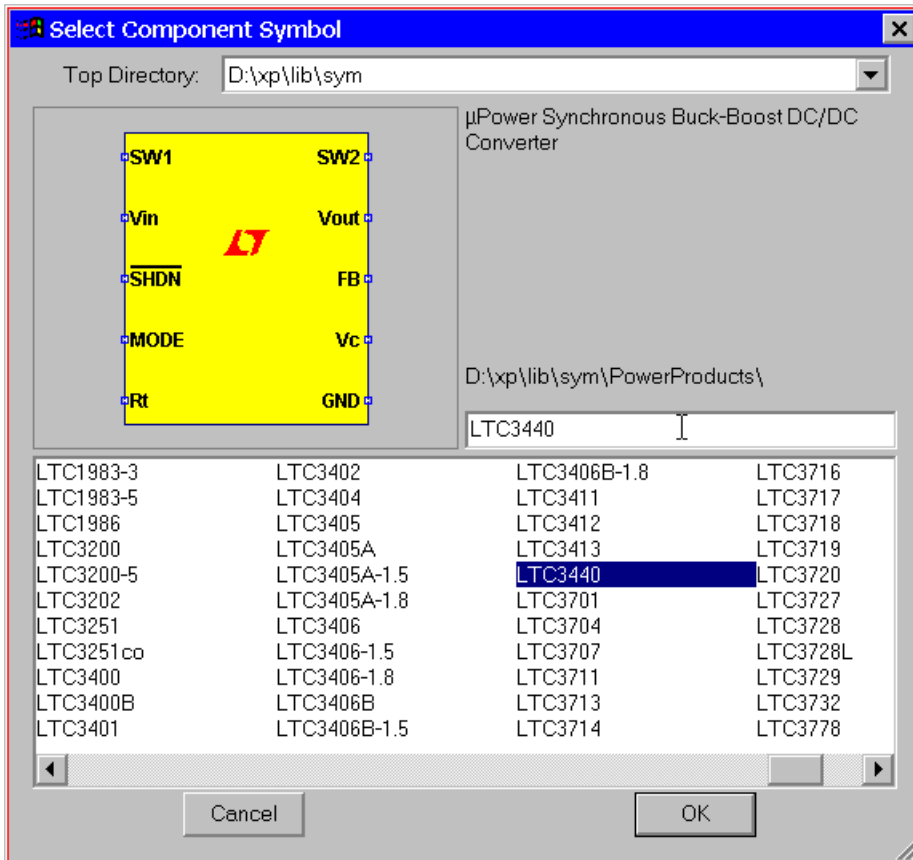

Programming Keyboard Shortcuts

The menu command Tools=>Control Panel=>Drafting Options=>Hot Keys allows you to program the keyboard shortcuts for most commands. Simply mouse click on a command and then press the key or key combination you would like to code for the command. To remove a shortcut, click on the command and press the "Delete" key.

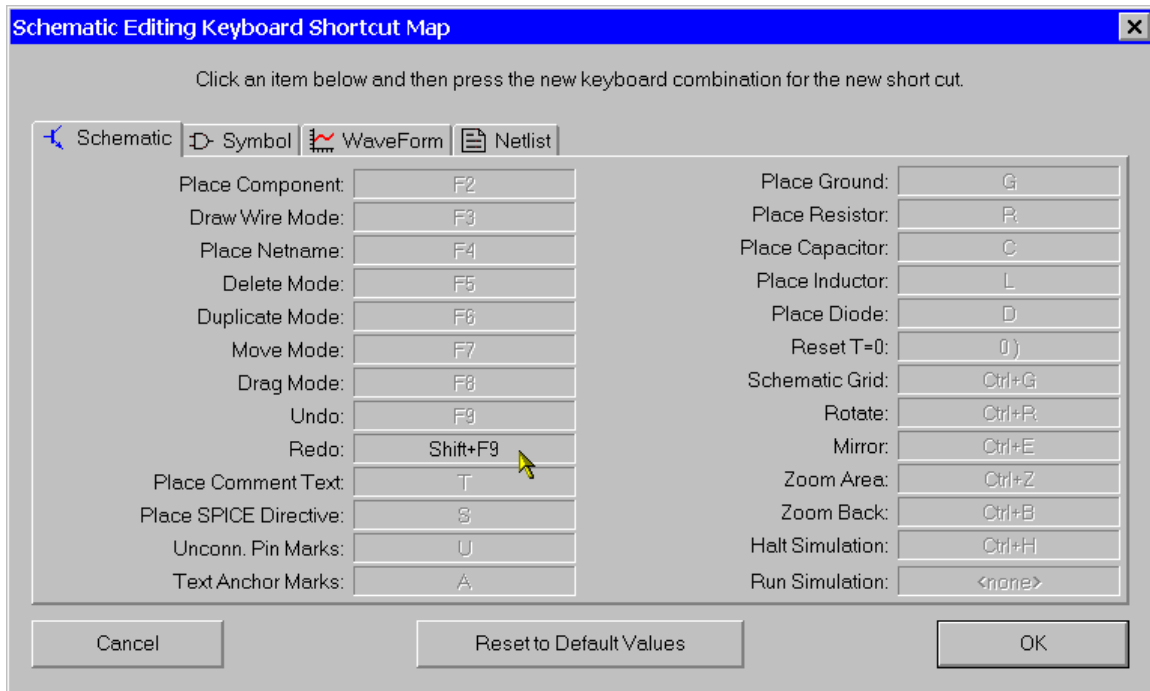

PCB Netlist Extraction

The schematic menu command Tools=>Export Netlist allows you to generate the ASCII netlist for PCB layout. Note that you would have to make a set of symbols that have the same order of pin netlist order. For example, if you want to import an LTspice schematic's netlist into ExpressPCB you would have to make a set of symbols for either LTspice or ExpressPCB that had the same netlist order for every symbol you use. Otherwise diodes could netlist backwards or transistor lead connections could be scrambled.

The following formats are available: Accel, Algorex, Allegro, Applicon Bravo, Applicon Leap, Cadnetix, Calay, Calay90, CBDS, Computervision, EE Designer, ExpressPCB, Intergraph, Mentor, Multiwire, PADS, Scicards, Tango, Telesis, Vectron, and Wire List.

Editing Components

Editing Components


Components can be edited in two or three different ways, depending on the type of component:

1. Most visible component attribute fields can be edited by pointing at it with the mouse and then right clicking. The mouse cursor will turn into a text caret when it's pointing at the text.
2. Many component types, such as resistors, capacitors, inductors, diodes, bipolar transistors, MOSFET transistors, JFET transistors, independent voltage sources, independent current sources, and hierarchical circuit blocks have special editors. These editors can access the appropriate database of devices. To use these editors, right mouse click on the body of the component.
3. Place the mouse over a symbol, hold down the control key, and click the right mouse button. A dialog box will appear that will displays all available symbol attributes. Next to each field is a check box to indicate if the field should be visible on the schematic.

Edit a visible attribute


Most visible component attribute fields can be edited by pointing at it with the mouse and then right clicking. The mouse cursor will turn into a text caret when it's pointing at the text. This is a convenient way of changing the value of a component.

|

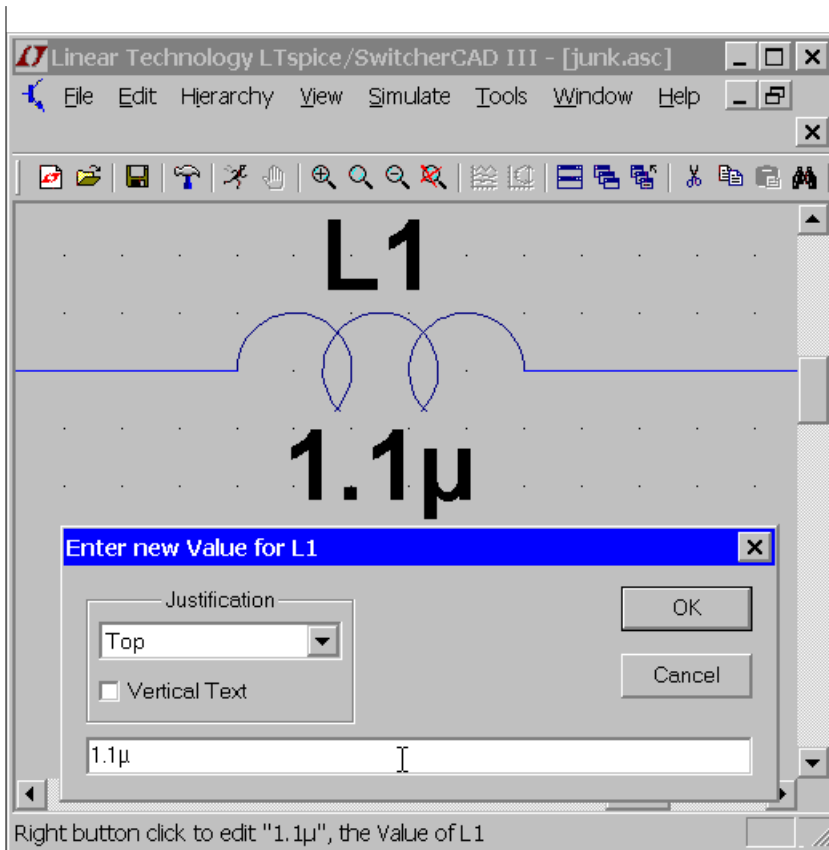


Specialized Component Editors

Many component types, such as resistors, capacitors, inductors, diodes, bipolar transistors, MOSFET transistors, JFET transistors, independent voltage sources, independent current sources, and hierarchical circuit blocks have special editors. These editors can access the appropriate database of related components. To use these editors, right mouse click on the body of the component.

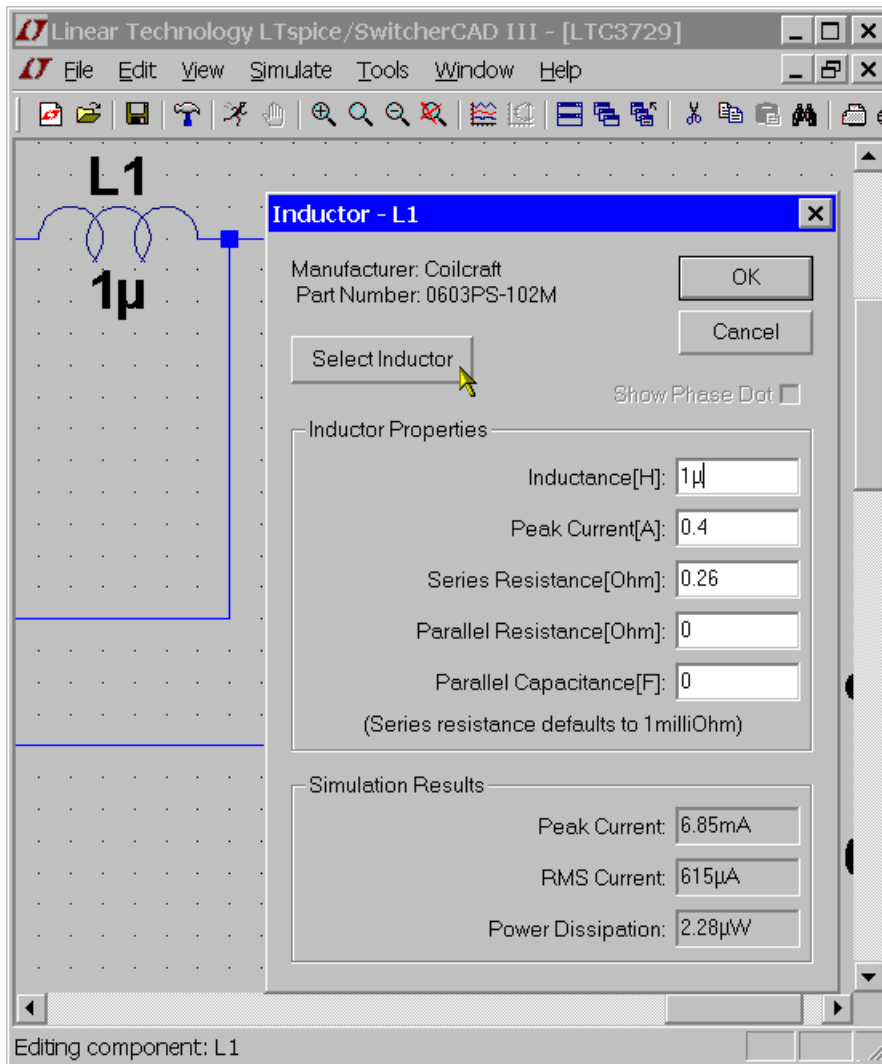

General Attribute Editor

Sometimes it is desired to get direct access to every available component attribute to edit their contents and visibility. An editor that allows you to do this can be reached by placing the mouse over the body of a symbol, holding down the control key, and clicking the right mouse button. A dialog box will appear that will displays all available symbol attributes. Next to each field is a check box to indicate if the field should be visible on the schematic.

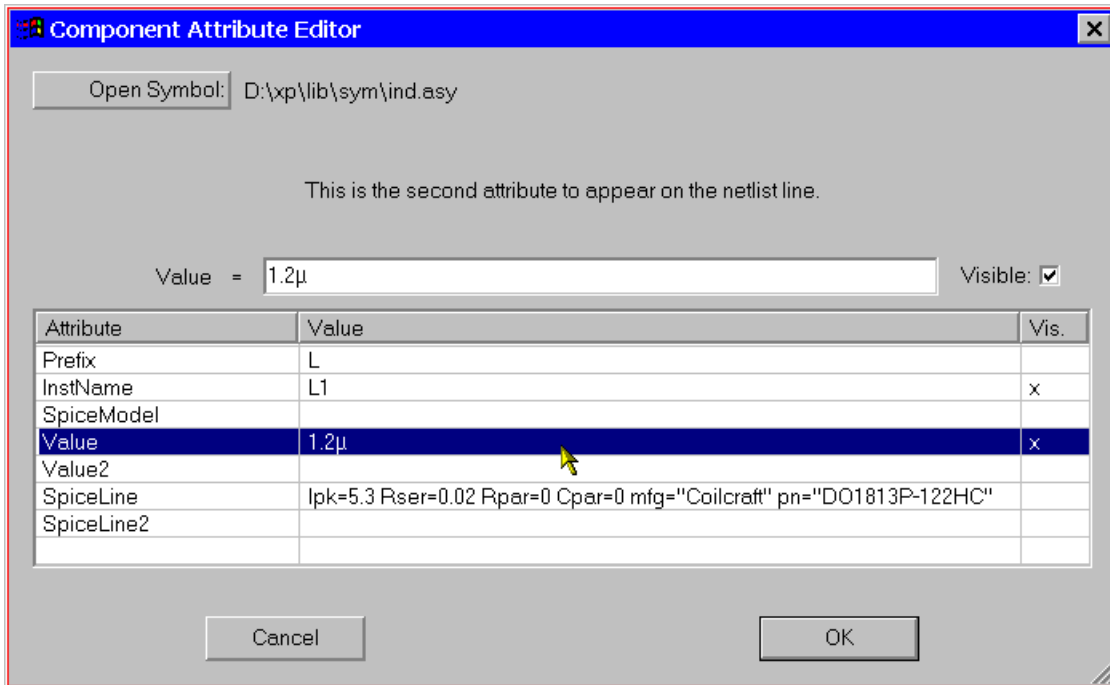

The attributes SpiceModel, Value, Value2, SpiceLine, and SpiceLine2 are all part of the overall value of the component. In terms of the way the component is netlisted for SPICE, the component will generate a line of SPICE that looks like this:

```
<name> node1 node2 [...] <SpiceModel>
+   <Value> <Value2> <SpiceLine> <SpiceLine2>
```

The prefix attribute character is prefixed to the reference designator if different than the first character of the reference designator. The Prefix character and InstName will be separated with a '\$' character in this case. For example, if you have a Prefix attribute of "M" and an InstName attribute of "Q1", the name in the netlist will be M\$Q1. This allows you use reference designators with a leading character different than SPICE uses to identify the type of device.

There are three exceptions to the above rule. There is one special symbol, jumper, that does not translate into a circuit element, but is a directive to the netlist generator that there are two different names for the same electrically identical node. Another exception is a symbol defined to have a prefix of 'X' and both a Value and Value2 attributes defined. Such a component netlists as two lines of SPICE:

```
.lib <SpiceModel>  
<name> node1 node2 [...] <Value2>
```

This allows symbols to be defined that automatically include the library that contains the definition of the subcircuit called by the component. The netlist compiler removes duplicate .lib statements. Note that such components are not editable on the schematic. The third exception is a symbol that has other exception is a symbol defined to have a prefix of 'X' and a ModelFile attribute defined. Such a component also netlists as two lines of SPICE:

```
.lib <ModelFile>  
<name> node1 node2 [...] <SpiceModel> <Value>  
<Value2> <SpiceLine> <SpiceLine2>
```

Use this method when you want to automatically include a library file yet still want to have an instance of this symbol editable. If the symbol attribute SpiceModel exists and is the name of a subcircuit in the file specified as <ModelFile> then a drop list of all subcircuits names will be available when an instance of the symbol is edited on a schematic.

Creating New Symbols

Symbol Editing Overview


Symbols can represent a primitive device such as a resistor or a capacitor; a subcircuit libraried in a

separate file; or another page of the schematic. This section describes how to define your own new symbols. To start a new symbol, use the menu command File=>New Symbol.

NOTE: Screen updates during symbol editing can be slow. If this is a problem with your video card, reduce the area of the symbol-editing window to speed up screen redraws and/or reduce the screen's color resolution. This will give better tactical response to mouse movement.


Drawing the body

You draw the body of the symbol as a series of lines, rectangles, circles, and arcs. The objects have no electrical impact on the circuit. You can also draw text on the symbol with the Draw=>Text command that has no impact on the circuit. The anchor points of this objects are drawn with small red circles so you know what to grab when dragging them about. You can toggle the red markers off and on with the menu command View=>Mark Object Anchors

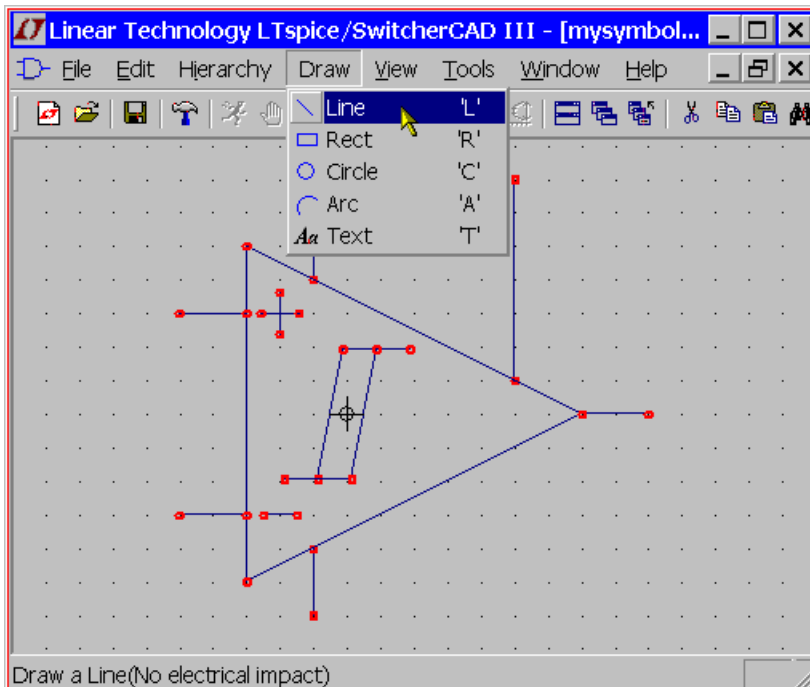

Adding the Pins

The pins allow electrical connection to the symbol. Use the menu command Edit=>Add Pin/Port to add a new pin.

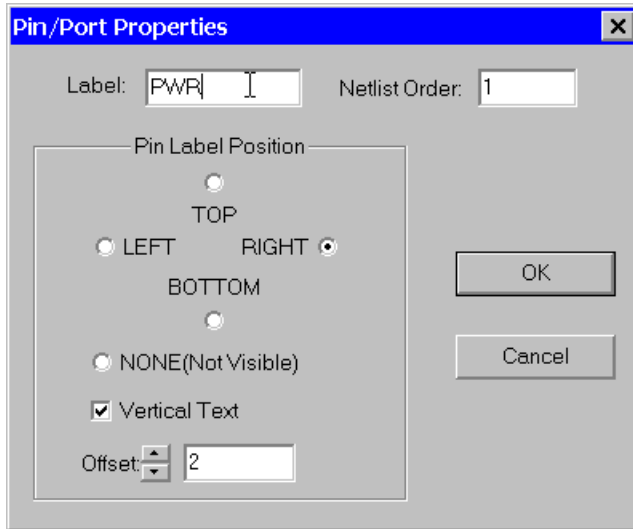


The "Pin Label Position" determines how the pin label is presented. "TOP", "BOTTOM", "LEFT", and "RIGHT" are text justifications. For example, if a pin label is TOP justified, the pin(the label's text justification's anchor point) will be above the label. If the symbol represents a SPICE primitive element or a subcircuit from a library, then the pin label has no direct electrical impact on the circuit. However, if the symbol represents lower-level schematic of a hierarchical schematic, then the pin name is significant as the name of a net in the lower level schematic.

The "Netlist Order" determines the order this pin is netlisted for SPICE.

Adding Attributes

You can define default attributes for a symbol using the menu command Edit=>Attributes=>Edit Attributes. The most important attribute is called the "Prefix". This determines the basic type of symbol. If the symbol is intended to represent a SPICE primitive, the symbol should have the appropriate prefix, R for resistor, C or capacitor, M for MOSFET, etc. See the LTspice reference for a complete set of SPICE primitives available. The prefix should be 'X' if you want to use the symbol to represent a subcircuit defined in a library.

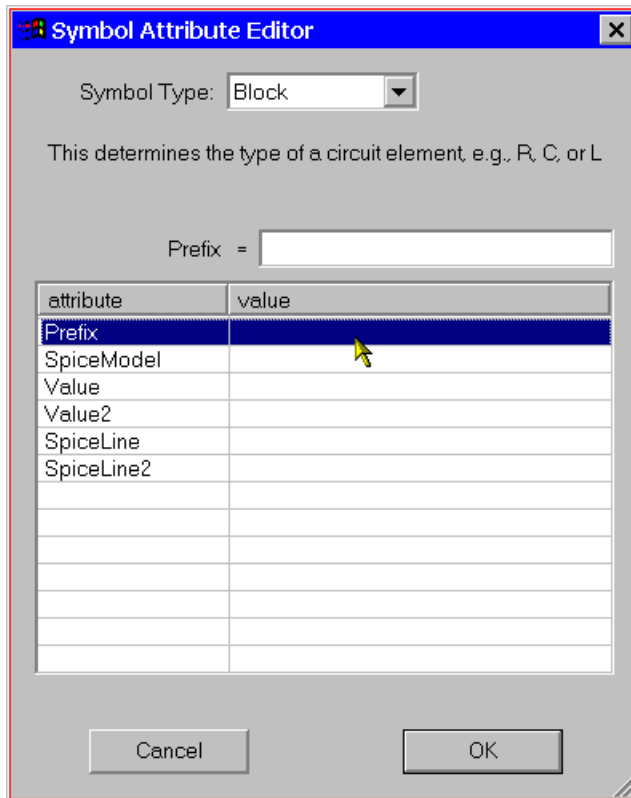

The symbol's attributes can be overridden in the instance of the symbol as a component in a schematic. For example, if you have a symbol for a MOSFET with a prefix attribute of 'M', it's possible to override the prefix to an 'X' on an instance-by-instance basis so that the transistor can be modeled as subcircuit instead.

There is a special combination of attributes that will cause a required library to be automatically included in every schematic that uses the symbol:

Prefix: X

SpiceModel: <name of file including the spicemodel>

Value: <What ever you want visible on the schematic>

Value2: <The value as you want in the netlist>


Value2 would be made to coincide with a subcircuit name defined in the file including the spicemodel and may pass additional parameters to the subcircuit. When a symbol is defined in this manner, an instance of the symbol as a component on a schematic cannot be edited to have different attributes.

If you wish the symbol to represent another page of a hierarchical schematic, all attributes should be left blank the symbol type should be changed from "Cell" to "Block". No attribute values need be set.


There is a symbol attribute, ModelFile, that may be specified. This is used for the name of a file to be included in the netlist as a library. See the symbol/subcircuit pair `.\lib\sym\Opamps\lpole.asy` and `.\lib\sub\lpole.sub` to see an example of the utility of this attribute. If the prefix attribute is 'X' and there is a symbol attribute SpiceModel defined that is subcircuit defined in the model file, then a drop list of all subcircuits names will be available when an instance of the symbol is edited on a schematic.

Attribute Visibility

You can edit the visibility of attributes using the menu command Edit=>Attributes=>Attribute Window. After you select an attribute with this dialog you will then be able to position it as you wish with respect to the symbol.

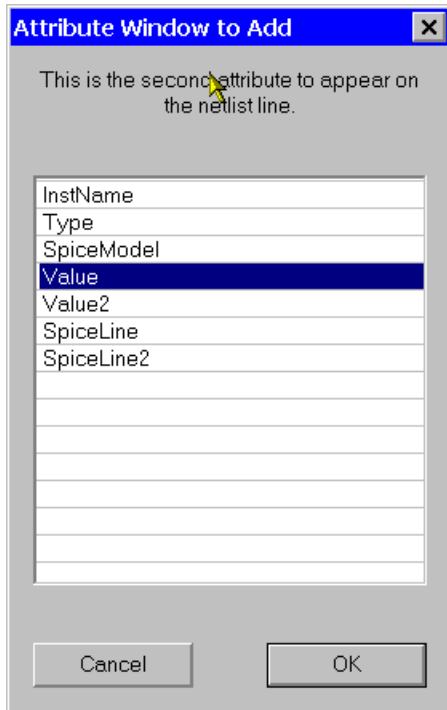

You can modify the text justification and contents of attributes that you've already made visible by right mouse clicking on the text of the attribute.

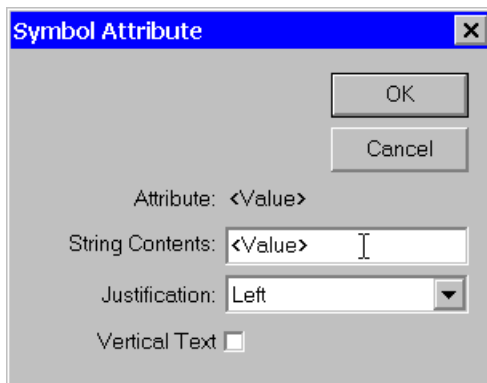


Hierarchy

Hierarchy Overview

Hierarchical schematic drafting has powerful advantages. Much larger circuits can be drafted than can fit onto a one sheet schematic while retaining the clarity of the smaller schematics. Repeated circuitry to be easily handled in an abstract manner. Blocks of circuitry can be libraried for latter use in a different project.

Rules of Hierarchy

The way to refer to another schematic as a block in a higher level schematic is to create a symbol with the same name as the block schematic and then by placing that symbol on the higher level schematic. For example, if you have a top-level schematic called topXYZ.asc and another schematic file called preamp.asc that you wish to place in the schematic of topXYZ then create a symbol called preamp.asy and place an instance of that symbol on the schematic of topXYZ. The electrical connectivity between the schematics is established by connecting wires of the higher-level schematic to pins on the lower level block's symbol that matches the name of a node in the lower-level schematic.

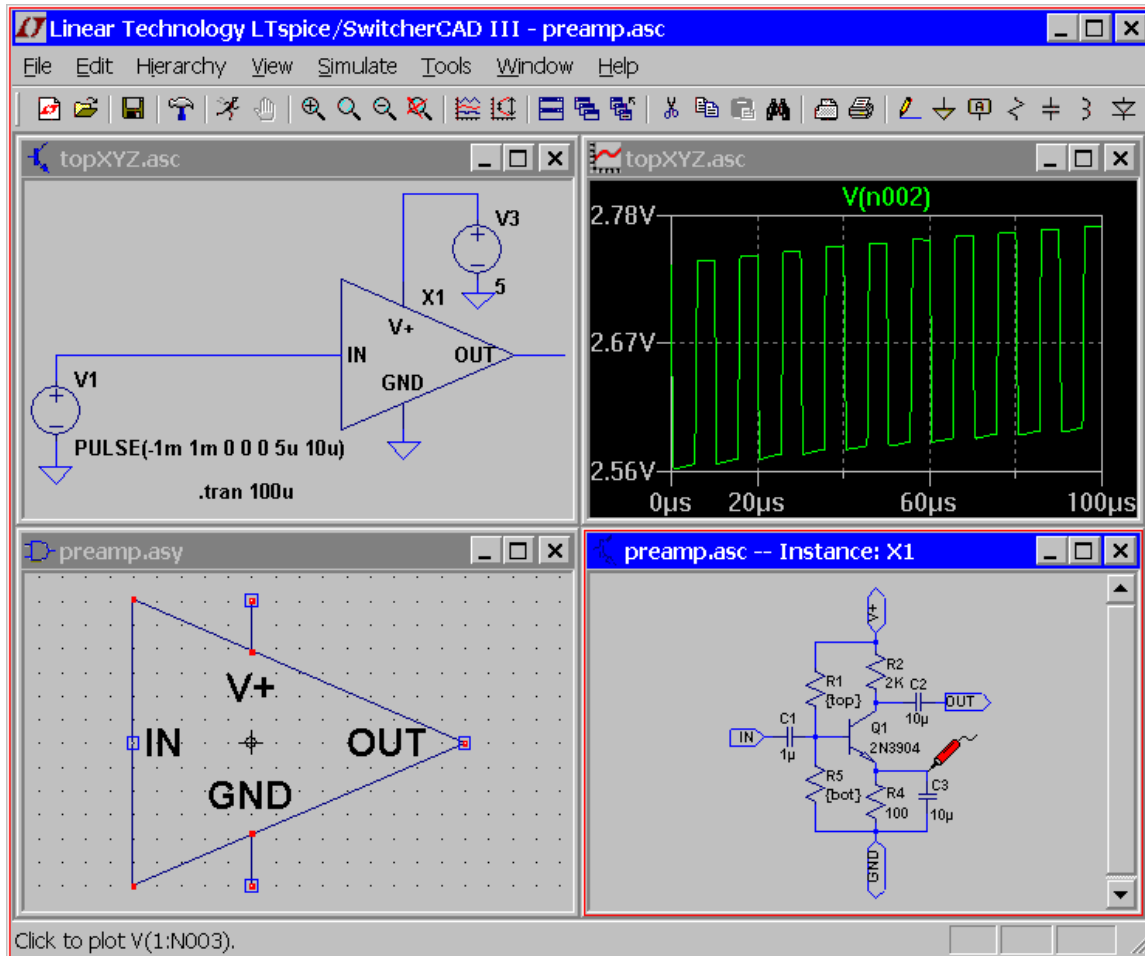


LTspice will look in the directory of the top-level schematic for symbols and blocks to complete the circuitry of the top-level schematic.

The symbol you create to represent the lower-level schematic block should have no attributes defined.

Navigating the Hierarchy

Any file opened with the File=>Open command is considered a top-level schematic. You can add SPICE directives to that block and run simulations using only it and any lower-level schematics to which it refers.

To open a schematic block as an instance of a block of a higher-level schematic, first open the higher-level schematic and then move the mouse to the body of the instance of the symbol calling the block. When you right mouse click on the body of the instance of that symbol, a special dialog appears that allows you to open the schematic. When you open the schematic in this manner, you can cross probe the nodes and current in the block. Note that you should have the options "Save Subcircuit Node Voltages" and "Save Subcircuit Device Currents" checked on the Save Defaults Pane of the Control Panel. Also, if you've highlighted a node on the top-level schematic, that node will be also highlighted in the lower level block.

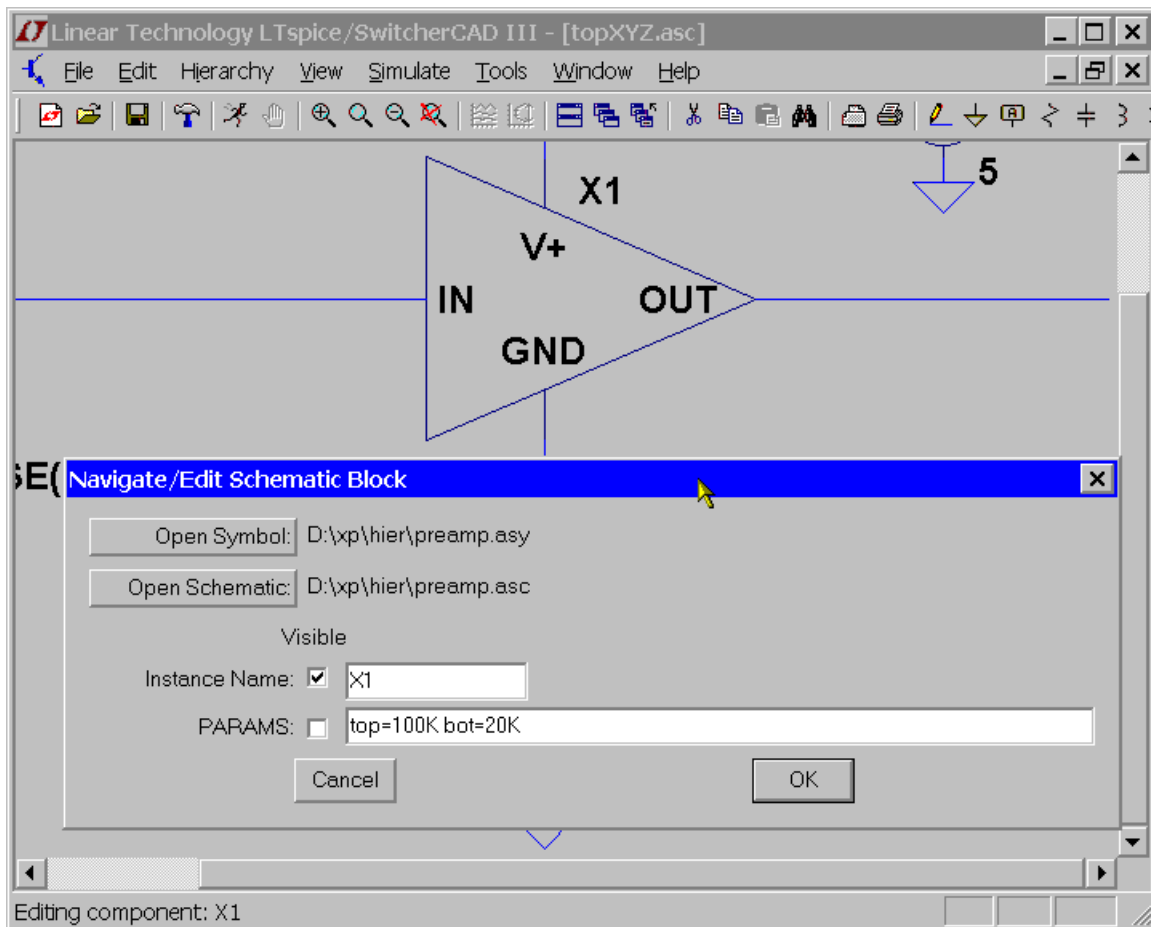

Note that is dialog also allows you to enter parameters to pass to this instance of the circuitry in preamp.asc.

Waveform Viewer

Overview

SwitcherCAD III includes an integrated waveform viewer that allows complete control over the manner the simulation data is plotted.

Trace Selection

There are three basic means of selecting plotted traces.


1. Probing directly from the schematic
2. Menu command Plot Settings=>Visible Traces
3. Menu command Plot Settings=>Add Trace

The undo and redo commands allow you to review the different trace selections plotted no matter which method of selection is used.

1. Probing directly from the schematic:


The easiest method is to simply probe the schematic. You simply point and click at a wire to plot the voltage on that wire. You plot the current through any component with two connections (like a resistor, capacitor or an inductor) by clicking on the body of the component. This works at any level of the circuit's hierarchy. You can also plot current into a particular connection of a component with more than two pins by clicking on that pin of the symbol. If you click the same voltage or current twice, then all other traces will be erased and the double clicked trace will be plotted by itself. You can delete individual traces by clicking on the trace's label

after selecting the delete command. The following screen shot shows how to point at a pin current. Notice that the mouse cursor turns into an icon that looks like a clamp on ammeter when it's pointing at a current that can be plotted.

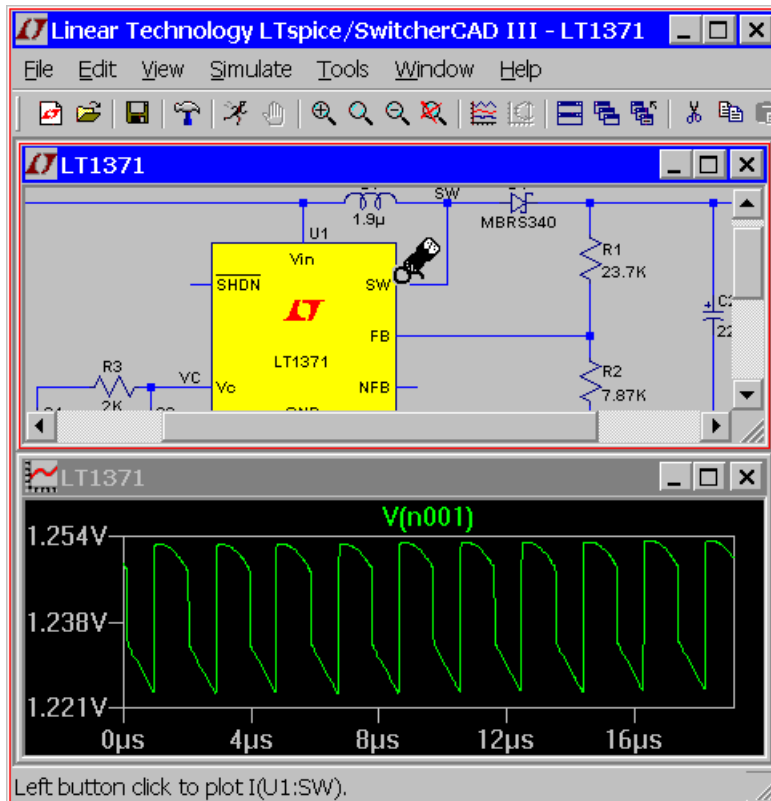


When plotting a pin current, the convention of positive current is in the direction into the pin.

It is also possible to point at voltage differences with the mouse. You can click on one node and drag the mouse to another node. You will see the red voltage probe at the first node and a black probe on the second. This allows you to differentially plot voltages:

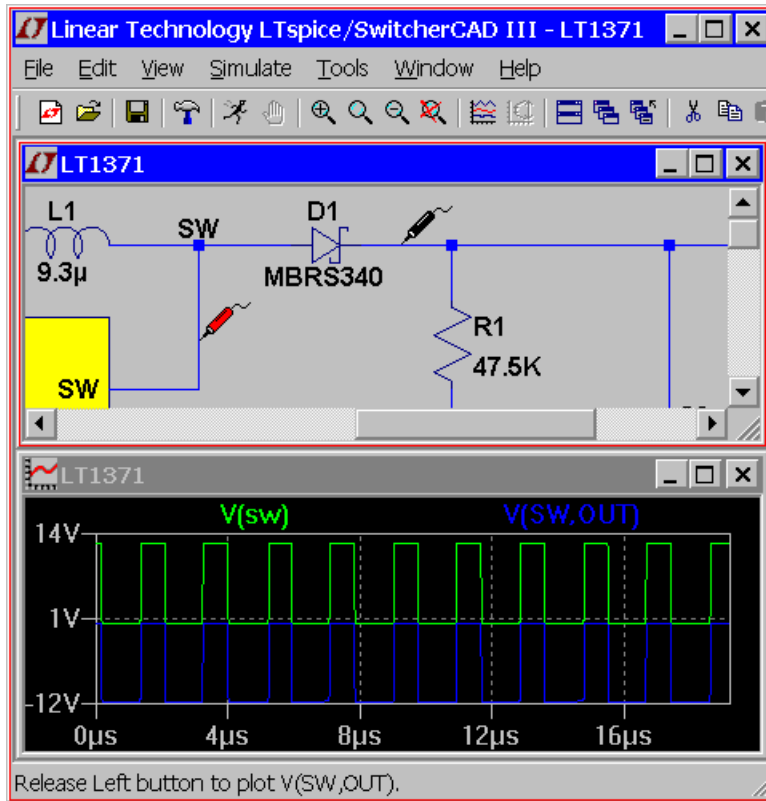


Yet another schematic probing technique is to plot the instantaneous power dissipation of a component. To do this, hold down the Alt key and click on the body of the symbol of the component. The instantaneous power dissipation will be plotted as an expression of voltages and currents. It will be plotted on it's own scale with the units of Watts. The mouse cursor turns into an icon that looks like a thermometer when it's pointing at a dissipation that can be plotted. You can find the average power dissipation by control-clicking the trace label.

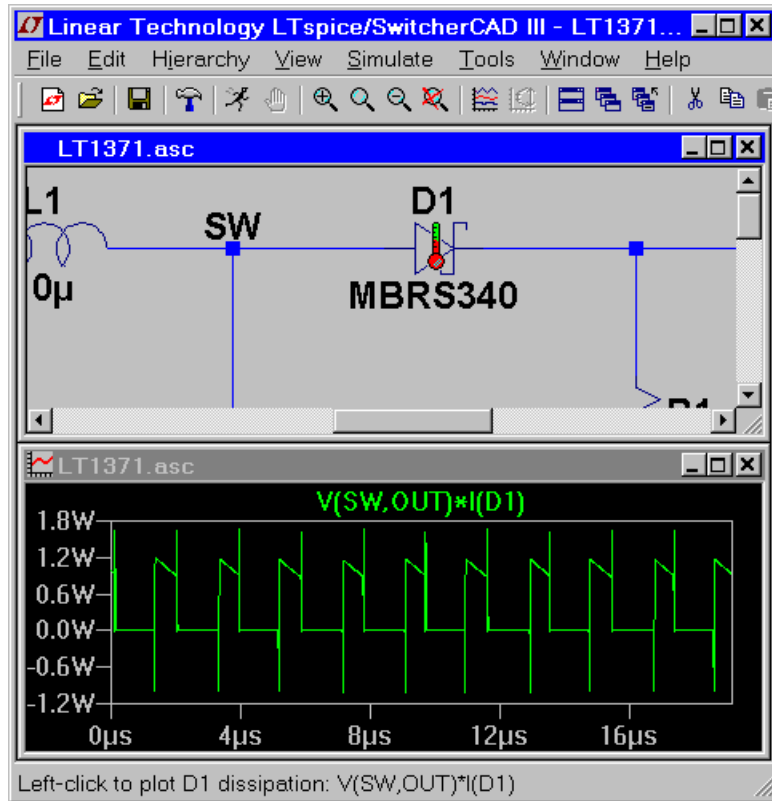


2. Menu command Plot Settings=>Visible Traces:

The menu command Plot Settings=>Visible Traces is the dialog seen at the beginning of plotting data from a simulation. It lets you select the initial traces to start the plot. It also gives you random access to the full list of traces plotted.

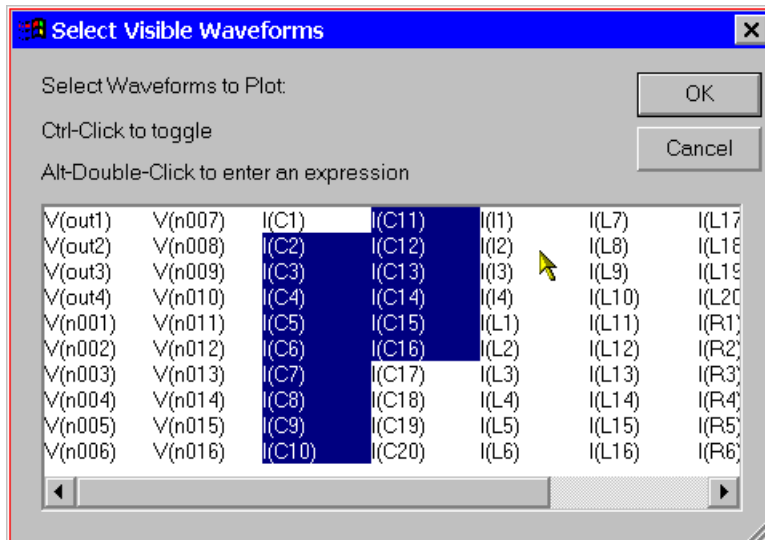


3. Menu command View=>Add Trace:

The Plot Settings=>Add Trace command is similar to the Plot Settings=>Visible Traces command. However, you can not delete traces that are already visible with it. It has two useful capabilities. One is an edit box near the top of the dialog that allows you to enter a pattern of characters. Only trace names that match the pattern will be shown in the dialog. This is very useful for finding a trace when you can only partially remember the name. Also, it's a bit easier to compose an expression of trace data because you can click on a name in the dialog instead of typing out its name.

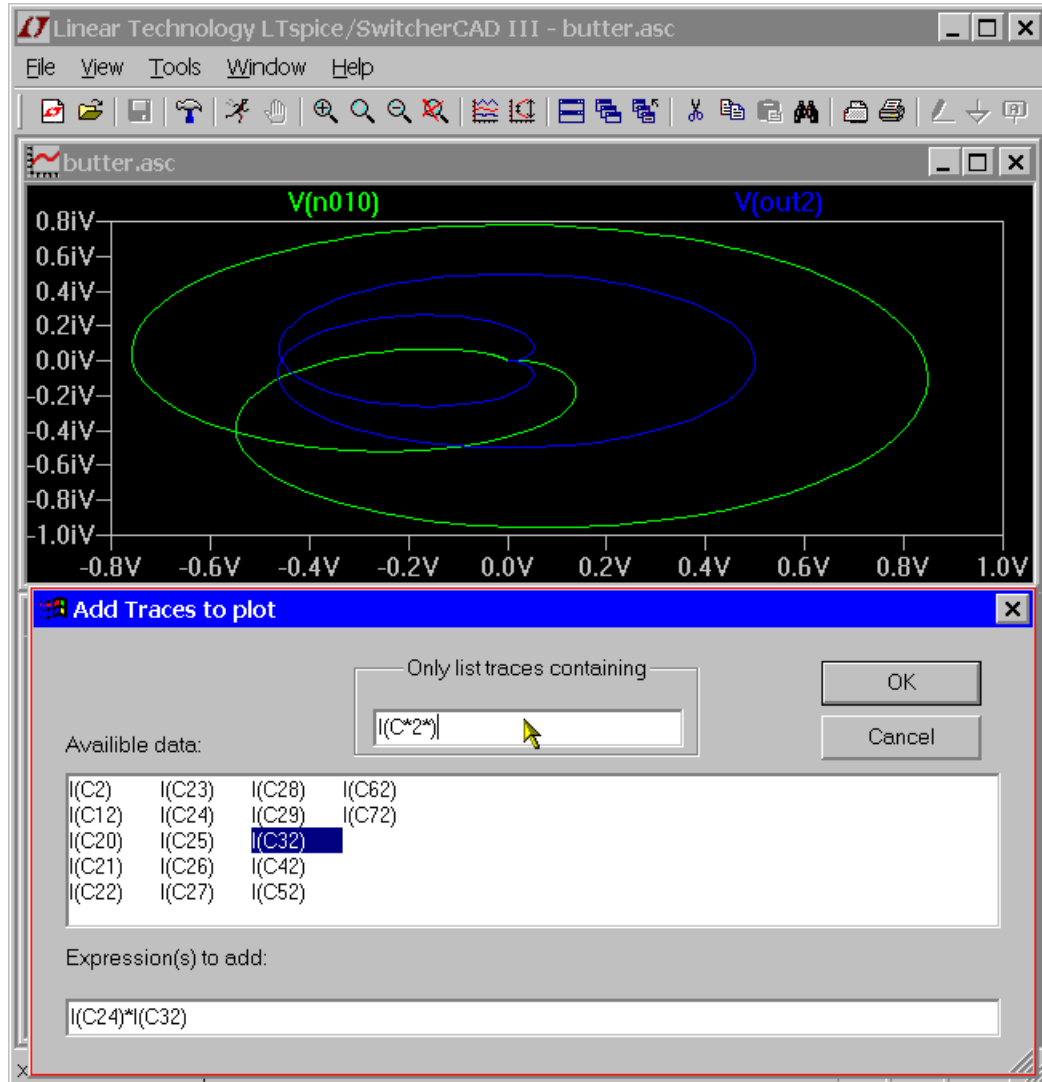

Zooming

LTspice/SwitcherCAD III autozooms whenever there is new data to plot. To zoom up on an area, simply drag a box about the region you wish to see drawn larger.

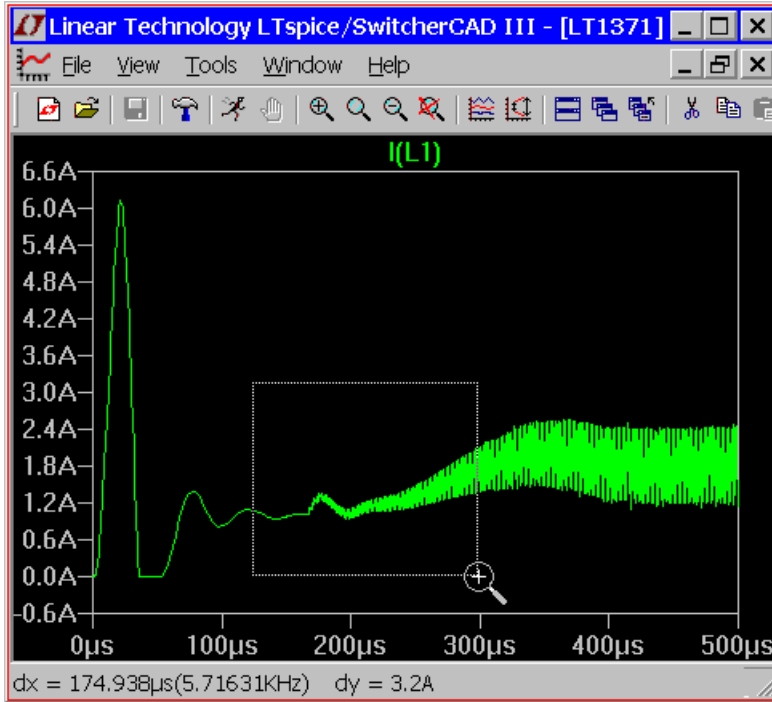

There are toolbar buttons and menu commands for zooming out, panning, and returning to the autoranged zoom. Note the undo and redo commands allow you to review the different zooms used.

Waveform Arithmetic


There are three types of mathematical operations that can be performed on waveform data:

1. Plot expressions of traces.
2. Compute the average or RMS of a trace.

3. Display the Fourier Transform of a Trace.

1. Plot expressions of traces.

Both the View=>Visible Traces and View=>Add Trace commands allow one to enter an expression of data. Another method to plot an expression of available simulation data traces is to move the mouse to the trace's label and right click. This dialog box also allows you to set the trace's color and allows you to attach a cursor to the waveform. LTspice will do a dimensional analysis of the expression and plot it against a vertical axis labeled with those units. All waveforms in a plotting pane with the same units are plotted on the same axis.

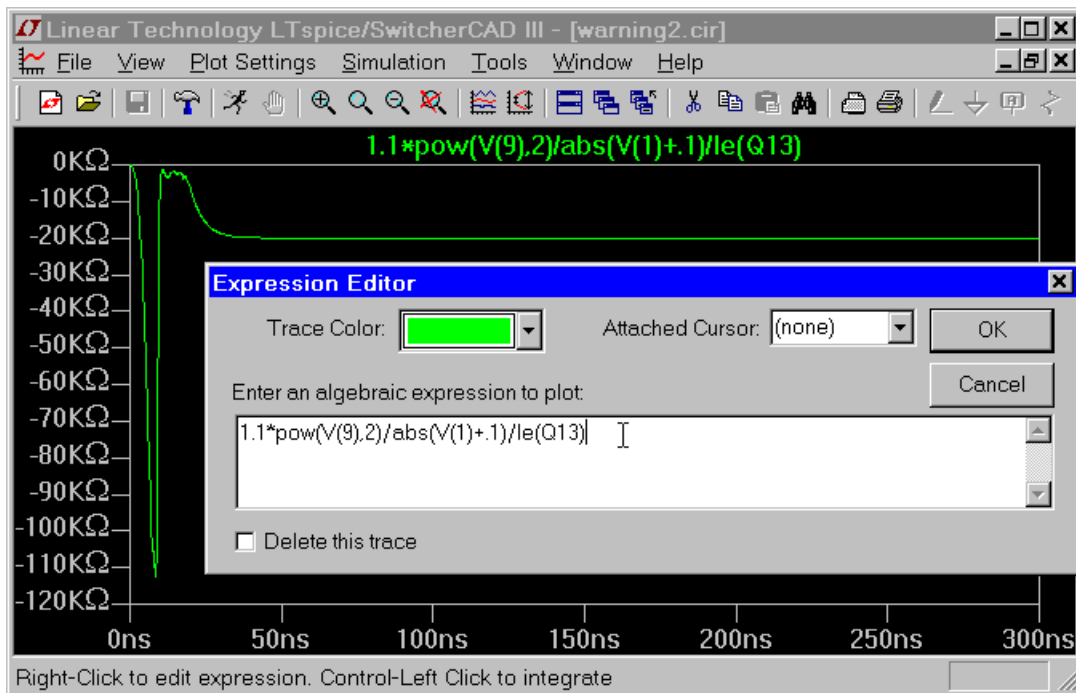

The difference of two voltages; e.g., $V(a) - V(b)$; can equivalently be written as $V(a,b)$. The following functions are available for real data:

name	function
abs(x)	absolute value
acos(x)	arc cosine of x

```

    acosh(x) | arc hyperbolic cosine
    asin(x)  | arc sine
    asinh(x) | arc hyperbolic sine
    atan(x)  | arc tangent
atan2(y,x) | four quadrant arc tangent of y/x
    atanh(x) | arc hyperbolic tangent
    buf(x)   | 1 if x > .5, else 0
    ceil(x)  | integer equal or greater than x
    cos(x)   | cosine
    cosh(x)  | hyperbolic
    exp(x)   | exponential
    floor(x) | integer equal or less than x
    if(x,y,z) | if x > .5, then y else z
    int(x)   | convert x to integer
    inv(x)   | 0 if x > .5, else 1
limit(x,y,z) | equivalent to min(max(x,y),z)
    ln(x)    | natural logarithm
    log(x)   | natural logarithm
    log10(x) | base 10 logarithm
    min(x,y) | the less of x or y
    max(x,y) | the greater of x or y
    rand(x)  | random number between 0 and 1.
random(x)   | random number between 0 and 1 that
              | transitions smoothly between values.
    re(x)   | real part of complex x
    sgn(x)  | sign
    sin(x)  | sine
    sinh(x) | hyperbolic sine
    sqrt(x) | square root
table(x,a,b,...) | interpolate a value for x
                  | based on a look up table given
                  | as a set of pairs of points
    tan(x)  | tangent
    tanh(x) | hyperbolic tangent
    u(x)    | unit step, 1 if x > 0., else 0.
uramp(x)   | x if x > 0., else 0.
white(x)   | random number between -.5 and .5
              | smoothly transitions between values
              | even more smoothly than random()

```

For complex data, the functions `atan2(,)`, `sgn()`, `u()`, `buf()`, `inv()`, `uramp()`, `int()`, `floor()`, `ceil()`, `rand()`, `min(,)`, `limit(,)`, `if(,,)`, and `table(...)` are not available. The functions `Re(x)` and `Im(x)` are available for complex data and return a complex number with the real part equal to the real or imaginary part of the argument respectively and the imaginary part

equal to zero. The functions Ph(x) and Mag(x) are also available for complex data and return a complex number with the real part equal to the phase angle or magnitude of the argument respectively and the imaginary part equal to zero. The function conj(x) is also available for complex data and returns the complex conjugate of x.

The following operations, grouped in reverse order of precedence of evaluation, are available for real data:

symbol	Operation
&	convert the expressions to either side to Boolean, then AND
	convert the expressions to either side to Boolean, then OR
^	convert the expressions to either side to Boolean, then XOR
<	TRUE if expression on the left is less than the expression on the right, otherwise false
>	TRUE if expression on the left is greater than the expression on the right, otherwise FALSE
<=	TRUE if expression on the left is less than or equal the expression on the right, otherwise FALSE
>=	TRUE if expression on the left is greater than or equal the expression on the right, otherwise FALSE
+	addition
-	subtraction
*	multiplication
/	division

```

** | raise left hand side to power of
   | right hand side
!  | convert the following expression
   | to Boolean and invert
@  | step selection operator

```

TRUE is numerically equal to 1 and FALSE is 0. Conversion to Boolean converts a value to 1 if the value is greater than 0.5, otherwise the value is converted to 0.

The step selection operator, '@' is useful when multiple simulation runs are available as in a .step, .temp, or .dc analysis. It selects the data from a specific run. For example, V(1)@3 would plot the data from the 3rd run no matter what steps were selected for plotting.

For complex data, only +, -, *, /, **, and @ are available. Also with regard to complex data, the Boolean XOR operator, ^ is understood to mean exponentiation, **.


The following constants are also internally defined:

constant	value
e	2.7182818284590452354
pi	3.14159265358979323846
k	1.3806503e-23
q	1.602176462e-19

The keyword "time" is understood when plotting transient analysis waveform data. Similarly, "freq" and "omega" are understood when plotting data from an AC analysis. "w" can be used as a synonym for omega.


2. Compute the average or RMS of a trace.

The waveform viewer can integrate a trace to obtain the average and RMS value over the displayed region. First zoom the waveform to the region of interest, then move the mouse to the label of the trace, hold down the control key and left mouse click.

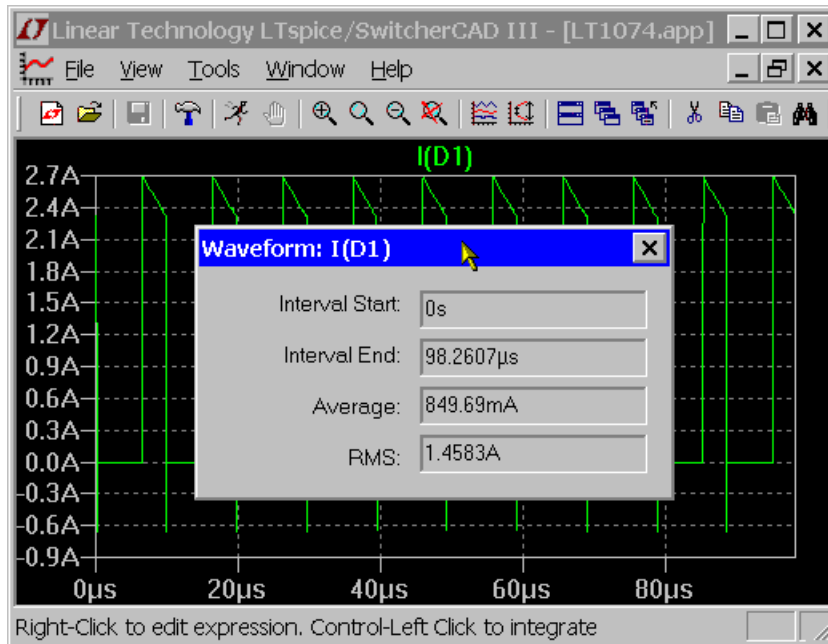

3. Display the Fourier Transform of a Trace.

You can use the menu command View=>FFT to perform a Fast Fourier transform on various data traces.

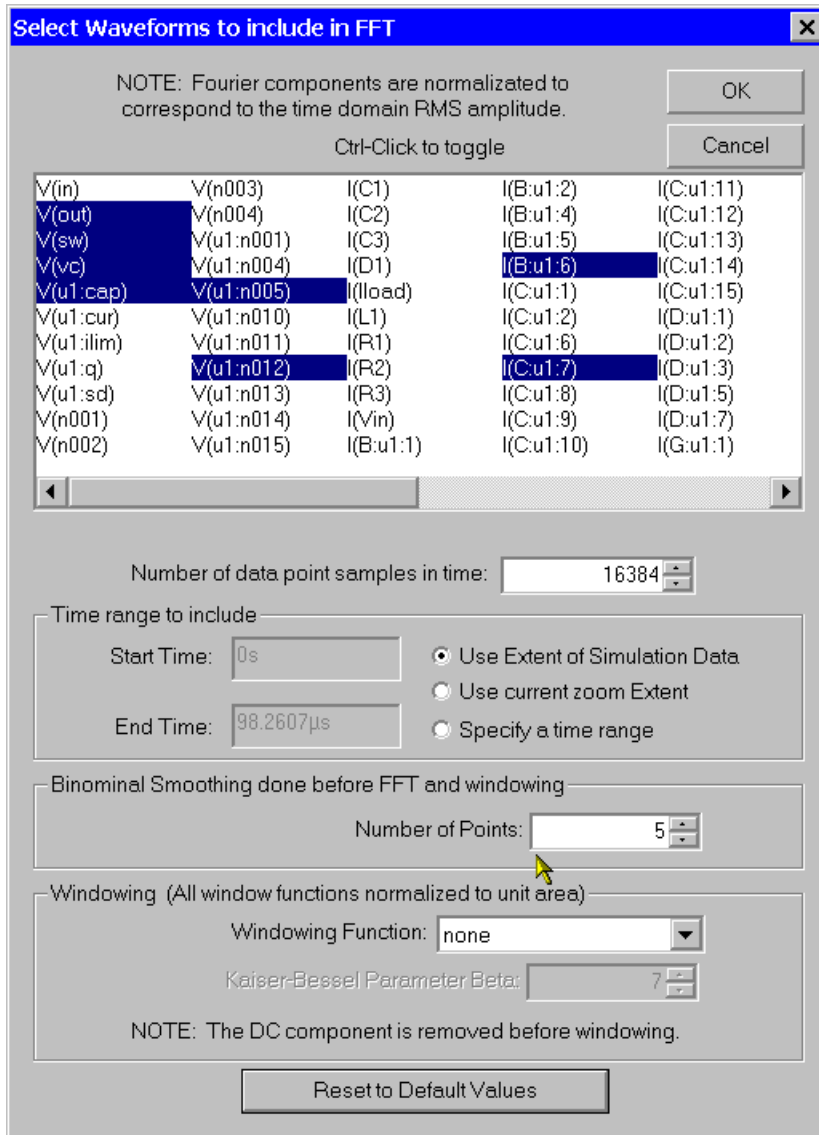

User-Defined Functions

The menu command Plot Settings=>Edit Plot Defs File allows you to enter your own function definitions and parameter definitions for use in the waveform viewer. These functions are kept in the file plot.defs in the same directory as the SwCADIII executable, scad3.exe.

Then the syntax is the same as the .param and .func statements used for parameterized circuits. E.g., the line

```
.func Pythag(x,y) {sqrt(x*x+y*y)}
```

defines the function Pythag() to be the square root of the sum of its two arguments.

Similarly, the line

```
.param twopi = 2*pi
```

would define twopi to be 6.28318530717959. Note that it uses the already internally defined constant pi of the waveform viewer.


Axis Control

When you move the mouse cursor beyond the data plotting region, the cursor turns into a ruler. This tries to indicate that you are pointing at that axis' attributes. When you left click you can enter a dialog to manually enter that axis' range and the nature of the plot. For example, for real data, if you move the mouse to the bottom of the screen and left click, you can enter a dialog to change the horizontal quantity plotted. This lets you make parametric plots.

For complex data, you can choose to plot either phase, group delay, or nothing against the right vertical axis. You can change the representation of complex data from Bode to Nyquist or Cartesian by moving the mouse to the left vertical axis of complex data.


Plot Panes

Multiple plot panes can be displayed on one window. This allows better separation between traces and allows different traces to be independently autoscaled. Traces can be dragged between panes by dragging the label. A copy of a trace can be made on another pane by holding down the control key when you release the mouse button.

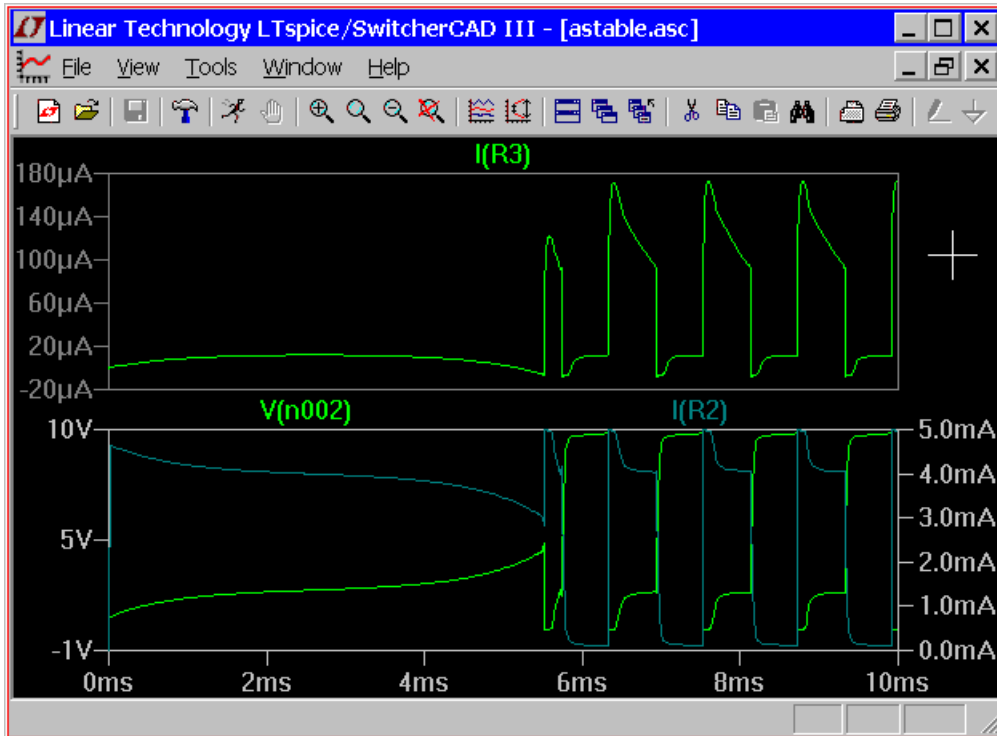


Color Control

The menu command Tools=>Color Preferences colors allows you to set the colors used for plotting data. You click on an object in the sample plot and use the red, green and blue sliders to adjust the colors to your preferences.

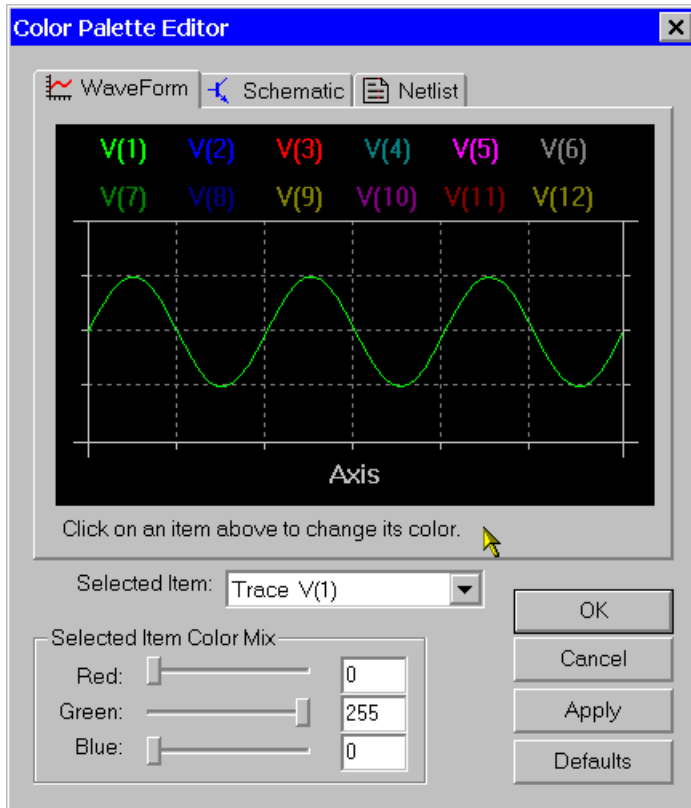


Attached Cursors


There are up to two attached cursors available. You can attach a cursor to a trace by left mouse clicking on the trace label. You can attach both cursors to a single trace by right clicking on the trace label and selecting "1st & 2nd". You can also attach the 1st or 2nd cursor or both cursors to any trace by right clicking on that trace's label and using the Attached Cursor drop down box. The attached cursors can be dragged about with the mouse or moved with the cursor keys.

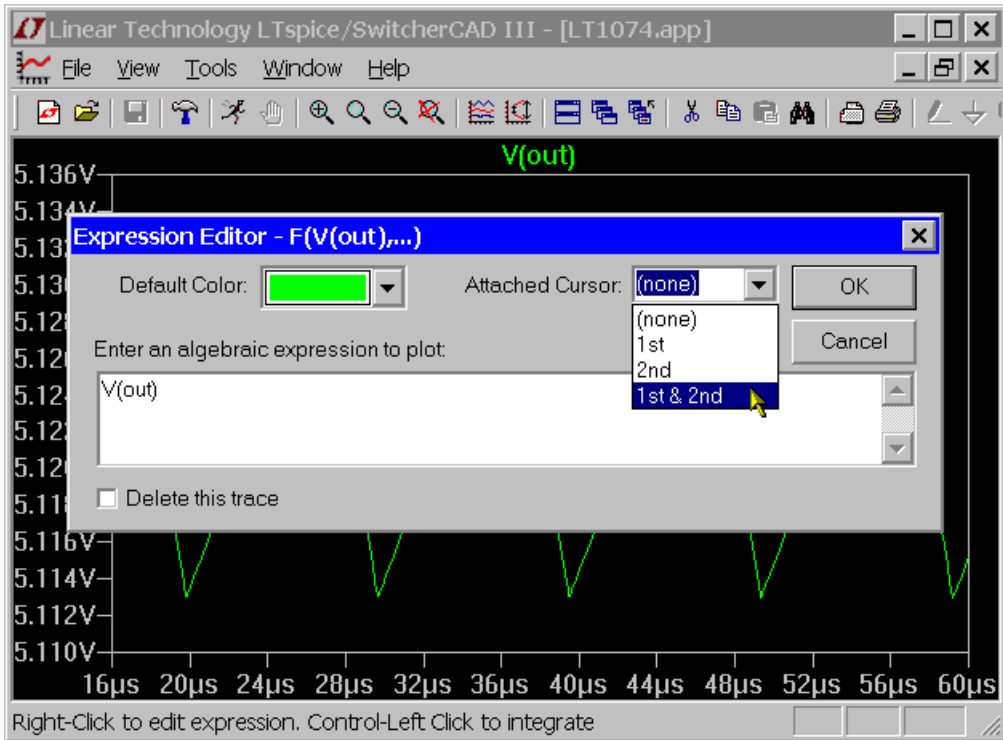


When there are attached cursors active, a readout display becomes visible that will tell you the location and difference of the cursors.

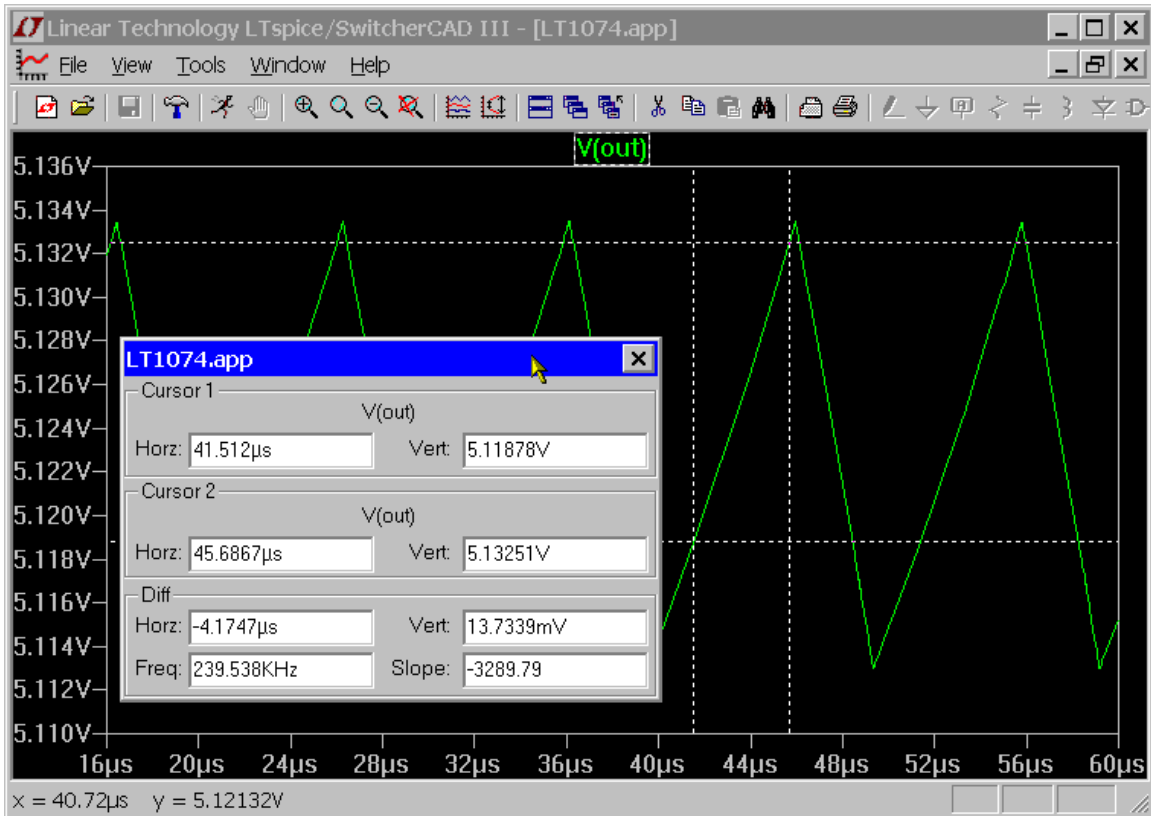

Note that there is also mouse cursor readout independent of the above attached cursor readout. As you move the mouse over the waveform window, the mouse position is readout on the status bar. If you drag the mouse as if you were going to zoom, the size of box is displayed on the status bar. This lets you quickly measure differences with the mouse cursor. If the horizontal axis is time, then this time difference is also converted to frequency.

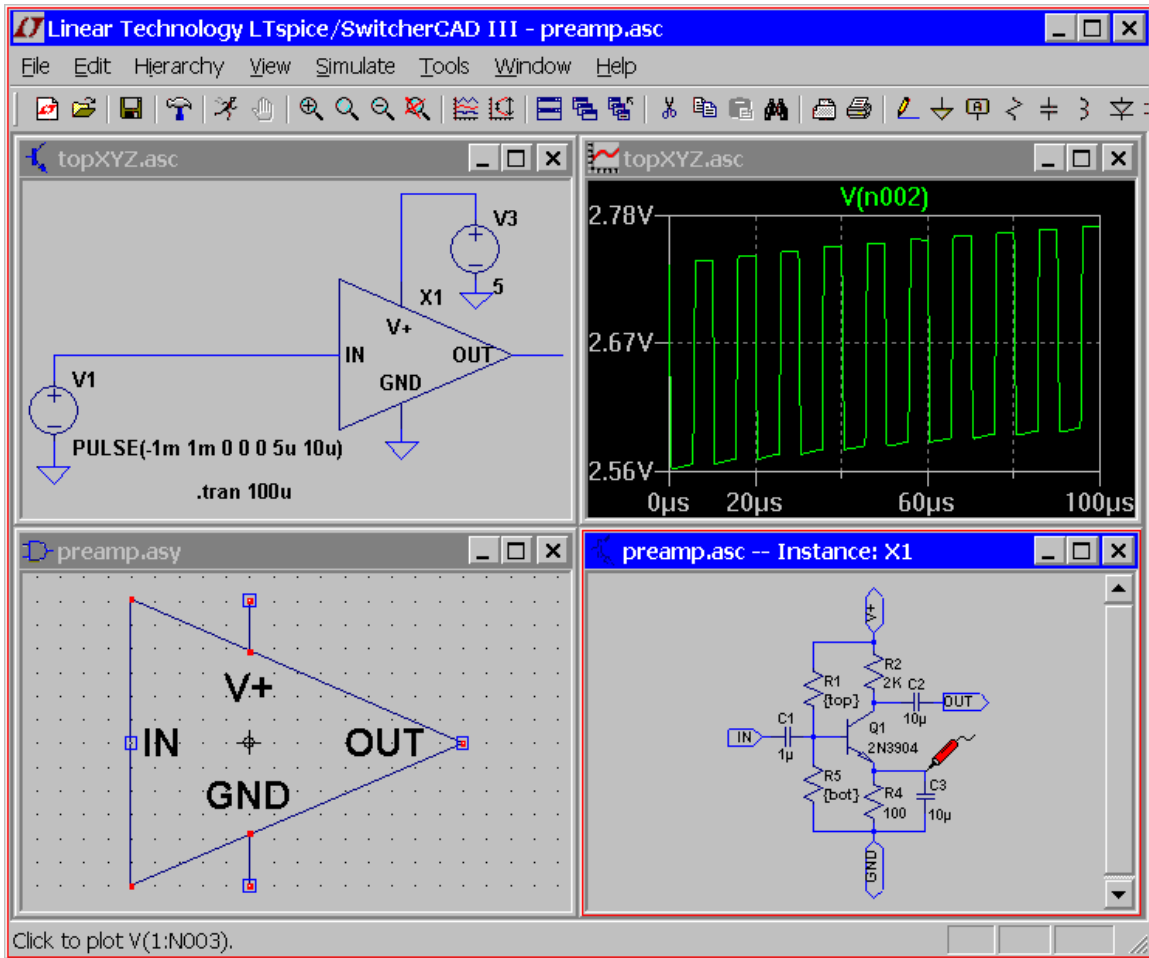

You can measure differences in this manner without performing the zoom by either pressing the Esc key or right mouse button before releasing the left mouse button.

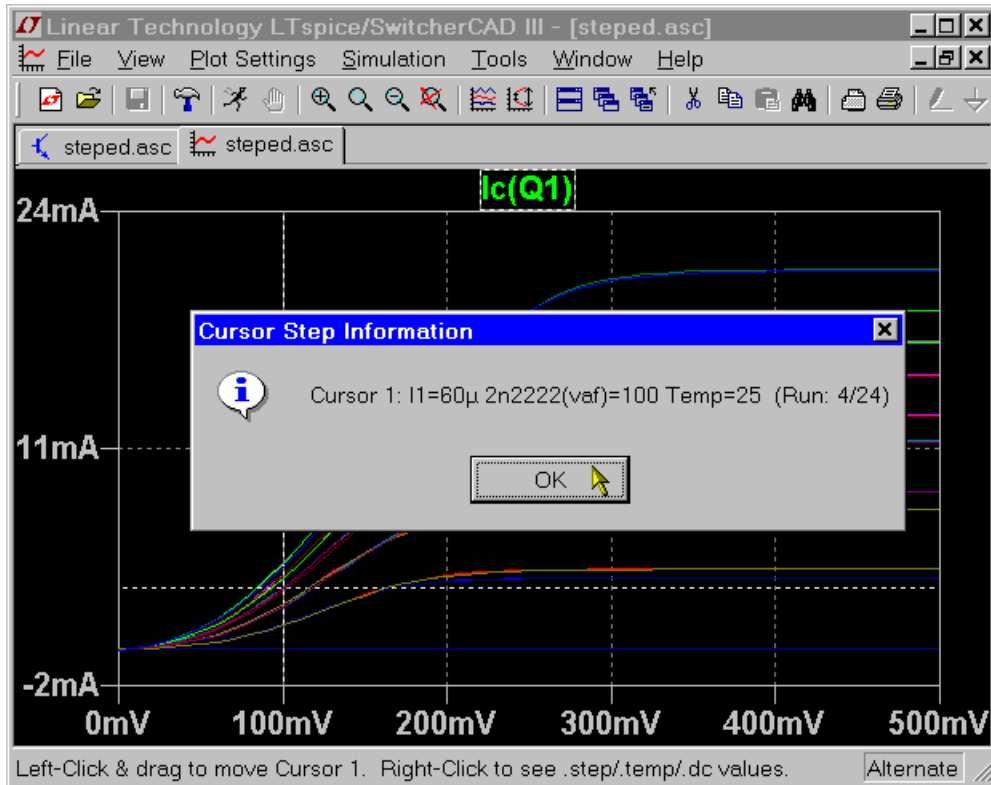

The attached cursors can also be used to readout which trace belongs to which run of a `.step/.dc/.temp` set of simulation runs. You can navigate the cursor from dataset to dataset with the up/down keyboard cursor keys and then right-click on the cursor to see the step information for that run.

Save Plot Configurations

The menu commands Plot Settings=>Save Plot Settings/Open Plot Settings files allow you to read and write plot configurations to disk. Plot setting files are ASCII files that have a file extension of `.plt`. The default filename is computed from the name of the data file by replacing the data file's `".raw"` extension with `".plt"`. If such a file name exists when a data file is first opened, that plot settings file is read for initial plot configuration.

Each analysis type; .tran, .ac, .noise, etc.; has its own entry in the plot settings file. It isn't possible to load the settings from one analysis type to another. But you can use the plot settings file from another simulation of the same analysis type.

Fast Access File Format

During simulation, LTspice usually uses a compressed binary file format that allows additional simulation data to be appended without modifying the rest of the file. But once the simulation is completed, this file format can be slow to access for the purposes of adding a single new plot trace from the file.

To reduce this time, you can convert the file to an alternative, Fast Access, format. This format can only be done after the simulation is completed when no new data will be added to the file. But once the file is converted to this format, the load time of a new traces will be reduced typically by a factor equal to the number of data traces that have been saved in the file. For example, if you have a 5GB file with 2000 data traces, it might take 4min to add a new trace. But after you convert it to Fast Access format, this four minute load time would be reduced to a single second. This makes cross probing large circuits with huge simulation data files interactive. The exact time it takes to load a trace from a Fast Access format file will depend more on the amount of physical memory you have than your hard disk speed.

To convert a waveform window to Fast Access format, make the waveform window the active window and execute menu command =>Files=>Convert to Fast Access. The conversion process will require an amount of free disk space equal to the file size to be converted, but the converted file will be only 11 bytes larger than the original file.

The conversion process can take a long time and use up to one quarter of your physical memory. In fact, it can take more time to convert the file to Fast Access format than

was required for the initial simulation. The exact time the conversion requires will depend on such factors as the state of the hard disk fragmentation and the amount of physical memory you have. During conversion, you may find your machine is not very respondent to your mouse and keyboard. It is possible to convert files in a batch command with the following command line syntax:

```
scad3.exe -FastAccess <file>
```

Where <file> is the name of the .raw file you wish to convert to Fast Access format.

This format is only supported for real data, not the complex data that comes from a .ac analysis.

LTspice

LTspice™ Overview

LTspice™ is the circuit simulation engine for the **SwitcherCAD III**. LTspice is a schematic-driven circuit simulation program. The LTspice simulator was originally based years ago on Berkeley SPICE 3F4/5 with BSIM3v3.2.4 and other new MOSFET devices. The simulator has gone through a complete re-write in order to improve the performance of the simulator, fix bugs, and extend the simulator so that it can run industry standard semiconductor and behavioral models. A digital simulation capability has been added along with extensive enhancements to the analog SPICE simulator to make LTspice the industry superlative board-level analog and mixed-mode simulator for many classes of circuits such as switching regulators and switched-capacitor filters.

Many Linear Technology products are modeled with proprietary building blocks that accurately encapsulate realistic behavior with **custom macromodels**. This allows the power system board to be simulated and prototyped rapidly.

LTspice can be used as a general-purpose SPICE simulator. New circuits can be drafted with the built-in **schematic capture**. Simulation commands and parameters are placed as text on the schematic using established **SPICE syntax**. Waveforms of circuit nodes and device currents can be plotted by clicking the mouse on the nodes in the schematic during or after simulation.

LTspice is a trademark of Linear Technology Corporation.

Introduction

Circuit Description

Circuits are defined by a text netlist. The netlist consists of a list of circuit elements and their nodes, model definitions, and other SPICE commands.

The netlist is usually graphically entered. To start a new schematic, select the File=>Open menu item. A windows file browser will appear. Either select an existing schematic and save it under a new name or type in a new name to create a new blank schematic file. LTspice uses many different types of files and documents. You will want to make a file with a file name extension of ".asc". The schematic capture commands are under the Edit menu. Keyboard shortcuts for the commands are listed under Schematic Editor Overview.

When you simulate a schematic, the netlist information is extracted from the schematic graphical information to a file with the same name as the schematic but with a file extension of ".net". LTspice reads in this netlist.

You can also open, simulate, and edit a text netlist generated either by hand or externally generated. Files

with the extensions ".net", ".cir", or ".sp" are recognized by LTspice as netlists.

This section of the help documents the syntax used in netlists, but occasionally gives schematic-level advice.

General Structure and Conventions

The circuit to be analyzed is described by a text file called a netlist. The first line in the netlist is ignored, that is, it is assumed to be a comment. The last line of the netlist is usually simply the line ".END", but this can be omitted. Any lines after the line ".END" are ignored.

The order of the lines between the comment and end is irrelevant. Lines can be comments, circuit element declarations or simulation directives. Let's start with an example:

```
* This first line is ignored
* The circuit below represents an RC circuit driven
* with a 1MHz square wave signal
R1 n1 n2 1K ; a 1KOhm resistor between nodes n1 and n2
C1 n2 0 100p ; a 100pF capacitor between nodes n2 and
ground
V1 n1 0 PULSE(0 1 0 0 0 .5μ 1μ) ; a 1Mhz square wave
.tran 3μ ; do a 3μs long transient analysis
.end
```

The first two lines are comments. Any line starting with a "*" is a comment and is ignored. The line starting with "R1" declares that there is a 1K resistor connected between nodes n1 and n2. Note that the semicolon, ";", can be used to start a comment in the middle of a line. The line starting with "C1" declares that there is a 100pF capacitor between nodes n2 and ground. The node "0" is the global circuit common ground.

Below is an overview of the lexicon of LTspice:

- o Letter case, leading spaces, blanks, and tabs are ignored.
- o The first non-blank character of a line defines the type of circuit element.

character type of line

* A comment

A - Z: A circuit element, for example, "R" for resistor, "C" for capacitor, "L" for inductor, and so on. Each element in the circuit is specified by name, as are the circuit nodes to which the elements are connected and the values of the parameters that determine the electrical characteristics of the element. The first letter of the element name specifies the element type. Hence, R, R1, RSE, ROUT, and R3AC2ZY are valid resistor names. Element names must be unique; for example, there can only be one R1 in a circuit. Some circuit elements require models to be defined to fully specify the elements electrical behavior.

. A simulation directive, For example: `.options
reltol=1e-4`

+ A continuation of the previous line. The "+" is removed and the remainder of the line is considered part of the prior line.

Numbers can be expressed not only in scientific notation; e.g., 1e12; but also using engineering multipliers. That is, 1000.0 or 1e3 can also be

written as 1K. Below is a table of understood multipliers:

Suffix	multiplier
T	1e12
G	1e9
Meg	1e6
K	1e3
Mil	25.4e-6
M	1e-3
u(or μ)	1e-6
n	1e-9
p	1e-12
f	1e-15

Unrecognized letters immediately following a number or engineering multiplier are ignored. Hence, 10, 10V, 10Volts, and 10Hz all represent the same number, and M, MA, MSec, and MMhos all represent the same scale factor(1e-3). A common error is to draft a resistor with value of 1M, thinking of a one MegaOhm resistor, however, 1M is interpreted as a one milliOhm resistor. This is unfortunate, but is necessary for compatibility with standard SPICE practice.

LTspice will accept numbers written in the form 6K34 to mean 6.34K. This works for any of the multipliers above. It can be turned off by going to Tools=>Control Panel=>SPICE and unchecking "Accept 3K4 as 3.4K".

Nodes names may be arbitrary character strings. Global circuit common node(ground) is "0", though "GND" is special synonym. Note that since nodes are character strings, "0" and "00" are distinct nodes.

Throughout the following sections of the manual, angle brackets are placed around data fields that need to be filled with specific information; for example, "<srcname>" would be the name of some specific source. Square brackets indicate that the enclosed data field is optional.

Circuit Element Quick Reference

Component	Syntax
special functions	Axx n1 n2 n3 n4 n5 n6 n7 n8 + <model> [extra parameters]
arbitrary behavioral source	Bxx n+ n- <V=... or I=...>
capacitor	Cxx n+ n- <capacitance> + [ic=<val.>] [Rser=<val.>] + [Lser=<val.>] [Rpar=<val.>] + [Cpar=<val.>] [m=<val.>]
diode	Dxx A K <model> [area]
voltage dependent voltage	Exx n+ n- nc+ nc- <gain>
current dependent current	Fxx n+ n- <Vnam> <gain>
voltage dependent current	Gxx n+ n- nc+ nc- <transcond.>
current dependent voltage	Hxx n+ n- <Vnam> <transres.>
independent current source	Ixx n+ n- <current>
JFET transistor	Jxx D G S <model> [area] [off] +[IC=<Vds,Vgs>] [temp=<T>]
mutual inductance	Kxx L1 L2 <coeff.>
inductance	Lxx n+ n- <inductance> + [ic=<val.>] [Rser=<val.>] + [Rpar=<val.>] + [Cpar=<val.>] [m=<val.>]
MOSFET transistor	Mxx D G S B <model> [L=<len>] + [W=<width>] [AD=<area>] + [AS=<area>] [PD=<perim>] + [PS=<perim>] [NRD=<value>] + [NRS=<value>] [off] + [IC=<Vds, Vgs, Vbs> + [temp=<T>]
lossy transmission line	Oxx L+ L- R+ R- <model>
bipolar transistor	Qxx C B E [S] <model> [area] + [off] [IC=Vbe,Vce] [temp=<T>]
resistance	Rxx n1 n2 <value>
voltage controlled switch	Sxx n1 n2 nc+ nc- <model> + [on,off]
lossless transmission line	Txx L+ L- R+ R- ZO=<value> + TD=<value>
uniform RC-line	Uxx n1 n2 ncommon <model> + L=<len> [N=<lumps>]
independent voltage source	Vxx n+ n- <voltage>
current controlled switch	Wxx n1 n2 <Vnam> <model> + [on,off]
subcircuit	Xxx n1 n2 n3... <subckt name>

```
MESFET transistor          | Zxx D G S model [area] [off]
                           | + [IC=<Vds,Vgs>]
```

Dot Commands

C. Simulator Directives -- Dot Commands

To run a simulation, not only must the circuit be defined, but also the type of analysis to be performed. There are six different types of analyses: linearized **small signal AC**, **DC sweep**, noise, **DC operating point**, small signal DC transfer function and **transient analysis**. Precisely one of these six analyses must be specified.

Whereas the circuit topology is typically schematically drafted, the commands are usually placed on the schematic as text. All such commands start with a period and are therefore called "dot commands".

.AC -- Perform an Small Signal AC Analysis Linearized About the DC Operating Point.

The small signal(linear) AC portion of LTspice computes the AC complex node voltages as a function of frequency. First, the DC operating point of the circuit is found. Next, linearized small signal models for all of the nonlinear devices in the circuit are found for this operating point. Finally, using independent voltage and current sources as the driving signal, the resultant linearized circuit is solved in the frequency domain over the specified range of frequencies.

This mode of analysis is useful for filters, networks, stability analyses, and noise considerations.

Syntax: `.ac <oct, dec, lin> <Nsteps> <StartFreq> <EndFreq>`

The frequency is swept between frequencies StartFreq and EndFreq. The number of steps is defined with the keyword "oct", "dec", or "lin" and Nsteps according to the following table:

keyword	Nsteps
oct	No. of steps per octave
dec	No. of steps per decade
lin	Total number of linearly spaced steps between StartFreq and EndFreq

.BACKANNO -- Annotate the Subcircuit Pin Names to the Port Currents

Syntax: .backanno

This directive is automatically included in every netlist SwitcherCAD III generates from a schematic. It directs LTspice to include information in the .raw file that can be used to refer to port currents by the pin name. This allows you to plot the current into the pin of a symbol by mouse clicking on the symbol's pin.

.DC -- Perform a DC Source Sweep Analysis

This performs a DC analysis while sweeping the DC value of a source. It is useful for computing the DC transfer function of an amplifier or plotting the characteristic curves of a transistor for model verification.

Syntax: .dc <srcnam> <Vstart> <Vstop> <Vincr>
+ [<srcnam2> <Vstart2> <Vstop2> <Vincr2>]

The <srcnam> is either an independent voltage or current source that is to be swept from <Vstart> to

<Vstop> in <Vincr> step sizes. In the following example, the default BSIM3v3.2.4 characteristic curves are plotted:

```
* Example .dc sweep
*
M1 2 1 0 0 nbsim
Vgs 1 0 3.5
Vds 2 0 3.5
.dc Vds 3.5 0 -0.05 Vgs 0 3.5 0.5
.model nbsim NMOS Level=8
.save I(Vds)
.end
```

.END -- End of Netlist

This directive marks the end of the textual netlist. All lines after this one are ignored. Do not place this as text on the schematic, as the netlist extractor supplies it at the end.

.ENDS -- End of Subcircuit Definition

This directive marks the end of a subcircuit definition. See [.SUBCKT](#) for more information.

.FOUR -- Compute a Fourier Component after a .TRAN Analysis

Syntax: `.four <frequency> [Nharmonics] [Nperiods] <data trace1> [<data trace2> ...]`

Example: `.four 1kHz V(out)`

This command is performed after a transient analysis. It's supplied in order to be compatible with legacy SPICE

simulators. The output from this command is printed in the .log file. Use the menu item "View=>Spice Error Log" to see the output. For most purposes, the FFT capability built into the waveform viewer is more useful.

If the integer Nharmonics is present, then the analysis includes that number of harmonics. The number of harmonics defaults to 9 if not specified.

The Fourier analysis is performed over the period from the final time, Tend, to one period before Tend unless an integer Nperiods is given after Nharmonics. If Nperiods is given as -1, the Fourier analysis is performed over the entire simulation data range.

.FUNC -- User Defined Functions

Syntax: `.func <name>([args]) {<expression>}`

Example: `.func Pythag(x,y) {sqrt(x*x+y*y)}`

The .func directive allows the creation of user-defined functions for use with user parameterized circuits and behavioral sources. This is useful for associating a name with a function for the sake of clarity and parameterizing subcircuits so that abstract circuits can be saved in libraries.

The .func statement can be included inside a subcircuit definition to limit the scope the function to that subcircuit and the subcircuits invoked by that subcircuit.

To invoke parameter substitution and expression evaluation with these user-defined functions, enclose the expression

in curly braces. The enclosed expression will be replaced with the floating-point value.

Below is a example using both a `.func` and `.param` statements.

```
* Example deck using a .func statement
.func myfunc(x,y) {sqrt(x*x+y*y)}
.param u=100 v=600
V1 a 0 pulse(0 1 0 1n 1n .5µ 1µ)
R1 a b {myfunc(u,v/3)}
C1 b 0 100p
.tran 3µ
.end
```

All parameter substitution evaluation is done before the simulation begins.

.GLOBAL -- Declare Global Nodes

Syntax: `.global <node1> [node2 [node3] [...]]`

Example: `.global VDD VCC`

The `.global` command allows you to declare that certain nodes mentioned in subcircuits are not local to subcircuit but are absolute global nodes.

Note that global circuit common is node "0" and that a `.global` statement is not required. Also, node names that of the form "\$G_" are also global nodes without being mentioned in a `.global` statement.

.IC -- Set Initial Conditions

The `.ic` directive allows initial conditions for transient analysis to be specified. Node voltages and inductor currents may be specified. A DC solution is performed using the initial conditions as constraints. Note that although inductors are normally treated as short circuits in the DC solution in other SPICE programs, if an initial current is specified, they are treated as infinite-impedance current sources in LTspice.

Syntax: `.ic [V(<n1>)=<voltage>] [I(<inductor>)=<current>]`

Example: `.ic V(in)=2 V(out)=5 V(vc)=1.8 I(L1)=300m`

.INCLUDE -- Include Another File

Syntax: `.include <filename>`

This directive includes the named file as if that file had been typed into the netlist instead of the `.include` command. This is useful for including libraries of models or subcircuits.

An absolute path name may be entered for the filename. Otherwise LTspice looks first in the directory `<SwCADIII>\lib\sub` and then in the directory that contains the calling netlist, where `<SwCADIII>` is the directory containing the `scad3.exe` executable, typically installed as `C:\Program Files\LTC\SwCADIII`.

No file name extension is assumed. You must use `".inc myfile.lib"` not `".inc myfile"` if the file is called `"myfile.lib"`

It is possible to specify a url of the following form as a file name:

```
.inc http://www.company.com/models/library.lib
```

The file "library.lib" will be http-transferred to the circuit directory and included. For subsequent simulations, in the interest of avoiding downloading the file each time you run the simulation, you can edit the .inc statement to

```
.inc library.lib
```

Note that if the url you specify doesn't exist, most web servers don't return an error, but return a html web page to be displayed in your web browser that explains the error. LTspice can't always read these pages as error conditions so you may get some cryptic error message when the simulation tries to proceed with the included html language error page included in the simulation as valid SPICE syntax.

If the http- transferred url is a .pdf file, the simulation will abort after the download. For example the following deck will download this manual as a .pdf file:

```
* Dummy simulation to download the help file.  
* The simulation will abort with an error, but  
* you'll be left with the file scad3.pdf in the  
* same directory containing the netlist.  
.inc http://ltspice.linear.com/software/scad3.pdf  
.end
```

.LIB -- Include a Library

Syntax: `.lib <filename>`

This directive includes the model and subcircuit definitions of the named file as if that file had been typed into the netlist instead of the `.lib` command. Circuit elements at global scope are ignored.

An absolute path name may be entered for the filename. Otherwise LTspice looks first in the directory `<SwCADIII>\lib\cmp` and then `<SwCADIII>\lib\sub` and then in the directory that contains the calling netlist, where `<SwCADIII>` is the directory containing the `scad3.exe` executable, typically installed as `C:\Program Files\LTC\SwCADIII`.

No file name extension is assumed. You must use `".lib myfile.lib"` not `".lib myfile"` if the file is called `"myfile.lib"`

It is possible to specify a url of the following form as a file name:

```
.lib http://www.company.com/models/library.mod
```

The file `"library.mod"` will be http-transferred to the circuit directory and included as a library. For subsequent simulations, in the interest of avoiding downloading the file each time you run the simulation, you can edit the `.lib` statement to

```
.lib library.mod
```

Note that if the url you specify doesn't exist, most web servers don't return an error, but return a html web page to be displayed in your web browser that explains the

error. LTspice can't always read these pages as error conditions so you may get some cryptic error message when the simulation tries to proceed with the included html language error page included in the simulation as valid SPICE syntax.

If the http-transferred url is a .pdf file, the simulation will abort after the download. For example the following deck will download this manual as a .pdf file:

```
* Dummy simulation to download the help file.  
* The simulation will abort with an error, but  
* you'll be left with the file scad3.pdf in the  
* same directory containing the netlist.  
.lib http://ltspice.linear.com/software/scad3.pdf  
.end
```

Encrypted Libraries

LTspice can generate and read a special form of encrypted libraries. This allows one user to prepare a library that another user can use in a simulation without revealing the implementation of the library. A reasonable attempt has been made to make the encrypted library difficult to decode by unauthorized concerns, but it cannot be considered perfectly secure if for no other reason than it is implemented in software.

To prepare an encrypted library, you need to invoke LTspice from the command line with the command line option "-encrypt". You will need to first backup the library because it will be replaced with the encrypted version. THERE EXISTS NO UTILITY TO CONVERT AN ENCRYPTED LIBRARY BACK TO CLEAR TEXT. Below summarizes the two steps:

1. Make a backup copy of the library. The version you encrypt is deleted.
2. From a command line, type
scad3.exe -encrypt <filename>

The file <filename> will be replaced with an encrypted version. The encryption process will take a few minutes.

One this process is finished, you have an encrypted ASCII file. It's possible to add a copyright notice above the "* Begin:" line, but the first 9 lines of the file must remain unchanged and each line of copyright notice you add must begin with the character '*'.

That is, here an encrypted file written by LTspice:

```
* LTspice Encrypted File
*
* This encrypted file has been supplied by a 3rd
* party vendor that does not wish to publicize
* the technology used to implement this library.
*
* Permission is granted to use this file for
* simulations but not to reverse engineer its
* contents.
*
* Begin:
50 3E 46 0F FA 6E 67 FF B8 4D D9 62 14 32 60 24
36 71 35 0B 66 4F AD 52 B8 F5 9E 22 9F C0 18 8B
FB FE 1D...
```

you can change this to be

```
* LTspice Encrypted File
*
* This encrypted file has been supplied by a 3rd
* party vendor that does not wish to publicize
* the technology used to implement this library.
*
* Permission is granted to use this file for
* simulations but not to reverse engineer its
* contents.
*
* Copyright © 2005 Acme SPICE Modeling
* For additional information, see
* www.acmespicemodels.com
*
* Begin:
50 3E 46 0F FA 6E 67 FF B8 4D D9 62 14 32 60 24
36 71 35 0B 66 4F AD 52 B8 F5 9E 22 9F C0 18 8B
FB FE 1D...
```

.LOADBIAS -- Load a Previously Solved DC Solution

Syntax: `.loadbias <filename>`

The `loadbias` command is the compliment to the `.savebias` command. First run a simulation that executes a `.savebias` command. Then change the `.savebias` command to a `.loadbias` command.

.MEASURE -- Evaluate User-Defined Electrical Quantities

There are two basic different types of `.MEASURE` statements. Those that refer to a point along the ordinate (the independent variable, i.e., the time axis of a `.tran` analysis) and `.MEASURE` statements that refer to a range over the ordinate axis. The first version, those that point to one point on the ordinate axis, are used to print a data value or expression thereof at a specific point or when a condition is met. The following syntax is used:

Syntax: `.MEAS[SURE] [AC|DC|OP|TRAN|TF|NOISE] <name>`
+ [`<FIND|DERIV|PARAM>` `<expr>`]
+ [`WHEN <expr>` | `AT=<expr>`]
+ [`TD=<val1>`] [`<RISE|FALL|CROSS>=[<count1>|LAST]`]

Note one can optionally state the type of analysis to which the `.MEAS` statement applies. This allows you to use certain `.MEAS` statements only for certain analysis types. The name is required to give the result a parameter name that can be used in other `.MEAS` statements. Below are example `.MEAS` statements that refer to a single point along the ordinate:

```
.MEAS TRAN res1 FIND V(out) AT=5m
```

Print the value of `V(out)` at `t=5ms` labeled as `res1`.

```
.MEAS TRAN res2 FIND V(out)*I(Vout) WHEN V(x)=3*V(y)
```

Print the value of the expression $V(\text{out}) * I(\text{Vout})$ the first time the condition $V(x) = 3 * V(y)$ is met. This will be labeled res2.

```
.MEAS TRAN res3 FIND V(out) WHEN V(x)=3*V(y) cross=3
```

Print the value of $V(\text{out})$ the third time the condition $V(x) = 3 * V(y)$ is met. This will be labeled res3.

```
.MEAS TRAN res4 FIND V(out) WHEN V(x)=3*V(y) rise=last
```

Print the value of $V(\text{out})$ the last time the condition $V(x) = 3 * V(y)$ is met when approached as $V(x)$ increasing wrt $3 * V(y)$. This will be labeled res4.

```
.MEAS TRAN res5 FIND V(out) WHEN V(x)=3*V(y) cross=3 TD=1m
```

Print the value of $V(\text{out})$ the third time the condition $V(x) = 3 * V(y)$ is met, but don't start counting until the time as elapsed to 1ms. This will be labeled res5.

```
.MEAS TRAN res6 PARAM 3*res1/res2
```

Print the value of $3 * \text{res1} / \text{res2}$. This form is useful for printing expressions of other .meas statement results. It's not intended that expressions based on direct simulation data, such as $V(3)$, are present in the expression to be evaluated, but if they are, the data is taken from the last simulated point. The result will be labeled res6.

Note that the above examples, while referring to one point along the ordinate, the requested result is based on coordinate data (the dependent variables). If no coordinate information is requested, then the .MEAS statement prints point on the ordinate that the measurement condition occurs:

```
.MEAS TRAN res6 WHEN V(x)=3*V(y)
```


Print the first time the condition $V(x)=3*V(y)$ is met.
This will be labeled res6.

The other type of .MEAS statement refers to a range over the ordinate. The following syntax is used:

```
Syntax:  .MEAS [AC|DC|OP|TRAN|TF|NOISE] <name>
          +      [<AVG|MAX|MIN|PP|RMS|INTEG> <expr>]
          + [TRIG <lhs1> [[VAL]=]<rhs1>] [TD=<val1>]
          +      [<RISE|FALL|CROSS>=<count1>]
          + [TRIG <lhs2> [[VAL]=]<rhs2>] [TD=<val2>]
          +      [<RISE|FALL|CROSS>=<count2>]
```

The ordinate range is specified with the points defined by "TRIG" and "TARG". The TRIG point defaults to the start of the simulation if omitted. Similarly, the TARG point defaults to the end of simulation data. If all three of the TRIG, TARG, and the previous WHEN points are omitted, then the .MEAS statement operates over the entire range of ordinate data. The types of measurement operations that can be done over an interval are

keyword	operation perform over interval
AVG	compute the average of <expr>
MAX	find the maximum value of <expr>
MIN	find the minimum value of <expr>
PP	find the peak-to-peak of <expr>
RMS	compute the root mean square of <expr>
INTEG	integrate <expr>

If no measurement operation is specified, the result of the .MEAS statement is the distance along the ordinate between the TRIG and TARG points. Below are example interval .MEAS statements:

```
.MEAS TRAN res7 AVG V(NS01)
+ TRIG V(NS05) VAL=1.5 TD=1.1u FALL=1
+ TARG V(NS03) VAL=1.5 TD=1.1u FALL=1
```

Print the value of average value of V(NS01) from the 1st fall of V(NS05) to 1.5V after 1.1us and the 1st fall of V(NS03) to 1.5V after 1.1us. This will be labeled res7.

For .AC analyses, the conditional expressions of complex data are translated to real conditions by converting the expression to its magnitude. So in this example:

```
.MEAS AC rel8 when V(out)=1/sqrt(2)
```

The result rel8 is the frequency that the magnitude of V(out) is equal to 0.7071067811865475.

Also, the result of a .MEAS statement can be used in another .MEAS statement. In this example, the 3dB bandwidth is computed:

```
.MEAS AC tmp max mag(V(out)); find the peak response  
;  
; and call it "tmp"  
.MEAS AC BW trig mag(V(out))=tmp/sqrt(2) rise=1  
+ targ mag(V(out))=tmp/sqrt(2) fall=last
```

Print the difference in frequency between the two points 3dB down from peak response. NOTE: The data from a .AC analysis is complex and so are the .measurement statements results. However, the equality refers only to the real part of the complex number, that is, "mag(V(out))=tmp/sqrt(2)" is equivalent to $\text{Re}(\text{mag}(V(\text{out}))) = \text{Re}(\text{tmp}/\sqrt{2})$.

The AVG, RMS, and INTEG operations are different for .NOISE analysis than the analysis types since the noise is more meaningfully integrated in quadrature over frequency. Hence AVG and RMS both give the RMS noise voltage and INTEG gives the integrated total noise. Hence, if you add the SPICE directives

```
.MEAS NOISE out_totn INTEG V(onoise)
.MEAS NOISE in_totn INTEG V(inoise)
```

to a .noise analysis, the total integrated input and output referenced rms noise will be printed in the .log file.

.MEAS statements are done in post processing after the simulation is completed. This allows you to write a script of .MEAS statements and execute them on a dataset. To do this, make the waveform window the active window and execute menu command File=>Execute .MEAS Script. Another consequence of .MEAS statements being done in post processing after the simulation is that the accuracy of the .MEAS statement output is limited by the accuracy of the waveform data after compression. You may want to adjust the compression settings for more precise .MEAS statement output.

Note when testing a condition such as "when <cond1> = <cond2>" you will want the condition to go through the equality, not must meet it. This relates to the fact that floating point equality should never be required due to the finite precision used in storing numbers.

.MODEL -- Define a SPICE Model

Defines a model for a diode, transistor, switch, lossy transmission line or uniform RC line

Some circuit elements, for example, transistors, have many parameters. Instead of defining every transistor parameter for every instance of a transistor, transistors are grouped by model name and have parameters in common. The transistors of the same model can have different sizes and the electrical behavior is scaled to the size of the instance.

Syntax: `.model <modname> <type>[(<parameter list>)]`

The model name must be unique. That is, two different types of circuit elements, such as a diode and a transistor, cannot have the same model name. The parameter list depends on the type of model. Below is a list of model types:

Type	associated circuit element
SW	Voltage controlled switch
CSW	Current controlled switch
URC	Uniform distributed RC model
LTRA	Lossy transmission line model
D	Diode model
NPN	NPN BJT model
PNP	PNP BJT model
NJF	N-channel JFET model
PJF	P-channel JFET model
NMOS	N-channel MOSFET model
PMOS	P-channel MOSFET model
NMF	N-channel MESFET model
PMF	P-channel MESFET model
VDMOS	Vertical double diffused power MOSFET model

See the description of the circuit element for a list of which parameters are instance specific and which are common to a model.

.NET -- Compute Network Parameters in a .AC Analysis

This statement is used with a small signal(.AC) analysis to compute the input and output admittance, impedance, Y-parameters, Z-parameters, H-parameters, and S-parameters of a 2-port network. It can also be used to compute the the input admittance and impedance of a 1-port network. This must be used with a .AC statement, which determines the frequency sweep of the network analysis.

```
Syntax: .net [V(out[,ref])|I(Rout)] <Vin|Iin>
+       [Rin=<val>] [Rout=<val>]
```

The network input is specified by either an independent voltage source, <Vin>, or an independent current source, <Iin>. The optional output port is specified either with a node, V(out), or a resistor, I(Rout). The ports will be terminated with resistances Rin and Rout. If unspecified, the termination impedances default to 1 Ohm except in the case of the Voltage source with an Rser specified or an output port specified with a resistor. In those two cases the termination resistances defaults to the device impedance. Termination values specified on the .NET statement will override device impedances for the .NET calculation, but not for the normal .AC node voltages and currents. That is, the .NET statement will not impose terminating impedances on the network for the normal voltages and currents computed as part of the .AC analysis.

See the example file typically installed as C:\Program Files\LTC\SwCADIII\examples\Educational\S-param. It recommends using a voltage source, V4, with Rser set the desired source impedance and a resistor, Rout, to set the output termination with a .NET statement reading simply ".net I(Rout) V4." No Rin or Rout values specified on the .net statement and the input/output devices supply default termination values. This arrangement makes the node voltages and currents of the the .AC analysis correspond to the network being terminated in the same manner as in the .NET statement.

.NODESET -- Supply Hints for Initial DC Solution

The .nodeset directive supplies hints for finding the DC operating point. If a circuit has multiple possible DC states as, for example, a flipflop, the iteration process for finding the DC solution may never converge. A .nodeset directive can be used to lead the circuit to one or another state. Basically, after a solution pass is done with the voltage specified on the nodeset directive, the constraint is removed for subsequent iterative passes.

Syntax: .NODESET V(node1)=<voltage> [V(node2)=<voltage> [...]]

.NOISE -- Perform a Noise Analysis

This is a frequency domain analysis that computes the noise due to Johnson, shot and flicker noise. The output data is noise spectral density per unit square root bandwidth.

Syntax: .noise V(<out>[,<ref>]) <src> <oct, dec, lin>
+ <Nsteps> <StartFreq> <EndFreq>

V(<out>[,<ref>]) is the node at which the total output noise is calculated. It can be expressed as V(n1, n2) to represent the voltage between two nodes. <src> is the name of an independent source to which input noise is referred. <src> is the noiseless input signal. The parameters <oct, dec, lin>, <Nsteps>, <StartFreq>, and <EndFreq> define the frequency range of interest and resolution in the manner used in the .ac directive.

Output data trace V(onoise) is the noise spectral voltage density referenced to the node(s) specified as the output in the above syntax. If the input signal is given as a voltage source, then data trace V(inoise) is the input-referred noise voltage density. If the input is specified as a current source, then the data trace inoise is the noise referred to the input current source signal. The noise contribution of each component can be plotted. These contributions are referenced to the output. You can reference them to the input by dividing by the data trace "gain".

The waveform viewer can integrate noise over a bandwidth by <Ctrl-Key> + left mouse button clicking on the corresponding data trace label.

.OP -- Find the DC Operating Point

Perform a DC solution with capacitances open circuited and inductances short circuited. Usually a DC solution is performed as part of another analysis in order to find the operating point of the circuit. Use `.op` if you wish only this operating point to be found. The results will appear in a dialog box. After a `.OP` simulation, when you point at a node or current the `.OP` solution will appear on the status bar.

.OPTIONS -- Set Simulator Options

Keyword	data type	default value	Description
<code>abstol</code>	num.	1pA	Absolute current error tolerance
<code>baudrate</code>	num.	(none)	Used for eye diagrams. Tells the waveform graphic package how to wrap the time ordinate to overlay the bit transitions
<code>chgtol</code>	num.	10fC	Absolute charge tolerance
<code>cshunt</code>	num.	0.	Optional capacitance added from every node to ground.
<code>cshuntintern</code>	num.	<code>cshunt</code>	Optional capacitance added from every device internal node to ground.

defad	num.	0.	Default MOS drain diffusion area
defas	num.	0.	Default MOS source diffusion area
defl	num.	100µm	Default MOS channel length
defw	num.	100µm	Default MOS channel width
delay	num.	(none)	Used for eye diagrams. Shifts the bit transitions in the diagram.
flagloads	flag	false	flag external current sources as loads
frain	num.	(none)	Input node for freq. response analysis
fraout	num.	(none)	Output node for freq. response analysis
frastop	num.	(none)	high freq. for freq. response analysis
frastart	num.	(none)	lowest frequency for frequency response analysis
fraamp	num.	(none)	fra func ampl. for freq. response analysis
fravref	num.	(none)	additional DC offset of Vin Freq. response analysis
Gmin	num.	1e-12	Conductance added to every PN junction to aid convergence
gminsteps	num.	25	Set to non-zero to use gminstepping for the initial DC solution
gshunt	num.	0.	Optional conductance added from every node to ground.
itl1	num.	100.	DC iteration count limit

itl2	num.	50.	DC transfer curve iteration count limit
itl4	num.	10.	Transient analysis time point iteration count limit
itl6	num.	25.	number of steps to use in source stepping(used for difficult DC operating point solutions)
srcsteps	num.	25.	alternative name for itl6
maxclocks	num.	infin.	max number of clock cycles to save
maxstep	num.	infin.	Maximum step size for transient analysis
measdgt	num.	6	Number of significant figures used for .measure statement output.
method	string	trap	Numerical integration method, either trapezoidal or Gear
minclocks	num.	10	min. number of clock cycles to save
nomarch	flag	false	Do not plot marching waveforms
noopiter	flag	false	Go directly to gmin stepping.
numdgt	num.	6	Historically "numdgt" was used to set the number of significant figures used for output data. In LTspice, if "numdgt" is set to be > 6, double precision is used for dependent variable data.
oversample	num.	(none)	For Freq. response analysis
pivrel	num.	1e-3	Relative ratio between the

			largest column entry and an acceptable pivot value.
pivtol	num.	1e-13	Absolute minimum value for a matrix entry to be accepted as a pivot.
reltol	num.	0.001	Relative error tolerance
startclocks	num.	5	number of clock cycles to wait before looking for steadystate
sstol	num.	0.001	rel. error for steady-state detection
temp	num.	27°C	Default temperature for circuit element instances that don't specify temperature
tnom	num.	27°C	Default temperature at which device parameters were measured for models that don't specify this temperature
topologycheck	num.	1	Set to zero to skip check for floating nodes, loops of voltage sources, and non-physical transformer winding topology
trtol	num.	1.0	Set the transient error tolerance. This parameter is an estimate of the factor by which the actual truncation error is overestimated.
trytocompact	num.	1	When non-zero, the simulator tries to condense LTRA transmission lines' history of input voltages and currents.
vntol	num.	1µV	Sets the absolute voltage error tolerance.

plotreltol	num.	.0025	Sets the relative error tolerance for waveform compression
plotvntol	num.	10 μ V	Sets the absolute voltage error tolerance for waveform compression
plotabstol	num.	1nA	Sets the absolute current error tolerance for waveform compression
plotwinsize	num.	300	Number of datapoints to compress in one window. Set to zero to disable compression.

.PARAM -- User-Defined Parameters

The `.param` directive allows the creation of user-defined variables. This is useful for associating a name with a value for the sake of clarity and parameterizing subcircuits so that abstract circuits can be saved in libraries.

The `.param` statement can be included inside a subcircuit definition to limit the scope the parameter value to that subcircuit and subcircuits invoked by that subcircuit.

To invoke parameter substitution and expression evaluation, enclose the expression in curly braces. The enclosed expression will be replaced with the floating-point value.

Below is a example using both a `.param` statement and directly passing parameters on the subcircuit invocation line.

```

*
* This is the circuit definition
.params x=y y=z z=1k*tan(pi/4+.1)
X1 a b 0 divider top=x bot=z
V1 a 0 pulse(0 1 0 .5μ .5μ 0 1μ)

* this is the definition of the subcircuit
.subckt divider n1 n2 n3
r1 n1 n2 {top}
r2 n2 n3 {bot}
.ends
*

.tran 3μ
.end

```

The parameter substitution scheme is a symbolic declarative language. The parameters are not passed to the subcircuit as evaluated values, but by the expressions and relations themselves. When curly braces are encountered, the enclosed expression is evaluated on the basis of all relations available at the scope and reduced to a floating point value.

.SAVE -- Limit the Quantity of Saved Data.

Some simulations, particularly time domain simulations, can generate large amount of data. The amount of output can be restricted by using the .save directive to save only the specific node voltages and device current of interest.

Syntax: `.save V(out) [V(in) [I(L1) [I(S2)]]] [dialogbox]`

The directive `.save I(Q2)` will save the base, collector and emitter currents of bipolar transistor Q2. To save a single terminal current, specify `Ic(Q2)`.

The wildcard characters '*' and '?' can be used to specify data traces matching a pattern. For example, ".save V(*) Id(*)" will save every voltage and every drain current.

If the keyword "dialogbox" is specified, then a dialog box with a list of all-available default nodes and currents is displayed allowing the user to select from the list which should be saved. If the netlist was generated from a schematic, then nodes and devices can be pointed to and clicked on in the schematic to highlight them as selected in the dialog box.

.SAVEBIAS -- Save Operating Point to Disk

```
Syntax: .savebias <filename> [internal]
+ [temp=<value>] [time=<value> [repeat]] [step=<value>]
+ [DC1=<value>] [DC2=<value>] [DC3=<value>]
```

This command writes a text file to disk that is reloaded with a .loadbias command in a subsequent simulation. If you have a circuit that has a difficult-to-solve DC operating point, you can save that solution to disk so that the next analysis can save time finding the DC solution before proceeding to the rest of the simulation.

The keyword "internal" can be added to indicate that the internal nodes of some devices should also be kept so that a more complete version of the DC solution is kept.

If you want to save a particular DC operating point from a .tran analysis, you can give specify a time. The first solved time point after the stipulated time will be written. The modifier "repeat" will cause the DC solution to be written after every period specified by this time. The file will contain only the most recently solved DC

point. DC1, DC2, and DC3 can be given to extract a single operating point from .dc sweep analysis.

The savebias command writes a text file in the form of a .nodeset command. Note that nodeset statements are only recommendations of the solution. That is, the solver will start iterating the solution with the node voltages given in the nodeset statements, but will continue iterating until it's satisfied that the solution is valid. If you want to restart a .tran solution from the DC operating point, you can edit the file from a .nodeset to a .ic to try to coerce the solver to start from this DC state.

Since the integration state of all the circuit reactances isn't saved in the .savebias file, success with this technique varies.

.STEP -- Parameter Sweeps

This command causes an analysis to be repeatedly performed while stepping the temperature, a model parameter, a global parameter, or an independent source. Steps may be linear, logarithmic, or specified as a list of values.

Example: `.step oct v1 1 20 5`

Step independent voltage source V1 from 1 to 20 logarithmically with 5 points per octave.

Example: `.step I1 10u 100u 10u`

Step independent current source I1 from 10u to 100u in step increments of 10u.

Example: `.step param RLOAD LIST 5 10 15`

Perform the simulation three times with global parameter Rload being 5, 10 and 15.

```
Example: .step NPN 2N2222(VAF) 50 100 25
```

Step NPN model parameter VAF from 50 to 100 in steps of 25.

```
Example: .step temp -55 125 10
```

Step the temperature from -55°C to 125°C in 10-degree step. Step sweeps may be nested up to three levels deep.

.SUBCKT -- Define a Subcircuit

As an aid to defining a circuit, repetitive circuitry can be enclosed in a subcircuit definition and used as multiple instances in the same circuit. Before the simulation runs, the circuit is expanded to a flat netlist by replacing each invocation of a subcircuit with the circuit elements in the subcircuit definition. There is no limit on the size or complexity of subcircuits.

The end of a subcircuit definition must be a .ends directive.

Here is an example using a subcircuit:

```
*
* This is the circuit definition
X1 a b 0 divider
V1 a 0 pulse(0 1 0 .5µ .5µ 0 1µ)

* this is the definition of the subcircuit
.subckt divider n1 n2 n3
```

```
r1 n1 n2 1k
r2 n2 n3 1k
.ends
```

```
.tran 3μ
.end
```

Which runs after expanding to

```
* Expand X1 into two resistor network
r:1:1 a b 1k
r:1:2 b 0 1k
*
v1 a 0 pulse(0 1 0 .5μ .5μ 0 1μ)
.tran 3μ
.end
```

Note that unique names based on the subcircuit name and the subcircuit definition element names are made for the circuit elements inserted by subcircuit expansion.

.TEMP -- Temperature Sweeps

This is an archaic form for the step command for temperature. It performs the simulation for each temperature listed.

The syntax

```
.TEMP <T1> <T2> ...
```

is equivalent to

```
.STEP TEMP LIST <T1> <T2> ...
```


.TF -- Find the DC Small Signal Transfer Function

This is an analysis mode that finds the DC small signal transfer function of a node voltage or branch current due to small variations of an independent source.

Syntax: .TF V(<node>[, <ref>]) <source>
 .TF I(<voltage source>) <source>

Examples:

```
.TF V(out)    Vin
.TF V(5,3)    Vin
.TF I(Vload)  Vin
```

.TRAN -- Perform a Nonlinear Transient Analysis

Perform a transient analysis. This is the most direct simulation of a circuit. It basically computes what happens when the circuit is powered up. Test signals are often applied as independent sources.

Syntax: .TRAN <Tstep> <Tstop> [Tstart [dTmax]] [modifiers]
 .TRAN <Tstop> [modifiers]

The first form is the traditional .tran SPICE command. Tstep is the plotting increment for the waveforms but is also used as an initial step-size guess. LTspice uses waveform compression, so this parameter is of little value and can be omitted or set to zero. Tstop is the duration of the simulation. Transient analyses always start at time equal to zero. However, if Tstart is specified, the waveform data between zero and Tstart is not saved. This

is a means of managing the size of waveform files by allowing startup transients to be ignored. The final parameter `dTmax`, is the maximum time step to take while integrating the circuit equations. If `Tstart` or `dTmax` is specified, `Tstep` must be specified.

Several **modifiers** can be placed on the `.tran` line.

.WAVE -- Write Selected Nodes to a .Wav File.

LTspice can write `.wav` audio files. These files can then be listened to or be used as the input of another simulation.

Syntax: `.wave <filename.wav> <Nbits> <SampleRate>`
`V(out) [V(out2) ...]`

example: `.wave C:\output.wav 16 44.1K V(left) V(right)`

`<filename.wav>` is either a complete absolute path for the `.wav` file you wish to create or a relative path computed from the directory containing the simulation schematic or netlist. Double quotes may be used to specify a path containing spaces. `<Nbits>` is the number of sampling bits. The valid range is from 1 to 32 bits. `<SampleRate>` is the number of samples to write per simulated second. The valid range is 1 to 4294967295 samples per second. The remainder of the syntax lists the nodes that you wish to save. Each node will be an independent channel in the `.wav` file. The number of channels may be as few as one or as many as 65535. It is possible to write a device current, e.g., `Ib(Q1)` as well as node voltage. The `.wav` analog to digital converter has a full scale range of -1 to +1 Volt or Amp.

Note that it is possible to write `.wav` files that cannot be played on your PC sound system because of the number of channels, sample rate or number of bits due to limitations of your PC's codec. But these `.wav` files may still be used in LTspice as input for another simulation. See the sections `LTspice=>Circuit Elements=>V. Voltage Source` and `I. Current source` for information on playing a `.wav` file into an LTspice simulation. If you want to play the `.wav`

file on your PC sound card, keep in mind that the more popularly supported .wav file formats have 1 or 2 channels; 8 or 16 bits/channel; and a sample rate of 11025, 22050, or 44100 Hz.

Transient Analysis Options

.TRAN Modifiers

UIC: Skip the D.C. operating solution and use user-specified initial conditions.

steady: Stop the simulation when steady state has been reached.

nodiscard: Don't delete the part of the transient simulation before steady state is reached.

startup: Solve the initial operating point with independent voltage and current sources turned off. Then start the transient analysis and turn these sources on in the first 20 us of the simulation.

step: Compute the step response of the circuit.

UIC

Use Initial Conditions. Normally, a DC operating point analysis is performed before starting the transient analysis. This directive suppresses this initialization. The initial conditions of some circuit elements can be specified on an instance-per-instance basis. Uic is not a particularly recommended feature of SPICE. Skipping the DC operating point analysis leads to a nonphysical initial condition. For example, consider a voltage source connected in parallel to a capacitance. The node voltage is taken as zero if not specified. Then, in the first time step, an infinite current is required to charge the capacitor. The simulator cannot find a short enough time step to make the

current nonsingular, and a "time step too small convergence fail" message is issued.

startup

This is similar to SPICE's original "uic". It means that independent sources should be ramped on during the first 20 μ s of the simulation. However, a DC operating point analysis is performed using the constraints specified on a .ic directive.

steady

Stop the simulation when steady state has been reached. This is required for an efficiency calculation report. Steady state detection is written into the SMPS macromodels. Typically they are written to look for zero error amp output current averaged over a clock cycle. The algorithm takes the error amp's output compliance range into consideration. The fraction of peak current that is considered zero current is specified with the sstol option.

The automatic steady state detection can fail either by being too critical or not critical enough. You can interactively specify steady state in the following manner: As soon as the simulation starts, execute menu command Simulate=>Efficiency Calculation=>Mark Start. The first time you execute this command you tell LTspice you're going to manually specify the integration limits. After the circuit looks like it's reached steady-state, execute that command again. That will clear the history and restart the Efficiency Calculation. Then, after awhile, as in you see well more than 10 clock cycles, execute Simulate=>Efficiency Calculation=>Mark End. Each time you execute Simulate=>Efficiency Calculation=>Mark Start you restart the efficiency calculation and clear the waveform history. This is a good method of preventing the data file from becoming too large and slowing down plotting, so it's recommended that you periodically execute

Simulate=>Efficiency Calculation=>Mark Start whenever it is clear that you've accumulated substantial data that you don't want to be included in the integration of efficiency.

Use the `.ic` directive to specify node voltages and inductor currents to reduce the length of the transient analysis required to find the steady state.

nodiscard

Don't delete the part of the transient simulation before steady state is reached.

step

Compute the step response of the circuit. This function works with a current source used as a load with a list of step currents. The procedure is:

- 1) compute to steady state and discard the history unless `nodiscard` is set.
- 2) ramp the step load to the next value in the list of currents at the rate of 20A/ μ s.
- 3) compute to steady state
- 4) change the step load to the next value in the list or quit if there is none.

Due to the circuit complexity, the automatic STEP transition might not be detectable. Under this circumstance, it is best to use the `.TRAN` command to run the transient simulation and observe the starting and ending periods of the desired step load response. Use `PWL` command to program the output load current and switches to different levels at desired time periods. For example:

```
PWL(0 0.5 1m 0.5 1.01m 0.1 3m 0.1 3.01m 0.5)
```

The load current starts with 0.5A at time 0,
stays at 0.5A at 1ms,
switches to 0.1A at time 1.01ms,
stays at 0.1A until 3ms,
and switches to 0.5A at 3.01ms and stays at 0.5A.

The PWL can have almost unlimited pairs of (time, value) sequence.

Circuit Elements

A. Special Functions.

Symbol names: INV, BUF, AND, OR, XOR, SCHMITT, SCHMTBUF, SCHMTINV, DFLOP, VARISTOR, and MODULATE

Syntax: Annn n001 n002 n003 n004 n005 n006 n007 n008
<model> [instance parameters]

These are Linear Technology Corporation's proprietary special function/mixed mode simulation devices. Most of these and their behavior are undocumented as they frequently change with each new set of models available for LTspice. However, here we document some of them because of their general interest.

INV, BUF, AND, OR, and XOR are generic idealized behavioral gates. All gates are netlisted with eight terminals. These gates require no external power. Current is sourced or sunk from the complementary outputs, terminals 6 and 7, and returned through device common, terminal 8. Terminals 1 through 5 are inputs. Unused inputs and outputs are to be connected to terminal 8. The digital device compiler recognizes that as a flag that that terminal is not used and removes it from the simulation. This leads to the

potentially confusing situation where AND gates act differently when an input is grounded or at zero volts. If ground is the gate's common, then the grounded input is not at a logic false condition, but simply not part of the simulation. The reason that these gates are implemented like that is that this allows one device to act as 2-, 3-, 4- or 5- input gates with true, inverted, or complementary output with no simulation speed penalty for unused terminals. That is, the AND device acts as 12 different types of AND gates. The gates default to 0V/1V logic with a logic threshold of .5V, no propagation delay, and a 10hm output impedance. Output characteristics are set with these instance parameters:

parameter	default	meaning
Vhigh	1V	logic high level
Vlow	0V	logic low level
Trise	0	Rise time
Tfall	Trise	Fall time
Tau	0	output RC time constant
Cout	0	output capacitance
Rout	1	output impedance
Rhigh	Rout	logic high level impedance
Rlow	Rout	logic low level impedance

Note that not all parameters can be specified on the same instance at the same time, e.g., the output characteristics are either a slewing rise time or an RC time constant, not both.

The propagation delay defaults to zero and is set with instance parameter Td. Input hold time is equal to the propagation delay.

The input logic threshold defaults to $.5 \cdot (V_{high} + V_{low})$ but can be set with the instance parameter Ref. The hold time is equal to the propagation delay.

The Schmitt trigger devices have similar output characteristics as the gates. Their trip points are

specified with instance parameters Vt and Vh. The low trip point is Vt-Vh and the high trip point is Vt+Vh.

The gates and Schmitt trigger devices supply no timestep information to the simulation engine by default. That is, they don't look when they are about to change state and make sure there's a timestep close to either side of the state change. The instance parameter tripdt can be set to stipulate a maximum timestep size the simulator takes across state changes.

The VARISTOR is a voltage controlled varistor. Its breakdown voltage is set by the voltage between terminals 1 and 2. Its breakdown impedance is specified with the instance parameter rclamp. See the example schematic `.\examples\Educational\varistor.asc`

The MODULATE device is a voltage controlled oscillator. See the example schematic `.\examples\Educational\PLL.asc`. The instantaneous oscillation frequency is set by the voltage on the FM input. The conversion from voltage to frequency is linear and set by the two instance parameters, mark and space. Mark is the frequency when the FM input is at 1V and space is the frequency when the input is at 0V. The amplitude is set by the voltage on the AM input and defaults to 1V if that input is unused (connected to the MODULATE common).

The schematic capture aspect of LTspice netlists symbols for these devices in a special manner. All unconnected terminals are automatically connected to terminal 8. Also, if terminal 8 is unconnected, then it is connected to node 0.

B. Arbitrary behavioral voltage or current sources.

Symbol names: BV, BI


```

Syntax:  Bnnn n001 n002 V=<expression> [ic=<value>]
        + [tripdv=<value>] [tripdt=<value>]
        + [laplace=<expression> [window=<time>]]
        + [nfft=<number>] [mtol=<number>]]

        Bnnn n001 n002 I=<expression> [ic=<value>]
        + [tripdv=<value>] [tripdt=<value>] [Rpar=<value>]
        + [laplace=<expression> [window=<time>]]
        + [nfft=<number>] [mtol=<number>] ]

```

The first syntax specifies a behavioral voltage source and the next is a behavioral current source. For the current source, a parallel resistance may be specified with the Rpar instance parameter.

Tripdv and tripdt control step rejection. If the voltage across a source changes by more than tripdv volts in tripdt seconds, that simulation time step is rejected.

Expressions can contain the following:

- o Node voltages, e.g., V(n001)
- o Node voltage differences, e.g., V(n001, n002)
- o Circuit element currents; for example, I(S1), the current through switch S1 or Ib(Q1), the base current of Q1. However, it is assumed that the circuit element current is varying quasi-statically, that is, there is no instantaneous feedback between the current through the referenced device and the behavioral source output.
- o The keyword, "time" meaning the current time in the simulation.

o The keyword, "pi" meaning 3.14159265358979323846.

o The following functions:

name	function
abs(x)	absolute value
acos(x)	arc cosine of x
acosh(x)	arc hyperbolic cosine
asin(x)	arc sine
asinh(x)	arc hyperbolic sine
atan(x)	arc tangent
atan2(y, x)	four quadrant arc tangent of y/x
atanh(x)	arc hyperbolic tangent
cos(x)	cosine
cosh(x)	hyperbolic
exp(x)	exponential
ln(x)	natural logarithm
log(x)	natural logarithm
log10(x)	base 10 logarithm
sgn(x)	sign
sin(x)	sine
sinh(x)	hyperbolic sine
sqrt(x)	square root
tan(x)	tangent
tanh(x)	hyperbolic tangent
u(x)	unit step, 1 if x > 0., else 0.
buf(x)	1 of x > .5, else 0
inv(x)	0 of x > .5, else 1
uramp(x)	x if x > 0., else 0.
!(x)	alternative syntax for inv(x)
int(x)	convert x to integer
floor(x)	integer equal or less than x
ceil(x)	integer equal or greater than x
rand(x)	random number between 0 and 1 depending on the integer value of x.
random(x)	like rand(), but smoothly transitions between values.
min(x,y)	the smaller of x or y
max(x,y)	the greater of x or y
limit(x,y,z)	intermediate value of x, y or z
if(x,y,z)	if x > .5, then y else z
table(x,a,b,c,d,...)	interpolate a value for x based on a look up table given as a

| set of pairs of points

- o The following operations, grouped in reverse order of precedence of evaluation:

	Description
&	convert the expressions to either side to Boolean, then AND
	convert the expressions to either side to Boolean, then OR
^	convert the expressions to either side to Boolean, then XOR
<	true if expression on the left is less than the expression on the right, otherwise false
>	true if expression on the left is greater than the expression on the right, otherwise false
<=	true if expression on the left is less than or equal the expression on the right, otherwise false
>=	true if expression on the left is greater than or equal the expression on the right, otherwise false
+	floating point addition
-	floating point subtraction
*	floating point multiplication
/	floating point division
**	raise left hand side to power of right hand side
!	convert the following expression to Boolean and invert

True is numerically equal to 1 and False is 0. Conversion to Boolean converts a value to 1 if the value is greater than 0.5, otherwise the value is converted to 0.


If the optional Laplace transform is defined, that transform is applied to the result of the behavioral current or voltage signal. The Laplace transform must be a function of s . The frequency response at frequency f is found by substituting s with $\sqrt{-1} \cdot 2 \cdot \pi \cdot f$. The time domain behavior is found from the impulse response found from the Fourier transform of the frequency domain response. LTspice must guess an appropriate frequency range and resolution. The response must drop at high frequencies or an error is reported. It is recommended that the LTspice first be allowed to make a guess at this and then check the accuracy by reducing `reltol` or explicitly setting `nfft` and the window. The reciprocal of the value of the window is the frequency resolution. The value of `nfft` times this resolution is the highest frequency considered. The Boolean XOR operator, "`^`" is understood to mean exponentiation "`**`" when used in a Laplace expression.

C. Capacitor

Symbol names: CAP, POLCAP

Syntax: Cnnn n1 n2 <capacitance> [ic=<value>]
+ [Rser=<value>] [Lser=<value>] [Rpar=<value>]
+ [Cpar=<value>] [m=<value>]
+ [RLshunt=<value>] [temp=<value>]

It is possible to specify an equivalent series resistance, series inductance, parallel resistance and parallel shut capacitance. The equivalent circuit is given below:

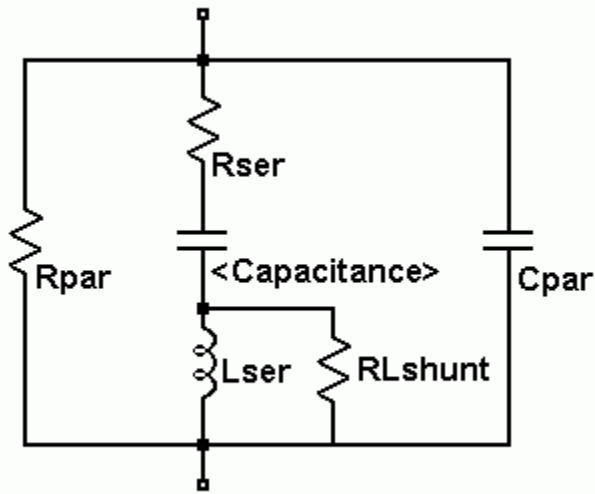

Capacitor Instance Parameters

name	parameter
Rser	equivalent series resistance
Lser	equivalent series inductance
Rpar	equivalent parallel resistance
Cpar	equivalent parallel capacitance
RLshunt	shunt resistance across Lser
m	number of parallel units
ic	initial voltage(used only if uic is flagged on the .tran card)
temp	instance temperature(for tempcos in a corresponding .model statement)

It is computationally better to include the parasitic Rpar, Rser, RLshunt, Cpar and Lser in the capacitor than to explicitly draft them. LTspice uses proprietary circuit simulation technology to simulate this model of a physical capacitor without any internal nodes. This makes the simulation matrix smaller, faster to compute and less likely to be singular at short time steps.

Note that since the capacitor element includes these parasitics, it is useful for macromodeling the fundamental of a piezoelectric crystal.

There is also a general nonlinear capacitor available. Instead of specifying the capacitance, one writes an expression for the charge.

LTspice will compile this expression and symbolically differentiate it with respect to all the variables, finding the partial derivative's that correspond to capacitances.

Syntax: Cnnn n1 n2 Q=<expression> [ic=<value>] [m=<value>]

There is a special variable, *x*, that means the voltage across the device. Therefore, a 100pF constant capacitance can be written as

```
Cnnn n1 n2 Q=100p*x
```

A capacitance with an abrupt change from 100p to 300p at zero volts can be written as

```
Cnnn n1 n2 Q=x*if(x<0,100p,300p)
```

This device is useful for rapidly evaluating the behavior of a new a hypothetical charge model for, e.g., a transistor.

D. Diode

Symbol Names: DIODE, ZENER, SCHOTTKY, VARACTOR.

Syntax: Dnnn anode cathode <model> [area]

```
+ [off] [m=<val>] [temp=<value>]
```

Examples:

```
D1 SW OUT MyIdealDiode
```

```
.model MyIdealDiode D(Ron=.1 Roff=1Meg Vfwd=.4)
```

```
D2 SW OUT dio2
```

```
.model dio2 D(Is=1e-10)
```

A diode requires a .model card to specify its characteristics. There are two types of diodes available. One is a conduction region-wise linear model that yields a computationally light weight representation of an idealized diode. It has three linear regions of conduction: on, off and reverse breakdown. Forward conduction and reverse breakdown can non-linear by specifying a current limit with Ilimit(revIlimit). tanh() is used to fit the slope of the forward conduction to the limit current. The parameters epsilon and revepsilon can be specified to smoothly switch between the off and conducting states. A quadratic function is fit between the off and on state such that the diode's IV curve is continuous in value and slope and the transition occurs over a voltage specified by the value of epsilon for the off to forward conduction and revepsilon for the transition between off and reverse breakdown.

Below are the model parameters for this type of diode:

name	parameter	units	default
Ron	resistance in forward conduction	Ohm	1.
Roff	resistance when off	Ohm	1/gmin
Vfwd	forward threshold voltage to enter conduction	V	0.
Vrev infin.	reverse breakdown voltage		V
Rrev	breakdown impedance	Ohm	Ron

Ilimit	forward current limit	A	
infin.			
Revilimit	reverse current limit	A	infin.
Epsilon	width of quadratic region	V	0.
Revepsilon	width of reverse quad. Region	V	0.

This idealized model is used if any of Ron, Roff, Vfwd, Vrev or Rrev is specified in the model. The

The other model available is the standard Berkeley SPICE semiconductor diode but extended to handle more detailed breakdown behavior and recombination current. The area factor determines the number of equivalent parallel devices of a specified model. Below are the diode model parameters for this diode.

name	parameter	units	default	example
Is	saturation current	A	1e-14	1e-7
Rs	ohmic resistance	Ohms	0	10
N	emission coefficient	-	1	1.
Tt	transit-time	sec	0	0.1ns
Cjo	zero-bias junction cap.	F	0	2p
Vj	junction potential	V	1	0.6
M	grading coefficient	-	0.5	0.5
Eg	activation energy	eV	1.11	1.11 Si 0.69 Sbd 0.67 Ge
XTI	sat.-current temp. exp	-	3.0	3.0 jn 2.0 Sbd
Kf	flicker noise coeff.	-	0	
Af	flicker noise exponent	-	1	
Fc	coeff. for forward-bias depletion capacitance formula	-	0.5	
BV	reverse breakdown voltage	V	infin.	40.
Ibv	current at breakdown voltage	A		1e-10
Tnom	parameter measurement temp.	°C	27	50
Isr	recombination current parameter	A	0	
Nr	Isr emission coeff.	-	2	
Ikf	high-injection knee current	A	infin.	
Tikf	linear Ikf temp coeff	/°C	0	
Trsl	linear Rs temp coeff	/°C	0	

Trs2 quadratic Rs temp coeff /°C/°C 0

It is possible to specify voltage, current, and power dissipation ratings for a model. These model parameters do not affect the electrical behavior. They allow LTspice to check if the diode is being used beyond its rated capability. The following parameters apply to either model. These parameters do not scale with area.

name	parameter	units	default
Vpk	Peak voltage rating	V	(none)
Ipk	Peak current rating	A	(none)
Iave	Ave current rating	A	(none)
Irms	RMS current rating	A	(none)
diss	maximum power dissipation rating	W	(none)

E. Voltage Dependent Voltage Source

Symbol Names: E, E2

There are three types of voltage-dependent voltage-source circuit elements.

Syntax: Exxx n+ n- nc+ nc- <gain>

This circuit element asserts an output voltage between the nodes n+ and n- that depends on the input voltage between nodes nc+ and nc-. This is a linearly dependent source specified solely by a constant gain.

Syntax: Exxx n+ n- nc+ nc- table=(<value pair>, <value pair>, ...)

A look-up table is used to specify the transfer function. The table is a list of pairs of numbers. The second value of the pair is the output voltage when the control voltage is equal to the first value of that pair. The output is linearly interpolated when the control voltage is between specified points. If the control voltage is beyond the range of the look-up table, the output voltage is extrapolated as a constant voltage of the last point of the look-up table.

Syntax: Exxx n+ n- nc+ nc- Laplace=<func(s)>
+ [window=<time>] [nfft=<number>] [mtol=<number>]

The transfer function of this circuit element is specified by its Laplace transform. The Laplace transform must be a function of s . The frequency response at frequency f is found by substituting s with $\sqrt{-1} \cdot 2\pi \cdot f$. The time domain behavior is found from the impulse response found from the Fourier transform of the frequency domain response. LTspice must guess an appropriate frequency range and resolution. The response must drop at high frequencies or an error is reported. It is recommended that the LTspice first be allowed to make a guess at this and then check the accuracy by reducing `reltol` or explicitly setting `nfft` and the window. The reciprocal of the value of the window is the frequency resolution. The value of `nfft` times this resolution is the highest frequency considered. The Boolean XOR operator, "`^`" is understood to mean exponentiation "`**`" when used in a Laplace expression.

Syntax: Exxx n+ n- value={<expression>} This is an alternative syntax of the behavioral source, arbitrary behavioral voltage source, B.

Syntax: Exxx n+ n- POLY(<N>) <(node1+,node1-)
(node2+,node2-)
+ ... (nodeN+,nodeN-)> <c0 c1 c2 c3 c4 ...>

This is an archaic means of arbitrary behavioral modeling with a polynomial. It is useful for running existing Linear Technology behavioral models.

Note: It is better to use a G source shunted with a resistance to approximate an E source than to use an E source. A voltage controlled current source shunted with a resistance will compute faster and cause fewer convergence problems than a voltage controlled voltage source. Also, the resultant nonzero output impedance is more representative of a practical circuit.

F. Current Dependent Current Source

Symbol Name: F

Syntax: Fxxx n+ n- <Vnam> <gain>

This circuit element applies a current between nodes n+ and n-. The current applied is equal to the value of the gain times the current through the voltage source specified as <Vnam>.

Syntax: Fxxx n+ n- value={<expression>}

This is an alternative syntax of the behavioral source, arbitrary behavioral voltage source, B.

Syntax: Fxxx n+ n- POLY(<N>) <V1 V2 ... VN> <c0 c1 c2 c3 c4 ...>

This is an archaic means of arbitrary behavioral modeling with a polynomial. It is useful for running existing Linear Technology behavioral models.

G. Voltage Dependent Current Source

Symbol Names: G, G2

There are three types of voltage dependent current-source circuit elements.

Syntax: Gxxx n+ n- nc+ nc- <gain>

This circuit element asserts an output current between the nodes n+ and n- that depends on the input voltage between nodes nc+ and nc-. This is a linearly dependent source specified solely by a constant gain.

Syntax: Gxxx n+ n- nc+ nc- table=(<value pair>, <value pair>, ...)

Here a lookup table is used to specify the transfer function. The table is a list of pairs of numbers. The second value of the pair is the output current when the control voltage is equal to the first value of that pair. The output is linearly interpolated when the control voltage is between specified points. If the control voltage is beyond the range of the look-up table, the output current is extrapolated as a constant current of the last point of the look-up table.

Syntax: Gxxx n+ n- nc+ nc- Laplace=<func(s)>
+ [window=<time>] [nfft=<number>] [mtol=<number>]

The transfer function of this circuit element is specified by its Laplace transform. The Laplace transform must be a function of s. The frequency response at frequency f is found by substituting s with $\sqrt{-1} \cdot 2 \cdot \pi \cdot f$. The time-domain behavior is found from the impulse response, which is found from the Fourier transform of the frequency-domain response. LTspice must guess an appropriate frequency range and resolution. The response must drop at high frequencies or an error is reported. It is recommended that the LTspice first be allowed to make a guess at this and then check the accuracy by reducing reltol or explicitly setting nfft and window. The reciprocal of the value of window is the frequency

resolution. The value of nfft times this resolution is the highest frequency considered. The Boolean XOR operator, "^" is understood to mean exponentiation "*" when used in a Laplace expression.

Syntax: Gxxx n+ n- value={<expression>} This is an alternative syntax of the behavioral source, arbitrary behavioral voltage source, B.

Syntax: Gxxx n+ n- POLY(<N>) <(node1+,node1-)
(node2+,node2-)
+ ... (nodeN+,nodeN-)> <c0 c1 c2 c3 c4 ...>

This is an archaic means of arbitrary behavioral modeling with a polynomial. It is useful for running existing Linear Technology behavioral models.

H. Current Dependent Voltage Source

Symbol Name: H

Syntax: Hxxx n+ n- <Vnam> <transresistance>

This circuit element applies a voltage between nodes n+ and n-. The voltage applied is equal to the value of the gain times the current through the voltage source <Vnam>.

Syntax: Hxxx n+ n- value={<expression>}

This is an alternative syntax of the behavioral source, arbitrary behavioral voltage source, B.

Syntax: Hxxx n+ n- POLY(<N>) <V1 V2 ... V3> <c0 c1 c2
c3 c4 ...>

This is an archaic means of arbitrary behavioral modeling with a polynomial. It is useful for running existing Linear Technology behavioral models.

I. Current Source

Symbol Name: CURRENT

Syntax: Ixxx n+ n- <current> [AC=<amplitude>] [load]

This circuit element sources a constant current between nodes n+ and n-. If the source is flagged as a load, the source is forced to be dissipative, that is, the current goes to zero if the voltage between nodes n+ and n- goes to zero or a negative value. The purpose of this options is to model a current load on a power supply that doesn't draw current if the output voltage is zero.

For AC analysis, the value of AC is used as the amplitude of the source at the analysis frequency.

Syntax: Ixxx n+ n- PULSE(Ioff Ion Tdelay Trise Tfall Ton Tperiod Ncycles)

Time-dependent pulsed current source

name	parameter	units
Ioff	initial value	Amps
Ion	pulsed value	Amps
Tdelay	delay	seconds
Tr	rise time	seconds
Tf	fall time	seconds
Ton	on time	seconds
Tperiod	period	seconds
Ncycles	number of cycles wave	cycles

Syntax: Ixxx n+ n- SINE(Ioffset Iamp Freq Td Theta Phi Ncycles)

Time-dependent sine wave current source.

name	parameter	units
Ioffset	DC. offset	Amps
Iamp	amplitude	Amps
Freq	frequency	Hz
Td	delay	seconds
Theta	damping factor	1/seconds
Phi	phase of sine wave	degrees
Ncycles	number of cycles wave	cycles

For times less than Td or times after completing Ncycles, have run, the output current is given by Ioffset+Iamp*sin(pi*phi/180) Otherwise the current is given by

$$Ioffset + Iamp * \exp(-(time - Td) * Theta) * \sin(2 * \pi * Freq * (time - Td) + \pi * \phi / 180)$$

The damping factor, Theta, is the reciprocal of the decay time constant.

Syntax: Ixxx n+ n- Ixxx n+ n- EXP(I1 I2 Td1 Tau1 Td2 Tau2)

Time-dependent exponential current source

name	parameter	units
I1	initial value	Amps
I2	pulsed value	Amps
Td1	rise delay time	seconds
Tau1	rise-time constant	seconds
Td2	fall delay time	seconds
Tau2	fall-time constant	seconds

For times less than Td1, the output current is V1. For times between Td1 and Td2 the current is given by

$$I1+(I2-I1) * (1-\exp(-(time-Td1)/Tau1)) .$$

For times after Td2 the current is given by

$$I1+(I2-I1) * (1-\exp(-(time-Td1)/Tau1)) \\ + (I1-I2) * (1-\exp(-(time-Td2)/Tau2)) .$$

Syntax: Ixxx n+ n- SFFM(Ioff Iamp Fcar MDI Fsig)

Time-dependent single-frequency FM current source.

name	parameter	units
Ioff	D.C. offset	Amps
Iamp	amplitude	Amps
Fcar	carrier frequency	Hz
MDI	modulation index	(none)
Fsig	signal frequency	Hz

The current is given by

$$Ioff+Iamp*\sin((2.*\pi*Fcar*time)+MDI*\sin(2.*\pi*Fsig*time)) .$$

Syntax: Ixxx n+ n- tbl=(<voltage, current>, <voltage, current>, ...)

The current can also be specified as a function of the voltage across the output nodes with a look-up table. This is useful for modeling the characteristics of a load.

Syntax: Ixxx n+ n- <value> step(<value1>, [<value2>],
[<value3>, ...]) [load]

This is a special form for the current source. The current is specified as a list of currents to use in a step load response transient analysis. In this mode, the simulation is computed until steady state is reached at the first current in the list, <value1>. Then the current is stepped to the next value in the list, <value2>. The simulation proceeds until steady state is achieved at that current. Then the current is stepped to the next value and the process repeats until the list is exhausted. If the .tran command doesn't specify "step", then the original <value> is used.

Syntax: Ixxx n+ n- R=<value>

This is not a current source at all, but a resistor. It is used to model a resistive load when the load is netlisted as a current source.

Syntax: Ixxx n+ n- PWL(t1 i1 t2 i2 t3 i3...)

Arbitrary Piece-wise linear current source.

For times before t1, the current is i1. For times between t1 and t2, the current varies linearly between i1 and i2. There can be any number of time, current points given. For times after the last time, the current is the last current.

Syntax: Ixxx n+ n- wavfile=<filename> [chan=<nnn>]

This allows a .wav file to be used as an input to LTspice. <filename> is either a full, absolute path for the .wav file or a relative path computed from the directory containing the simulation schematic or netlist. Double quotes may be used to specify a path containing spaces. The .wav file may contain up to 65536 channels, numbered 0

to 65535. Chan may be set to specify which channel is used. By default, the first channel, number 0, is used. The .wav file is interpreted as having a full scale range from -1A to 1A.

This source only has meaning in a .tran analysis.

J. JFET transistor

Symbol Names: NJF, PJF

```
Syntax: Jxxx D G S <model> [area] [off] [IC=Vds, Vgs]
        [temp=T]
```

Examples:

```
J1 0 in out MyJFETmodel
.model MyJFETmodel NJF(Lambda=.001)
```

```
J2 0 in out MyPJFETmodel
.model MyPJFETmodel PJF(Lambda=.001)
```

A JFET transistor requires a `.model` card to specify its characteristics. Note that the model card keywords NJF and PJF specify the polarity of the transistor. The area factor determines the number of equivalent parallel devices of a specified model.

The JFET model is derived from the FET model of Shichman and Hodges extended to include Gate junction recombination current and impact ionization. The DC characteristics are defined by the parameters VTO and BETA, which determine the variation of drain current with gate voltage; LAMBDA, which determines the output conductance; and Is, the saturation

current of the two gate junctions. Two ohmic resistances, R_d and R_s , are included. Charge storage is modeled by nonlinear depletion layer capacitances for both gate junctions; which vary as the $-1/2$ power of junction voltage and are defined by the parameters C_{gs} , C_{gd} , and PB . A fitting parameter B has been added. See A. E. Parker and D. J. Skellern, An Improved FET Model for Computer Simulators, IEEE Trans CAD, vol. 9, no. 5, pp. 551-553, May 1990.

name	parameter	units	default	example
Vto	threshold voltage	V	-2.0	-2.0
Beta	transconductance parameter	A/V/V	1e-4	1e-3
Lambda	channel-length modulation parameter	1/V	0	1e-4
Rd	drain ohmic resistance	Ohm	0	100
Rs	source ohmic resistance	Ohm	0	100
Cgs	zero-bias G-S junction capacitance	F	0	5pF
Cgd	zero-bias G-D junction capacitance	F	0	1pF
PB	gate junction potential	V	1	0.6
Is	gate junction saturation current	A	1e-14	1e-14
B	doping tail parameter	-	1	1.1
KF	flicker noise coefficient	-	0	
AF	flicker noise exponent	-	1	
FC	coeff. for forward-depletion capacitance	-	0.5	
Tnom	parameter measurement temperature	°C	27	50
betatce	transconductance parameter exponential temperature coefficient	%/°C	0	
vtotc	Threshold voltage temperature coefficient	V/°C	0	
N	Gate junction emission coefficient	-	1	
Isr	Gate junction recombination current parameter	A	0	
Nr	emission coefficient for Isr	-	2	
alpha	ionization coefficient	1/V	0	

Vk	ionization knee current	V	0
x _{ti}	Saturation current	-	3
	temperature coefficient		

K. Mutual Inductance

Symbol Names: None, this is placed as text on the schematic.

Syntax: Kxxx L1 L2 [L3 ...] <coefficient>

L1 and L2 are the names of inductors in the circuit. The mutual coupling coefficient must be in the range of -1 to 1.

The line

```
K1 L1 L2 L3 L4 1.
```

is synonymous with the six lines

```
K1 L1 L2 1.
K2 L2 L3 1.
K3 L3 L4 1.
K4 L1 L3 1.
K5 L2 L4 1.
K6 L1 L4 1.
```


It is recommended to start with a mutual coupling coefficient equal to 1. This will eliminate leakage inductance that can ring at extremely high frequencies if damping is not supplied and slow the simulation. However, a mutual inductance value of -1 or 1 can lead to simulation difficulties if the uic directive is flagged on the .tran card.

L. Inductor

Symbol Names: IND, IND2

```
Syntax: Lxxx n+ n- <inductance> [ic=<value>]
        + [Rser=<value>] [Rpar=<value>]
        + [Cpar=<value>] [m=<value>] [temp=<value>]
```

It is possible to specify an equivalent series resistance, series inductances, parallel resistance and parallel shut capacitance. The equivalent circuit is given below:

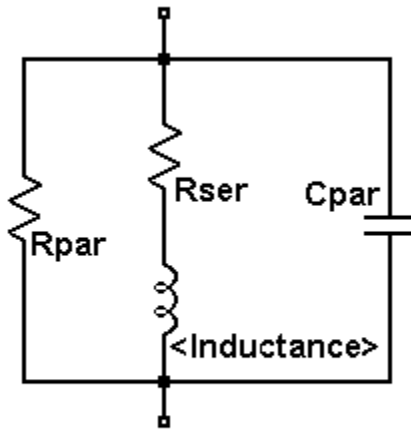

Inductor Instance Parameters

name	parameter
Rser	equivalent series resistance
Rpar	equivalent parallel resistance
Cpar	equivalent parallel capacitance
m	number of parallel units
ic	initial current(used only if uic

```

        | is flagged on the .tran card)
tc1   | linear inductance temperature coeff.
tc2   | quadratic inductance temperature coeff.
temp  | instance temp

```

It is better to include the device parasitics Rpar, Rser, and Cpar in the inductor than to explicitly draft them. LTspice uses proprietary circuit simulation technology to simulate this physical inductor without any internal nodes. This makes the simulation matrix smaller, faster to compute and less likely to be singular over all time-step sizes.

By default, LTspice will supply losses to inductors to aid SMPS transient analysis. For SMPS, these losses are of usually of no consequence, but may be turned off if desired. On the "Tools=> Control Panel=>Hacks!" page, uncheck "Supply a min. inductor damping if no Rpar is given." This setting will be remembered between invocations of the program. There is also a default series resistance of 1 milliOhm for inductors that aren't mentioned in a mutual inductance statement. This Rser allows SwitcherCAD III to integrate the inductance as a Norton equivalent circuit instead of Thevenin equivalent in order to reduce the size of the circuit's linearized matrix. If you don't want LTspice to introduce this minimum resistance, you must explicitly set Rser=0 for that inductor. This will require LTspice to use the more cumbersome Thevenin equivalent of the inductor during transient analysis.

There are two forms of non-linear inductors available in LTspice. One is a behavioral inductance specified with an expression for the flux. The inductor's current is referred to by the keyword "x" in the expression. Below is an example in a netlist.

```

*
L1 N001 0 Flux=1m*tanh(5*x)
I1 0 N001 PWL(0 0 1 1)
.tran 1
.end

```

In the above example, I1 supplies a unity dI/dT so that the inductance can be read off as the voltage on node N001.

There other non-linear inductor available in LTspice is a hysteretic core model based on a model first proposed in by John Chan et la. in IEEE Transactions On Computer-Aided Design, Vol. 10. No. 4, April 1991. This model defines the hysteresis loop with only three parameters:

name	parameter	units
Hc	Coercive force	Amp-turns/meter
Br	Remnant Flux Density	Tesla
Bs	Saturation Flux Density	Tesla


The upper and lower branches of the hysteresis major loop are given by

$$B_{up}(H) = B_s \cdot \frac{H + H_c}{|H + H_c| + H_c \cdot (B_s / B_r - 1)} + \mu_0 \cdot H$$

and

$$B_{dn}(H) = B_s \cdot \frac{H - H_c}{|H - H_c| + H_c \cdot (B_s / B_r - 1)} + \mu_0 \cdot H$$


These functions are plotted in following figure. Hc and Br are the intersections of the major hysteresis loop with the H- and B-axes. Bs is the B-axis intersection of the asymptotic line, $B_{sat}(H) = B_s + \mu_0 \cdot H$, approached as H goes to infinity.

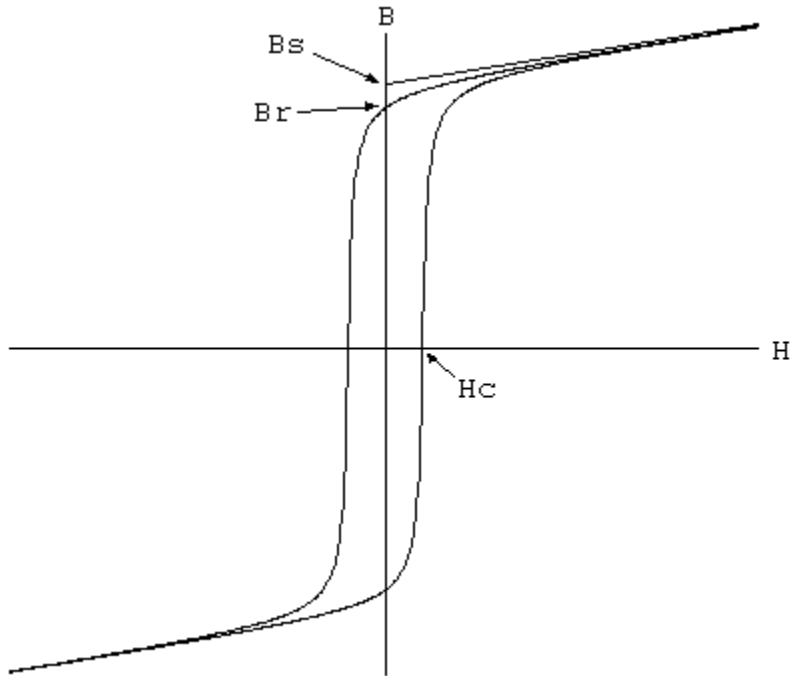

The initial magnetization curve is given by

$$B_{mag}(H) = .5 \cdot (B_{up}(H) + B_{dn}(H))$$

Minor loops are obtained by various translations of the above equations per the cited reference. The core's absolute and differential permeabilities are a function of H and the history of values of H. The plot below shows the path taken by an asymmetrical minor loop for a typical power ferrite ($H_c=16$ A-turns/m, $B_s=.44$ T, $B_r=.10$ T).

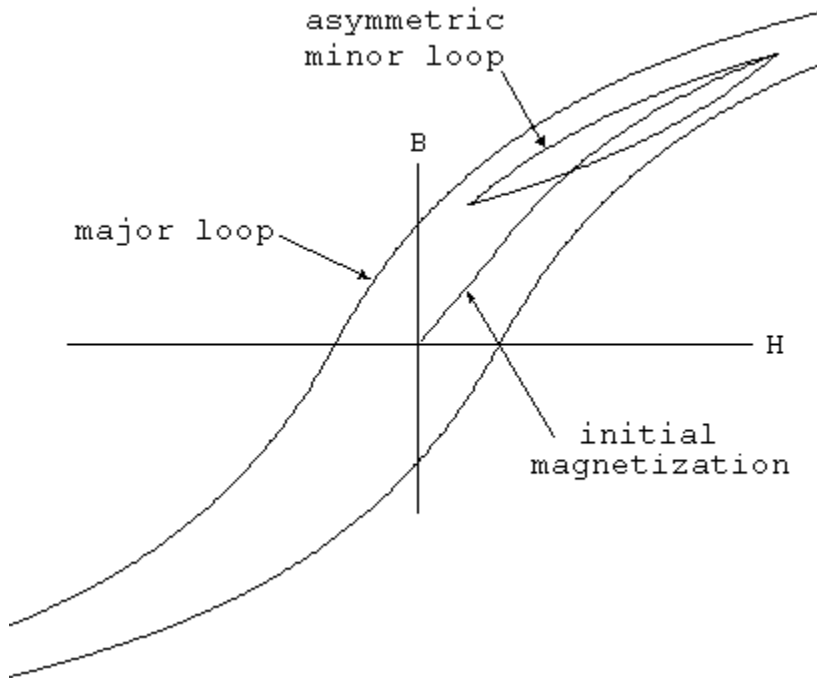

In addition to the core property parameters H_c , B_r , and B_s , mechanical dimensions of the core are required:

name	parameter	units
L_m	Magnetic Length(excl. gap)	meter
L_g	Length of gap	meter
A	cross sectional area	meter**2
N	number of turns	--

Note that if specifying a non-zero gap the magnetic field, H , is not proportional to the current in the windings. LTspice solves for the magnetic fields in the core and gap under the assumption of uniform cross sectional area and thin or uniformly distributed gap.

Below is an example that shows inductance vs. current for $L1$, an inductor wound on a gapped core. You can read out the inductance as $V(n001)$ since current source $I1$ supplies a unity dI/dt . The core follows the initial magnetization curve, so you can see that the permeability first increases from the initial value as the current is ramped and then

drops as it saturates. Since the gap makes the inductance insensitive to the exact permeability of the core, you have to really zoom in on V(n001) to see that it does increase. The peak is when H inside the core is equal to its Hc.

```
*
L1 N001 0 Hc=16. Bs=.44 Br=.10 A=0.0000251
+ Lm=0.0198 Lg=0.0006858 N=1000
I1 0 N001 PWL(0 0 1 1)
.tran .5
.options maxstep=10u
.end
```

M. MOSFET

Symbol Names: NMOS, NMOS3, PMOS, PMOS3 There are two fundamentally different types of MOSFETS in LTspice, monolithic MOSFETS and a new vertical double diffused power MOSFET model.

Monolithic MOSFET:

```
Syntax: Mxxx Nd Ng Ns Nb <model> [m=<value>] [L=<len>]
+ [W=<width>] [AD=<area>] [AS=<area>]
+ [PD=<perim>] [PS=<perim>] [NRD=<value>]
+ [NRS=<value>] [off] [IC=<Vds, Vgs, Vbs>]
+ [temp=<T>]
```

```
M1 Nd Ng Ns 0 MyMOSFET
.model MyMOSFET NMOS (KP=.001)
```

```
M1 Nd Ng Ns Nb MypMOSFET
.model MypMOSFET PMOS (KP=.001)
```

Vertical double diffused power MOSFET:

```
Syntax:  Mxxx Nd Ng Ns <model> [L=<len>] [W=<width>]
         + [M=<area>] [m=<value>] [off]
         + [IC=<Vds, Vgs, Vbs>] [temp=<T>]
```

Example:

```
M1 Nd Ng Ns Si4410DY
.model Si4410DY VDMOS (Rd=3m Rs=3m Vto=2.6 Kp=60
+ Cgdmax=1.9n Cgdmin=50p Cgs=3.1n Cjo=1n
+ Is=5.5p Rb=5.7m)
```

The MOSFET's model card specifies which type is intended. The model card keywords NMOS and PMOS specify a monolithic N- or P- channel MOSFET transistor. The model card keyword VDMOS specifies a vertical double diffused power MOSFET.

Monolithic MOSFETS are four terminal devices. Nd, Ng, NS, and Nb are the drain, gate, source, and bulk; i.e., substrate; nodes. L and W are the channel length and width, in meters. AD and AS are the areas of the drain and source diffusions, in square meters. Note that the suffix u specifies μm and p square μm . If any of L, W, AD, or AS are not specified, default values are used. PD and PS are the perimeters of the drain and source junctions, in meters. NRD and NRS designate the equivalent number of squares of the drain and source diffusions; these values multiply the sheet resistance RSH specified on the .MODEL control line. PD and PS default to zero while NRD and NRS to one. OFF indicates an initial condition on the device for DC analysis. The initial condition specification using IC=VDS, VGS, VBS is for use with the UIC option on the .TRAN control line, when a transient analysis is desired starting from other than the quiescent operating point. The optional TEMP value is the temperature at which this device is to operate, and overrides the temperature specification on the .OPTION control line. The temperature specification is ONLY

valid for level 1, 2, 3, and 6 MOSFETs, not for level 4, 5 or 8 BSIM devices.

LTspice contains seven different types of monolithic MOSFET's and one type of vertical double diffused Power MOSFET.

There are seven monolithic MOSFET device models. The model parameter LEVEL specifies the model to be used. The default level is one.

level	model
1	Shichman-Hodges
2	MOS2 (see A. Vladimirescu and S. Liu, The Simulation of MOS Integrated Circuits Using SPICE2, ERL Memo No. M80/7, Electronics Research Laboratory University of California, Berkeley, October 1980)
3	MOS3, a semi-empirical model (see reference for level 2)
4	BSIM (see B. J. Sheu, D. L. Scharfetter, and P. K. Ko, SPICE2 Implementation of BSIM. ERL Memo No. ERL M85/42, Electronics Research Laboratory University of California, Berkeley, May 1985)
5	BSIM2 (see Min-Chie Jeng, Design and Modeling of Deep-Submicrometer MOSFETs ERL Memo Nos. ERL M90/90, Electronics Research Laboratory University of California, Berkeley, October 1990)

- 6 MOS6 (see T. Sakurai and A. R. Newton, A Simple MOSFET Model for Circuit Analysis and its application to CMOS gate delay analysis and series-connected MOSFET Structure, ERL Memo No. ERL M90/19, Electronics Research Laboratory, University of California, Berkeley, March 1990)

- 8 BSIM3v3.2.4 from University of California, Berkeley as of December 2001.

- 9 BSIMSOI3.2 (Silicon on insulator) from the BSIM Research Group of the University of California, Berkeley, February 2004.

- 12 EKV 2.6 based on code from Ecole Polytechnique Federale de Lausanne. See <http://legwww.epfl.ch/ekv> and "The EPFL-EKV MOSFET Model Equations for Simulation, Version 2.6", M. Bucher, C. Lallement, F. Theodoloz, C. Enz, F. Krummenacher, EPFL-DE-LEG, June 1997.

- 14 BSIM4.4.0 from the University of California, Berkeley BSIM Research Group, March 4, 2004.

The DC characteristics of the level 1 through level 3 MOSFETs are defined by the device parameters VTO, KP, LAMBDA, PHI and GAMMA. These parameters are computed if the process parameters (NSUB, TOX, ...) are given, but user-specified values always override. VTO is positive (negative) for enhancement mode and negative (positive) for depletion mode N-channel (P-channel) devices. Charge storage is modeled by three constant capacitors, CGSO, CGDO, and CGBO which represent overlap capacitances, by the non-linear thin-oxide capacitance which is distributed among the gate, source, drain, and bulk regions, and by the nonlinear depletion-layer capacitances for both substrate junctions divided into bottom and periphery, which vary as the MJ and MJSW power of junction voltage respectively, and are determined by the parameters CBD, CBS, CJ, CJSW, MJ, MJSW and PB. Charge storage effects are modeled by the

piecewise linear voltages-dependent capacitance model proposed by Meyer. The thin-oxide charge-storage effects are treated slightly different for the Level=1 model. These voltage dependent capacitances are included only if T_{ox} is specified.

There is some overlap among the parameters describing the junctions, e.g., the reverse current can be specified either through I_s [Amp] or through J_s [Amp/m/m]. Whereas the first is an absolute value the second is multiplied by A_d and A_s to give the reverse current of the drain and source junctions respectively. The same idea applies also to the zero-bias junction capacitances C_{BD} and C_{BS} [Farad] on one hand, and C_J [Farad/m/m] on the other. The parasitic drain and source series resistance can be expressed as either R_D and R_S [Ohms] or R_{SH} [Ohms/square], the latter being multiplied by the number of squares N_{RD} and N_{RS} input on the device line.


MOSFET level 1, 2, 3 and 6 parameters:

name	parameter	units	default	example
VTO	zero-bias threshold voltage	V	0.	1.
KP	transconductance parameter	A/V/V	2e-5	3e-5
GAMMA	bulk threshold parameter	sqrt(V)	0.	0.37
PHI	surface potential	V	0.6	0.65
LAMBDA	channel-length modulation(level 1 and 2 only)	1/V	0.	0.02
Rd	drain ohmic resistance	Ohms	0.	1.
Rs	source ohmic resistance	Ohms	0.	1.
Cbd	zero-bias B-D junction capacitance	F	0.	20f
Cbs	zero-bias B-S junction capacitance	F	0.	20f
Is	bulk junction saturation	A	1e-14	1e-15

Current

N	bulk diode emission coefficient	-	1.	
Pb	bulk junction potential	V	0.8	0.87
Cgso	gate-source overlap capacitance per meter channel width	F/m	0.	4e-11
Cgdo	gate-drain overlap capacitance per meter channel width	F/m	0.	4e-11
Cgbo	gate-bulk overlap capacitance per meter channel length	F/m	0.	2e-10
Rsh	drain and source diffusion sheet resistance	Ohms	0.	10.
Cj	zero-bias bulk junction bottom capacitance per sq-meter of junction area	F/m/m	0.	2e-4
Mj	bulk junction bottom grading coefficient	-	0.5	0.5
Cjsw	zero-bias bulk junction sidewall capacitance per meter of junction perimeter	F/m	0.	1e-9
Mjsw	bulk junction sidewall grading coefficient	-	0.50 level 1 0.33 level 2,3	
Js	bulk junction saturation current per sq-meter of junction area	A/m	0.	1e-8
Tox	oxide thickness	m	1e-7	1e-7
Nsub	substrate doping	1/cm/cm/cm	0.	4e15
Nss	surface state density	1/cm/cm	0.	1e10
Nfs	fast surface state density	1/cm/cm	0.	1e10
TPG	type of gate material: +1 opp. to substrate -1 same as substrate 0 Al gate	-	1.	
XJ	metallurgical junction depth	m	0.	1μ
LD	lateral diffusion	m	0.	0.8μ
UO	surface mobility	cm*cm/V/s	600	700


Ucrit	critical field for mobility degradation (MOS2 only)	V/cm	1e4	1e4
Uexp	critical field exponent in mobility degradation (MOS2 only)	-	0.	0.1
UTRA	transverse field coefficient (mobility) (deleted for MOS2)	-	0.	0.3
Vmax	maximum drift velocity of carriers	m/s	0.	5e4
Neff	total channel-charge (fixed and mobile) coefficient (MOS2 only)	-	1.	5.0
KF	flicker noise coefficient	-	0.	1e-26
AF	flicker noise exponent	-	1.	1.2
FC	coefficient for forward-bias depletion capacitance formula	-	0.5	
DELTA	width effect on threshold voltage (MOS2 and MOS3)	-	0.	1.
THETA	mobility modulation (MOS3 only)	1/V	0.	0.1
ETA	static feedback (MOS3 only)	-	0.	1.
KAPPA	saturation field factor (MOS3 only)	-	0.2	0.5
Tnom	parameter measurement temperature	°C	27	50

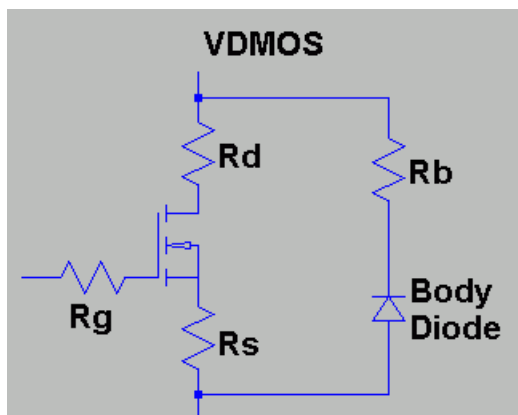

The discrete vertical double diffused MOSFET transistor (VDMOS) popularly used in board level switch mode power supplies has behavior that is qualitatively

different than the above monolithic MOSFET models. In particular, (i) the body diode of a VDMOS transistor is connected differently to the external terminals than the substrate diode of a monolithic MOSFET and (ii) the gate-drain capacitance (C_{gd}) non-linearity cannot be modeled with the simple graded capacitances of monolithic MOSFET models. In a VDMOS transistor, C_{gd} abruptly changes about zero gate-drain voltage (V_{gd}). When V_{gd} is negative, C_{gd} is physically based a capacitor with the gate as one electrode and the drain on the back of the die as the other electrode. This capacitance is fairly low due to the thickness of the non-conducting die. But when V_{gd} is positive, the die is conducting and C_{gd} is physically based on a capacitor with the thickness of the gate oxide.

Traditionally, elaborate subcircuits have been used to duplicate the behavior of a power MOSFET. A new intrinsic spice device was written that encapsulates this behavior in the interest of compute speed, reliability of convergence, and simplicity of writing models. The DC model is the same as a level 1 monolithic MOSFET except that the length and width default to one so that transconductance can be directly specified without scaling. The AC model is as follows. The gate-source capacitance is taken as constant. This was empirically found to be a good approximation for power MOSFETS if the gate-source voltage is not driven negative. The gate-drain capacitance follows the following empirically found form:

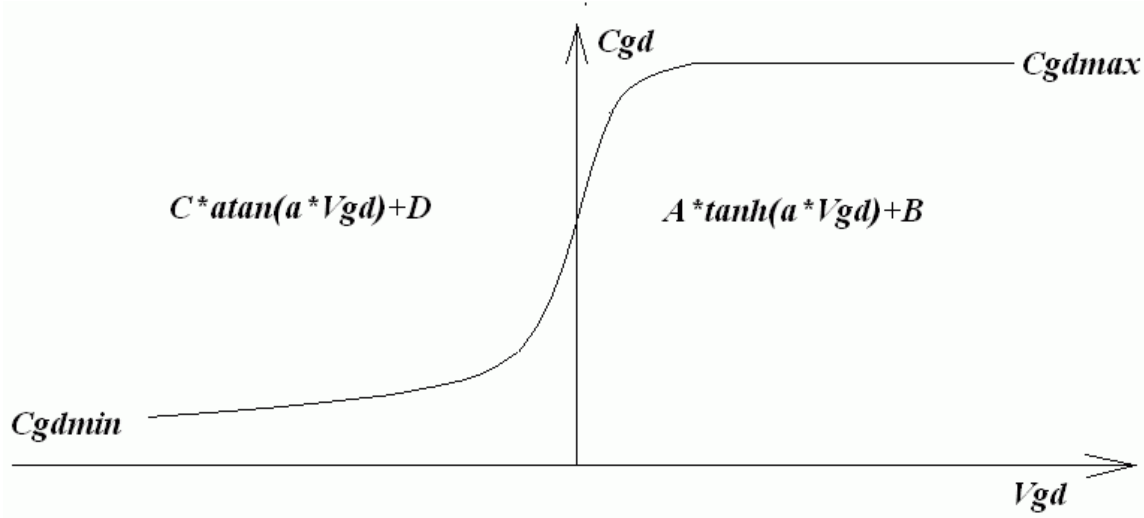

For positive V_{gd} , C_{gd} varies as the hyperbolic tangent of V_{gd} . For negative V_{gd} , C_{gd} varies as the arc tangent of V_{gd} . The model parameters a , C_{gdmax} , and C_{gdmin} parameterize the gate drain capacitance. The source-drain capacitance is supplied by the graded capacitance of a body diode connected across the source drain electrodes, outside of the source and drain resistances.

name	parameter	units	default	example
l	Length	m	1.	2.
w	Width	m	1.	1.
R_g	Gate ohmic resistance	Ohms	0.	
R_{ds}	Drain-Source shunt resistance	Ohms	0.	
V_{TO}	zero-bias threshold voltage	V	0.	1.
K_P	transconductance	A/V	1.	3.
Φ_{SI}	surface potential	V	0.6	0.65
λ	channel-length modulation	1/V	0.	0.02
C_{bd}	zero-bias B-D junction capacitance	F	0.	20f
C_{bs}	zero-bias B-S junction capacitance	F	0.	20f
R_d	Drain ohmic resistance	Ohms	0.	
R_s	Source ohmic resistance	Ohms	0.	
C_{gs}	Gate-source overlap capacitance	F	0.	4e-11
C_{gdmin}	Minimum non-linear G-D capacitance	F	0.	4e-11

Cgdmax	Maximum non-linear G-D capacitance	F	0.	4e-11
a	non-linear Cgd capacitance parameter	1	1.	.5
Is	Body diode saturation current	A	1e-14	1e-15
Rb	Body diode ohmic resistance	Ohms	0.	
n	Body diode emission coefficient	-	1.	
Cjo	Body diode junction capacitance	F	0.	4e-11
Vj	Body diode junction potential	V	0.75	
m	Body diode grading coefficient	-	0.5	0.5
Fc	Body diode forward bias junction fit parameter	-	0.5	
tt	Body diode transit time	sec	0.	0.1n
Eg	Body diode activation energy for temperature effect on Is	eV	1.11	
Xti	Body diode saturation current temperature exponent	-	3	
nchan[*]	N-channel VDMOS	-	(true)	
pchan[*]	P-channel VDMOS	-	(false)	
Tnom	Parameter measurement temperature	°C	27	
Kf	Flicker noise coefficient	-	0	
Af	Flicker noise exponent	-	0	

*]The model name VDMOS is used both for a N-channel and P-channel device. The polarity defaults to N-channel. To specify P-channel, flag the model with the keyword "pchan", e.g., ".model xyz VDMOS(Kp = 3 pchan)" defines a P-channel transistor.

O. Lossy Transmission Line

Symbol Name: LTLIN

Syntax: Oxxx L+ L- R+ R- <model>

Example:

```
O1 in 0 out 0 MyLossyTline
.model MyLossyTline LTRA(len=1 R=10 L=1u C=10n)
```

This is a single-conductor lossy transmission line. N1 and N2 are the nodes at port 1. N3 and N4 are the nodes at port 2. A model card is required to define the electrical characteristics of this circuit element.

Model parameters for Lossy Transmission Lines

name	parameter	units/type	default
R	resistance/length	Ohm/unit	0.
L	inductance/length	Henrys/unit	0.
G	conductance/length	mhos/unit	0.
C	capacitance/length	Farads/unit	0.
LEN	length of line		(none)
REL	breakpoint control	-	1
ABS	breakpoint control		1
NOSTEPLIMIT	don't limit time-step to less than line delay	flag	not set
NOCONTROL	don't do complex time-step control	flag	not set
LININTERP	use linear interpolation	flag	not set
MIXEDINTERP	use linear interpolation when quadratic seems bad	flag	not set
COMPACTREL	special reltol for history compaction	flag	RELTOL
COMPACTABS	special abstol for history compaction		ABSTOL
TRUNCNR	use Newton-Raphson method for time-step control	flag	not set
TRUNCDONTCUT	don't limit time-step to keep impulse-response	flag	not set

errors low

Q. Bipolar transistor

Symbol Names: NPN, PNP, NPN2, PNP2

Syntax: Qxxx Collector Base Emitter [Substrate Node]
+ model [area] [off] [IC=<Vbe, Vce>] [temp=<T>]

Example:

```
Q1 C B E MyNPNmodel  
.model MyNPNmodel NPN(Bf=75)
```

Bipolar transistors require a model card to specify its characteristics. The model card keywords NPN and PNP indicate the polarity of the transistor. The area factor determines the number of equivalent parallel devices of a specified model.

The bipolar junction transistor model is an adaptation of the integral charge control model of Gummel and Poon. This modified Gummel-Poon model extends the original model to include several effects at high bias levels, quasi-saturation, and substrate conductivity. The model automatically simplifies to the Ebers-Moll model when certain parameters are not specified. The DC model is defined by the parameters I_s , B_f , N_f , I_{se} , I_{kf} , and N_e which determine the forward current gain characteristics, I_s , B_r , N_r , I_{sc} , I_{kr} , and N_c which determine the reverse current gain characteristics, and V_{af} and V_{ar} which determine the output conductance for forward and reverse regions. Three ohmic resistances R_b , R_c and R_e , are included, where R_b can be high current dependent. Base charge storage is modeled by forward and reverse transit times, T_f and

Tr, the forward transit time Tf being bias dependent if desired; and nonlinear depletion layer capacitances, which are determined by Cje, Vje and Mje, for the B-E junction, Cjc, Vjc, and MJC for the B-C junction and Cjs, Vjs, and Mjs for the Collector-Substrate junction. The temperature dependence of the saturation current, Is, is determined by the energy gap, Eg, and the saturation-current temperature exponent, XTI. Additionally base current temperature dependence is modeled by the beta temperature exponent XTB in the new model. The values specified are assumed to have been measured at the temperature TNOM, which can be specified on the .OPTIONS control line or overridden by a specification on the .model line.

The BJT parameters used in the modified Gummel-Poon model are listed below.

Modified Gummel-Poon BJT Parameters

name	parameter	units	default
Is	transport saturation current	A	1.0e-16
Bf	ideal maximum forward beta	-	100
Nf	forward current emission coefficient	-	1.0
Vaf	forward Early voltage	V	infinite
Ikf	corner for forward beta		
	high current roll-off	A	infinite
Ise	B-E leakage saturation current	A	0
NE	B-E leakage emission coefficient	-	1.5
Br	ideal maximum reverse beta	-	1
Nr	reverse current emission coefficient	-	1
Var	reverse Early voltage	V	infinite
Ikr	corner for reverse beta		
	high current roll-off	A	infinite
Isc	B-C leakage saturation current	A	0
Nc	B-C leakage emission coefficient	-	2
Rb	zero bias base resistance	Ohm	0
Irb	current where base resistance		
	falls halfway to its min value	A	infinite
Rbm	minimum base resistance		
	at high currents	Ohm	RB
Re	emitter resistance	Ohm	0

Rc	collector resistance	Ohm	0
Cje	B-E zero-bias depletion capacitance	F	0
Vje	B-E built-in potential	V	0.75
Mje	B-E junction exponential factor	-	0.33
Tf	ideal forward transit time	sec	0
Xtf	coefficient for bias dependence of TF	-	0
Vtfc	voltage describing VBC dependence of TF	V	infinite
Itfc	high-current parameter for effect on TF	A	0
PTF	excess phase at freq=1.0/(TF*2PI) Hz	°	0
Cjc	B-C zero-bias depletion capacitance	F	0
Vjc	B-C built-in potential	V	0.75
Mjc	B-C junction exponential factor	-	0.33
Xcjc	fraction of B-C depletion capacitance connected to internal base node	-	1
Tr	ideal reverse transit time	sec	0
Cjs	zero-bias collector-substrate capacitance	F	0
Vjs	substrate junction built-in potential	V	0.75
Mjs	substrate junction exponential factor	-	0
Xtb	forward and reverse beta temperature exponent	-	0
Eg	energy gap for temperature effect on IS	eV	1.11
Xti	temperature exponent for effect on IS	-	3
Kf	flicker-noise coefficient	-	0
Af	flicker-noise exponent	-	1
Fc	coefficient for forward-bias depletion capacitance formula	-	0.5
Tnom	Parameter measurement temperature	°C	27
cn	Quasi-saturation temperature coefficient for hole mobility		2.42 NPN 2.2 PNP
d	Quasi-saturation temperature coefficient for scattering-limited hole carrier velocity		.87 NPN .52 PNP
gamma	epitaxial region doping factor		1e-11
qco	epitaxial region charge factor	Coul	0
quasimod	Quasi-saturation flag for temperature dependence	-	0
rco	epitaxial region resistance	Ohm	0
vg	Quasi-saturation extrapolated bandgap voltage at 0°K	V	1.206
vo	carrier mobility knee voltage	V	10.
Tre1	Re linear temperature coefficient	/°C	0
Tre2	Re quadratic temperature coefficient	/°C/°C	0

Trb1	Rb linear temperature coefficient	/°C	0
Trb2	Rb quadratic temperature coefficient	/°C/°C	0
Trc1	Rc linear temperature coefficient	/°C	0
Trc2	Rmb quadratic temperature coefficient	/°C/°C	0
Trm1	Rmb linear temperature coefficient	/°C	0
Trm2	Rc quadratic temperature coefficient	/°C/°C	0
Iss	Substrate junction saturation current	A	0
Ns	Substrate junction emission Coefficient	-	1

The model parameter "level" can be used to specify another type of BJT in LTspice. Due to a generous contribution of source code from Dr.-Ing. Dietmar Warning of DAnalyse GmbH, Berlin, Germany; LTspice includes a version of VBIC. Set Level=9 to use the alternate device. Level 4 is a synonym for level 9. The following documentation has been supplied by Dr. Warning:


VBIC - Vertical Bipolar Inter Company model

The VBIC model is an extended development of the Standard Gummel-Poon (SGP) model with the focus of integrated bipolar transistors in today's modern semiconductor technologies. With the implemented modified Quasi-Saturation model from Kull and Nagel it is also possible to model the special output characteristic of switching transistors. It is a widely used alternative to the SGP model for silicon, SiGe and III-V HBT devices.

VBIC Capabilities compared to Standard Gummel-Poon Model

- o Integrated Substrate transistor for parasitic devices in integrated processes
- o Weak avalanche and Base-emitter breakdown model
- o Improved Early Effect modeling
- o Physical separation of I_c and I_b
- o Improved Depletion capacitance model
- o Improved temperature modeling
- o Self-heating modeling (not in this version)

Model Structure

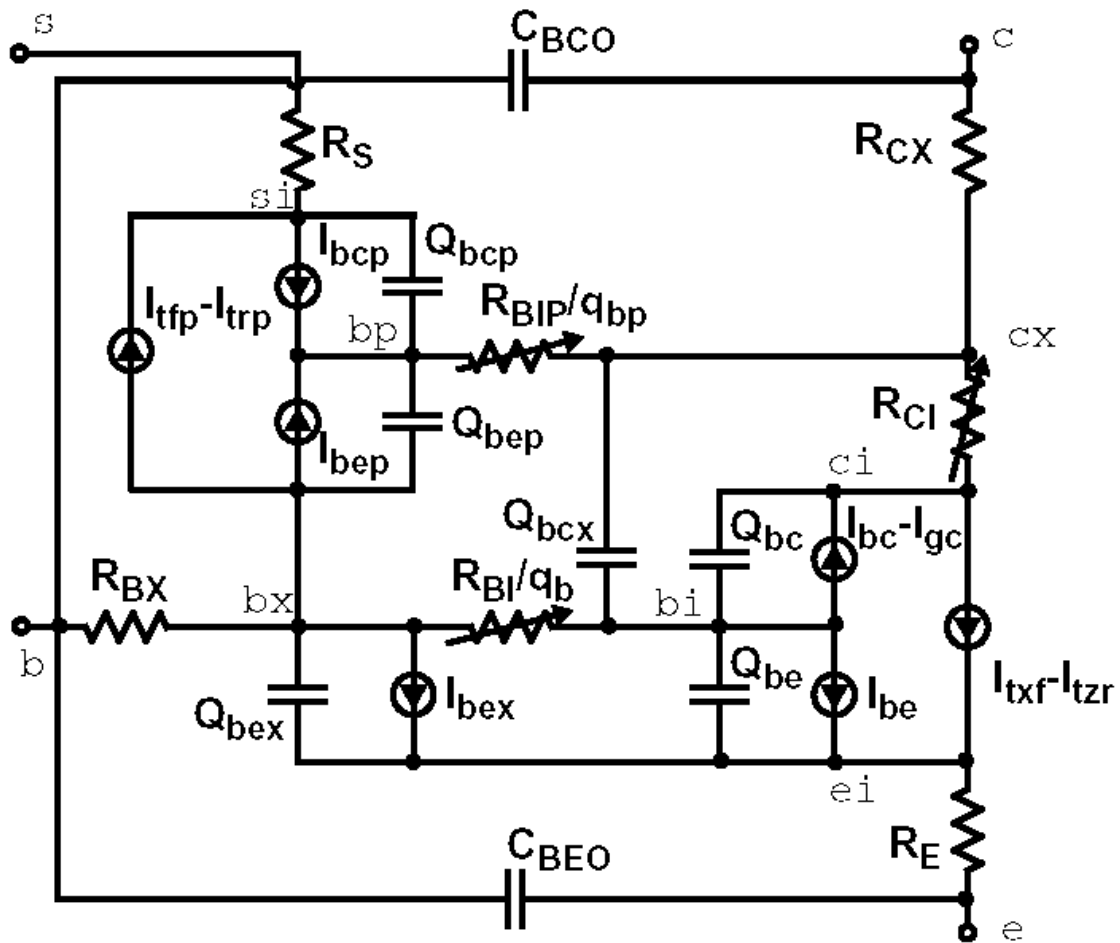

Parameters

Because the VBIC model is based on SGP model it is possible to start with an SGP parameters, carry out some transformations. Following parameters are from VBIC version 1.2, which is implemented in LTSpice in the 4-terminal version without excess phase network and self-heating effect. To switch from SGP to VBIC you should set the extra parameter **level** to 9.

Na me	Parameter meaning	Unit	Default
tno m	Parameter measurement temperature	degC	27.0
rcx	Extrinsic coll resistance	Ω	0.1
rci	Intrinsic coll resistance	Ω	0.1

vo	Epi drift saturation voltage	V	8
gam m m	Epi doping parameter		0.0
hrc f	High current RC factor		8
rbx	Extrinsic base resistance	Ω	0.1
rbi	Intrinsic base resistance	Ω	0.1
re	Intrinsic emitter resistance	Ω	0.1
rs	Intrinsic substrate resistance	Ω	0.1
rbp	Parasitic base resistance	Ω	0.1
is	Transport saturation current	A	1e-16
nf	Forward emission coefficient		1.0
nr	Reverse emission coefficient		1.0
fc	Fwd bias depletion capacitance limit		0.9
cb eo	Extrinsic B-E overlap capacitance	F	0.0
cje	Zero bias B-E depletion capacitance	F	0.0
pe	B-E built in potential	V	0.75
me	B-E junction grading coefficient		0.33
aje	B-E capacitance smoothing factor		-0.5
cb co	Extrinsic B-C overlap capacitance	F	0.0
cjc	Zero bias B-C depletion capacitance	F	0.0
qco	Epi charge parameter	C	0.0
cje p	B-C extrinsic zero bias capacitance	F	0.0
pc	B-C built in potential	V	0.75
mc	B-C junction grading coefficient		0.33
ajc	B-C capacitance smoothing factor		-0.5
cjc p	Zero bias S-C capacitance	F	0.0

ps	S-C junction built in potential	V	0.75
ms	S-C junction grading coefficient		0.33
ajs	S-C capacitance smoothing factor		-0.5
ibe i	Ideal B-E saturation current	A	1e-18
wb e	Portion of IBEI from Vbei 1-WBE from Vbex		1.0
nei	Ideal B-E emission coefficient		1.0
ibe n	Non-ideal B-E saturation current	A	0.0
ne n	Non-ideal B-E emission coefficient		2.0
ibc i	Ideal B-C saturation current	A	1e-16
nci	Ideal B-C emission coefficient		1.0
ibc n	Non-ideal B-C saturation current	A	0.0
nc n	Non-ideal B-C emission coefficient		1.0
av c1	B-C weak avalanche parameter 1	1/V	0.0
av c2	B-C weak avalanche parameter 2	1/V	0.0
isp	Parasitic transport saturation current	A	0.0
ws p	Portion of ICCP		1.0
nfp	Parasitic fwd emission coefficient		1.0
ibe ip	Ideal parasitic B-E saturation current	A	0.0
ibe np	Non-ideal parasitic B-E saturation current	A	0.0
ibc ip	Ideal parasitic B-C saturation current	A	0.0
nci p	Ideal parasitic B-C emission coefficient		1.0
ibc np	Non-ideal parasitic B-C saturation current	A	0.0

nc np	Non-ideal parasitic B-C emission coefficient		2.0
vef	Forward Early voltage		8
ver	Reverse Early voltage		8
ikf	Forward knee current	A	8
ikr	Reverse knee current	A	8
ikp	Parasitic knee current	A	8
tf	Ideal forward transit time	s	0.0
qtf	Variation of TF with base-width modulation		0.0
xtf	Coefficient for bias dependence of TF		0.0
vtf	Voltage giving VBC dependence of TF	V	8
itf	High current dependence of TF	A	8
tr	Ideal reverse transit time	s	0.0
td	Forward excess-phase delay time	s	0.0
kfn	B-E Flicker Noise Coefficient		0.0
afn	B-E Flicker Noise Exponent		1.0
bfm	B-E Flicker Noise 1/f dependence		1.0
xre	Temperature exponent of RE		0.0
xrb i	Temperature exponent of RBI		0.0
xrc i	Temperature exponent of RCI		0.0
xrs	Temperature exponent of RS		0.0
xv o	Temperature exponent of VO		0.0
ea	Activation energy for IS	V	1.12
eai e	Activation energy for IBEI	V	1.12
eai c	Activation energy for IBCI/IBEIP	V	1.12
eai s	Activation energy for IBCIP	V	1.12
ea	Activation energy for IBEN	V	1.12

ne			
ea nc	Activation energy for IBCN/IBENP	V	1.12
ea ns	Activation energy for IBCNP	V	1.12
xis	Temperature exponent of IS		3.0
xii	Temperature exponent of IBEL,IBCL,IBEIP,IBCIP		3.0
xin	Temperature exponent of IBEN,IBCN,IBENP,IBCNP		3.0
tnf	Temperature exponent of NF		0.0
tav c	Temperature exponent of AVC2		0.0
rth	Thermal resistance	K/W	0.0
cth	Thermal capacitance	Ws/K	0.0
vert	Punch-through voltage of internal B-C junction	V	0.0
art	Smoothing parameter for reach-through		0.1
cco	Fixed C-S capacitance	F	0.0
qbm	Select SGP qb formulation		0.0
nkf	High current beta rolloff		0.5
xik f	Temperature exponent of IKF		0.0
xrc x	Temperature exponent of RCX		0.0
xrb x	Temperature exponent of RBX		0.0
xrb p	Temperature exponent of RBP		0.0
isrr	Separate IS for fwd and rev		1.0
xis r	Temperature exponent of ISR		0.0
de ar	Delta activation energy for ISRR		0.0
ea	Excitation energy for ISP		1.12

p			
vb be	B-E breakdown voltage	V	0.0
nb be	B-E breakdown emission coefficient		1.0
ibb e	B-E breakdown current		1e-06
tvb be 1	Linear temperature coefficient of VBBE		0.0
tvb be 2	Quadratic temperature coefficient of VBBE		0.0
tnb be	Temperature coefficient of NBBE		0.0
eb be	$\exp(-VBBE/(NBBE*Vtv))$		0.0
dte mp	Locale Temperature difference	deg	0.0
ver s	Revision Version		1.2
vre f	Reference Version		0.0

References:

C. C. McAndrew et al., "Vertical Bipolar Inter Company 1995: An Improved Vertical, IC Bipolar Transistor Model", Proceedings of the IEEE Bipolar Circuits and Technology Meeting, pp. 170 – 177, 1995

C. C. McAndrew et.al., VBIC95, "The Vertical Bipolar Inter-Company Model", IEEE Journal of Solid State Circuits, vol. 31, No. 10, October 1996

C. C. McAndrew, VBIC Model Definition, Release 1.2, 18. Sep. 1999

R. Resistor

Symbol Names: RES, RES2

```
Syntax:  Rxxx n1 n2 <value> [tc=tc1, tc2, ...]
         +                   [temp=<value>]
```

The resistor supplies a simple linear resistance between nodes n1 and n2. A temperature dependence can be defined for each resistor instance with the parameter tc. The resistance, R, at will be

$$R = R0 * (1. + dt * tc1 + dt**2 * tc2 + dt**3 * tc3 + \dots)$$

where R0 is the resistance at the nominal temperature and dt is the difference between the resistor's temperature and the nominal temperature.

S. Voltage Controlled Switch

Symbol Names: SW

```
Syntax:  Sxxx n1 n2 nc+ nc- <model> [on,off]
```

Example:

```
S1 out 0 in 0 MySwitch
```

```
.model MySwitch SW(Ron=.1 Roff=1Meg Vt=0 Vh=-.5 Lser=10n
Vser=.6)
```

The voltage between nodes nc+ and nc- controls the switch's impedance between nodes n1 and n2. A model card is required to define the behavior of the switch. See the schematic file `.\examples\Educational\Vswitch.asc` to see an example of a model card placed directly on a schematic as a SPICE directive.

Voltage Controlled Switch Model Parameters

name	parameter	units	default
Vt	threshold voltage	Volts	0.
Vh	hysteresis voltage	Volts	0.
Ron	on resistance	Ohms	1.
Roff	off resistance	Ohms	1/gmin
Lser	series inductance	Henry	0.
Vser	series voltage	Volts	0.
ilimit	current limit	Amps	infin.

The switch has three distinct modes of voltage control, depending on the value of the hysteresis voltage, V_h . If V_h is zero, the switch is always completely on or off depending upon whether the input voltage is above the threshold. If V_h is positive, the switch shows hysteresis, as if it was controlled by a Schmitt trigger with trip points at $V_t - V_h$ and $V_t + V_h$. Note that V_h is half the voltage between trip points which is different than the common laboratory nomenclature. If V_h is negative, the switch will smoothly transition between the on and off impedances. The transition occurs between the control voltages of $V_t - V_h$ and $V_t + V_h$. The smooth transition follows a low order polynomial fit to the logarithm of the switch's conduction.

There is also a level 2 voltage-controlled switch which is an advanced version of the level 1 switch with negative hysteresis. The level 2 switch is never completely on or off. The conduction as a function of control voltage V_c is

$$g(V_c) = \exp(A * \operatorname{atan}((V_c - V_t)/V_h) + B)$$

where

$$A = \pi * (\log(1/R_{on}) - \log(1/R_{off}))$$

$$B = (\log(1/R_{on}) + \log(1/R_{off}))$$

Also, the transition of the level 2 switch to current limit is gradual instead of abrupt. At a fixed control voltage, the I-V curve is given by the equation

$$I(V) = I_{\text{limit}} * \tanh(g(V_c) * V)$$

The level 2 switch supports the option to conduct in only one direction by either specifying the flag "oneway" or specifying a voltage drop with parameter Vser. The transition between forward conduction and reverse open circuit can be specified to be a smooth transition by specifying the parameter epsilon to be non-zero.

T. Lossless Transmission Line

Symbol Name: TLINE

Syntax: Txxx L+ L- R+ R- Zo=<value> Td=<value>

L+ and L- are the nodes at one port. R+ and R- are the nodes for the other port. Zo is the characteristic impedance. The length of the line is given by the propagation delay Td.

This element models only one propagation mode. If all four nodes are distinct in the actual circuit, then two modes may be excited. To simulate such a situation, two transmission-line elements are required.

U. Uniform RC-line

Symbol Names: URC

Syntax: Uxxx N1 N2 Ncom <model> L=<len> [N=<lumps>]

N1 and N2 are the two element nodes the RC line connects, whereas Ncom is the node to which the capacitances are connected. MNAME is the model name and LEN is the length of the RC line in meters. Lumps, if specified, is the number of lumped segments to use in modeling the RC line. A guess at an appropriate number of lumps to use will be made if lumps is not specified.

The URC model is derived from a model proposed by L. Gertzberg in 1974. The model is accomplished by a subcircuit-type expansion of the URC line into a network of lumped RC segments with internally generated nodes. The RC segments are in a geometric progression, increasing toward the middle of the URC line, with K as a proportionality constant.

The URC line is made up strictly of resistor and capacitor segments unless the ISPERL parameter is given a nonzero value, in which case the capacitors are replaced with reverse-biased diodes with a zero-bias junction capacitance equivalent to the capacitance replaced, and with a saturation current of ISPERL amps per meter of transmission line and an optional series resistance equivalent to RSPERL ohms per meter.


name	parameter	units	default
K	Propagation Constant	(none)	2.
FMAX	Maximum Frequency of interest	Hz	1G
RPERL	Resistance per unit length	Ohm/m	1000
CPERL	Capacitance per unit length	F/m	1e-15
ISPERL	Saturation Current/unit length	A/m	0
RSPERL	Diode Resistance/unit length	Ohm/m	0

V. Voltage Source

Symbol Names: VOLTAGE, BATTERY

Syntax: Vxxx n+ n- <voltage> [AC=<amplitude>]
+ [Rser=<value>] [Cpar=<value>]

This element sources a constant voltage between nodes n+ and n-. For AC analysis, the value of AC is used as the amplitude of the source at the analysis frequency. A series resistance and parallel capacitance can be defined. The equivalent circuit is:

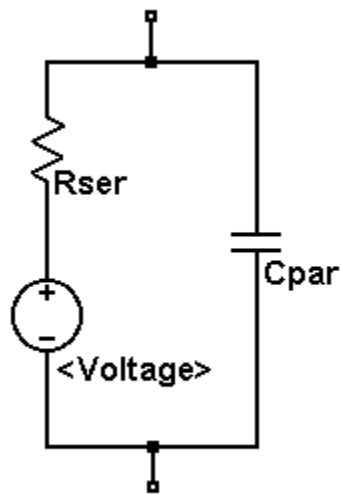

Voltage sources have historically been used as the current meters in SPICE and are used as current sensors for current-controlled elements. If Rser is specified, the voltage source can not be used as a sense element for F, H, or W elements. However, the current of any circuit element, including the voltage source, can be plotted.

Syntax: Vxxx n+ n- PULSE(V1 V2 Tdelay Trise Tfall Ton
Tperiod Ncycles)

Time-dependent pulsed voltage source

name	parameter	units
Voff	initial value	Volts
Von	pulsed value	Volts
Tdelay	delay	seconds
Tr	rise time	seconds
Tf	fall time	seconds
Ton	on time	seconds
Tperiod	period	seconds
Ncycles	number of cycles wave	cycles

Syntax: Vxxx n+ n- SINE(Voffset Vamp Freq Td Theta Phi Ncycles)

Time-dependent sine wave voltage source.

name	parameter	units
Voffset	DC offset	Volts
Vamp	amplitude	Volts
Freq	frequency	Hz
Td	delay	seconds
Theta	damping factor	1/seconds
Phi	phase	degrees
Ncycles	number of cycles wave	cycles

For times less than Td or times after completing Ncycles, have run, the output voltage is given by

$$Voffset + Vamp * \sin(\pi * \Phi / 180)$$

Otherwise the voltage is given by

$$Voffset + Vamp * \exp(-(time - Td) * \Theta) * \sin(2 * \pi * Freq * (time - Td) + \pi * \Phi / 180)$$

The damping factor, Theta, is the reciprocal of the decay time constant.

Syntax: Vxxx n+ n- EXP(V1 V2 Td1 Tau1 Td2 Tau2)

Time-dependent exponential voltage source

name	parameter	units
V1	initial value	Volts
V2	pulsed value	Volts
Td1	rise delay time	seconds
Tau1	rise-time constant	seconds
Td2	fall delay time	seconds
Tau2	fall-time constant	seconds

For times less than Td1, the output voltage is V1. For times between Td1 and Td2 the voltage is given by

$$V1 + (V2 - V1) * (1 - \exp(-(time - Td1) / Tau1)).$$

For times after Td2 the voltage is given by

$$V1 + (V2 - V1) * (1 - \exp(-(time - Td1) / Tau1)) + (V1 - V2) * (1 - \exp(-(time - Td2) / Tau2)).$$

Syntax: Vxxx n+ n- SFFM(Voff Vamp Fcar MDI Fsig)

Time-dependent single frequency FM voltage source.

name	parameter	units
Voff	D.C. offset	Volts
Vamp	amplitude	Volts
Fcar	carrier frequency	Hz
MDI	modulation index	(none)
Fsig	signal frequency	Hz

The voltage is given by

$$V_{off} + V_{amp} \sin((2 \cdot \pi \cdot F_{car} \cdot \text{time}) + MDI \cdot \sin(2 \cdot \pi \cdot F_{sig} \cdot \text{time}))$$

Syntax: Vxxx n+ n- PWL(t1 v1 t2 v2 t3 v3...)

Arbitrary Piece-wise linear voltage source.

For times before t1, the voltage is v1. For times between t1 and t2, the voltage varies linearly between v1 and v2. There can be any number of time, voltage points given. For times after the last time, the voltage is the last voltage.

Syntax: Vxxx n+ n- wavfile=<filename> [chan=<nnn>]

This allows a .wav file to be used as an input to LTspice. <filename> is either a full, absolute path for the .wav file or a relative path computed from the directory containing the simulation schematic or netlist. Double quotes may be used to specify a path containing spaces. The .wav file may contain up to 65536 channels, numbered 0 to 65535. Chan may be set to specify which channel is used. By default, the first channel, number 0, is used. The .wav file is interpreted as having a full scale range from -1V to 1V.

This source only has meaning in a .tran analysis.

W. Current Controlled Switch

Symbol Names: CSW

Syntax: Wxxx n1 n2 Vnam <model> [on,off]

Example:

```
W1 out 0 Vsense MySwitch
```

```
Vsense a b 0.
```

```
.model MySwitch CSW(Ron=.1 Roff=1Meg It=0 Ih=-.5)
```

The current through the named voltage source controls the switch's impedance. A model card is required to define the behavior of the current controlled switch.

Current Controlled Switch Model Parameters

name	parameter	units	default
It	threshold current	Volts	0.
Ih	hysteresis current	Volts	0.
Ron	on resistance	Ohms	1.
Roff	off resistance	Ohms	1/gmin

The switch has three distinct modes of current control, depending on the value of the hysteresis current, I_h . If I_h is zero, the switch is always completely on or off according to whether the control current is above threshold. If I_h is positive, the switch shows hysteresis with trip point currents at $I_t - I_h$ and $I_t + I_h$. If I_h is negative, the switch will smoothly transition between the on and off impedances. The transition occurs between the control currents of $I_t - I_h$ and $I_t + I_h$. The smooth transition follows a low order polynomial fit to the logarithm of the switch's conduction.

X. Subcircuit

Symbol Names:

```
LT1001      LT1006      LT1028      LT1070
LT1071
```

LT1072	LT1074	LT1109-12	LT1109-5
LT1109			
LT1109A-12	LT1109A-5	LT1109A	LT1112
LT1124			
LT1169	LT1170	LT1170HV	LT1171
LT1171HV			
LT1172	LT1172HV	LT1211	LT1227
LT1300			
LT1301	LT1302-5	LT1302	LT1303-5
LT1303			
LT1304-3.3	LT1304-5	LT1304	LT1305
LT1307			
LT1307b	LT1309	LT1316	LT1317
LT1317b			
LT1351	LT1371	LT1372	LT1375-5
LT1375			
LT1376-5	LT1376	LT1377	LT1413
LT146			
LT1490	LT1498	LT1533	LT1610
LT1611			
LT1613	LT1614	LT1627	LT1676
LT1735			
LTC1047	LTC1174-3.3	LTC1174-5	LTC1174
LTC1174HV-3.3			
LTC1174HV-5	LTC1174HV	LTC1625	LTC1628
LTC1736 (and others)			

Syntax: Xxxx n1 n2 n3... <subckt name>
 [<parameter>=<expression>]

Subcircuits allow circuitry to be defined and stored in a library for later retrieval by name. Below is an example of defining and calling a voltage divider and invoking it in a circuit.

```
* calling a subcircuit
*
* This is the circuit
X1 in out 0 divider top=9K bot=1K
V1 in 0 pulse(0 1 0 .5m .5m 0 1m)

* This is the subcircuit
.subckt divider A B C
```



```

R1 A B {top}
R2 B C {bot}
.ends divider
.tran 3m
.end

```

Z. MESFET transistor

Symbol Names: MESFET

Syntax: Zxxx D G S model [area] [off] [IC=<Vds, Vgs>]
+ [temp=<value>]

A MESFET transistor requires a model card to specify its characteristics. The model card keywords NMF and PMF specify the polarity of the transistor. The MESFET model is derived from the GaAs FET model described in H. Statz et al., GaAs FET Device and Circuit Simulation in SPICE, IEEE Transactions on Electron Devices, V34, Number 2, February, 1987 pp160-169.

Two ohmic resistances, Rd and Rs, are included. Charge storage is modeled by total gate charge as a function of gate-drain and gate-source voltages and is defined by the parameters CGS, CGD, and PB.

name	parameter	units	default
VTO	pinch-off voltage	V	-2.
BETA	transconductance parameter	A/V/V	1e-4
B	doping tail extending parameter	1/V	.3
ALPHA	saturation voltage parameter	1/V	2
LAMBDA	channel-length modulation	1/V	0
RD	drain ohmic resistance	Ohms	0
RS	source ohmic resistance	Ohms	0
CGS	zero-bias G-S junction capacitance	F	0
CGD	zero-bias G-D junction capacitance	F	0
PB	gate junction potential	V	1


KF	flicker noise coefficient	(none)	0
AF	flicker noise exponent	(none)	1
FC	forward-bias depletion coefficient	(none)	.5

Control Panel

Accessing the Control Panel

To get to the Control Panel, use the menu command Tools=>Control Panel. There you can configure many aspects of LTspice/SwitcherCAD III.

Compression

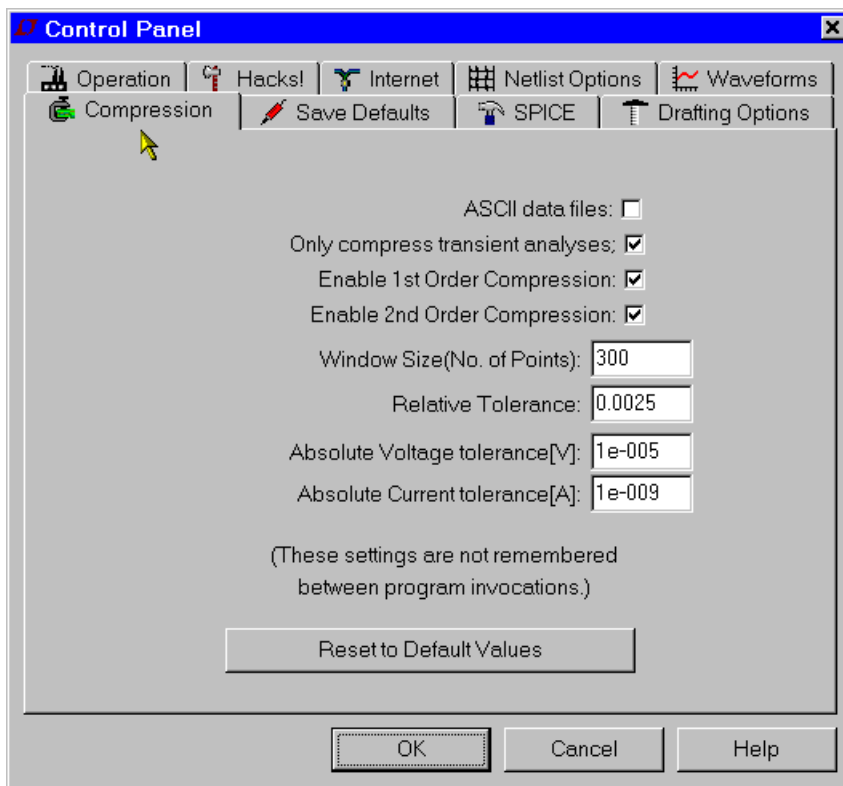

LTspice compresses the raw data files as they are generated. A compressed file can be 50 times smaller than the un-compressed one. This is a lossy compression. This

pane of the control panel allows you to control how lossy the compression runs.

Window Size (No. of Points): Maximum number of points that can be compressed into two end points.


Relative Tolerance: The relative error allowed between the compressed data and the uncompressed data.

Absolute Voltage tolerance[V]: The voltage error allowed by the compression algorithm.


Absolute Current tolerance[A]: The current error allowed by the compression algorithm.

These compression settings are not remembered between program invocations to encourage use of the defaults. They are available on the control panel for diagnostic purposes. The tolerances and window size can be specified with option parameters `plotreltol`, `plotvntol`, `plotabstol` and `plotwinsize` in `.option` statements placed as SPICE directives on the schematic.

File Size Vs Fidelity study:

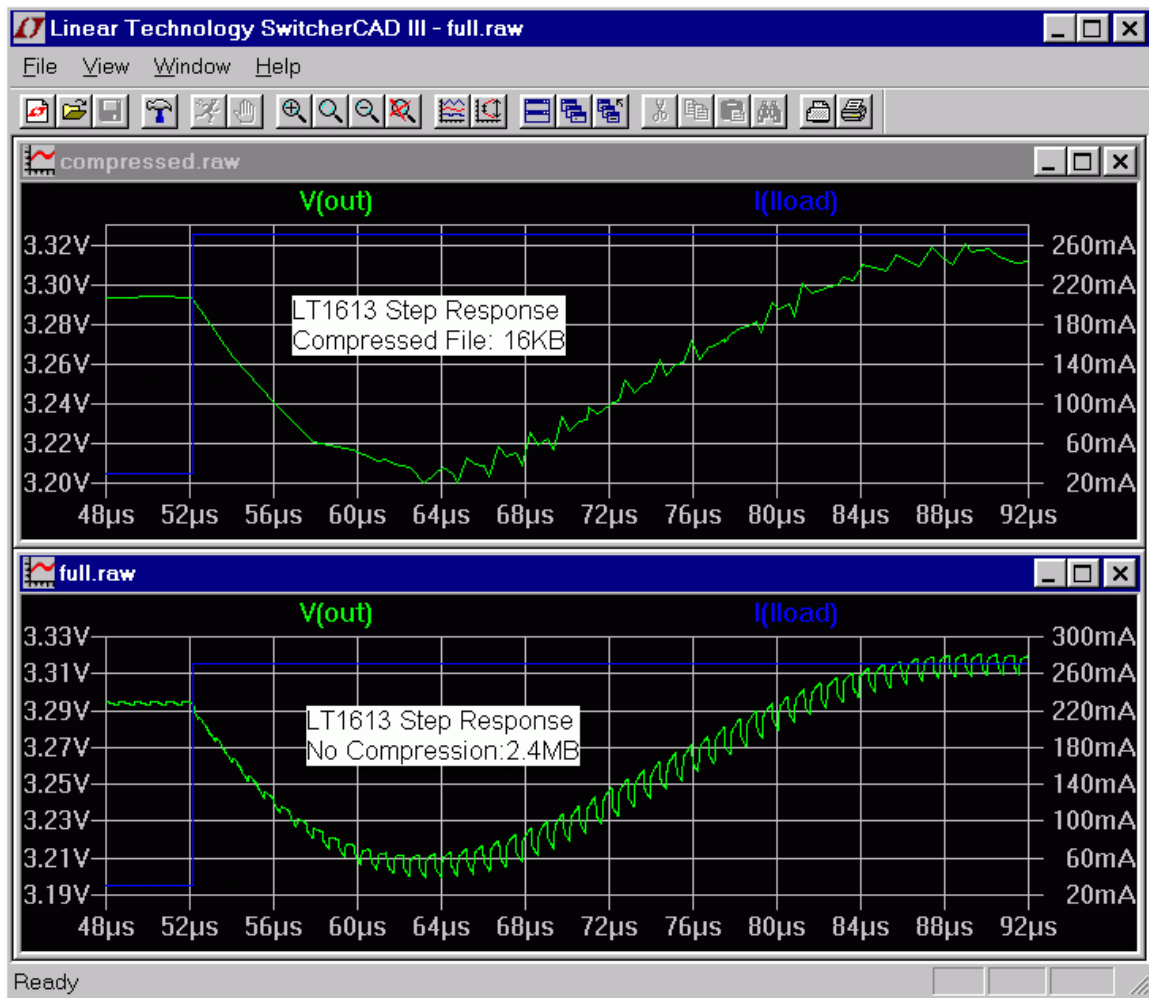

Operation

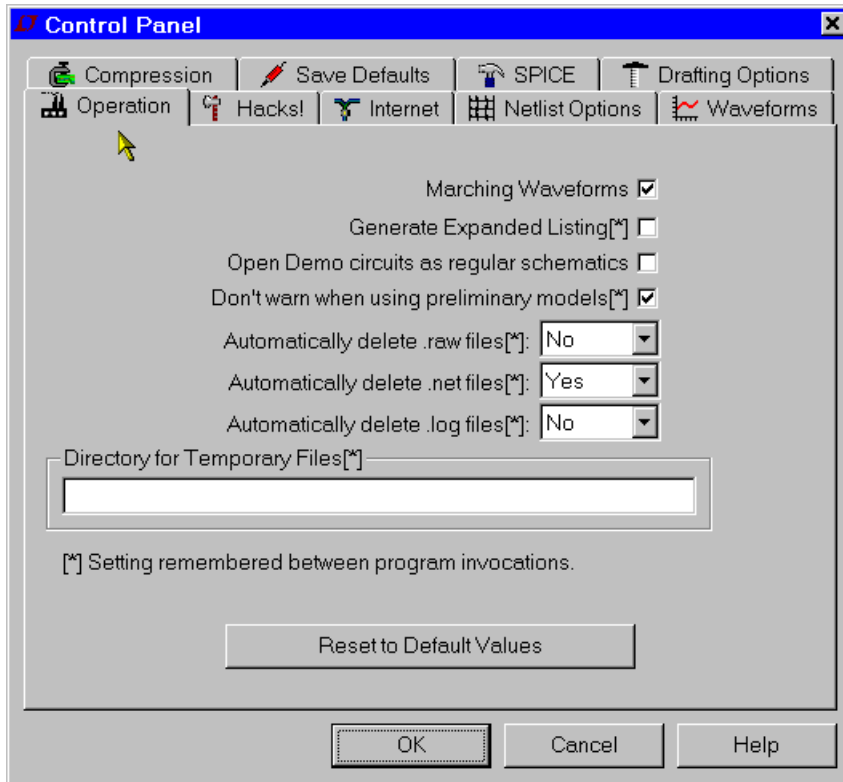

Settings marked with an asterisk [*] are remembered between program invocations.

Marching Waveforms: Check to enable simulation results to be incrementally plotted during the simulation.

Generate Expanded Listing: Dump the flat netlist after expanding subcircuits to the in the [SPICE Error Log](#) file.

Open Demo circuits as regular schematics: Use [File] [Open] to open demo circuits in `.\SwCADIII\lib\app*.app`. All SPICE commands will be visible. The schematic can be edited and saved to a new file. The double dots '..' is for demo circuit display control use. Only one dot is required for editing.

Don't warn when using preliminary models: Turn off the warning message for all preliminary models. Note: All SMPS models are flagged as preliminary as a disclaimer.

Automatically delete .raw files: This allows waveform data files to be deleted automatically after closing a simulation. This dramatically reduces the amount of disk space used by LTspice but requires the simulation to be rerun when you reopen the simulation.


Automatically delete .net files: This allows the schematic's netlist to be automatically deleted whenever the schematic is closed. These files can be thought of as small temporary files and deleting them makes exploring the directory tidier. They define the electrical connectivity of the schematic to the LTspice simulator. Some people prefer not to delete them because they have further use for them.

Automatically delete .log files: This allows the simulation log to be automatically deleted whenever the simulation is closed. These files contain various simulation statistics such as elapsed time during the simulation, warning and error messages, and step parameters used for .step/.temp/.dc analyses.

Directory for Temporary Files: Directory for temporary storage of waveform and update files.

Save Defaults

These settings are used when you don't explicitly state which nodes should be saved in a simulation. Useful settings are "Save Device Currents", "Save Subcircuit Node Voltages", and "Save Subcircuit Device Currents". Device voltages and internal device voltages are only of internal program development use.

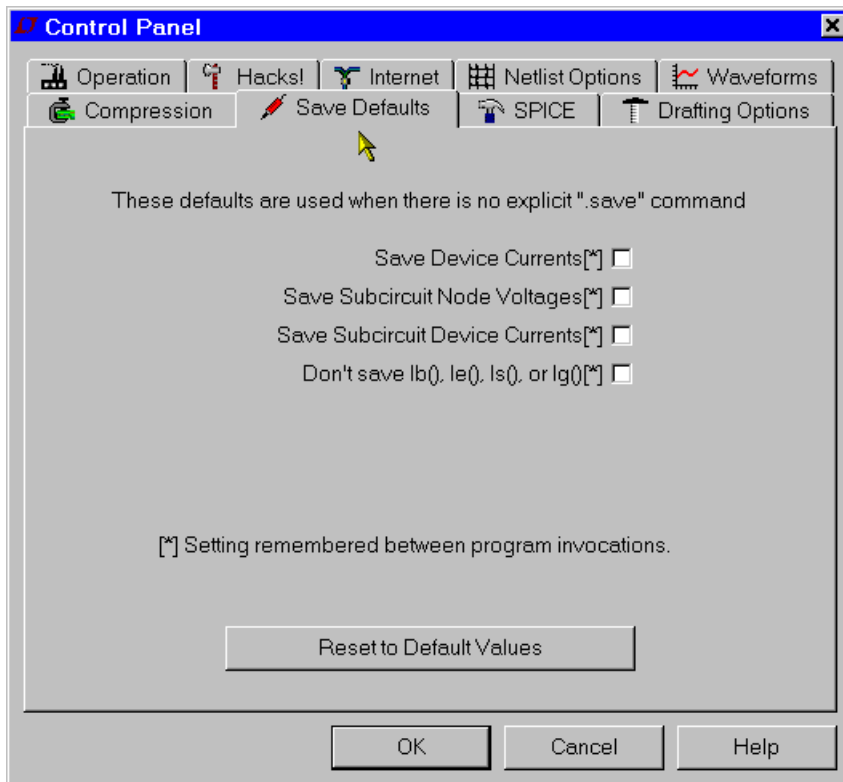

Save Device Currents: Check this so that you can plot device and terminal currents. You will also need it to be able to plot dissipation.

Save Subcircuit Node Voltages: You will need to check this to plot voltages in hierarchical designs.


Save Subcircuit Device Currents: You will need to check this to plot currents in hierarchical designs.

Don't save Ib(), Ie(), Is(), Ig(): This saves only the collector(drain) currents of transistors in the interest of reducing the size of the output .data file. This is useful for IC design, but it using it means that there isn't enough data available to compute transistor dissipation.

Save Device Currents: Check this so that you can plot device and terminal currents. You will also need it to be able to plot dissipation.

SPICE

This pane allows you to define the various defaults for LTspice. These defaults can be overridden in any simulation by specifying the options in that simulation. Usually you can leave these options as they are. If you have frequently updated the program over the web, you might want to press "Reset to Default Values" to reset to the current recommended settings.

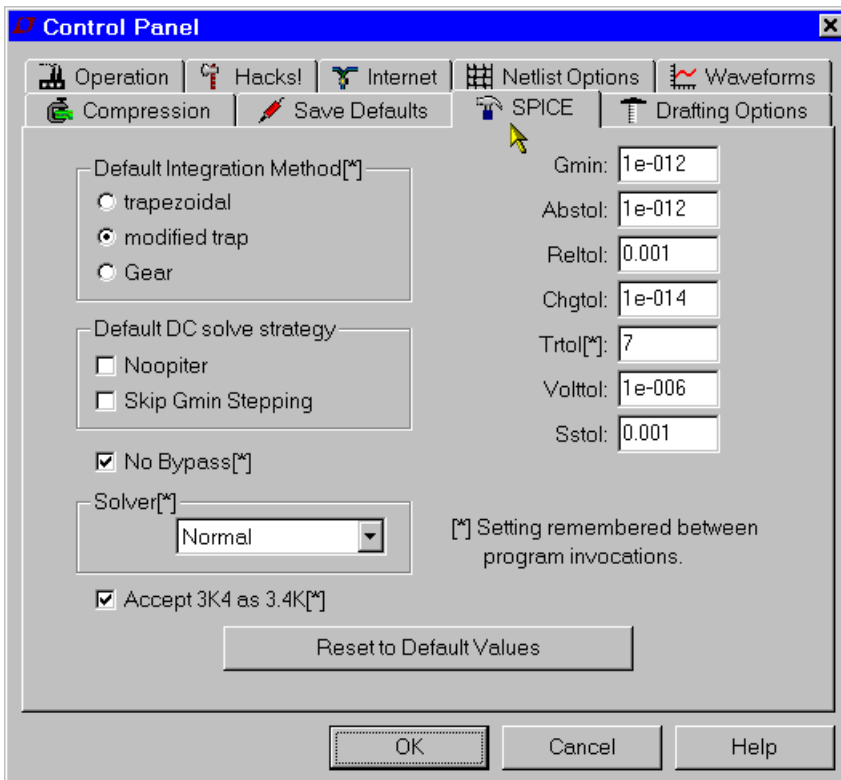

One default you may want to change is Trtol. Most commercial SPICE programs default this to 7. In LTspice

this defaults to 1 so that simulations using the SMPS macromodels are less likely to show any simulation artifacts in their waveforms. Trtol more affects the timestep strategy than directly affects the accuracy of the simulation. For transistor-level simulations, a value larger than 1 is usually a better overall solution. You might find that you get a speed of 2x if you increase trtol with out adversely affecting simulation accuracy. Your trtol is remembered between program invocations. However, most of the traditional SPICE tolerance parameters, gmin, abstol, reltol, chgtol, vntol are not remembered between program invocations. If you want to use something other than the default values, you will have to write a .option statement specifying the values you want to use and place it on the schematic or keep the settings in a file and .inc that file.

Also interesting is which solver is used. LTspice contains two complete versions of SPICE. One is called the normal solver and the other is called the alternate solver. The alternate solver uses a different sparse matrix package with reduced roundoff error. Typically the alternate solver will simulate at half the speed of the normal solver but with one thousand times more internal accuracy. This can be a useful diagnostic to have available. There is no .option to specify which solver is used, the choice must be made before the netlist is parsed because the two solvers use different parsers.

Check the box next to "Accept 3K4 as 3.4K" to force LTspice to understand a number written as 4K99 to be equal to 4.99K. Normal SPICE practice does not allow this, but it is available in LTspice by popular request.

.

Netlist Options

Convert 'μ' to 'u': Replace all instances of 'μ' to 'u'. Useful if your MS Windows installation can't display a Greek Mu(as, e.g., some Chinese editions of Windows don't


with default fonts) and (ii) generating netlists for SPICE simulators that don't understand the ' μ ' character as the metric multiplier of $1e-6$.

Reverse comp. order: Circuit elements are normally netlisted in the order in which they were added to the schematic. Checking this box causes this order to be reversed.

Default Devices: Whenever a diode is used in an LTspice schematic, the default model statement ".model D D" is added to the netlist to suppress messages about using the default model. Unchecking this option suppresses inclusion of this line as well as the analogous model statements for bipolar, MOSFET, and JFET transistors.

Default Libraries: Whenever a diode is used in an LTspice schematic, the default library, standard.dio, is included in the simulation by a .lib statement. Unchecking this option suppresses inclusion of this library as well as the analogous library statements for bipolar, MOSFET, and JFET transistors.


Convergence Aids: For Internal program development use only.

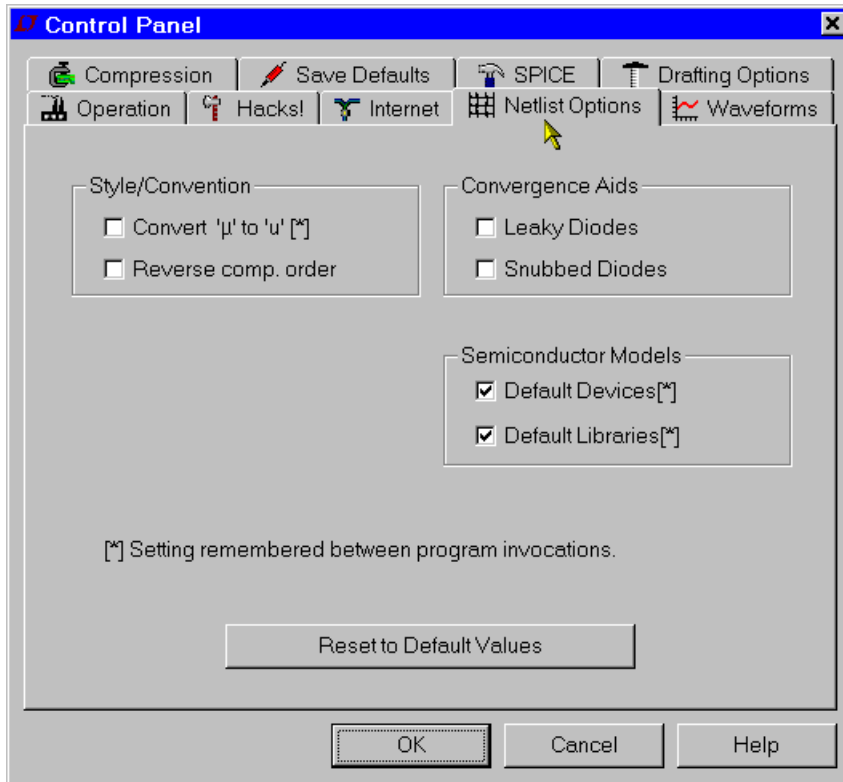


Hacks

This pane was used for internal program development, but is currently almost obsolete.

Usually you can leave these options as they are. If you have frequently updated the program over the web, you might want to press "Reset to Default Values" to reset to the current recommended settings.

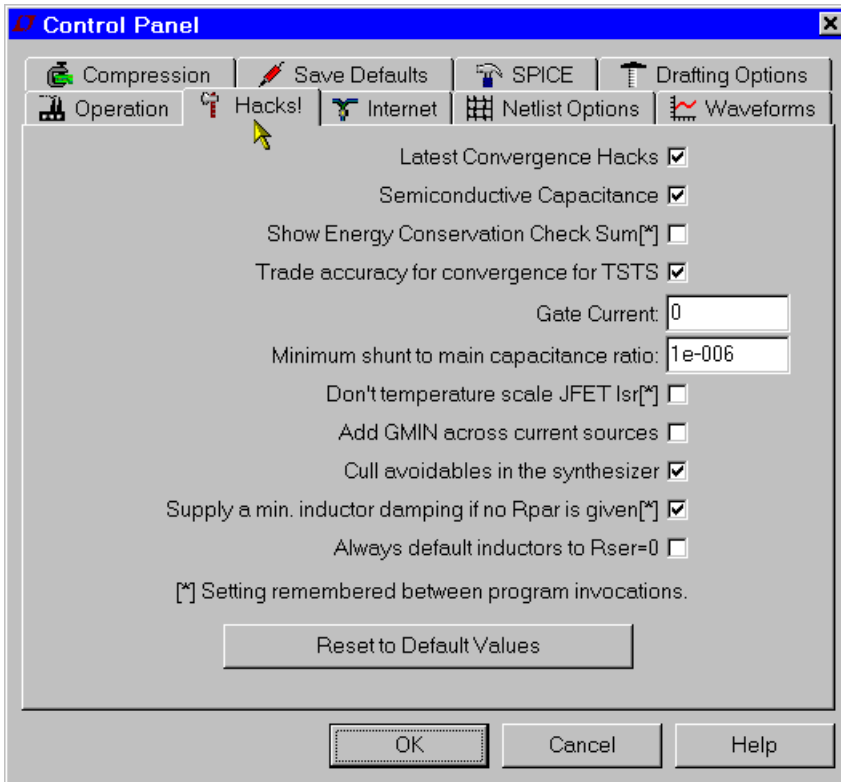

Drafting Options

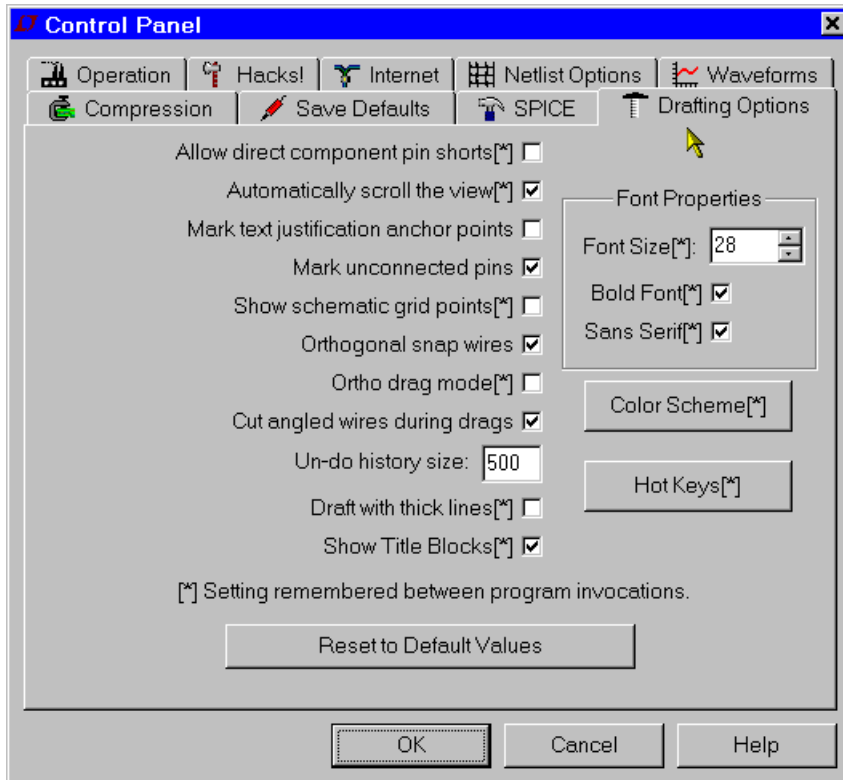

Allow direct component pin shorts: Normally you can draw a wire directly through a component and the wire segment shorting pins is deleted. If you check it, the shorting wire will not be automatically deleted.

Automatically scroll the view: Checking this box makes the view of the schematic scroll as you move the mouse close the edge while editing the schematic.

Mark text Justification anchor points: Draw a small circle to indicate the reference point of text blocks.

Mark unconnected pins: Draw a small square at each unconnected pin to flag it as unconnected.

Show schematic grid points: Start with visible grid enabled.

Orthogonal snap wires: Force wires to be drawn in vertical and horizontal segments while drawing. If not checked, a wire can be drawn at any angle and will snap to any grid. Holding down the control key will momentarily toggle the current setting while drawing wires.


Cut angled wires during drags: During the Drag command, a non-orthogonal wire will be broken into two connected wires if you click along the middle of the wire.

Undo history size: Set the size of the undo/redo buffer.

Draft with thick lines: Increases the all line widths. Useful for generating images for publication.

Show Title Block: For internal use.

Internet Option

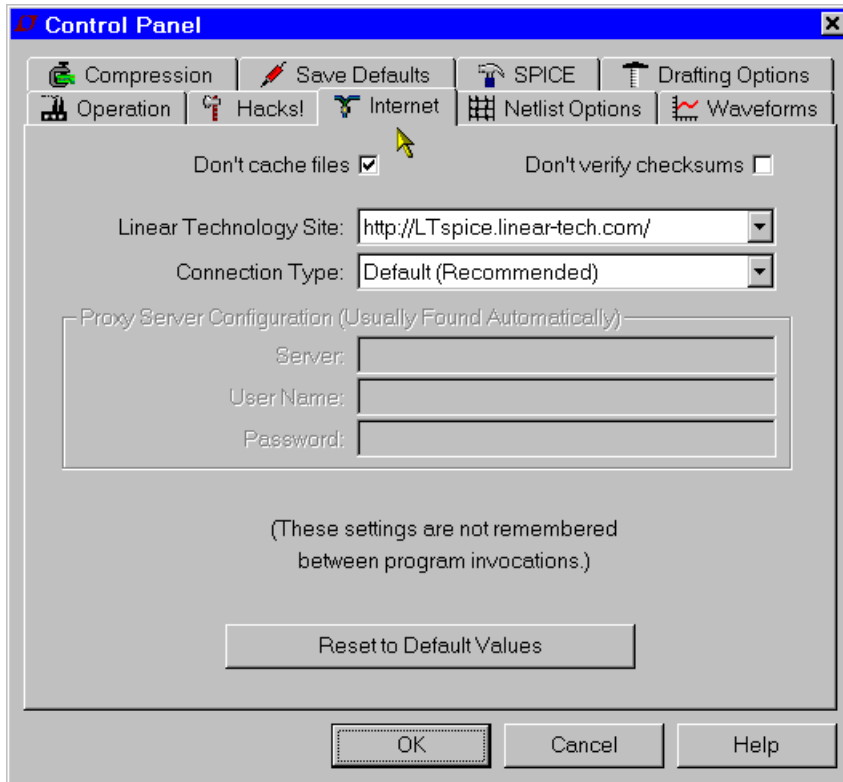

This pane of the Control Panel is used for the incremental updates obtained from the web. LTspice is often updated with new features and models. Use the menu command Tools=>Sync Release to update to the current version. If you don't update for a couple months, LTspice will begin to ask if you would like to check for updates. LTspice never accesses the web without asking for your permission to do so. LTspice contains no spyware or transmits any type of data while obtaining the files it need for update.

Don't cache files: Neither cache nor use files cached on our machine for the update.

Don't verify checksums: For security reasons, LTspice uses a proprietary and confidential 128bit checksum algorithm to authenticate the files it receives off the web for updating. This authentication can be disabled in case there's a error in that algorithm. However, no problem with this has ever been reported, so it is not recommended that you ever defeat this security feature.

LTspice uses only high-level operating system calls for its Internet access. It should not be required to make any adjustments to these settings except in rare cases when you need to specify the Proxy server and password since LTspice is not managing the Internet access, but your computer and operating system. Settings on this pane are not remembered between program invocations.

FAQs

Installation Problems

How do I install SwitcherCAD III?

1. Go to <http://www.linear.com/software> and download the file `swcadiii.exe` into a temporary directory on your PC.
2. Run the `swcadiii.exe` to install.

I'm running a Chinese Edition of Windows. The Greek Mu character doesn't show up correctly, what can I do?

That problem should be completely fixed in the current version of LTspice/SwCAD III. But you can go to the menu item `Tools=>Control Panel=>Netlist Options` and check "Convert 'μ' to 'u'". This option now not only applies to netlists, but will draw a Greek Mu as 'u' wherever it might appear on the screen.

Program Updates

How do I get the latest version?

Once installed, there are two ways to getting the latest version. You can always reinstall the program again as mentioned in [Installation Problems](#). You don't have to

remove the old version before installing. If your PC has an internet connection, it is much easier to get the latest release by using the `Sync_Release` feature.

How do I know what new features are added?

After you have updated your file to the latest version, the 'changelog.txt' file in your root directory, usually at `c:\Program Files\ltc\swcadiii\Changelog.txt`, has a detailed program revision list.

Can I go back to the old version after Sync_Release?


It is not reversible. All symbols, models, and programs are updated with the new ones. You need to make a backup copy before the `Sync_Release` starts. The component databases, `standard.*`, will be merged with the new ones automatically. If you added new inductors or capacitors, your devices will be preserved and merged with the new ones from program update. Your own local working file won't be affected.

Transformer Models

How do I build a transformer model?

The best way would be to draft a model with coupled inductors with a mutual inductance statement placed as a SPICE directive on the schematic. See the section in `mutual Inductance` for more information. Inductors participating in a mutual inductance will be drawn with a phasing dot.

The following example demonstrates a transformer with 1:3 turns ratio (one to nine inductance ratio) with a sine wave input and simulates for 0.1ms. The K is set to 1 to model a transformer with no leakage inductance.

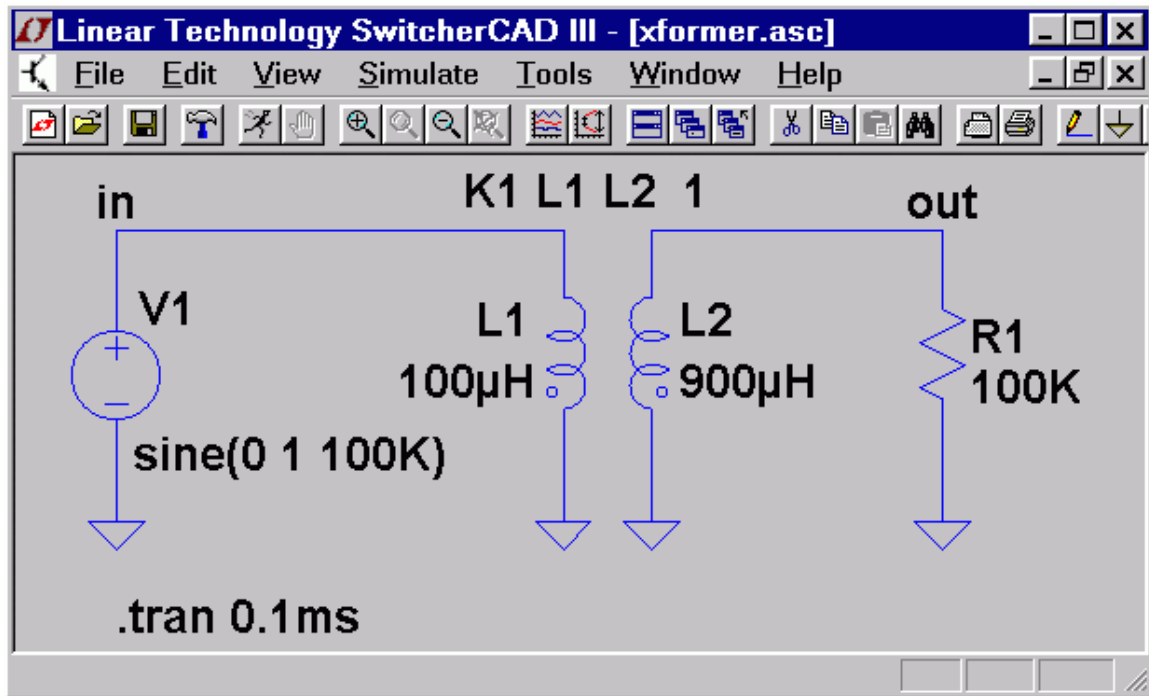

Third-party Models

This section explains the basics to adding a third-party model to LTspice/SwitcherCAD III.

Basically there are two types of third party SPICE models, those described with a .MODEL statement and those defined with a .SUBCKT.

Models given as .MODEL statements are for intrinsic SPICE devices like diodes and transistors. The .MODEL statement gives the parameters for the specific component. The behavior of the device is already known by SPICE, only the parameters need to be given to finish specifying the component's electrical characteristics.

On the other hand, models given by `.SUBCKT` statements define the modeled component by a collection of circuitry of intrinsic SPICE devices. For example, the SPICE model of an opamp would be given as a subcircuit.

The way how to include the model in LTspice depends on whether the model is given as a `.MODEL` statement or a `.SUBCKT`.

Example for an NPN transistor defined with a `.MODEL` statement:

1. Add an instance of the symbol NPN to your schematic.
2. Edit the value "NPN" to be "BC547C" to coincide with the name used in the target `.MODEL` statement.
3. Now either
 - 3a) Add the `.MODEL BC547C...` statement as a SPICE directive on your schematic.

or

- 3b) If you have a file `bipol.lib` containing your `.MODEL BC547C...` (other models may be too in this file), then add the SPICE directive `".INCLUDE bipol.lib"` on your schematic. Note that `"bipol.lib"` must be the complete name with any file extensions and that Windows Explorer defaults to not showing the file extension. So you if you have a file called `"bipol.lib.txt"`, which you can edit/view in notepad, and Windows Explorer shows you the file exits as `"bipol.sub"` The SPICE directive to include this file is `".inc bipol.sub.txt"` If you used, `".inc bipol.sub"` you will get an error message that that file can't be found.

or

- 3c) You can alternatively add the `.MODEL BC547C...` statement to the file typically installed as `C:\Program Files\LTC\SwCADIII\lib\cmp\standard.bjt`. If you do that you will automatically see the model as a

choice was editing the NPN transistor. If you edit this standard.bjt file outside of LTspice, you will have to restart LTspice for it to notice that the file has changed.

Example for a 5-pin opamp. This will be defined with a .SUBCKT statement:

1. Add an instance of symbol opamp2 to your schematic.
2. Edit the value "opamp2" to "TL072" on the schematic to coincide with the name of the .SUBCKT.
3. Either
 - 3a) Paste the ".SUBCKT TL072ENDS" definition as one multi-line SPICE directive to your schematic.
 - or
 - 3b) If you have a file called "TI.lib" containing the definition of subcircuit TL072 (It will look like a line that starts out as ".SUBCKT TL072...") add the SPICE directive ".INCLUDE TI.lib" to the schematic.

It is possible to create a new symbol and program it to automatically include the necessary model for the simulation. See help section Schematic Capture=>Creating New Symbols.

Example for a 3-pin NPN transistor but defined with a .SUBCKT statement:

1. Add an instance of symbol NPN to your schematic.
2. Move the cursor over the body of the newly-placed NPN symbol instance. Press <Ctrl>RightMouseButton. A dialog box will appear. Change Prefix: QN to Prefix: X. This causes this instance of the symbol to netlist as a subcircuit instead of an intrinsic bipolar transistor.
3. Edit the value "NPN" to be "BFG135" to coincide with the name given on the .SUBCKT line.

4. Then either

4a) Add the `.SUBCKT BFG135` lines to your schematic

or

4b) If you have a file `Phil.lib` containing your `.SUBCKT BFG135` (others may be too in this file) then you have to add a command line `.INCLUDE Phil.lib`

One aspect of adding a `.SUBCKT` model to LTspice is that you need have the symbol used to call the subcircuit and the model agree on the same pin/port netlist order. The above examples assume the 3rd party model you're adding follows popular pin order conventions.

Further related information is in the help sections Schematic Capture and LTspice. The basic idea is that the schematic capture program generates a netlist that the simulator, LTspice reads. Any aspect of importing 3rd party models can be resolved by understanding SPICE netlist syntax and how the schematic capture program generates that syntax. There are also tutorials prepared on this topic archived at the independent users' group at <http://groups.yahoo.com/group/LTspice>.

Inductor Models

How do I design a coupled inductor?

You first draw at least two inductors and then define the K coefficient between the two inductors.

See [mutual inductance](#) section.

How do I control the inductor parasitic resistance?

By default, LTspice will supply losses to inductors to aid SMPS transient analysis. For SMPS, these losses are of usually of no consequence, but may be turned off if desired. On the "Tools=> Control Panel=>Hacks!" page, uncheck "Supply a min. inductor damping if no Rpar is given" This setting will be remembered between invocations of the program. There is also a default series resistance of 1 milliOhm for inductors that aren't mentioned in a mutual inductance statement. This Rser allows SwitcherCAD III to integrate the inductance as a Norton equivalent circuit instead of Thevenin equivalent in order to reduce the size of the circuit's linearized matrix. If you don't want LTspice to introduce this minimum resistance, you must explicitly set Rser=0 for that inductor. This will require LTspice to use the more cumbersome Thevenin equivalent of the inductor during transient analysis.

Can I add/edit my own inductor model?

Open the file typically installed as

```
C:\Program Files\LTC\SwCADIII\lib\cmp\standard.ind
```

to add or edit inductor models.

MOSFET Models

What is the difference between SwitcherCAD III MOSFET and standard SPICE MOSFET models?

Besides the standard SPICE MOSFET models, SwitcherCAD III also includes a proprietary MOSFET model that is not implemented in other SPICE programs. It directly encapsulates the charge behavior of the vertical double diffused MOS transistor. This allows a power device to be modeled with an intrinsic VDMOS device LTspice instead of a subcircuit as in other SPICE programs. See [models](#) definition for details.

Can I add my own MOSFET models?

Yes, you can add your own model in the

C:\Program Files\LTC\SwCADIII\lib\cmp\standard.mos file. This file is only for devices defined with a .model statement, not as subcircuits. If you want to use a subcircuit, follow the following steps:

1. Change the "Prefix" attribute of the component instance of the symbol to be an 'X'. Don't change the symbol, just the instances of the symbol as a component on a schematic. You can access this attribute by holding down the control key and right clicking on the body of the component.
2. Edit the "Value" attribute of the component to coincide with the name of the subcircuit you wish to use.
3. Add a SPICE directive on the schematic such as ".inc filename" where filename is the name of the file containing the definition of the subcircuit. Note that this must be the complete name with any file extension and Windows Explorer defaults to not showing the file extension. So you if you have a file called "mylib.sub.txt", which you can edit/view in notepad, and Windows Explorer shows you the file exists as "mylib.sub" The SPICE directive to include this file is ".inc mylib.sub.txt" If you used, ".inc mylib.sub" you will get an error message that that file can't be found.

License and Distribution

Can I re-distribute the software?

Yes, you can distribute the software freely whether you are a Linear Technology customer or not. See the [license](#) section for more details. Technical support for non-Linear Technology customers is purely discretionary.

Is it a shareware, freeware or demo?

This program is not a shareware or a demo. It is fully functional freeware. The purpose of this software is to help our customers use our products. It can also be used as a general-purpose circuit design package with schematic capture and SPICE simulation. We do encourage students using the program to become familiar with the analog design process. We cannot guarantee support for non Linear Technology related program usage, but we'll fix all general program bugs and appreciate such reports. We do extensive in-house testing and believe the program has superior convergence capability. There are no known outstanding bugs.

Who can I contact at Linear Technology for help?

For all software issues e-mail scad3@linear.com.

For all hardware issues, such as additional application information for Linear Technology IC's, call Linear Technology application department at (408) 954-8400 during normal business hours.

Circuit Efficiency Calculation

What is the difference between *.APP and *.ASC files?

An APP file is a schematic file and has embedded control statements to help calculate efficiency and other product information. ASC file is the general schematic file without any hidden SPICE commands. ASC file is the more general and powerful file format. It is recommended that you save your own designs with a .ASC file name extension.

How can I get an efficiency report for my schematic?

You need to add a ".TRAN <time> steady" statement on the schematic. The program will automatically detect the steady state by checking the internal state of the LTC macro-models. It doesn't work when LTC switching regulator part is absent. There must be exactly one Voltage source in the circuit. This will be identified as the input. There must be exactly one current source in the circuit. This will be identified as the load. After the simulation is done, you can select the 'Efficiency Report' under the 'View' menu to see the report on the schematic.

Custom Symbol

Can I create my own symbols?

Yes, you can create your own symbols.

How do I create my own symbol?

Start with the menu command File=>New Symbol.

Can I create my own switching regulator models?

Not very easily. The switching regulator models that ship with LTspice/SwitcherCAD III use new intrinsic SPICE devices designed to encapsulate the behavior of LTC's switching regulator products. Even if you succeed in making a model with standard SPICE primitives, the simulation time will be orders of magnitude longer. Note that some people have made such switching regulator models with standard SPICE devices. LTspice can run these models

and will usually outperform the simulator for which they were targeted.

Memory Problems

How much memory do I need to run the program?

You should have enough memory to run Windows 95, 98, NT4.0, Me, or 2000. You can basically run the SwitcherCAD III if you can operate your Windows system. We have spent a great deal of effort in minimizing the memory requirement of this program. While a typical simulation might generate 8Gigabytes of raw data, that data will be compressed on the disk to 400Megabytes. To view a single trace would require less than 65Megabytes of RAM. Of course, the more memory the better the performance will be. Also, SwitcherCAD III benefits from the improved memory performance of Windows NT and 2000, so you might consider upgrading operating system if you run out of memory.

Where is the waveform stored during simulation?

All the waveform data are stored on hard disk. Only the plotted traces are loaded into RAM. Turning off the marching waveforms can reduce the RAM memory requirement. Note that for most analysis types, there is no particular file size limit. You can generate and view .raw files that are very many Gigabytes in size.

What if I don't have enough disk space for long simulation?

The waveform data has been compressed, but it is still proportional to the run time and the number of traces saved. The easiest way to save memory is to select desired traces for storing before the simulation starts.

OK, I've done everything and I'm still running out of memory. What can I do?

During a transient analysis, you can interactively throw away the past waveforms by pressing the '0' key. That will retrigger the simulation time to t=0 as the present time.

Model Compatibility

Is the new model compatible with the older one?

We are always improving the macromodels. Those changes usually produce more accurate device behavior and might not be noticeable by the user. For example, the quiescent and the pin-bias currents might be added but that doesn't appreciably change the transient waveforms. Occasionally, a symbol might be changed due to some special circumstance and that will affect schematics drafted with the former version of the symbol. Users are advised to keep a backup copy of the design and symbols used.

Are the switching regulator models compatible with Pspice models and others?

We used proprietary building blocks inside the switching regulator models to speed up the simulation and control the convergence. While it is possible, in principle, to translate the proprietary building blocks to standard SPICE equivalent blocks, the simulation will be hundreds of times slower. Because of the performance concern, all switching regulators were built with proprietary blocks, and there is no translator, either. LTspice can, however, run Pspice semiconductor and behavioral models and is generally a much higher performance simulator, so you might move your Pspice simulations to LTspice.

SPICE Netlist

How do I create a SPICE netlist?

A netlist can be created with any text editor capable of generating an ASCII file. You can view the SPICE netlist of any schematic in SwitcherCAD III with the command View=>SPICE netlist. From this view you can copy the netlist to the clipboard by selecting all text and typing Ctrl-C to bring the netlist to a different editor.

How do I run a netlist?

Just open the text file first and then run it. LTspice/SwitcherCAD III will recognize the file as a netlist if it has file extension of ".cir"

Exporting/Merging Waveform Data

Can I export the waveform data to other applications?

You can copy a plot as bitmap by making a waveform window the active window and typing Ctrl-C. Then, in an application that accepts bitmap pastes from the clipboard like Word or Paint, type Ctrl-V. Note that this also works for bitmaps of schematics. These images can also be exported as Windows metafiles (Menu command Tools=>Write to a .wmf file) which writes the image as vector graphics to a .wmf file that can be imported in various desktop publishing tools. When exporting a metafile of waveform data, you first go to Tools=>Control Panel=>Waveform=>Font and select Arial. The default, System, is highly legible on a CRT, but is a fixed font that does not scale correctly in metafiles.

OK, that works for bitmaps, but can I get the data itself to an application like Excel?

There is an export utility (Waveform Menu: File=>Export) that allows data to be exported to an ASCII file. There is also a 3rd party free utility written by Helmut Sennewald. It is available from the independent users' group <http://groups.yahoo.com/group/LTspice>. This utility allows various forms of manipulation of the data including the ability to merge waveforms from different simulation runs.

Running Under Linux

Do you have a Linux version of this program?

Not a separate edition, but it does run under WINE. The program has been tested on Linux RedHat 8.0 with WINE version 20030219, RedHat 9.0 with WINE 20040716, and SuSE 9.1 with 20040716.

OK, I've never used WINE, how do I install this?

Check with <http://www.winehq.com> to find the current version of WINE for your system. At the time of this writing, for RedHat 8.0, this pointed to <http://mecano.gme.usherb.ca/~vberon/wine>

Copy the appropriate .rpm file to your machine and open it from nautilus.

Get the file swcadiii.exe from <http://www.linear.com/software>. In an xterm, execute "wine swcadiii.exe" to install LTspice.

There will now be a Linear Technology Logo on your gnome desktop. Double click it to start or type "wine scad3.exe" from an xterm to start the program.

The schematic fonts don't scale as smoothly under WINE as Windows. Why is that?

WINE is doing the best it can with the fonts it finds. It will do better if you tell it how to find the files arial.ttf and cour.ttf from your Windows system.

The PWL additional point editor doesn't look right under WINE?

Try using the native Windows .dll from your Windows system. The command line to then invoke LTspice from WINE is `wine -dll commctrl,comctl32=n scad3.exe`.

It seems LTspice is running slightly differently under WINE/Linux than windows. Why is that?

LTspice detects whether or not it's running under WINE. If so, it works around a few WINE issues. You can force LTspice to think it's running under WINE with the command line switch `-wine`. You can force it to think it's not with the command line switch `-nowine` in case you're interesting in working on WINE issues.

What about a Paper Manual?

You can download a .pdf of these help pages from <http://LTspice.linear-tech.com/software/scad3.pdf> and print it if you wish.

What about a Users' Group?

There is an independent users' group at <http://groups.yahoo.com/group/LTspice>. The group has a Files section with additional tutorials, libraries, and examples.

Appendixes

Symbols

Symbol Overview

This appendix documents the schematic symbols supplied with LTspice.

Power Products

Overview

All macromodels reflect typical performance at room temperature (27 °C). Worst-case models are not covered.

The synchronization capability is usually not modeled except for devices that use phase locked loops. The macromodels will not fail if over-voltaged. The absolute maximum ratings specified in the data sheets must be obeyed. Those device failure modes are not modeled.

LT1308A


High Current, Micropower Single Cell, 600kHz DC/DC Converter

<u>PARAMETER</u>	<u>CONDITIONS</u>	Device Typical	Sim. Model
Quiescent Current	Not Switching	140	140
uA			
	Switching	2.5	3.2
mA			
Feedback Voltage		1.22	1.23
V			
Switch Frequency	Vin=1.2V	600	590
kHz			
Max. Duty Cycle		90	90
%			
Switch Current Limit	Duty Cycle=30%	3	3.3
A			
Switch Vcesat	"Isw=2A, Vin=1.5V"	290	320
mV			


Min. Input Voltage
V

0.92 1

Low battery detector function are not implemented for those two models. Shutdown pin current is not modeled.

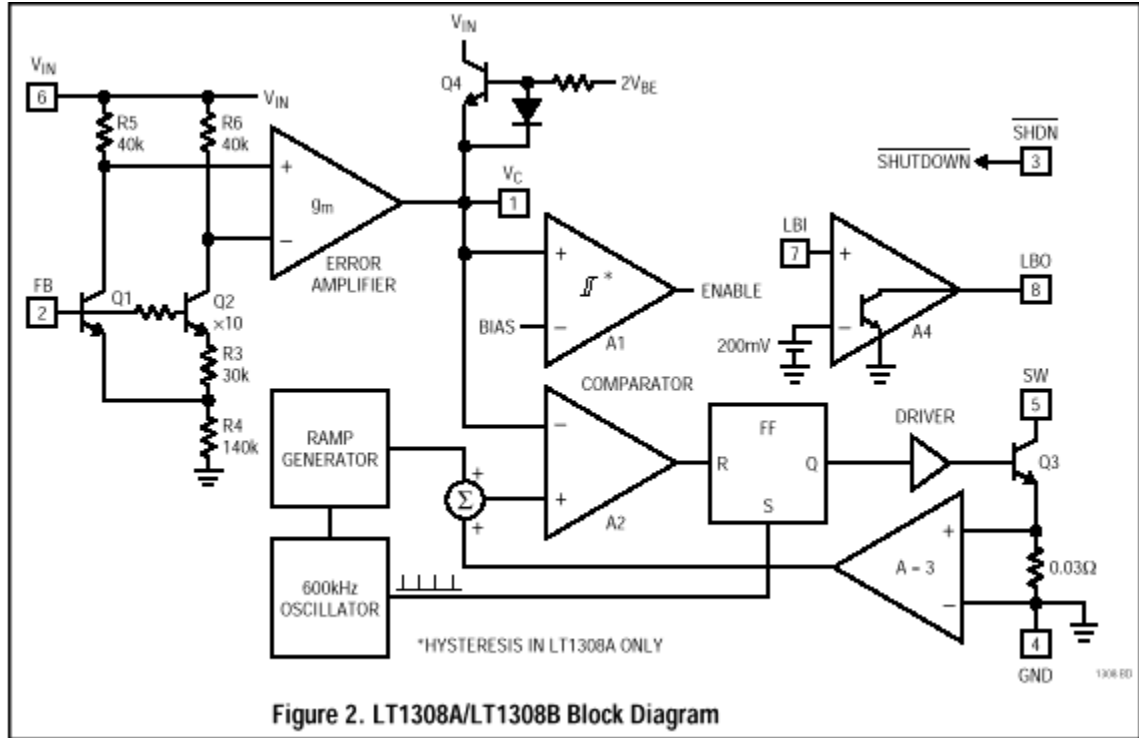

Demo-board DC207 LT1308 Vin=3.3V, Vout=5V


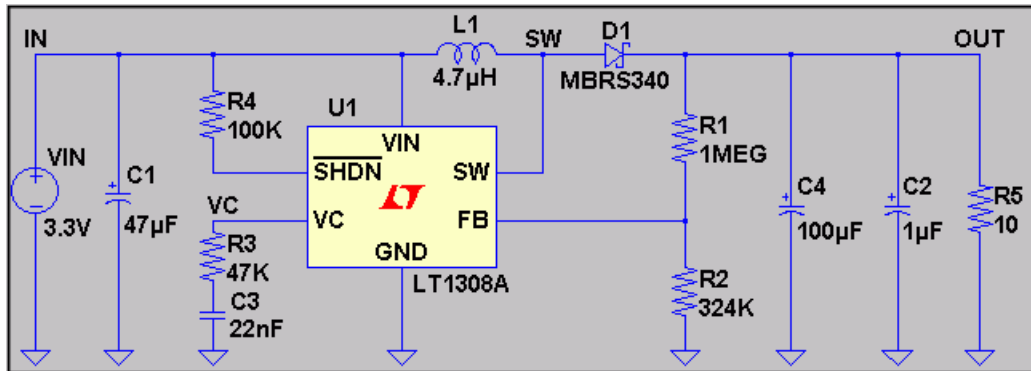


switching from 5% full load(25mA) to full load(500mA)

Step Load Response:

Simulation : PULSE(500M 25M 5M 0.1u 0.1u 5M 10M)



Measurement: Tek TDS 640A Scope, 100mV, 2.5mS

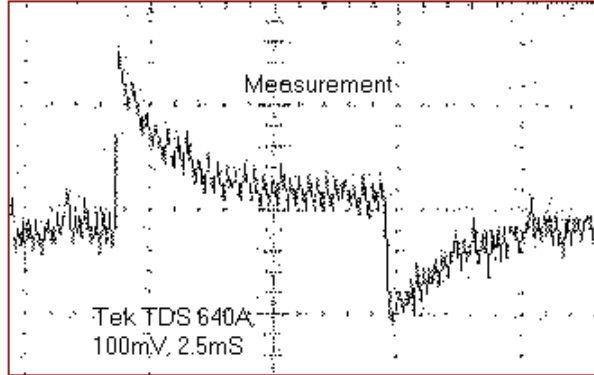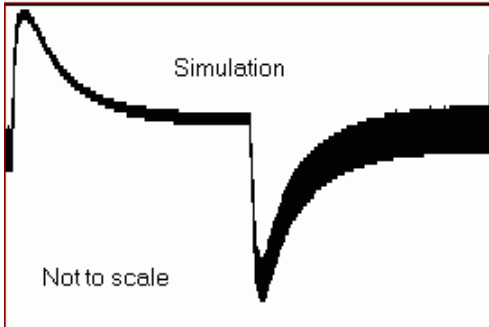

Startup Response:

Simulation : $V_{in}=3.3V$, $V_{out}=5V$, $I_{load}=500mA$.

Measurement: Tek TDS 640A Scope, 2.00V, 500uS

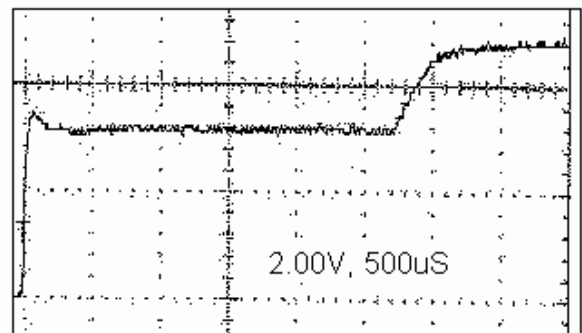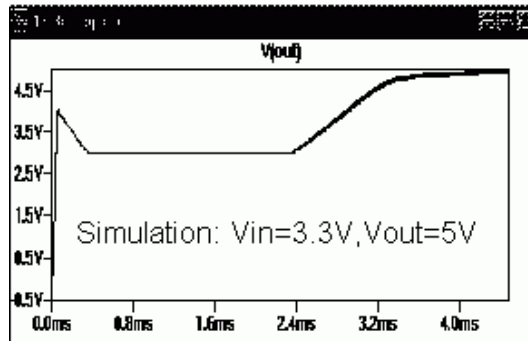

LTC1435A

SFB bias current not implemented. Gate drivers' transition time is not guaranteed at 50ns. Reference voltage line and load regulations are not characterized. Shutdown supply current is not a function of input voltage.

LTC1735

Gate drive rise and fall time are not characterized. Supply current consumption between operation modes are not implemented. Reference line and load regulation are not implemented. In the model, RUN/SS capacitor can't not be used as a short-circuit time-out circuit.

LTC1628

High Efficiency, 2-Phase Synchronous Step-Down Switching Regulator

When FCB is above 4.8V, Burst mode is not disabled. Gate drive rise and fall time are not characterized. Supply current consumption between operation modes are not implemented. Reference line and load regulation are not implemented. Device turn on LDO independent of soft-start when pin STBYMD is set to above 2V, however the model set LDO to be independent of soft-start regardless of the voltage on STBYMD pin

LTC1624

Gate drive rise and fall time are not characterized. Supply current consumption between operation modes are not implemented. Reference line and load regulation are not implemented.

LTC1622

Low Input Voltage Current Mode Step-Down DC/DC Controller

Gate drive rise and fall times are not characterized. Supply current consumption between operation modes is not implemented. Undervoltage lockout hysteresis is not implemented.

LT1026

Switched Capacitor Voltage Converter

LT1054

Switched-Capacitor Voltage Converter with Regulator

LT1054L

Switched-Capacitor Voltage Converter with Regulator

LT1070

5A High Efficiency Switching Regulator

LT1070HV

5A High Efficiency Switching Regulator (High Voltage version)

LT1071

2.5A High Efficiency Switching Regulator

LT1071HV

2.5A High Efficiency Switching Regulator (High Voltage version)

LT1072

1.25A High Efficiency Switching Regulator

LT1072HV

1.25A High Efficiency Switching Regulator (High Voltage version)

LT1073

5 Volt Micropower DC/DC Converter

LT1073-5

5 Volt Micropower DC/DC Converter

LT1073-12

12 Volt Micropower DC/DC Converter

LT1074

5A Step-Down Switching Regulator

LT1074HV

5A Step-Down Switching Regulator

LT1076

2A Step-Down Switching Regulator

LT1082

1A High Voltage, Efficiency Switching Voltage Regulator

LT1084

5A Low Dropout Positive Adjustable Regulator

LT1085

5A Low Dropout Positive Adjustable Regulator

LT1103

Offline Switching Regulator

LT1105

Offline Switching Regulator

LT1106

Micropower Step-Up DC/DC Converter for PCMCIA Card Flash Memory

LT1107

Adjustable Micropower DC/DC Converter

LT1107-5

5 Volt Micropower DC/DC Converter

LT1107-12

12 Volt Micropower DC/DC Converter

LT1108

Adjustable Micropower DC/DC Converter

LT1108-12

12Volt Micropower DC/DC Converter

LT1109

Micropower Low Cost DC/DC Converter Adjustable

LT1109-12

Micropower Low Cost DC/DC Converter Fixed 12V

LT1109-5

Micropower Low Cost DC/DC Converter Fixed 5V

LT1110-5

5 Volt Micropower DC/DC Converter

LT1110-12

12 Volt Micropower DC/DC Converter

LT1111

Adjustable Micropower DC/DC Converter

LT1111-5

5 Volt Micropower DC/DC Converter

LT1170

100kHz, 5A High Efficiency Switching Regulator

LT1170HV

100kHz, 5A High Efficiency Switching Regulators Vin: 3V to 60V

LT1171

100kHz, 2.5A High Efficiency Switching Regulator

LT1171HV

100kHz, 2.5A High Efficiency Switching Regulators Vin: 3V
to 60V

LT1172

100kHz, 1.25A High Efficiency Switching Regulators

LT1172HV

100kHz, 1.25A High Efficiency Switching Regulators Vin: 3V
to 60V

LT1173

Adjustable Micropower DC/DC Converter

LT1173-5

5 Volt Micropower DC/DC Converter

LT1173-12

12 Volt Micropower DC/DC Converter

LT1176

Step-Down Switching Regulator, Adjustable Output
Voltage

LT1176-5

Step-Down Switching Regulator, Fixed 5V Output

LT1182

CCFL/LCD Contrast Switching Regulator

LT1183

CCFL/LCD Contrast Switching Regulator

LT1184

CCFL Switching Regulator, Grounded-Lamp

LT1184F

CCFL Switching Regulator, Floating-Lamp or Grounded-Lamp

LT1186F

DAC Programmable CCFL Switching Regulator (Bits-to-Nits(TM))

LT1242

High Speed Current Mode Pulse Width Modulator

LT1243

High Speed Current Mode Pulse Width Modulator

LT1245

High Speed Current Mode Pulse Width Modulator

LT1246

1MHz Off-Line Current Mode PWM and DC/DC Converter

LT1247

1MHz Off-Line Current Mode PWM and DC/DC Converter

LT1248

Power Factor Controller(NOTE External sync capability is not modeled)

LT1249

Power Factor Controller(NOTE External sync capability is not modeled)

LT1269

4A High Efficiency Switching Regulator

The model's performance in flyback configuration is not verified.

LT1268

7.5A 150kHz Switching Regulator

The model's performance in flyback configuration is not verified.

LT1268B

7.5A 150kHz Switching Regulator

LT1270

8A High Efficiency Switching Regulator

LT1270A

10A High Efficiency Switching Regulator

LT1271

4A High Efficiency Switching Regulator

LT1300

Micropower High Efficiency 3.3/5V Step-Up DC/DC Converter

LT1301

Micropower High Efficiency 5V/12V Step-Up DC/DC Converter for Flash Memory

LT1302

Micropower High Output Current Step-Up Adjustable DC/DC Converter

LT1302-5

Micropower High Output Current Step-Up Fixed 5V DC/DC Converter

LT1303

Micropower High Efficiency DC/DC Converters with Low-Battery Detector Adjustable

LT1303-5

Micropower High Efficiency DC/DC Converters with Low-Battery Detector, Fixed 5V

LT1304

Micropower DC/DC Converters with Low-Battery Detector Active in Shutdown

LT1304-3.3

Micropower DC/DC Converters with Low-Battery Detector Active in Shutdown

LT1304-5

Micropower DC/DC Converters with Low-Battery Detector Active in Shutdown

LT1305

Micropower High Power DC/DC Converter with Low-Battery Detector

Shutdown pin bias current is not modeled, because the input voltage level is the trigger, not current. The low battery input sensor's input bias current and output leakage current are also not modeled for the same reason. Mostly the output is fed into a logic input, which is high impedance. Currents for those pins are in the nA range.

LT1306

Synchronous, Fixed Frequency Step-Up DC/DC Converter

LT1307

Single Cell Micropower 600kHz PWM DC/DC Converters

LT1307B

Single Cell Micropower 600kHz PWM DC/DC Converters

LT1309

500kHz Micropower DC/DC Converter for Flash Memory

Shutdown bias current is not modeled. Soft-start start-up waveforms can't fully match the data sheet's waveforms.

LT1316

Micropower DC/DC Converter with Programmable Peak Current Limit

LT1317

Micropower, 600kHz PWM DC/DC Converters

LT1317B

Micropower, 600kHz PWM DC/DC Converters, Continuous Switching at Light Loads (LT1317B)

LT1336

Half-Bridge N-Channel Power MOSFET Driver with Boost Regulator

LT1370

500kHz High Efficiency 6A Switching Regulator

LT1371

500kHz High Efficiency 3A Switching Regulator

LT1371HV

500kHz High Efficiency 3A Switching Regulator (High Voltage version)

LT1372

1.5A, 500kHz High Efficiency Step-Down Switching Regulator, Adjustable Output Voltage

The soft-start pin for the LT1372/LT1377 can be used to synchronize with an external oscillator, but the model does not have this capability, It is disabled for now. Also not modeled is the input current to the soft-start pin as a function of voltage.

LT1372HV

1.5A, 500kHz High Efficiency Step-Down Switching Regulator, Adjustable Output Voltage (High Voltage version)

LT1373

250kHz Low Supply Current High Efficiency 1.5A Switching Regulator, Adjustable Output Voltage

LT1373HV

250kHz Low Supply Current High Efficiency 1.5A Switching Regulator, Adjustable Output Voltage

LT1374

4.5A, 500KHz Step-Down Switching Regulator

LT1374-5

4.5A, 500kHz Step-Down Switching Regulator, Fixed
5Volt Output

LT1375

1.5A, 500kHz Step-Down Switching Regulators

The synchronization pin is not modeled.

LT1375HV

1.5A, 500kHz Step-Down Switching Regulator, Adjustable
Output Voltage

LT1375-5

1.5A, 500kHz Step-Down Switching Regulator

LT1376

1.5A, 500kHz Step-Down Switching Regulators

LT1376HV

1.5A, 500kHz Step-Down Switching Regulator, Adjustable
Output Voltage

LT1376-5

1.5A, 500kHz Step-Down Switching Regulator, Fixed 5V
Output

LT1377

500kHz and 1MHz High Efficiency 1.5A Switching Regulators

The soft-start pin for the LT1372/LT1377 can be used to synchronize with an external oscillator, but the model does not have this capability, Also not modeled is the input current to the soft-start pin as a function of voltage.

LT1339

High Power Synchronous DC/DC Controller

LT1424-5

Isolated Flyback Switching Regulator with 5V Output

LT1424-9

Isolated Flyback Switching Regulator with 9V Output

LT1425

Isolated Flyback Switching Regulator

LT1432

5V High Efficiency Step-Down Switching Regulator Controller

LT1432-3.3

3.3V High Efficiency Step-Down Switching Regulator Controller

LT1500

Adaptive-Frequency Current-Mode Switching Regulator, Adjustable Output Voltage

LT1501

Adaptive-Frequency Current-Mode Switching Regulator, Adjustable Output Voltage

LT1501-3.3

Adaptive-Frequency Current-Mode Switching Regulator, Fixed 3.3V Output

LT1501-5

Adaptive-Frequency Current-Mode Switching Regulator,
Fixed 5V Output

LT1505

Constant-Current/Voltage High Efficiency Battery
Charger

LT1505-1

Constant-Current/Voltage High Efficiency Battery
Charger

LT1506

4.5A, 500KHz Step-Down Switching Regulator, Adjustable
Output Voltage

Shutdown pin bias current is not accurately modeled.

LT1506-3.3

4.5A, 500KHz Step-Down Switching Regulator, Fixed 3.3V
Output

LT1500-3

Adaptive-Frequency Current-Mode Switching Regulator,
Selectable 3.3V or 5V Output

LT1507

500kHz Monolithic Buck Mode Switching Regulator,
Adjustable Output Voltage

Shutdown pin bias current is not accurately modeled.

LT1507-3.3

500kHz Monolithic Buck Mode Switching Regulator, Fixed
3.3V Output Voltage

LT1508

Power Factor and PWM Controller (Voltage Mode)

LT1509

Power Factor and PWM Controller

LT1510-5

500KHz Constant-Voltage/Constant-Current Battery
Charger

LT1510

Constant-Voltage/Constant-Current Battery Charger

LT1512

SEPIC Constant-Current/Constant Voltage Battery
Charger

LT1529

3A Low Dropout Regulator with Micropower Quiescent
Current and Shutdown

LT1533

Ultralow Noise 1A Switching Regulator

LT1534

Ultralow Noise 2A Switching Regulator

LT1572

100kHz, 1.25A High Efficiency Switching Regulator with
Catch Diode

LT1576

1.5A, 200kHz Step-Down Switching Regulator, Adjustable
Output Voltage

LT1578

1.5A, 200kHz Step-Down Switching Regulator, Adjustable
Output Voltage

LT1576-5

1.5A, 200kHz Step-Down Switching Regulator, Fixed 5V Output

LT1612

Synchronous, Step-Down 800KHz PWM DC/DC Converter

LT1613

1.4MHz, Single Cell DC/DC Converter in 5-Lead SOT-23
Shutdown pin bias current and hysteresis are not implemented.

LT1614

Inverting 600kHz Switching Regulator

LT1615

Shutdown pin bias current and hysteresis are not implemented.

LT1617

Shutdown pin bias current and hysteresis are not implemented.

LT1618

Constant-Current/Constant-Voltage 1.4MHz Step-Up DC/DC Converter

LT1610

1.7MHz, Single Cell Micropower DC/DC Converter

LT1611

Inverting 1.4MHz Switching Regulator in 5-Lead SOT-23

LT1615-1

Micropower Step-Up DC/DC Converter in SOT-23

LT1616

600mA, 1.4MHz Step-Down Switching Regulator in SOT-23

LT1617

Micropower Inverting DC/DC Converters in SOT-23

LT1617-1

Micropower Inverting DC/DC Converters in SOT-23

LT1619

Low Voltage Current Mode PWM Controller

LT1620

Rail-to-Rail Current Sense Amplifier

LT1620S8

Rail-to-Rail Current Sense Amplifier

LT1621

Dual Rail-to-Rail Current Sense Amplifier

LT1676

Wide Input Range, High Efficiency, Step-Down Switching Regulator

LT1680

High Power DC/DC Step-Up Controller

LT1725

General Purpose Isolated Flyback Controller

LT1735

High Efficiency Synchronous Step-Down Switching Regulator

LT1737

High Power Isolated Flyback Controller

LT1761-1.8

100mA Low Noise Low Dropout Micropower Regulator with Shutdown in SOT-23, 1.8V Output

LT1761-2.5

100mA Low Noise Low Dropout Micropower Regulator with Shutdown in SOT-23, 2.5V Output

LT1761-3

100mA Low Noise Low Dropout Micropower Regulator with Shutdown in SOT-23, 3V Output

LT1761-5

100mA Low Noise Low Dropout Micropower Regulator with Shutdown in SOT-23, 5V Output

LT1761-BYP

100mA Low Noise Low Dropout Micropower Regulator in SOT-23, Adjustable Output Voltage

LT1761-SD

100mA Low Noise Low Dropout Micropower Regulator with Shutdown in SOT-23, Adjustable Output Voltage

LT1761-3.3

100mA Low Noise Low Dropout Micropower Regulator with Shutdown in SOT-23, 3.3V Output

LT1762

150mA Low Noise Low Dropout Micropower Regulator with Shutdown, Adjustable Output Voltage

LT1762-1.5

150mA Low Noise Low Dropout Micropower Regulator with Shutdown, 1.5V

LT1762-1.8

150mA Low Noise Low Dropout Micropower Regulator with Shutdown, 1.8V

LT1762-2.5

150mA Low Noise Low Dropout Micropower Regulator with Shutdown, 2.5V

LT1762-3.3

150mA Low Noise Low Dropout Micropower Regulator with Shutdown, 3.3V

LT1762-3

150mA Low Noise Low Dropout Micropower Regulator with Shutdown, 3V

LT1762-5

150mA Low Noise Low Dropout Micropower Regulator with Shutdown, 5V

LT1763

500mA Low Noise Low Dropout Micropower Regulator with Shutdown, Adjustable Output Voltage

LT1763-1.5

500mA Low Noise Low Dropout Micropower Regulator with Shutdown, 1.5V

LT1763-1.8

500mA Low Noise Low Dropout Micropower Regulator with Shutdown, 1.8V

LT1763-2.5

500mA Low Noise Low Dropout Micropower Regulator with Shutdown, 2.5V

LT1763-3.3

500mA Low Noise Low Dropout Micropower Regulator with Shutdown, 3.3V

LT1763-3

500mA Low Noise Low Dropout Micropower Regulator with Shutdown, 3V

LT1763-5

500mA Low Noise Low Dropout Micropower Regulator with Shutdown, 5V

LT1764

3A, Fast Transient Response, Low Noise, LDO Regulator, Adjustable Output Voltage

LT1764-1.5

3A, Fast Transient Response, Low Noise, LDO Regulator, 1.5V Output

LT1764-1.8

3A, Fast Transient Response, Low Noise, LDO Regulator, 1.8V Output

LT1764-2.5

3A, Fast Transient Response, Low Noise, LDO Regulator, 2.5V Output

LT1764-3.3

3A, Fast Transient Response, Low Noise, LDO Regulator, 3.3V Output

LT1767

Monolithic 1.5A, 1.25MHz Step-Down Switching Regulator

LT1776

Wide Input Range, High Efficiency, Step-Down Switching Regulator

LT1777

Low Noise Step-Down Switching Regulator

LT1786F

SMBus Programmable CCFL Switching Regulator (Bits-to-Nits(TM))

LT1930

1A 1.2Mhz boost DC/DC Converter in ThinSOT

LT1930A

1A, 2.2Mhz Boost DC/DC Converter in ThinSOT

LT1931

1.2Mhz Inverting DC/DC Converter in ThinSOT

LT1931A

2.2Mhz Inverting DC/DC Converter in ThinSOT

LT1949

600kHz, 1A Switch PWM DC/DC Converter

LT1956

High Voltage, 1.5A, 500KHz Step-Down Switching Regulator

LT1959

4.5A, 500KHz Step-Down Switching Regulator, Adjustable Output Voltage

LT1962

300mA Low Noise Low Dropout Micropower Regulator with Shutdown, Adjustable Output Voltage

LT1962-1.5

300mA Low Noise Low Dropout Micropower Regulator with Shutdown, 1.5V

LT1962-1.8

300mA Low Noise Low Dropout Micropower Regulator with Shutdown, 1.8V

LT1962-2.5

300mA Low Noise Low Dropout Micropower Regulator with Shutdown, 2.5V

LT1962-3

300mA Low Noise Low Dropout Micropower Regulator with Shutdown, 3V

LT1962-5

300mA Low Noise Low Dropout Micropower Regulator with Shutdown, 5V

LT1963

1.5A, Low Noise, Fast Transient Response LDO Regulator, Adjustable Output Voltage

LT1963-1.5

1.5A, Low Noise, Fast Transient Response LDO Regulator, 1.5V

LT1963-1.8

1.5A, Low Noise, Fast Transient Response LDO Regulator, 1.8V

LT1963-2.5

1.5A, Low Noise, Fast Transient Response LDO Regulator, 2.5V

LT1963-3.3

1.5A, Low Noise, Fast Transient Response LDO Regulator, 3.3V

LT1956-5

High Voltage, 1.5A, 500KHz Step-Down Switching Regulator, Fixed 5V Output

LTC660

100mA CMOS Voltage Converter

LTC1044

Switched Capacitor Voltage Converter

LTC1044A

12V CMOS Switched Capacitor Voltage Converter

LTC1046

"Inductorless" 5V to -5V Converter

LTC1142

Dual High Efficiency Synchronous Step-Down Switching Regulator Controller, Fixed 3.3V and 5V Outputs

LTC1142HV

Dual High Efficiency Synchronous Step-Down Switching Regulator Controller, Fixed 3.3V and 5V Outputs

LTC1142HV-ADJ

Dual High Efficiency Synchronous Step-Down Switching Regulator Controller, Adjustable Output Voltages

LTC1142L-ADJ

Dual High Efficiency Synchronous Step-Down Switching Regulator Controller, Adjustable Output Voltages

LTC1143

Dual High Efficiency SO-16 Step-Down Switching Regulator Controller, Fixed 3.3V and 5V Outputs

LTC1143L

Dual High Efficiency SO-16 Step-Down Switching Regulator Controller, Fixed 3.3V and 5V Outputs

LTC1143L-ADJ

Dual High Efficiency SO-16 Step-Down Switching Regulator Controller, Adjustable Output Voltages

LTC1144

Switched-Capacitor Wide Input Range Voltage Converter with Shutdown

LTC1147-3.3

High Efficiency Step-Down Switching Regulator
Controller, Fixed 3.3V Output

LTC1148L

High Efficiency Synchronous Step-Down Switching
Regulator Controller, Adjustable Output Voltage

LTC1148L-3.3

High Efficiency Synchronous Step-Down Switching
Regulator Controller, Fixed 3.3V Output

LTC1149

High Efficiency Synchronous Step-Down Switching
Regulator Controller, Adjustable Output Voltage

LTC1149-3.3

High Efficiency Synchronous Step-Down Switching
Regulator Controller, Fixed 3.3V Output

LTC1149-5

High Efficiency Synchronous Step-Down Switching
Regulator Controller, Fixed 5V Output

LTC1159

High Efficiency Synchronous Step-Down Switching
Regulator Controller, Adjustable Output Voltage

LTC1159-3.3

High Efficiency Synchronous Step-Down Switching
Regulator Controller, Fixed 3.3V Output

LTC1626

Low Voltage, High Efficiency Step-Down DC/DC
Controller, Adjustable Output Voltage

LTC1159-5

High Efficiency Synchronous Step-Down Switching
Regulator Controller, Fixed 5V Output

LTC1174

High Efficiency Step-Down and Inverting DC/DC Converter

LTC1174-3.3

High Efficiency Step-Down and Inverting DC/DC Converter

LTC1174-5

High Efficiency Step-Down and Inverting DC/DC Converter

LTC1174HV

High Efficiency Step-Down and Inverting DC/DC Converter

LTC1174HV-3.3

High Efficiency Step-Down and Inverting DC/DC Converter

LTC1174HV-5

High Efficiency Step-Down and Inverting DC/DC Converter

LTC1261

Switched Capacitor Regulated Voltage Inverter

LTC1261CS8

Switched Capacitor Regulated Voltage Inverter

LTC1261LCS8

Switched Capacitor Regulated Voltage Inverter

LTC1261LCS8-4

Switched Capacitor Regulated Voltage Inverter, Fixed
4V Output

LTC1261LCS8-4.5

Switched Capacitor Regulated Voltage Inverter, Fixed 4.5V Output

LTC1262

12V, 30mA Flash Memory Programming Supply

LTC1263

12V, 60mA Flash Memory Programming Supply

LTC1265

1.2A, High Efficiency Step-Down DC/DC Controller, Adjustable Output Voltage

LTC1265-3.3

1.2A, High Efficiency Step-Down DC/DC Controller, Fixed 3.3V Output

LTC1265-5

1.2A, High Efficiency Step-Down DC/DC Controller, Fixed 5V Output

LTC1266

Synchronous Regulator Controller for N- or P-Channel MOSFETs, Adjustable Output Voltage

LTC1266-3.3

Synchronous Regulator Controller for N- or P-Channel MOSFETs, Fixed 3.3V Output

LTC1266-5

Synchronous Regulator Controller for N- or P-Channel MOSFETs, Fixed 5V Output

LTC1267

Dual High Efficiency Synchronous Step-Down Switching Regulator Controller, Fixed 3.3V and 5V Outputs

LTC1267-ADJ

Dual High Efficiency Synchronous Step-Down Switching Regulator Controller, Adjustable Output Voltages

LTC1267-ADJ5

Dual High Efficiency Synchronous Step-Down Switching Regulator Controller, One Adjustable Output Voltage and One Fixed 5V Output

LTC1430

High Power Step-Down Synchronous Switching Regulator Controller

LTC1430A

High Power Step-Down Synchronous Switching Regulator Controller

LTC1433

450mA, Low Noise Current Mode Step-Down DC/DC Converter

LTC1434

450mA, Low Noise Current Mode Step-Down DC/DC Converter

LTC1436A

High Efficiency Low Noise Synchronous Step-Down Switching Regulator

LTC1436A-PLL

High Efficiency Low Noise Synchronous Step-Down Switching Regulator

LTC1437A

High Efficiency Low Noise Synchronous Step-Down Switching Regulator

LTC1438-ADJ

Dual High Efficiency, Low Noise, Synchronous Step-Down Switching Regulator

LTC1438

Dual High Efficiency, Low Noise, Synchronous Step-Down Switching Regulator

LTC1439

Dual High Efficiency, Low Noise, Synchronous Step-Down Switching Regulator

LTC1474

Low Quiescent Current, High Efficiency Step-Down Converter, Adjustable Output Voltage

LTC1475

Low Quiescent Current, High Efficiency Step-Down Converter, Adjustable Output Voltage

LTC1475-5

Low Quiescent Current, High Efficiency Step-Down Converter, 5V Output

LTC1502-3.3

Single Cell to 3.3V Regulated Charge Pump DC/DC Converter

LTC1503-1.8

High Efficiency Inductorless Step-Down DC/DC Converter, Fixed 1.8V Output

LTC1503-2

High Efficiency Inductorless Step-Down DC/DC Converter, Fixed 2V Output

LTC1504

500mA Low Voltage Step-Down Synchronous Regulator, Adjustable Output Voltage

LTC1504-3.3A

500mA Low Voltage Step-Down Synchronous Regulator, Fixed 3.3V Output

LTC1504A

500mA Low Voltage Step-Down Synchronous Regulator,
Adjustable Output Voltage

LTC1504-3.3

500mA Low Voltage Step-Down Synchronous Regulator,
Fixed 3.3V Output

LTC1514-3.3

Step-Up/Step-Down Switched Capacitor DC/DC Converter
with Low-Battery Comparator, Fixed 3.3V Output

LTC1514-5

Step-Up/Step-Down Switched Capacitor DC/DC Converter
with Low-Battery Comparator, Fixed 5V Output

LTC1515

Step-Up/Step-Down Switched Capacitor DC/DC Converter
with Reset, Adjustable Output Voltage

LTC1515-3.3/5

Step-Up/Step-Down Switched Capacitor DC/DC Converter
with Reset, Programmable 3.3V or 5V Output Voltage

LTC1515-3/5

Step-Up/Step-Down Switched Capacitor DC/DC Converter
with Reset, Programmable 3V or 5V Output Voltage

LTC1516

Micropower Regulated 5V Charge Pump DC/DC Converter

LTC1517-3.3

Micropower Regulated 3.3V Charge Pump in a 5-Pin SOT-
23 Package

LTC1517-5

Micropower Regulated 5V Charge Pump in a 5-Pin SOT-23
Package

LTC1522

Micropower Regulated 5V Charge Pump DC/DC Converter

LTC1530

High Power Synchronous Switching Regulator Controller,
Adjustable Output Voltage

LTC1530-1.9

High Power Synchronous Switching Regulator Controller,
Fixed 1.9 Volt Output

LTC1530-2.5

High Power Synchronous Switching Regulator Controller,
Fixed 2.5 Volt Output

LTC1530-3.3

High Power Synchronous Switching Regulator Controller,
Fixed 3.3 Volt Output

LTC1530-2.8

High Power Synchronous Switching Regulator Controller,
Fixed 2.8 Volt Output

LTC1538-AUX

Dual High Efficiency, Low Noise, Synchronous Step-Down
Switching Regulator

LTC1539

Dual High Efficiency, Low Noise, Synchronous Step-Down
Switching Regulator

LTC1550

Low Noise, Switched Capacitor Regulated Voltage
Inverter, Adjustable Output

LTC1550L

Low Noise, Switched Capacitor Regulated Voltage
Inverter, Adjustable Output

LTC1550LCS8

Low Noise, Switched Capacitor Regulated Voltage Inverter, Adjustable Output Voltage

LTC1550LCS8-2

Low Noise, Switched Capacitor Regulated Voltage Inverter, Fixed 2V Output

LTC1550LCS8-2.5

Low Noise, Switched Capacitor Regulated Voltage Inverter, Fixed 2.5V Output

LTC1550LCS8-4.1

Low Noise, Switched Capacitor Regulated Voltage Inverter, Fixed 4.1V Output

LTC1550CS8-4.1

Low Noise, Switched Capacitor Regulated Voltage Inverter, Fixed -4.1V Output

LTC1553

5-Bit Programmable Synchronous Switching Regulator Controller for Pentium II Processor

LTC1553L

5-Bit Programmable Synchronous Switching Regulator Controller for Pentium II Processor

LTC1574

High Efficiency Step-Down DC/DC Converter with Internal Schottky Diode, Adjustable Output Voltage

LTC1574-3.3

High Efficiency Step-Down DC/DC Converter with Internal Schottky Diode, Fixed 3.3V Output

LTC1574-5

High Efficiency Step-Down DC/DC Converter with Internal Schottky Diode, Fixed 5V Output

LTC1625

No R_SENSE Current Mode Synchronous Step-Down Switching Regulator

LTC1625-5

Low Voltage, High Efficiency Step-Down DC/DC Controller, Fixed 5V Output

LTC1626-3.3

Low Voltage, High Efficiency Step-Down DC/DC Controller, Fixed 3.3V Output

LTC1627

Monolithic Synchronous Step-Down Switching Regulator

LTC1628-PG

High Efficiency, 2-Phase Synchronous Step-Down Switching Regulator

LTC1629

PolyPhase, High Efficiency, Synchronous Step-Down Switching Regulator

LTC1629-PG

PolyPhase, High Efficiency, Synchronous Step-Down Switching Regulator

LTC1649

3.3V Input High Power Step-Down Synchronous Switching Regulator Controller, Adjustable Output Voltage

LTC1682

Doubler Charge Pump with Low Noise Linear Regulator, Adjustable Output Voltage

LTC1682-3.3

Doubler Charge Pump with Low Noise Linear Regular, Fixed 3.3V Output

LTC1682-5

Doubler Charge Pump with Low Noise Linear Regular,
Fixed 5V Output

LTC1693-1

Dual High Speed MOSFET Driver

LTC1693-2

Dual High Speed MOSFET Driver

LTC1693-3

High Speed MOSFET Driver

LTC1701

1MHz Step-Down DC/DC Converter in SOT-23

LTC1701B

1MHz Step-Down DC/DC Converter in SOT-23

LTC1702

Dual 550kHz Synchronous 2-Phase Switching Regulator
Controller NOTE Only one phase of two phases modeled

LTC1703

Dual 550kHz Synchronous 2-Phase Switching Regulator
Controller with VID

LTC1706-19

VID Voltage Programmer

LTC1707

High Efficiency Monolithic Synchronous Step-Down
Regulator (Note External sync. capability is not
modeled)

LTC1709

2-Phase, 5-Bit Adjustable, High Efficiency,
Synchronous Step-Down Switching Regulator

LTC1735-1

High Efficiency Synchronous Step-Down Switching Regulator

LTC1736

5-Bit Adjustable High Efficiency Synchronous Step-Down Switching Regulator

LTC1753

5-Bit Programmable Synchronous Switching Regulator Controller for Pentium II Processor

LTC1754-5

Micropower Regulated 5V Charge Pump with Shutdown in SOT-23

LTC1771

10 μ A Quiescent Current High Efficiency Step-Down DC/DC Controller

LTC1772B

Constant Frequency Current Mode Step-Down DC/DC Controller in SOT-23

LTC1772

Constant Frequency Current Mode Step-Down DC/DC Controller in SOT-23

LTC1773

Synchronous Step-Down Regulator Controller

LTC1775

High Power No Rsense(TM) Current Mode Synchronous Step-Down Switching Regulator

LTC1778

Wide Operating Range, No Rsense(TM) Step-Down Controller

LTC1779

250mA Current Mode Step-Down DC/DC Controller in SOT-23

LTC1871

Wide Input Range, No Rsense(TM) Current Mode Boost, Flyback and SEPIC Controller

LTC1872

Constant Frequency Current Mode Step-Up DC/DC Controller in SOT-23

LTC1872B

Constant Frequency Current Mode Step-Up DC/DC Controller in SOT-23

LTC1874

Dual Constant Frequency Current Mode Step-Down DC/DC Controller

LTC1873

Dual 550kHz Synchronous 2-Phase Switching Regulator Controller with 5-Bit VID

LTC1877

High Efficiency Monolithic Synchronous Step-Down Regulator(Note External sync. capability is not modeled)

LTC1878

High Efficiency Monolithic Synchronous Step-Down Regulator(Note External sync. capability is not modeled)

LTC1922-1

Synchronous Phase Modulated Full-Bridge Controller

LTC1929

2-Phase, High Efficiency, Synchronous Step-Down
Switching Regulator

LTC1929-PG

2-Phase, High Efficiency, Synchronous Step-Down
Switching Regulator

LTC1986

3V/5V SIM Power Supply in SOT-23

LTC3200

Low Noise, Regulated Charge Pump DC/DC Converter,
Adjustable Output

LTC3200-5

Low Noise, Regulated Charge Pump DC/DC Converter, 5V
Fixed Output

LTC3401

1A, 3MHz Micropower Synchronous Boost Converter

LTC3402

2A, 3MHz Micropower Synchronous Boost Converter

LTC3404

1.4MHz High Efficiency Monolithic Synchronous Step-
Down Regulator (Note External sync. capability is not
modeled)

LTC3405

1.5MHz, 250mA, Synchronous Step-Down Regulator in
ThinSOT

LTC3716

2-Phase, 5-Bit VID, Current Mode, High Efficiency,
Synchronous Step-Down Switching Regulator

LTC3711

5-Bit Adjustable, Wide Operating Range, No Rsense(TM)
Step-Down Controller

LTC3713

Low Input Voltage, High Power, No Rsense(TM)
Synchronous Controller

LTC3714

5-Bit Adjustable, Wide Operating Range, No Rsense(TM)
Step-Down Controller

LTC3728

High Efficiency, 2-Phase Synchronous Step-Down
Switching Regulator

LTC3729

550KHz, PolyPhase, High Efficiency, Synchronous Step-
Down Switching Regulator

Operational Amplifiers

LT1001

Precision Operational Amplifier

LT1001A

Precision Operational Amplifier

LT1001S8

Precision Operational Amplifier

LT1002

Precision Operational Amplifier

LT1002A

Precision Operational Amplifier

LT1006

Precision Single Supply Operational Amplifier
LT1006A

Precision Single Supply Operational Amplifier
LT1006S8

Precision Single Supply Operational Amplifier
LT1007

Low noise, High Speed Precision Operational Amplifier
LT1007A

Low noise, High Speed Precision Operational Amplifier
LT1007CS

Low noise, High Speed Precision Operational Amplifier
LT1008

Picoamp Input Current, μ Volt Offset, Low Noise
Operational Amplifier
LT1010

Fast +/-150mA Power Buffer
LT1012

Picoamp Input Current, μ Volt Offset, Low noise
Operational Amplifier
LT1012A

Picoamp Input Current, μ Volt Offset, Low noise
Operational Amplifier
LT1012D

Picoamp Input Current, μ Volt Offset, Low noise
Operational Amplifier

LT1012S8

Picoamp Input Current, μ Volt Offset, Low noise
Operational Amplifier

LT1013

Dual Precision Operational Amplifier

LT1013A

Dual Precision Operational Amplifier

LT1013D

Dual Precision Operational Amplifier

LT1014

Quad Precision Operational Amplifier

LT1014A

Quad Precision Operational Amplifier

LT1014D

Quad Precision Operational Amplifier

LT1022

High Speed, Precision JFET Input Operational Amplifier

LT1022A

High Speed, Precision JFET Input Operational Amplifier

LT1024

Dual, Matched Picoamp μ Volt Input, Low Noise
Operational Amplifier

LT1024A

Dual, Matched Picoamp μ Volt Input, Low Noise
Operational Amplifier

LT1028

Ultra-Low Noise Precision High Speed Operational
Amplifier

LT1028A

Ultra Low Noise Precision High Speed Operational
Amplifier

LT1028CS

Ultra Low Noise Precision High Speed Operational
Amplifier

LT1028N

Ultra-Low Noise Precision High Speed Operational
Amplifier

LT1037

Low Noise, High Speed Operational Amplifier

LT1037A

Low Noise, High Speed Operational Amplifier

LT1037CS

Low Noise, High Speed Operational Amplifier

LT1055

Precision, High Speed, JFET Input Operational
Amplifier
LT1055A

Precision, High Speed, JFET Input Operational
Amplifier
LT1055S8

Precision, High Speed, JFET Input Operational
Amplifier
LT1056

Precision, High Speed, JFET Input Operational
Amplifier
LT1056A

Precision, High Speed, JFET Input Operational
Amplifier
LT1056S8

Precision, High Speed, JFET Input Operational
Amplifier
LT1057

Dual JFET Input Precision High Speed Operational
Amplifier
LT1057A

Dual JFET Input Precision High Speed Operational
Amplifier
LT1057S

Dual JFET Input Precision High Speed Operational
Amplifier
LT1058

Quad JFET Input Precision High Speed Operational
Amplifier
LT1058A

Quad JFET Input Precision High Speed Operational
Amplifier
LT1077

Micropower Single Supply, Precision Operational
Amplifier
LT1077A

Micropower Single Supply, Precision Operational
Amplifier
LT1078

Micropower Dual, Single Supply, Precision Operational
Amplifier
LT1078A

Micropower Dual, Single Supply, Precision Operational
Amplifier
LT1079

Micropower Quad, Single Supply, Precision Operational
Amplifier
LT1079A

Micropower Quad, Single Supply, Precision Operational
Amplifier
LT1097

Low Cost Low Power Precision Operational Amplifier
LT1101

Precision Micropower Single Supply Instrumentation
Amplifier(Fixed Gain = 10 or 100)
LT1101A

Precision Micropower Single Supply Instrumentation
Amplifier(Fixed Gain = 10 or 100)
LT1102

High Speed Precision JFET Input Instrumentation
Amplifier(Fixed Gain = 10 or 100)
LT1102A

High Speed Precision JFET Input Instrumentation
Amplifier(Fixed Gain = 10 or 100)
LT1112

Dual Low Power Precision Picoamp Operational Amplifier
LT1113

Dual Low Noise Precision JFET Input Operational
Amplifier
LT1114

Quad Low Power Precision Picoamp Operational Amplifier
LT1115

Ultra-Low Noise Low Distortion, Audio Operational
Amplifier
LT1122

Fast Settling JFET Input Operational Amplifier
LT1124

Dual Low Noise High Speed Precision Operational
Amplifier
LT1125

Quad Low Noise High Speed Precision Operational
Amplifier
LT1126

Dual Decompensated Low Noise High Speed Operational
Amplifier
LT1127

Quad Decompensated Low Noise High Speed Operational
Amplifier
LT1128

Unity Gain Stable Ultra-Low Noise Precision High Speed
Operational Amplifier
LT1167

Single Resistor Gain Programmable Precision
Instrumentation Amplifier
LT1168

Micropower Single Resistor Gain Programmable Precision
Instrumentation Amplifier
LT1169

Dual Low Noise, Picoampere Bias Current, JFET Input
Operational Amplifier
LT1178

17mA Max, Dual Single Supply Precision Operational
Amplifier
LT1178A

17mA Max, Dual Single Supply Precision Operational
Amplifier
LT1179

17mA Max, Quad Single Supply Precision Operational
Amplifier
LT1179A

17mA Max, Quad Single Supply Precision Operational
Amplifier
LT1187

Low Power Video Difference Amplifier
LT1189

Low Power Video Difference Amplifier
LT1190

Ultra High Speed Operational Amplifier ($A_v \geq 1$)
LT1191

Ultra High Speed Operational Amplifier ($A_v \geq 1$)
LT1193

Video Difference Amplifier, Adjustable Gain
LT1194

Video Difference Amplifier, Gain of 10
LT1195

Low Power, High Speed Operational Amplifier
LT1206

250mA/60MHz Current Feedback Amplifier
LT1207

Dual 250mA/60MHz Current Feedback Amplifier
LT1208

Dual 45MHz, 400V/ μ s Operational Amplifier
LT1209

Quad 45MHz, 400V/ μ s Operational Amplifier
LT1210

1.1A, 35MHz Current Feedback Amplifier
LT1211

14Mhz, 7V/ μ s, Single Supply Dual Precision Operational
Amplifier
LT1212

14Mhz, 7V/ μ s, Single Supply Quad Precision Operational
Amplifier
LT1213

28Mhz, 12V/ μ s, Single Supply Dual Precision
Operational Amplifier
LT1214

28Mhz, 12V/ μ s, Single Supply Quad Precision
Operational Amplifier
LT1215

23Mhz, 50V/ μ s, Single Supply Dual Precision
Operational Amplifier

LT1216

23Mhz, 50V/ μ s, Single Supply Quad Precision
Operational Amplifier

LT1217

Low Power High Speed Current Feedback Amplifier

LT1218

Precision Rail-to-Rail Input and Output Operational
Amplifier

LT1219

Precision Rail-to-Rail Input and Output Operational
Amplifier

LT1220

Very High Speed Operational Amplifier($A_v \geq 1$)

LT1221

Very High Speed Operational Amplifier($A_v \geq 4$)

LT1222

Low Noise, Very High Speed Operational Amplifier($A_v \geq 10$)

LT1223

100MHz Current Feedback Amplifier

LT1224

Very High Speed Operational Amplifier($A_v \geq 1$)

LT1225

Very High Speed Operational Amplifier($A_v \geq 5$)
LT1226

Very High Speed Operational Amplifier($A_v \geq 25$)
LT1227

140MHz Video Current Feedback Amplifier
LT1228

100MHz Current Feedback Amplifier with DC Gain Control
LT1229

Dual 100MHz Current Feedback Amplifier
LT1230

Quad 100MHz Current Feedback Amplifier
LT1251

40Mhz Video Fader and DC Gain Controlled Amplifier
LT1252

Low Cost Video Amplifier
LT1253

Dual Low Cost Video Amplifier
LT1254

Quad Low Cost Video Amplifier
LT1256

40Mhz Video Fader and DC Gain Controlled Amplifier

LT1259

Low Cost Dual 130MHz Current Feedback Amplifier with
Shutdown

LT1260

Low Cost Triple 130MHz Current Feedback Amplifier with
Shutdown

LT1328

4Mbps IrDA Infrared Receiver -- simulate with
LT1328PD, the IR diode

LT1328PD

A photodiode similar to a SFH-205 for testing the
LT1328, drive the light input with a current source

LT1351

250mA, 3Mhz, 200V/ μ s, Operational Amplifier

LT1352

Dual 250mA, 3Mhz, 200V/ μ s, Operational Amplifier

LT1353

Quad 250mA, 3Mhz, 200V/ μ s, Operational Amplifier

LT1354

12Mhz, 400V/ μ s, Operational Amplifier

LT1355

Dual 12Mhz, 400V/ μ s, Operational Amplifier

LT1356

Quad 12Mhz, 400V/ μ s, Operational Amplifier
LT1357

25Mhz, 600V/ μ s, Operational Amplifier
LT1358

Dual 25Mhz, 600V/ μ s, Operational Amplifier
LT1359

Quad 25Mhz, 600V/ μ s, Operational Amplifier
LT1360

50Mhz, 800V/ μ s, Operational Amplifier
LT1361

Dual 50Mhz, 800V/ μ s, Operational Amplifier
LT1362

Quad 50Mhz, 800V/ μ s, Operational Amplifier
LT1363

70Mhz, 1000V/ μ s, Operational Amplifier
LT1364

Dual 70Mhz, 1000V/ μ s, Operational Amplifier
LT1365

Quad 70Mhz, 1000V/ μ s, Operational Amplifier
LT1366

Dual Precision Rail-to-Rail Input and Output
Operational Amplifier

LT1367

Quad Precision Rail-to-Rail Input and Output
Operational Amplifier

LT1368

Dual Precision Rail-to-Rail Input and Output
Operational Amplifier

LT1369

Quad Precision Rail-to-Rail Input and Output
Operational Amplifier

LT1395

400Mhz Current Feedback Amplifier

LT1396

Dual 400Mhz Current Feedback Amplifier

LT1397

Quad 400Mhz Current Feedback Amplifier

LT1398

Dual Low Cost 300MHz Current Feedback Amplifier with
Shutdown

LT1399

Triple Low Cost 300MHz Current Feedback Amplifier with
Shutdown

LT1413

Single Supply, Dual Precision Operational Amplifier

LT1413A

Single Supply, Dual Precision Operational Amplifier
LT1431

Programmable Reference
LT1462

Dual Micropower 260 μ W C-Load Picoampere Bias Current
JFET Input Operational Amplifier
LT1463

Quad Micropower 260 μ W C-Load Picoampere Bias Current
JFET Input Operational Amplifier
LT1464

Dual Micropower 1MHz C-Load Picoampere Bias Current
JFET Input Operational Amplifier
LT1465

Quad Micropower 1MHz C-Load Picoampere Bias Current
JFET Input Operational Amplifier
LT1466

Dual Micropower Precision Rail-to-Rail Input and
Output Operational Amplifier
LT1466L

Dual Micropower Precision Rail-to-Rail Input and
Output Operational Amplifier
LT1467

Quad Micropower Precision Rail-to-Rail Input and
Output Operational Amplifier
LT1467L

Quad Micropower Precision Rail-to-Rail Input and
Output Operational Amplifier

LT1468

90MHz, 22V/ μ s, 16-Bit Accurate Operational Amplifier

LT1468N

90MHz, 22V/ μ s, 16-Bit Accurate Operational Amplifier -
- This version of the model includes noise

LT1469

Dual 90MHz, 22V/ μ s, 16-Bit Accurate Operational Amplifier

LT1490

Dual Micropower Precision Rail-to-Rail Input and
Output Operational Amplifier

LT1491

Quad Micropower Precision Rail-to-Rail Input and
Output Operational Amplifier

LT1492

Dual 5MHz, 3V/ μ s Low Power Single Supply Precision
Operational Amplifier

LT1493

Quad 5MHz, 3V/ μ s Low Power Single Supply Precision
Operational Amplifier

LT1495

Dual 15 μ A Max, Precision Rail-to-Rail Input and Output
Operational Amplifier

LT1496

Quad 15 μ A Max, Precision Rail-to-Rail Input and Output
Operational Amplifier
LT1497

Dual 125mA, 50MHz, Current Feedback Amplifier
LT1498

Dual 10MHz, 6V/ μ s, Rail-to-Rail Input and Output
Precision C-Load Operational Amplifier
LT1499

Quad 10MHz, 6V/ μ s, Rail-to-Rail Input and Output
Precision C-Load Operational Amplifier
LT1630

Dual 30MHz, 10V/ μ s, Rail-to-Rail Input and Output
Precision Operational Amplifier
LT1631

Quad 30MHz, 10V/ μ s, Rail-to-Rail Input and Output
Precision Operational Amplifier
LT1632

Dual 45MHz, 45V/ μ s, Rail-to-Rail Input and Output
Precision Operational Amplifier
LT1633

Quad 45MHz, 45V/ μ s, Rail-to-Rail Input and Output
Precision Operational Amplifier
LT1635

Micropower Rail-to-Rail Operational Amplifier and
Reference
LT1636

Over-The-Top Micropower Rail-to-Rail Input and Output
Operational Amplifier with Shutdown

LT1637

1.1MHz, 0.4V/ μ s Over-The-Top Micropower Rail-to-Rail
Input and Output Operational Amplifier

LT1638

Dual 1.2MHz, 0.4V/ μ s, Over-The-Top Micropower Rail-to-
Rail input and output Operational Amplifier

LT1639

Dual 1.2MHz, 0.4V/ μ s, Over-The-Top Micropower Rail-to-
Rail input and output Operational Amplifier

LT1677

Low Noise, Rail-to-Rail Input and Output Precision
Operational Amplifier

LT1782

Micropower Over-The-Top, SOT-23, Rail-to-Rail Input
and Output Operational Amplifier

LT1783

1.2MHz Micropower Over-The-Top, SOT-23, Rail-to-Rail
Input and Output Operational Amplifier

LT1787

Single Resistor Gain Programmable, Precision
Instrumentation Amplifier

LT1793

Low Noise, Picoampere Bias Current, JFET Input Operational
Amplifier

LT1795

Dual 500mA/50MHz Current Feedback Amplifier/xDSL Line Driver

LT1806

325MHz, Single Rail-to-Rail Input and Output, Low Distortion, Low Noise Precision Operational Amplifier

LT1807

325MHz, Dual Rail-to-Rail Input and Output, Low Distortion, Low Noise Precision Operational Amplifier

LT1809

Single 180MHz, 350V/ μ s, Rail-to-Rail Input and Output, Low Distortion, Low Noise Precision Operational Amplifier

LT1792

Low Noise, Precision, JFET Input Operational Amplifier

LT1810

Dual 180MHz, 350V/ μ s, Rail-to-Rail Input and Output, Low Distortion, Low Noise Precision Operational Amplifier

LT1812

3mA, 100MHz, 750V/ μ s Operational Amplifier with Shutdown

LT1881

Dual Rail-to-Rail Output pA Input Precision Operational Amplifier

LT1884

Dual Rail-to-Rail Output pA Input Precision
Operational Amplifier

LT1886

Dual 700MHz, $A_v \geq 10$, 200mA Operational Amplifier

LT1920

Single Resistor Gain Programmable, Precision
Instrumentation Amplifier

LT2078

Dual Micropower Single Supply Precision Operational
Amplifier

LT2078A

Dual Micropower Single Supply Precision Operational
Amplifier

LT2079

Quad Micropower Single Supply Precision Operational
Amplifier

LT2079A

Quad Micropower Single Supply Precision Operational
Amplifier

LT2178

Quad 17mA Max, Single Supply Precision Operational
Amplifier

LT2178A

Quad 17mA Max, Single Supply Precision Operational
Amplifier

LT2179

Quad 17mA Max, Single Supply Precision Operational
Amplifier
LT2179A

Quad 17mA Max, Single Supply Precision Operational
Amplifier
LTC1043

Dual Instrumentation Switched Capacitor Building Block
LTC1047

Dual Micropower Chopper Stabilized Operational
Amplifier with Internal Capacitors
LTC1049

Precision Low Power Zero-Drift Operational Amplifier
with Internal Capacitors
LTC1050

Precision Zero-Drift Operational Amplifier with
Internal Capacitors
LTC1050A

Precision Zero-Drift Operational Amplifier with
Internal Capacitors
LTC1051

Dual Precision Zero-Drift Operational Amplifier with
Internal Capacitors
LTC1051A

Dual Precision Zero-Drift Operational Amplifier with
Internal Capacitors
LTC1052

Chopper-Stabilized Operational Amplifier
LTC1052CS

Chopper-Stabilized Operational Amplifier
LTC1053

Quad Precision Zero-Drift Operational Amplifier with
Internal Capacitors
LTC1100

Precision, Chopper-Stabilized Instrumentation
Amplifier
LTC1100A

Precision, Chopper-Stabilized Instrumentation
Amplifier
LTC1150

+/-15V Zero-Drift Operational Amplifier with Internal
Capacitors
LTC1151

Dual +/-15V Zero-Drift Operational Amplifier
LTC1152

Rail-to-Rail Input and Output Zero-Drift Operational
Amplifier
LTC1250

Very Low Noise Zero-Drift Bridge Amplifier
LTC1541

Micropower Operational Amplifier, Comparator and Reference
LTC1542

Micropower Operational Amplifier and Comparator
LTC2050

Low Noise, Zero-Drift Operational Amplifier in SOT-23
LTC7652

Chopper-Stabilized Operational Amplifier
OPAMP

Ideal single-pole operational amplifier. You must `.lib`
`opamp.sub`

Miscellaneous

Voltage

A `voltage` source.

OR

OR gate

The input logic threshold defaults to 0.5V and the output switches between 0V and 1V. Unused pins should not be connect to any wire. Unused pins are connected to the common node of the device and not used during the SPICE simulation. The common node will default to GROUND. Both output pins can be connected floating wires and probed after simulation. The logic threshold defaults to the average of V_{high} and V_{low} of the output levels.

Parameters:

`Trise`: Rise time. Defaults to 0.

`Tfall`: Fall Time, Defaults to `trise` if not specified.

Td: Gate delay time.

Vlow: Low output level. Defaults to 0V.

Vhigh: High output level. Defaults to 1V.

Vt: Logic threshold. Defaults to the average of Vhigh and Vlow.

hold-time is equal to the delay. If the delay time 10ns, the input has to hold the level for more than 10ns to validate the logic level.

SCHMITT

Schmitt Trigger

Uses vhigh and vlo

Parameters:

Trise: Rise time, defaults to 0.

Tfall: Fall Time, defaults to Trise.

Td: Gate delay time.

Vlow: Low output level, defaults to 0V.

Vhigh: High output level, defaults to 1V.

Vt: Logic threshold, defaults to the average of Vhigh and Vlow.

Vh: hysteresis voltage, the trip points are $Vt+Vh$ and $Vt-Vh$

SCHMTINV

Schmitt Trigger (Inverting output)

Same the SCHMITT with only one inverting output. SCHMITT has both inverting and non-inverting outputs.

XOR

5-input Exclusive OR gate

The output is true if one and only one input is true.

Parameters:

Trise: Rise time, Defaults to 0.

Tfall: Fall Time, Defaults to Trise.

Td: Gate delay time.

Vlow: Low output level, defaults to 0V.

Vhigh: High output level, defaults to 1V.

Ref: Logic threshold, defaults to the average of Vhigh and Vlow.

SCHMTBUF

Schmitt Trigger (non-inverting output)

Same the SCHMITT with only one non-inverting output.
SCHMITT has both inverting and non-inverting outputs.

AND

5-input AND gate

Parameters:

Trise: Rise time. Defaults to 0.

Tfall: Fall Time, Defaults to Trise if not specified.

Td: Gate delay time.

Vlow: Low output level. Defaults to 0V.

Vhigh: High output level. Defaults to 1V.

Vt: Logic threshold. Defaults to the average of Vhigh and Vlow.

BI

Arbitrary behavioral current sources

BI2

Arbitrary behavioral current sources (opposite polarity)

BV

Arbitrary behavioral voltage sources

BUF

A single input with complementary outputs. It can be used for level translation, impedance buffering and delay insertion.

Parameters:

Trise: Rise time. Defaults to 0.

Tfall: Fall Time, Defaults to Trise if not specified.

Td: Gate delay time.

Vlow: Low output level. Defaults to 0V.

Vhigh: High output level. Defaults to 1V.

Vt: Logic threshold. Defaults to the average of Vhigh and Vlow.

BUF1

same as BUF with only one non-inverting output.

INV

same as buf with inverting output.

CAP

Capacitor

POLCAP

Capacitor

CAPMETER

Capacitance meter that can measure the dynamic capacitance under different biases.

DUT+ : device under test terminal

DUT-: device under test terminal -

Bias: bias the device under test. The bias is applied across the DUT+ and DUT-.

Capacitance: measured capacitance.

Resistance: measured parallel resistance of the device.

SCHOTTKY

Schottky Diode

ZENER

Zener Diode

The main difference between a zener diode and other diodes is the BV (breakdown voltage) parameter in the model.

For example, 1N5234 has a zener voltage of 6.2V. The simplest model is as follows: `.model 1N5234 D(BV=6.2)`

Use the [File] [Open] command to open the diode database:

`.\lib\cmp\standard.dio` and insert the desired models, if necessary. The [Sync Release] will preserve the user's models as long as the model names are different from the default models provided by LTC.

DIODE

Diode

DFLOP

D Flip-Flop

Input: D, CLK, PRE, CLR, Output: Q, Q

Same parameters as OR gate. Data is edge-triggered. Hold time not required.

Unconnected pins are disabled during simulation. Pins can not be connected to dangling wires.

E2

Voltage Dependent Voltage Source (opposite polarity)

G2

Voltage Dependent Current Source (opposite polarity)

CURRENT

Current Source

LOAD

A current source

LOAD2

A current source

NJF

N JFET transistor

PJF

P JFET Transistor

IND

Inductor

IND2

Inductor(same as IND but drawn with phasing dots)

NMOS

MOS (substrate connected to drain)

NMOS4

MOS (independent substrate node available)

The power MOSFET(VDMOS) model file is
.\\lib\\cmp\\standard.mos. It can edited by a text editor.
The standard MOSFET(Level 1-8 and BSIM) models can be added
to the standard.mos file.

PMOS

PMOS

The power MOSFET(VDMOS) model file is
.\\lib\\cmp\\standard.mos. It can edited by a text editor.
The standard MOSFET(Level 1-8 and BSIM) models can be added
to the standard.mos file.

PMOS4

PMOS

A symbol that allows one to specify the substrate node for
the monolithic MOSFET devices in traditional SPICE's. You
have to supply the models for these

LTLINE

Lossy Transmission Line

NPN

Bipolar transistor

NPN2

Bipolar transistor

PNP

PNP

PNP2

RES

Resistor

RES2

Resistor

SW

Voltage Controlled switch.

TLINE

Lossless Transmission Line

SIGNAL

Voltage Source

CSW

Current controlled switch

OPAMP

Idealized single-pole operational amplifier. The SPICE directive `'.include standard.opamp'` must be entered on the schematic page to include the subcircuit of OpAmp.

Default value: `Aol=100K, GBW=10Meg`

*

```
.subckt opamp 1 2 3
G1 0 3 2 1 {Aol}
R3 3 0 1.
C3 3 0 {Aol/GBW/6.28318530717959}
.ends opamp
```

OPAMP2

opamp2 Linear Technology OpAmp.

The LTC OpAmp model name must be entered on the [Value] attribute of the symbol. The SPICE syntax '.lib standard.opamp' must be entered

on the schematic page to reference the OpAmp library.

MESFET

MESFET transistor

XTAL

Piezoelectric crystal. Set C, Lser and Cpar to set series and parallel resonances. This is actually the same circuit element as a capacitor and is just using LTspice's ability to model a capacitor's parasitic series inductance in the capacitor device. Note that there is a performance advantage to modeling a crystal in this manner over the usual macromodel of discrete lumped constants. There are no internal nodes in this device so the overall circuit matrix is smaller and the simulation runs faster.

CELL

Voltage Source, either DC, AC, PULSE, SINE, PWL, EXP, or SFFM

DIP10

Generic Symbol for use with subcircuits that you supply.

DIP14

Generic Symbol for use with subcircuits that you supply.

DIP16

Generic Symbol for use with subcircuits that you supply.

DIP20

Generic Symbol for use with subcircuits that you supply.

DIP8

Generic Symbol for use with subcircuits that you supply.

JUMPER

A wire jumper. This component lets you give the same net two different names

SIGNAL

Voltage Source, either DC, AC, PULSE, SINE, PWL, EXP, or SFFM

TOWTOM2

2nd Order Tow-Thomas Filter building block. Needs .lib TowTom2.sub & .params R=10K C=160p GBW1=10Meg GB2=15Meg Aol=100K

2nd order section of LTC1562 or LTC1562-2.

LTC1562: Very Low Noise, Low Distortion Active RC

Quad Universal Filter

* Copyright © Linear Technology Corp. 98,99,2000. All rights reserved.


*

```
.subckt TowTom2 1 2 3
C1 1 3 {C}
C3 N001 1 3p
C4 N002 N001 .3p
C7 2 N003 {C}
C6 2 3 1p
R2 N001 1 10K
R3 N002 N001 10K
R5 N003 N002 {R}
R1 1 0 1.
```

```

C2 1 0 {Aol/GBW1/6.28318530717959}
G1 0 1 0 3 {Aol}
R6 2 0 1.
C8 2 0 {Aol/GBW1/6.28318530717959}
G3 0 2 0 N003 {Aol}
R4 N002 0 1.
C5 N002 0 {Aol/GBW2/6.28318530717959}
G2 0 N002 0 N001 {Aol}
.params R=10K C=160p GBW1=10Meg GBW2=15Meg
.params Aol=100K
.ends TowTom2

```

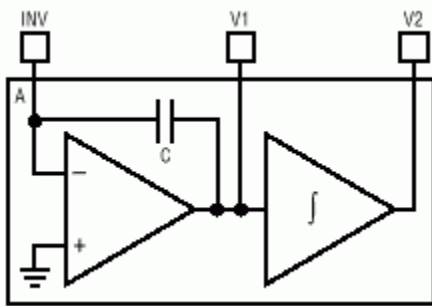

URC

Uniform RC-line. Intended for interconnection on IC's but rarely used.

URC2

Uniform RC-line. Intended for interconnection on IC's but rarely used.

BATTERY

Voltage Source, either DC, AC, PULSE, SINE, PWL, EXP, or SFFM

Opto Isolators

4N25

Optoisolator, Transistor Output

4N25A

Optoisolator, Transistor Output

4N26

Optoisolator, Transistor Output
4N27

Optoisolator, Transistor Output
4N28

Optoisolator, Transistor Output
CNY17-1

Optoisolator, Transistor Output
CNY17-2

Optoisolator, Transistor Output
CNY17-3

Optoisolator, Transistor Output
MOC205

Optoisolator, Transistor Output
MOC206

Optoisolator, Transistor Output
MOC207

Optoisolator, Transistor Output
PC817A

High Density Mounting Type Photocoupler
PC817B

High Density Mounting Type Photocoupler
PC817C

High Density Mounting Type Photocoupler
PC817D

High Density Mounting Type Photocoupler

Special Functions

MODULATE

Behavioral Modulator. Output is a sine wave modulated by AM and FM input voltages.

SINE wave generator with voltage-controlled amplitude and frequency. The amplitude is controlled by the input labeled AM. If left unconnected, the amplitude defaults to one Volt. The frequency is controlled by the FM pin. The conversion from voltage to frequency is defined by MARK(1V input) and SPACE(0V input) frequencies.

CAPMETER

A vector impedance meter. You must place the SPICE directive, ".lib capometer.sub", on the schematic to use this symbol.

VARISTOR

Voltage controlled varistor. The breakdown voltage is programmed with the control inputs. There is an example file, examples\Educational\varistor.asc, that shows using this device.

Filter Products

LTC1562-2

Very Low Noise, Low Distortion Active RC Quad Universal Filter NOTE: GBW, slew rate and noise are modeled in this otherwise highly idealized macromodel.

LTC1562

Very Low Noise, Low Distortion Active RC Quad Universal Filter NOTE: GBW, slew rate and noise are modeled in this otherwise highly idealized macromodel.

LTC1562A

Very Low Noise, Low Distortion Active RC Quad Universal Filter NOTE: GBW, slew rate and noise are modeled in this otherwise highly idealized macromodel.

Digital AND

Behavioral AND gate

Parameters:

Trise: Rise time, Defaults to 0.

Tfall: Fall Time, Defaults to Trise.

Td: Gate delay time.

Vlow: Low output level, defaults to 0V.

Vhigh: High output level, defaults to 1V.

Ref: Logic threshold, defaults to the average of Vhigh and Vlow.

BUF

Behavioral buffer with complementary outputs

Parameters:

Trise: Rise time, Defaults to 0.

Tfall: Fall Time, Defaults to Trise.

Td: Gate delay time.

Vlow: Low output level, defaults to 0V.

Vhigh: High output level, defaults to 1V.

Ref: Logic threshold, defaults to the average of Vhigh and Vlow.

BUF1

Behavioral buffer

Parameters:

Trise: Rise time, Defaults to 0.

Tfall: Fall Time, Defaults to Trise.

Td: Gate delay time.

Vlow: Low output level, defaults to 0V.

Vhigh: High output level, defaults to 1V.

Ref: Logic threshold, defaults to the average of Vhigh and Vlow.

DFLOP

Behavioral D-flipflop

Parameters:

Trise: Rise time, Defaults to 0.

Tfall: Fall Time, Defaults to Trise.

Td: Gate delay time.

Vlow: Low output level, defaults to 0V.

Vhigh: High output level, defaults to 1V.

Ref: Logic threshold, defaults to the average of Vhigh and Vlow.

INV

Behavioral Inverter

Parameters:

Trise: Rise time, Defaults to 0.

Tfall: Fall Time, Defaults to Trise.

Td: Gate delay time.

Vlow: Low output level, defaults to 0V.

Vhigh: High output level, defaults to 1V.

Ref: Logic threshold, defaults to the average of Vhigh and Vlow.

OR

Behavioral OR gate with complementary outputs

Parameters:

Trise: Rise time, Defaults to 0.

Tfall: Fall Time, Defaults to Trise.

Td: Gate delay time.

Vlow: Low output level, defaults to 0V.

Vhigh: High output level, defaults to 1V.

Ref: Logic threshold, defaults to the average of Vhigh and Vlow.

SCHMITT

Behavioral Schmitt-Triggered buffer with complementary outs

Parameters:

Trise: Rise time, defaults to 0.

Tfall: Fall Time, defaults to Trise.

Td: Gate delay time.

Vlow: Low output level, defaults to 0V.

Vhigh: High output level, defaults to 1V.

Vt: Logic threshold, defaults to the average of Vhigh and Vlow.

Vh: hysteresis voltage, the trip points are $Vt+Vh$ and $Vt-Vh$

SCHMTBUF

Behavioral Schmitt-Triggered buffer

Parameters:

Trise: Rise time, defaults to 0.

Tfall: Fall Time, defaults to Trise.

Td: Gate delay time.

Vlow: Low output level, defaults to 0V.

Vhigh: High output level, defaults to 1V.

Vt: Logic threshold, defaults to the average of Vhigh and Vlow.

Vh: hysteresis voltage, the trip points are $Vt+Vh$ and $Vt-Vh$

SCHMTINV

Behavioral Schmitt-Triggered inverter

Parameters:

Trise: Rise time, defaults to 0.

Tfall: Fall Time, defaults to Trise.

Td: Gate delay time.

Vlow: Low output level, defaults to 0V.

Vhigh: High output level, defaults to 1V.

Vt: Logic threshold, defaults to the average of Vhigh and Vlow.

Vh: hysteresis voltage, the trip points are $Vt+Vh$ and $Vt-Vh$

SRFLOP

Behavioral Set-Reset Flipflop

XOR

Behavioral XOR gate

DiffSchmtinv

Behavioral Schmitt-Triggered Inverter with Differential Input

Parameters:

Trise: Rise time, defaults to 0.

Tfall: Fall Time, defaults to Trise.

Td: Gate delay time.

Vlow: Low output level, defaults to 0V.

Vhigh: High output level, defaults to 1V.

Vt: Logic threshold, defaults to the average of Vhigh and Vlow.

Vh: hysteresis voltage, the trip points are $Vt+Vh$ and $Vt-Vh$

DiffSchmtbuf

Behavioral Schmitt-Triggered Buffer with Differential Input

Parameters:

Trise: Rise time, defaults to 0.

Tfall: Fall Time, defaults to Trise.

Td: Gate delay time.

Vlow: Low output level, defaults to 0V.

Vhigh: High output level, defaults to 1V.

Vt: Logic threshold, defaults to the average of Vhigh and Vlow.

Vh: hysteresis voltage, the trip points are $Vt+Vh$ and $Vt-Vh$

Diffschmitt

Behavioral Schmitt-Triggered Buffer with
Complementary Outs and Differential Input

Parameters:

Trise: Rise time, defaults to 0.

Tfall: Fall Time, defaults to Trise.

Td: Gate delay time.

Vlow: Low output level, defaults to 0V.

Vhigh: High output level, defaults to 1V.

Vt: Logic threshold, defaults to the average of Vhigh and Vlow.

Vh: hysteresis voltage, the trip points are $Vt+Vh$ and $Vt-Vh$

PHIDET

Behavioral type II phase detector. NOTE: It is best to
limit input rise times

Comparators

LT1016

Ultra Fast Precision Comparator

LT1116

12ns, Single Supply Ground-Sensing Comparator

LT1394

7ns, Low Power Single Supply, Ground-Sensing
Comparator

LT1671

60ns, Low Power, Single Supply, Ground-Sensing
Comparator

LT1720

Dual 4.5ns, Single Supply 3V/5V Comparator with Rail-to-
Rail Outputs

LT1721

Quad 4.5ns, Single Supply 3V/5V Comparator with Rail-
to-Rail Outputs

LTC1041

BANG-BANG Controller

LTC1042

Window Comparator

LTC1440

Ultralow Power Comparator with Reference

LTC1441

Dual Ultralow Power Comparator with Reference

LTC1442

Dual Ultralow Power Comparator with Reference

LTC1443

Quad Ultralow Power Comparator with Reference

LTC1444

Quad Ultralow Power Comparator with Reference

LTC1445

Quad Ultralow Power Comparator with Reference

LTC1540

Nanopower Comparator with Reference

SPICE Error Log Command

Use this command to display the simulation log file. A typical log file is shown as follows:

```
Circuit: * D:\XP\lib\app\LT1300-DC035A.app
```

```
Date: Tue Oct 05 16:57:31 1999
```

```
Total elapsed time: 6.64 seconds.
```

```
tnom = 27  
temp = 27  
method = modified trap  
totiter = 14872  
traniter = 14862  
tranpoints = 3865
```

```
accept = 2986
rejected = 879
trancuriters = 0
matrix size = 12
fillins = 2

solver = Normal
```

Web Update

All windows must be closed first before the Sync_Release command can be activated. The user needs to establish the internet connection first. The SwCAD III program will then download the master index file(release.log) from the LTC web server. The master index file contains the checksums for every file in the sub-directories. The local file's checksum is then calculated and checked against the one in the master index file. The file on the web server will then be downloaded automatically if there is a difference in checksum. SwCAD program files that were saved under the same name will be overwritten! Most of the macromodels are less than 3KB and can be transferred in a few seconds. During the update of the SCAD3.EXE, the new file is first copied to the Windows temp directory and the old SCAD3.EXE is overwritten after the download is complete. The old program is still preserved if the user cancels the file transfer. The changelog.txt file lists the changes of program revisions.

1107

Micropower DC/DC Converter, Adjustable, Fixed 5V, and 12V

1173

Micropower DC/DC Converter, Adjustable, Fixed 5V, and 12V outputs

E

Voltage Dependent Voltage Source

F

Current Dependent Current Source

G

Voltage Dependent Current Source

H

Current Dependent Voltage Source

LT1071

2.5A High Efficiency Switching Regulator

LT1072

1.25A High Efficiency Switching Regulator

LT1074

5A Step-Down Switching Regulator

LT1083

7.5A Low Dropout Positive Adjustable Regulator

LT1109

Micropower Low Cost DC/DC Converter, Adjustable Output Voltage

LT1109-12

Micropower Low Cost DC/DC Converter, Fixed 12V

LT1109-5

Micropower Low Cost DC/DC Converter, Fixed 5V

LT1109A

Micropower DC/DC Converter Flash Memory VPP Generator, Adjustable Output Voltage

LT1109A-12

Micropower DC/DC Converter Flash Memory VPP Generator,
Fixed 12V

LT1109A-5

Micropower DC/DC Converter Flash Memory VPP Generator,
Fixed 5V

LT1170

100kHz, 5A High Efficiency Switching Regulator

LT1170HV

100kHz, 5A High Efficiency Switching Regulator (High
Voltage version)

LT1171

100kHz, 2.5A High Efficiency Switching Regulator

LT1171HV

100kHz, 2.5A High Efficiency Switching Regulator (High
Voltage version)

LT1172

100kHz, 1.25A High Efficiency Switching Regulator

LT1172HV

100kHz, 1.25A High Efficiency Switching Regulator

LT1241

High Speed Current Mode Pulse Width Modulator

LT1300

Micropower High Efficiency 3.3/5V Step-Up DC/DC
Converter

LT1301

Micropower High Efficiency 5V/12V DC/DC Step-Up
Converter for Flash Memory

LT1302

Micropower High Output Current Step-up Adjustable
DC/DC Converter

LT1303

Micropower High Efficiency DC/DC Converter with Low-
Battery Detector, adjustable output voltage

LT1303-5

Micropower High Efficiency DC/DC Converter with Low-
Battery Detector, Fixed 5V

LT1304

Micropower DC/DC Converter with Low-Battery Detector
Active in Shutdown, Adjustable output voltage

LT1304-3.3

Micropower DC/DC Converter with Low-Battery Detector
Active in Shutdown, Fixed 3.3V

LT1304-5

Micropower DC/DC Converter with Low-Battery Detector
Active in Shutdown, Fixed 5V

LT1305

Micropower High Power DC/DC Converter with Low-Battery
Detector

LT1307

Single Cell Micropower 600kHz PWM DC/DC Converter

LT1307B

Single Cell Micropower 600kHz PWM DC/DC Converter

LT1308A

High Current, Single Cell Micropower 600kHz DC/DC
Converter

LT1308B

High Current, Single Cell Micropower 600kHz DC/DC
Converter

LT1309

500kHz Micropower DC/DC Converter for Flash Memory

LT1316

Micropower DC/DC Converter with Programmable Peak Current Limit

LT1375

1.5A, 500kHz Step-Down Switching Regulator, Adjustable Output Voltage

LT1375-5

1.5A, 500kHz Step-Down Switching Regulator, Fixed 5V Output

LT1108

5Volt Micropower DC/DC Converter

LT1111-12

12 Volt Micropower DC/DC Converter

LT1110

Adjustable Micropower DC/DC Converter

LTC1261CS8-4

Switched Capacitor Regulated Voltage Inverter, Fixed 4V Output

LTC1551CS8-4.1

Low Noise, Switched Capacitor Regulated Voltage Inverter, Fixed -4.1V Output

LTC1551LCS8

Low Noise, Switched Capacitor Regulated Voltage Inverter, Adjustable Output Voltage

LTC1551LCS8-4.1

Low Noise, Switched Capacitor Regulated Voltage Inverter, Fixed -4.1V Output

LT1962-3.3

300mA Low Noise Low Dropout Micropower Regulator with Shutdown, 3.3V

LT1761-2

100mA Low Noise Low Dropout Micropower Regulator with Shutdown in SOT-23, 2V Output

LTC1475-3.3

Low Quiescent Current, High Efficiency Step-Down Converter, 3.3V Output

LT1615

Micropower Step-Up DC/DC Converter in SOT-23

LTC1147-5

High Efficiency Step-Down Switching Regulator Controller, Fixed 5V Output

LTC1147L

High Efficiency Step-Down Switching Regulator Controller, Adjustable Output Voltage

LTC1147L-3.3

High Efficiency Step-Down Switching Regulator Controller, Fixed 3.3V Output

LTC1148

High Efficiency Synchronous Step-Down Switching Regulator Controller, Adjustable Output Voltage

LTC1148-3.3

High Efficiency Synchronous Step-Down Switching Regulator Controller, Fixed 3.3V Output

LTC1148-5

High Efficiency Synchronous Step-Down Switching Regulator Controller, Fixed 5V Output

LTC1148HV

High Efficiency Synchronous Step-Down Switching
Regulator Controller, Adjustable Output Voltage
LTC1148HV-3.3

High Efficiency Synchronous Step-Down Switching
Regulator Controller, Fixed 3.3V Output
LTC1148HV-5

High Efficiency Synchronous Step-Down Switching
Regulator Controller, Fixed 5V Output
LT1244

High Speed Current Mode Pulse Width Modulator
LT1813

Dual 3mA, 100Mhz, 750V/ μ s Operational Amplifier
opto isolator section
special function blocks

Filter Products
misc symbols

Index

.	
.AC -- Perform an AC analysis	77
.BACKANNO -- Annotate the subcircuit pin names on to the port currents	78
.DC -- Perform a DC source sweep analysis	78
.END	79
.ENDS	79
.GLOBAL -- Declare global nodes	81
.IC -- set initial conditions	81
.INCLUDE -- include another file.....	82
.LIB -- Include a library	83
.LOADBIAS -- Load a previously solved DC solution.....	87
.MEASURE -- Evaluate User-Defined Electrical Quantities	87
.MODEL	92
.NET -- Compute Network Parameters in a .AC Analysis	92
.NODESET -- supply hints for initial DC solution	93
.NOISE -- Perform a noise analysis	94
.OP -- Find the DC operating point	95
.OPTIONS -- Set simulator options	95
.PARAM -- User-defined parameters.....	99
.SAVE -- Limit the amount of saved data	100
.SAVEBIAS -- Save operating point to disk	101
.STEP -- Parameter sweeps	102
.SUBCKT -- define a subcircuit.....	103
.TEMP -- Temperature sweeps.....	104
.TF -- Find the DC small signal transfer function	105
.TRAN -- Do a non-linear transient analysis.....	105
.TRAN Modifiers	107
.WAVE -- Write selected nodes to a .wav file	106

A

A. General Structure and Conventions.....	73
A. Special functions	110
Adding Attributes.....	45
Adding the Pins	44
Application Note Circuits.....	24
Attached Cursors.....	65, 66, 69
Attribute Visibility	46
Axis Control.....	63

B

B. Arbitrary behavioral voltage or current sources	112
B. Circuit description	72

C

C. Simulator directives -- dot commands.....	77
C. Capacitor	116
Color Control	64

Compression.....	170, 171
Creating Symbol Overview	42
D	
D. Diode	118
Drawing the body	43
E	
E. Voltage Dependent Voltage Source.....	121
Edit a visible attribute	38
Efficiency Report	27
Example Circuits	25
Exporting Waveform Data	196
Externally Generated Netlists.....	26
F	
F. Current Dependent Current Source	123
Fast Access File Format	70
G	
G. Voltage Dependent Current Source.....	123
General Attribute Editor.....	40
General Purpose Schematic Driven SPICE.....	25
H	
H. Current Dependent Voltage Source.....	125
Hardware Requirements	18
I	
I. Current Source	126
III. Circuit Element Quick Reference.....	76
Is there a paper manual?	198
J	
J. JFET transistor.....	130
K	
K. Mutual Inductance.....	132
L	
L. Inductor.....	133
Label a node name	33
License Agreement/Disclaimer	19
LT Spice Overview	71
M	
M. MOSFET	138
Modes of Operation.....	21
N	
Navigating the Hierarchy	49
Netlist Options	177

O

O. Lossy Transmission Line.....	147
Operation.....	172
Overview.....	48

P

PCB Netlist Extraction.....	37
Placing Components.....	35
Plot Panes.....	64
Preface.....	15
Programming Keyboard Shortcuts.....	36

Q

Q. Bipolar transistor.....	149
----------------------------	-----

R

R. Resistor.....	158
Rules of Hierarchy.....	48
Running Under Linux.....	197

S

S. Voltage Controlled Switch.....	159
Save Plot Configurations.....	69
Schematic Colors.....	34
Schematic Editing.....	29
Software Installation.....	19
Specialized Component Editors.....	39
SPICE Error Log Command.....	281
Starting the Control Panel.....	170
steady.....	108, 109
SwitcherCAD III Overview.....	17
Symbol Editing.....	37
Symbol Overview.....	199
Synthesized Circuits.....	22

T

T. Lossless Transmission Line.....	161
Trace Selection.....	51
tran.....	108, 109
nodiscard.....	109
startup.....	108
step.....	109

U

U. Uniform RC-line.....	161
User-Defined Functions.....	62

V

V. Voltage Source.....	162
Viewer Overview.....	51

W

W. Current Controlled Switch.....	166
-----------------------------------	-----

Waveform Arithmetic	56
What about a Users s Group?	198
X	
X. Subcircuit	167
Z	
Z. MESFET transistor	169
Zooming	56