

PICAXE-40X2

Reset	☐ 1	☐ 40	☐ B.7 (In / Out)
{touch} (Comp1- / ADC0 / Out / In) A.0	☐ 2	☐ 39	☐ B.6 (In / Out)
{touch} (Comp2- / ADC1 / Out / In) A.1	☐ 3	☐ 38	☐ B.5 (In / Out) {ADC13 / touch}
{touch} (Comp2+ / ADC2 / Out / In) A.2	☐ 4	☐ 37	☐ B.4 (In / Out / ADC11) {touch}
{touch} (Comp1+ / ADC3 / Out / In) A.3	☐ 5	☐ 36	☐ B.3 (In / Out / ADC9) {touch}
Serial In	☐ 6	☐ 35	☐ B.2 (In / Out / ADC8 / hint2) {touch}
{SRNQ} (Out) Serial Out / A.4	☐ 7	☐ 34	☐ B.1 (In / Out / ADC10 / hint1) {touch}
{touch} (ADC5 / Out / In) A.5	☐ 8	☐ 33	☐ B.0 (In / Out / ADC12 / hint0) {touch / SRI}
{touch} (ADC6 / Out / In) A.6	☐ 9	☐ 32	☐ +V
{touch} (ADC7 / Out / In) A.7	☐ 10	☐ 31	☐ 0V
+V	☐ 11	☐ 30	☐ D.7 (In / Out / hpwm D / kb data) {ADC27 / touch}
0V	☐ 12	☐ 29	☐ D.6 (In / Out / hpwm C / kb clk) {ADC26 / touch}
Resonator	☐ 13	☐ 28	☐ D.5 (In / Out / hpwm B) {ADC25 / touch}
Resonator	☐ 14	☐ 27	☐ D.4 (In / Out) {ADC24 / touch}
(timer clk / Out / In) C.0	☐ 15	☐ 26	☐ C.7 (In / Out / hserin) {ADC19 / touch}
(pwm / Out / In) C.1	☐ 16	☐ 25	☐ C.6 (In / Out / hserout) {ADC18 / touch}
{touch / ADC14} (hpwm A / pwm / Out / In) C.2	☐ 17	☐ 24	☐ C.5 (In / Out / hspi sdo) {ADC17 / touch}
{touch / ADC4} (hi2c scl / hspi sck / Out / In) C.3	☐ 18	☐ 23	☐ C.4 (In / Out / hi2c sda / hspi sdi) {ADC16 / touch}
{touch / ADC20} (Out / In) D.0	☐ 19	☐ 22	☐ D.3 (In / Out) {ADC23 / touch}
{touch / ADC21} (Out / In) D.1	☐ 20	☐ 21	☐ D.2 (In / Out) {ADC22 / touch}