

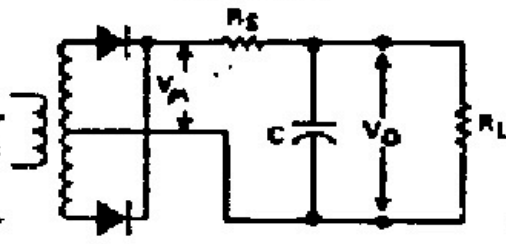


FULL-WAVE

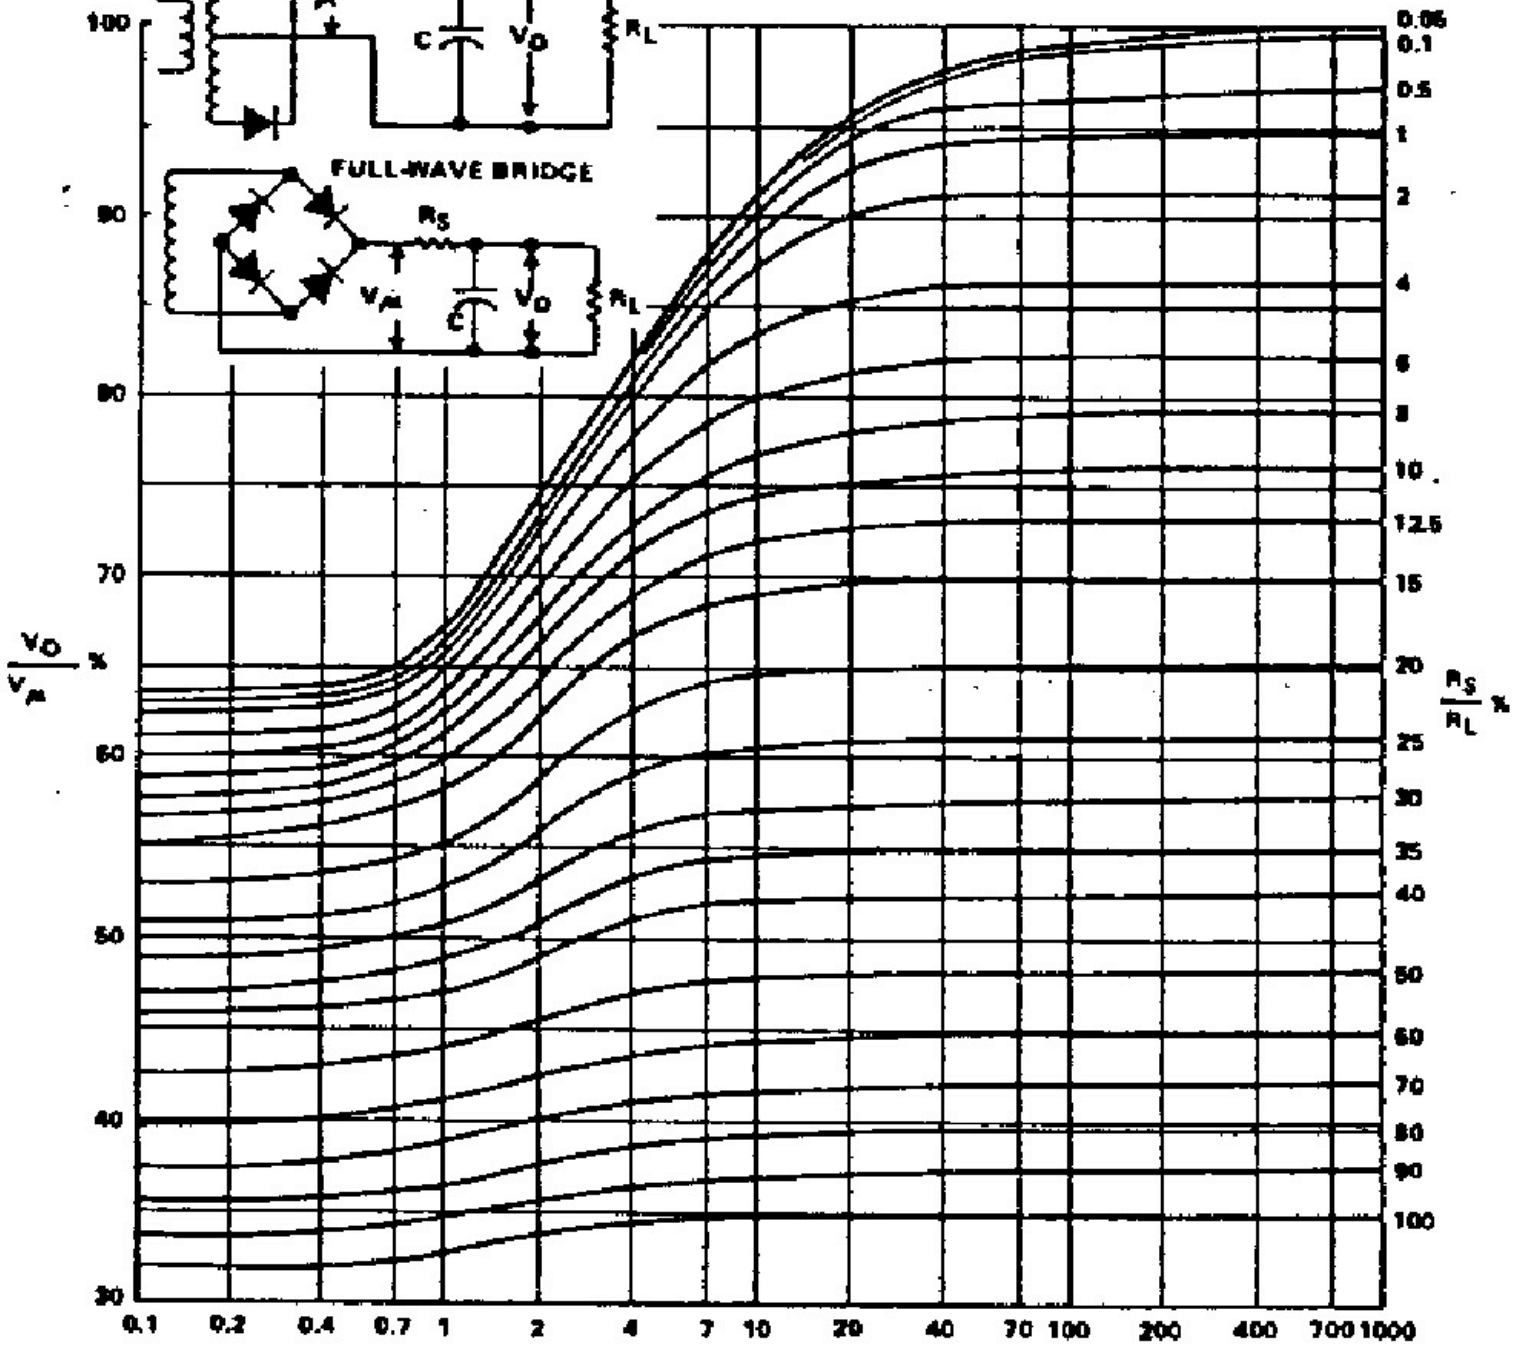

FULL-WAVE BRIDGE

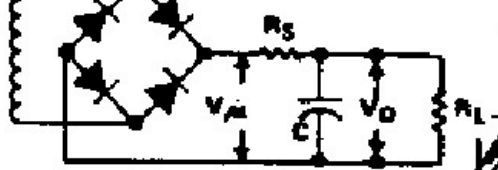

ωCR_L - C in Farads, R_L in Ohms, $\omega = 2\pi f$, f = Line Frequency