



1 2 3 4 5 6 7 8 9 10 11

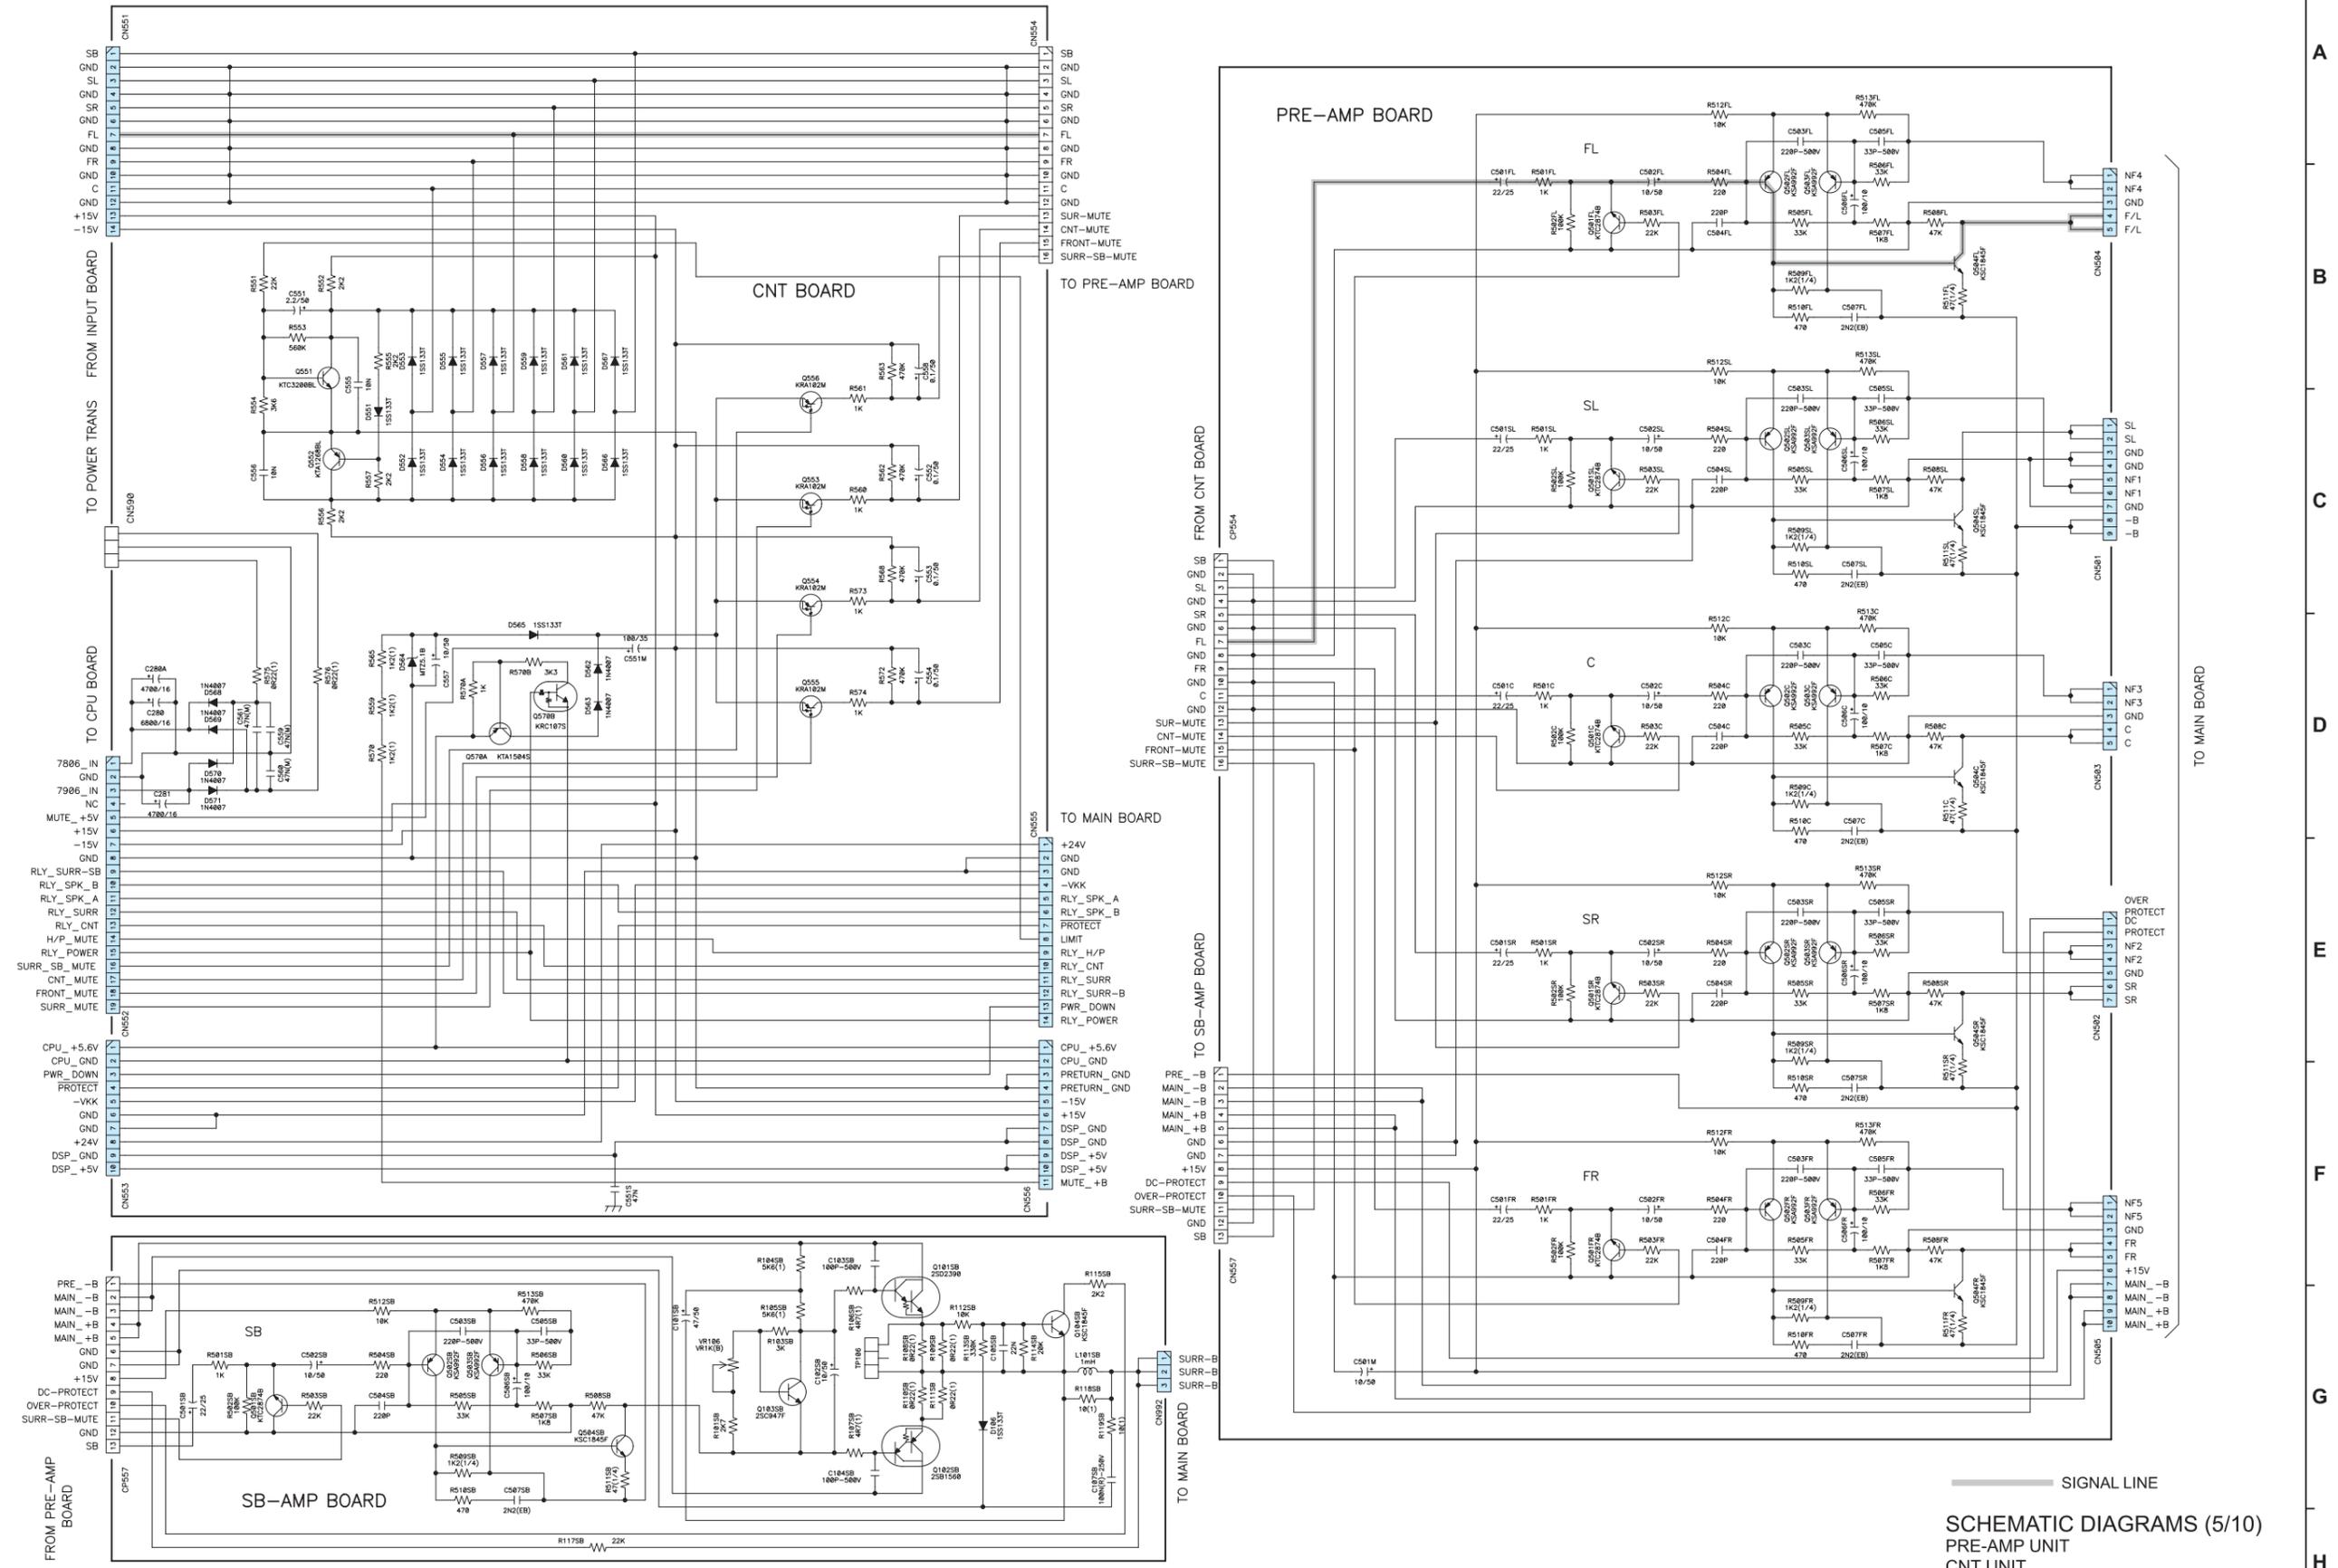

SIGNAL LINE

SCHEMATIC DIAGRAMS (5/10)
PRE-AMP UNIT
CNT UNIT
1-CH AMP UNIT

1 2 3 4 5 6 7 8 9 10 11

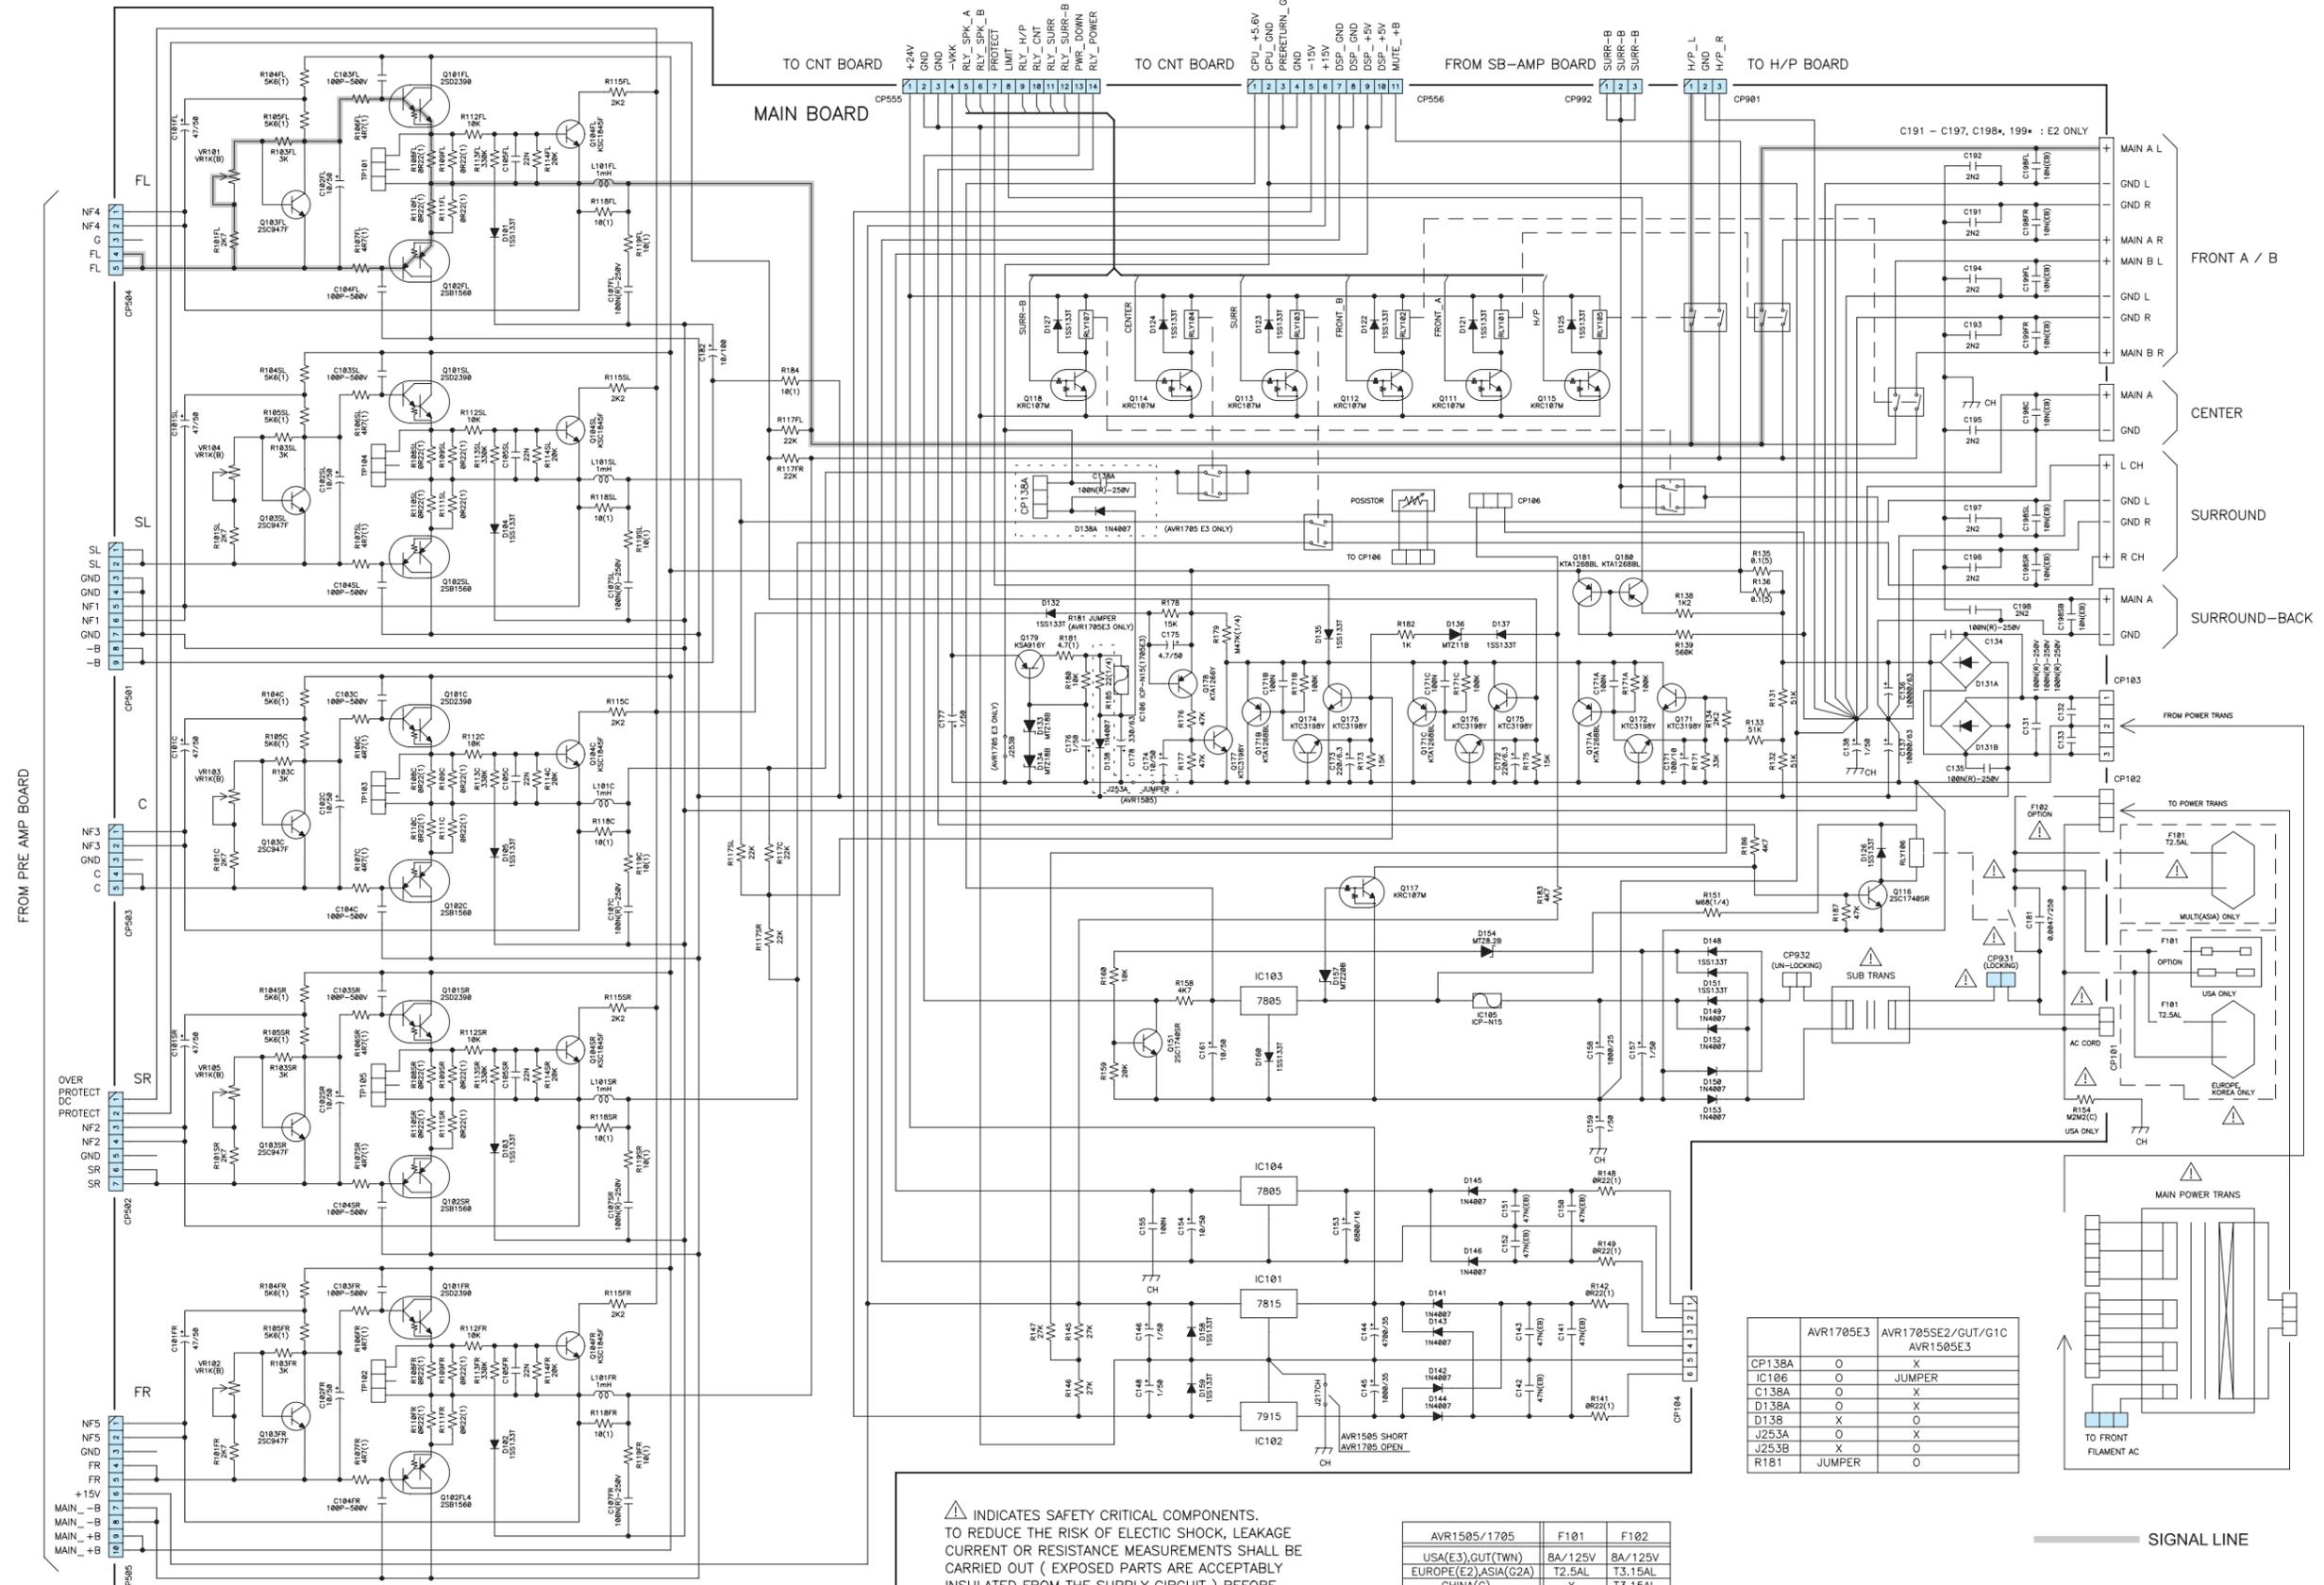

INDICATES SAFETY CRITICAL COMPONENTS. TO REDUCE THE RISK OF ELECTRIC SHOCK, LEAKAGE CURRENT OR RESISTANCE MEASUREMENTS SHALL BE CARRIED OUT (EXPOSED PARTS ARE ACCEPTABLY INSULATED FROM THE SUPPLY CIRCUIT) BEFORE THE APPLIANCE RETURNED TO THE CUSTOMER.

AVR1505/1705	F101	F102
USA(E3),GUT(TWN)	8A/125V	8A/125V
EUROPE(E2),ASIA(G2A)	T2.5AL	T3.15AL
CHINA(C)	X	T3.15AL
KOREA(K)	T2.5AL	T3.15AL

	AVR1705E3	AVR1705SE2/GUT/G1C AVR1505E3
CP138A	O	X
IC106	O	X
C138A	O	X
D138A	O	X
D138	X	O
J253A	O	X
J253B	X	O
R181	JUMPER	O

SIGNAL LINE

SCHEMATIC DIAGRAMS (6/10)
MAIN UNIT