

SAMSUNG

ROOM AIR CONDITIONER

INDOOR UNIT




AQ12WHWE
AQ12WHWED
AQ09W8WE
SH12ZWH
SH09ZW8

OUTDOOR UNIT

UQ12WHWE
UQ12WHWED
UQ09W8WE
SH12ZWHDX
SH09ZW8X

SERVICE *Manual*

AIR CONDITIONER

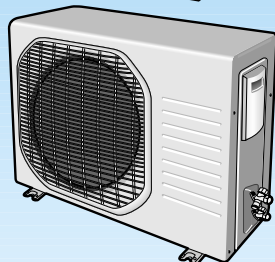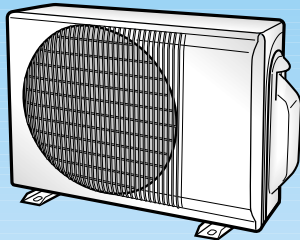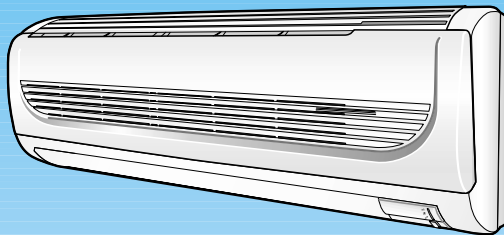

CONTENTS

- 1. Product Specifications**
- 2. Disassembly and Reassembly**
- 3. Refrigerating Cycle Diagram**
- 4. Set Up the Model Option**
- 5. Troubleshooting**
- 6. Exploded Views and Parts List**
- 7. Block Diagram**
- 8. Wiring Diagram**
- 9. Schematic Diagram**

1. Product Specifications





1-1 Table




Item		Model		AQ12WHWE[D]/SH12ZWHD(X)		AQ09W8WE/SH09ZW8(X)			
				Indoor unit	Outdoor unit	Indoor unit	Outdoor unit		
Type				Wall-mounted		Wall-mounted			
Performance	Cooling	-		12000 BTU/h		2600 W			
	Heating	-		13000 BTU/h		2900 W			
	Dehumidifying	l/h		1.2		0.9			
	Air Volume	Cooling	m ³ /min	8.3	-	7.5	-		
		Heating		8.3	-	8.0	-		
	Noise	Cooling	dB	41 / 39 / 37	53 / 53	38 / 36 / 34	51 / 51		
		Heating		41 / 39 / 37	53 / 53	38 / 36 / 34	51 / 51		
	Energy Efficiency Ratio	Cooling	-	10 BTU/h		2.68 WW			
Heating		11.02 BTU/h		3.22 WW					
Power	V-Hz		1-220 / 240-50		1-220 / 240-50				
Power	Power Consumption	Cooling	W	1200	970				
		Heating		1180	900				
	Operating Current	Cooling	A	5.3	4.3				
		Heating		5.2	4.0				
	Power Factor	Cooling	%	94.34	98				
		Heating		94.55	97.8				
	Starting Current	A		-	-				
Power Cord	Length	m	2	2					
	Number of Core Wire		3	3					
	Capacity	A	250V-10A	250V-10A					
Size	Outer Dimension	Width x Height x Depth	mm	825 x 285 x 189	720 x 548 x 265	825 x 285 x 189	660 x 475 x 242		
			inch	32.5 x 11.2 x 7.44	28.4 x 21.6 x 10.4	32.5 x 11.2 x 7.44	26.0 x 18.7 x 9.53		
	Weight(Net)	kg		8.1	33.2	7.8	26.0		
	Refrigerant Pipe	Liquid	mm x L(m)	ø12.7 x 5.0		ø 9.52 x 5.0			
		GAS	mm x L(m)	ø6.35x 5.0		ø 6.35 x 5.0			
	Drain Hose	D x L(mm)		ø18 x 550		ø 18 x 550			
	Compressor	Type			48D129JUAEL		44B102JXAEL		
		Motor	Type			-		-	
			Rated Output			1206		1005	
	Oil Type			SUNISO-467SD/NOC		SUNISO-467SD/NOC			
Blower	Type			Cross-flow	Propeller	Cross-flow	Propeller		
		Motor	Type	steel	steel	steel	steel		
	Rated Output	W	15	50	15	50			
Heat Exchanger			2ROW 14STEP	1ROW 20STEP	2ROW 10STEP	1ROW 18STEP			
Refrigerant Control Unit			CAPILLARY TUBE		CAPILLARY TUBE				
Freezer Oil Capacity	cc		600		360				
Refrigerant to Change(R410A)	g		870		650				
Protection Device(OLP)			RBC12074-12500		RBC12188-12500				
Cooling Test Condition			INDOOR UNIT : DB27°C WB19°C		OUTDOOR UNIT : DB35°C WB24°C				
Maximum Operation Condition			INDOOR UNIT : DB32°C WB23°C		OUTDOOR UNIT : DB43°C WB26°C				



2. Disassembly and Reassembly

Stop operation of the air conditioner and remove the power cord before repairing the unit.



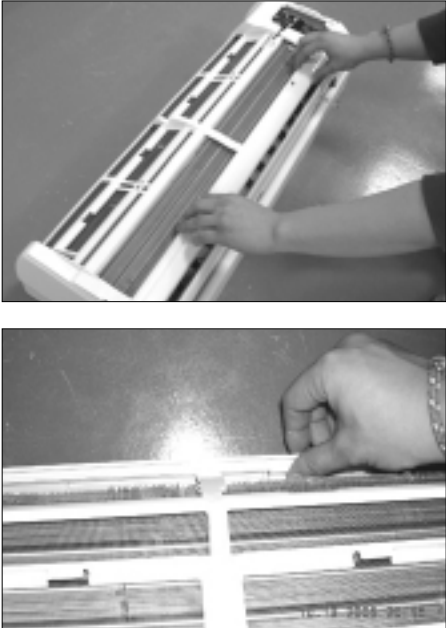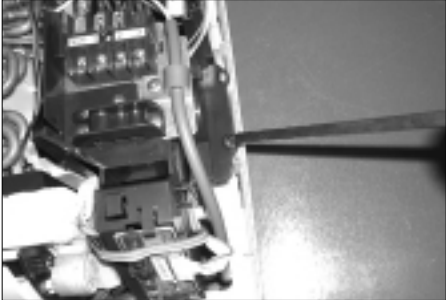


2-1 Indoor Unit

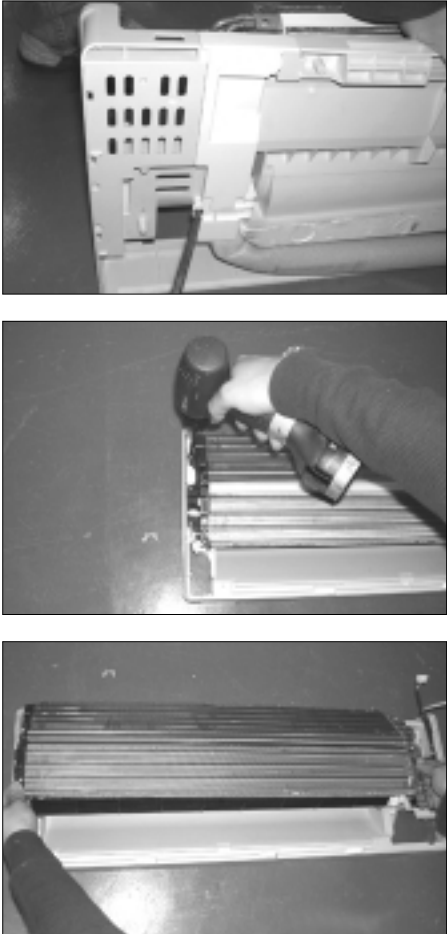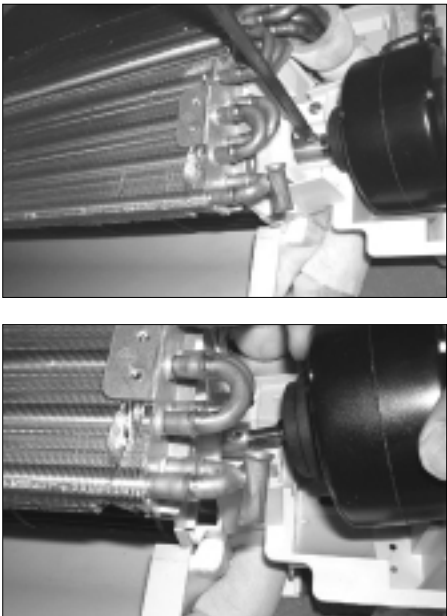




No	Parts	Procedure	Remark
1	Front Grille	<ol style="list-style-type: none">1) Stop the air conditioner operation and block the main power.2) Open the Front Grille by pulling right and left sides of the hook.3) Loosen 1 of the right screw and detach the Terminal Cover.4) Detach the thermistor from the Front Grille.5) Loosen 2 fixing screws of Front Grille.	   

No	Parts	Procedure	Remark
		<p>6) Unlock 2 hooks to fix Panel Front and Tray Drain.</p> <p>7) Unlock 3 hooks to fix Panel Front and Back-Body.</p>	
2	Control-In (Main PCB)	<ol style="list-style-type: none"> 1) Take all the connector of PCB upper side out. (Inclusion Power Cord) 2) Detach the outdoor unit connection wire from the Terminal Block. 3) Loosen 4 fixing screws of Ass'y Control-In. 	
3	Tray Drain	<ol style="list-style-type: none"> 1) Pull Tray Drain out from the Back Body. 	


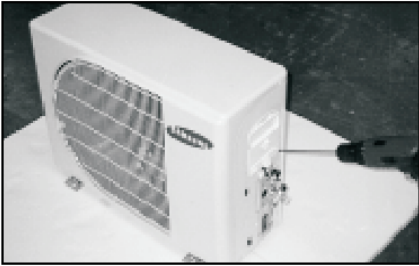

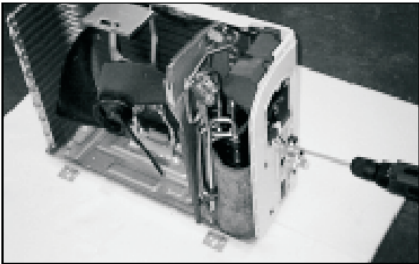
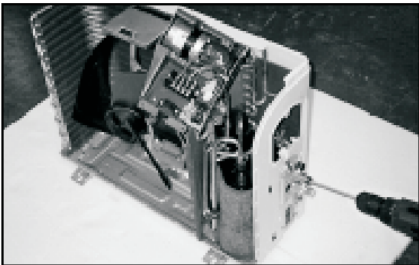
No	Parts	Procedure	Remark
4	Heat Exchanger	<ol style="list-style-type: none"> 1) Loosen 2 fixing earth screws of right side. 2) Detach the Connection Pipe. 3) Detach the Holder Pipe at the rear side. 4) Loosen the 3 fixing screws of right and left side. 5) Lifting the Heat Exchanger up a little to push the up side for separation from the indoor unit. 	
5	Fan Motor & Cross Fan	<ol style="list-style-type: none"> 1) Loosen the fixing screw and detach the Motor Holder. 2) Detach the Fan Motor from the Fan. 3) Detach the Fan From the left Holder Bearing. 	



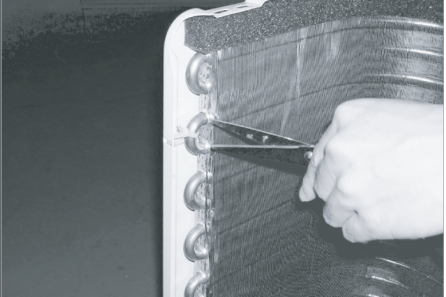


2-2 Outdoor Unit

No	Parts	Procedure	Remark
1	Common Work	<p>1) Loosen each 3 fixing screws on both right and left Cabinet-Side edge and a fixing screw on the Cabinet-Front lower to detach the Cabinet-Front.</p> <p>2) Loosen 2 fixing screws of the Assy-Control.</p> <p>3) Loosen 6 fixing screws of the Cabinet-Side RH.</p> <p>4) Loosen 2 fixing screws of the Cabinet-Side LF.</p>	    

No	Parts	Procedure	Remark
		5) Loosen 1 fixing Cable-Tie of the Cabinet-Side LF.	
2	Fan & Motor	<ol style="list-style-type: none"> 1) Detach the Nut Flange.(Turn counterclockwise because the screw is right-handed) 2) Detach the Fan. 3) Loosen 4 fixing screws to detach the Motor. 	
3	Heat Exchanger	<ol style="list-style-type: none"> 1) Loosen 2 fixing screws on both sides. 2) Disassemble the pipe in both inlet and outlet with welding torch. 3) Detach the Heat Exchanger. 	 
4	Compressor	<ol style="list-style-type: none"> 1) Loosen the Terminal Cover nut to open the Terminal Cover. 2) Disassemble the cloth sound felt. 3) Disassemble the pipe in both inlet and outlet of the Compressor with welding torch. 4) Disassemble the pipe in both inlet and outlet of the Condenser with welding torch. 5) Loosen the 3 bolts at the bottom. 6) Detach the Compressor. 	


2-3 Outdoor Unit

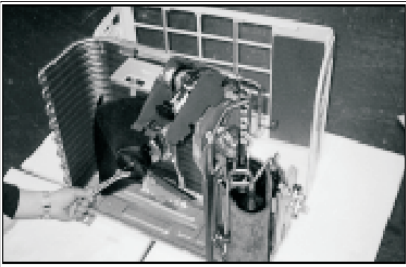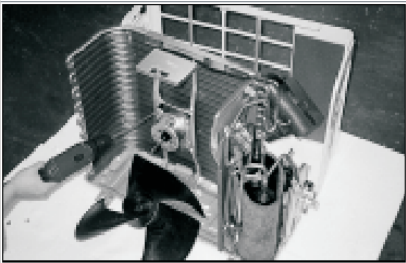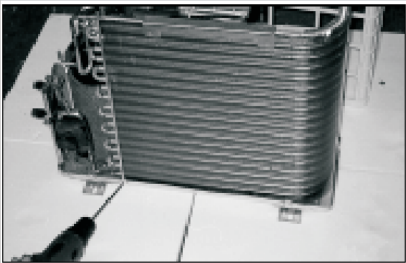No	Parts	Procedure	Remark
1	Common Work	<ol style="list-style-type: none"> <li data-bbox="505 342 945 401">1) Loosen 2 fixing screws on the Cover Valve and take off the Cover Valve. <li data-bbox="505 646 932 705">2) Loosen 1 fixing screws of the Cover Control and take off the Cover Control. <li data-bbox="505 951 906 1010">3) Loosen 8 fixing screws of the Cabi-Front and take off the Cabi-Front. <li data-bbox="505 1276 940 1335">4) Loosen the fixing screws of the Assy Control Out. <li data-bbox="505 1581 867 1640">5) Loosen the fixing screws of the Assy Cabi-side and take off the Cabi-side. 	    

No	Parts	Procedure	Remark
2	Fan & Motor	<ol style="list-style-type: none"> 1) Detach the Nut Flange.(Turn counterclockwise because the screw is right-handed) 2) Detach the Fan. 	
		<ol style="list-style-type: none"> 1) Loosen 4 fixing screws to detach the Motor. 2) Loosen 2 fixing screws to detach the Bracket of Motor. 	
3	Heat Exchanger	<ol style="list-style-type: none"> 1) Loosen 2 fixing screws on both sides. 2) Disassemble the pipe in both inlet and outlet with welding torch. 3) Detach the Heat Exchanger. 	
4	Compressor	<ol style="list-style-type: none"> 1) Loosen the Terminal Cover nut to open the Terminal Cover. 2) Disassemble the cloth sound felt. 3) Disassemble the pipe in both inlet and outlet of the Compressor with welding torch. 4) Disassemble the pipe in both inlet and outlet of the Condenser with welding torch. 	
		<ol style="list-style-type: none"> 1) Loosen the 3 bolts at the bottom. 2) Detach the Compressor. 	

3. Refrigerating Cycle Diagram

3-1 Refrigerating Cycle Diagram

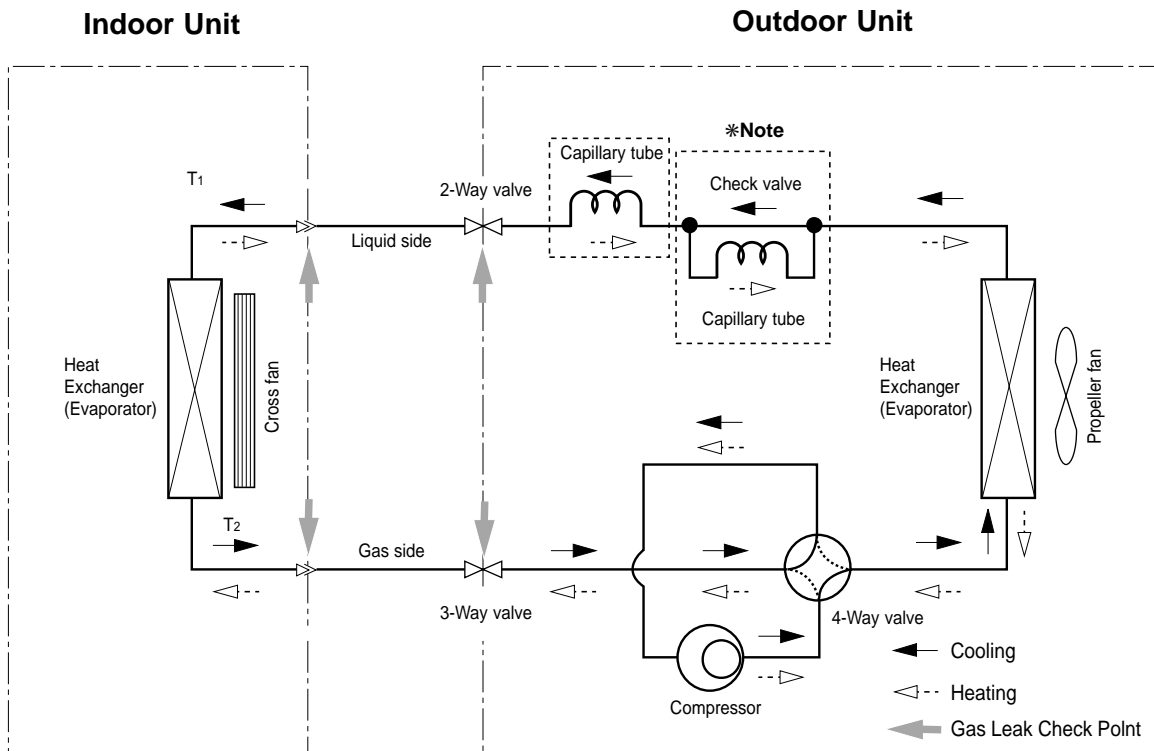



4. Set Up the Model Option

4-1 Setting Option Setup Method










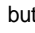

ex) Option No. : 25 02 57 03 40






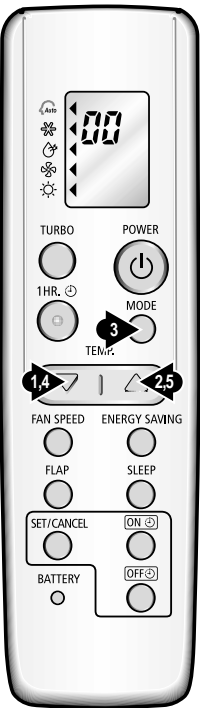







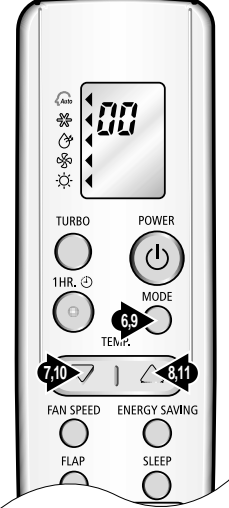




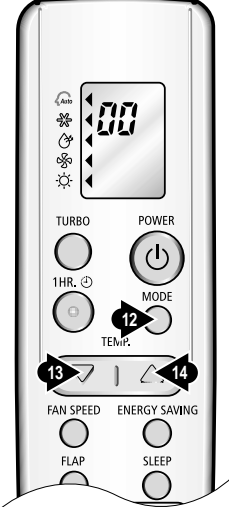

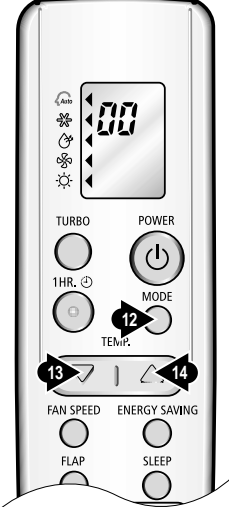


Step 1 : Enter the Option Setup mode.

- 1st Take out the batteries of remote control.
- 2nd Press the temperature  button simultaneously and insert the battery again.
- 3rd Make sure the remote display shown as  .

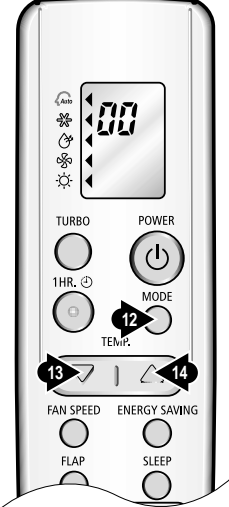


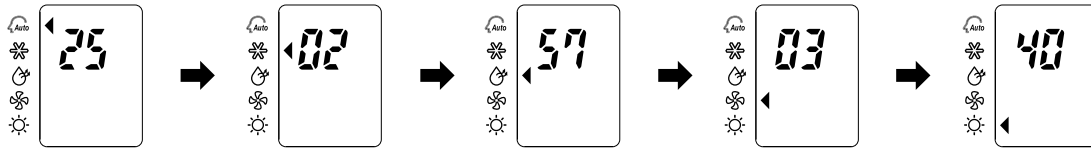
Step 2 : Enter the Option Setup mode and select your option according to the following procedure.

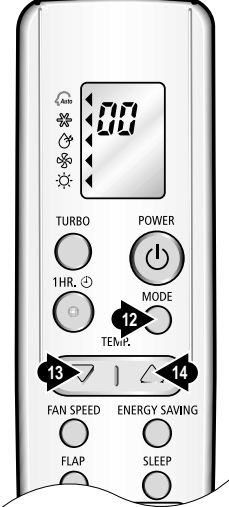	Feature	Display
	<p>1</p> <p>Setting Option SEG1. Push the  button to set the display panel to 2 . Every time you push the button, the display panel reads 0 → 1 → 2 → 3 → ... 9 → R → b → c → d → E → F repeatedly.</p>	
	<p>2</p> <p>Setting Option SEG2. Push the  button to set the display panel to 5 . Every time you push the button, the display panel reads 0 → 1 → 2 → 3 → ... 9 → R → b → c → d → E → F repeatedly.</p>	
	<p>3</p> <p>Change it into the set display of Option SEG3 and SEG4 with the  button.</p>	
	<p>4</p> <p>Setting Option SEG3. Push the  button to set the display panel to 0 . Every time you push the button, the display panel reads 0 → 1 → 2 → 3 → ... 9 → R → b → c → d → E → F repeatedly.</p>	
	<p>5</p> <p>Setting Option SEG4. Push the  button to set the display panel to 2 . Every time you push the button, the display panel reads 0 → 1 → 2 → 3 → ... 9 → R → b → c → d → E → F repeatedly.</p>	

	Feature	Display
	<p>6</p> <p>Change it into the set display of Option SEG5 and SEG6 with the  button.</p>	
	<p>7</p> <p>Setting Option SEG5. Push the  button to set the display panel to 5. Every time you push the button, the display panel reads 0 → 1 → 2 → 3 → ... 9 → A → b → c → d → E → F repeatedly.</p>	
	<p>8</p> <p>Setting Option SEG6. Push the  button to set the display panel to 7. Every time you push the button, the display panel reads 0 → 1 → 2 → 3 → ... 9 → A → b → c → d → E → F repeatedly.</p>	
	<p>9</p> <p>Change it into the set display of Option SEG7 and SEG8 with the  button.</p>	
	<p>10</p> <p>Setting Option SEG7. Push the  button to set the display panel to 0. Every time you push the button, the display panel reads 0 → 1 → 2 → 3 → ... 9 → A → b → c → d → E → F repeatedly.</p>	
	<p>11</p> <p>Setting Option SEG8. Push the  button to set the display panel to 3. Every time you push the button, the display panel reads 0 → 1 → 2 → 3 → ... 9 → A → b → c → d → E → F repeatedly.</p>	
	<p>12</p> <p>Change it into the set display of Option SEG9 and SEG10 with the  button.</p>	
	<p>13</p> <p>Setting Option SEG9. Push the  button to set the display panel to 4. Every time you push the button, the display panel reads 0 → 1 → 2 → 3 → ... 9 → A → b → c → d → E → F repeatedly.</p>	
	<p>14</p> <p>Setting Option SEG10. Push the  button to set the display panel to 0. Every time you push the button, the display panel reads 0 → 1 → 2 → 3 → ... 9 → A → b → c → d → E → F repeatedly.</p>	

Step 3 : Upon completion of the selection, check you made right selections.

Whenever you press the  button, the set Option will be displayed.




Step 4 : Pressing the ON/OFF button ()

When pressing the operation ON/OFF key with the direction of remote controller for unit, the sound "Ding" is heard and the OPERATION LED lamp is flickering at the same time, then the input of option is completed. (If the "ding" sound isn't heard, try again pressing the ON/OFF button.)

Step 5 : Unit operation test-run

First, Remove the battery from the remote controller.

Second, Re-insert the battery into the remote controller.

Third, Press ON/OFF () key with the direction of remote controller for set.

• Error Mode

- 1st If all lamps of indoor unit are flickering, Plug out, plug in power plug again and press ON/OFF key to retry.
- 2nd If the unit is not working properly or all lamps are continuously flickering after setting the option code, see if the correct option code is set up for its model.

4-2 Table of the option Code

Model	Option Code									
	SEG1	SEG2	SEG3	SEG4	SEG5	SEG6	SEG7	SEG8	SEG9	SEG10
AQ12WHWE[D]/SH12ZWHD(X)	2	5	0	2	5	7	0	3	4	0
AQ09W8WE/SH09ZW8(X)	2	5	0	2	5	7	0	2	2	E

5. Troubleshooting

Check the basic items first to judge if the problem was caused by breakdown or misuse. If none of the basic items are related to the problem, please scrutinize the machine according to the 'Breakdown Diagnosis by Symptoms' method.

5-1 Basic Breakdown Diagnosis Items




- The input voltage should be rating voltage $\pm 10\%$ range.
The air conditioner may not operate properly if the voltage is out of this range.
- Is the link cable linking the indoor unit and the outdoor unit linked properly?
The indoor unit and the outdoor unit shall be linked by 5 cables.
Check the terminals if the indoor unit and outdoor unit are properly linked by the same number of cables.
Otherwise the air conditioner may not operate properly.
- When a problem occurs due to the contents illustrated in the table below it is a symptom not related to the malfunction of the air conditioner.

No	Operation of air conditioner	Explanation
1	The OPERATION indication LED(GREEN) blinks when a power plug of the indoor unit is plugged in for the first time.	It indicates power is on. The LED stops blinking if the operation ON/OFF button on the remote control unit is pushed.
2	In a COOL operation mode, the compressor does not operate at a room temperature higher than the setting temperature that the INDOOR FAN should operate. In a HEAT operation mode, the compressor does not operate at a room temperature lower than the setting temperature that indoor fan should operate.	In happens after a delay of 3 minutes when the compressor is reoperated. The same phenomenon occurs when a power is on. As a phenomenon that the compressor is reoperated after a delay of 3 minutes, the indoor fan is adjusted automatically with reference to a temperature of the air blew.
3	Fan speed setting is not allowed in DRY(☼) mode.	The speed of the indoor fan is set to LL in DRY mode. Fan speed is selected automatically in AUTO mode.
4	Compressor stops operation intermittently in DRY(☼) mode.	Compressor operation is controlled automatically in DRY mode depending on the room temperature and humidity.
5	Compressor of the outdoor unit is operating although it is turned off in a HEAT mode.	When the unit is turned off while de-ice is activated, the compressor continues operation for up to 9 minutes (maximum) until the deice is completed.
6	Timer LED(GREEN) of the indoor unit lights up and the air conditioner does not operate.	Timer is being activated and the unit is in ready mode. The unit operates normally if the timer operation is cancelled.
7	The compressor and indoor fan stop intermittently in HEAT mode.	The compressor and indoor fan stop intermittently if room temperature exceeds a setting temperature in order to protect the compressor from overheated air in a HEAT mode.
8	Indoor fan and outdoor fan stop operation intermittently in a HEAT mode.	The compressor operates in a reverse cycle to remove exterior ice in a HEAT mode, and indoor fan and outdoor fan do not operate intermittently for within 20% of the total heater operation
9	The compressor stops intermittently in a COOL mode or DRY mode, and fan speed of the indoor unit decreases.	The compressor stops intermittently or the fan speed of the indoor unit decreases to prevent inside/outside air frozen depending on the inside/outside air temperature.

5-2 Trouble check in the initial status


5-2-1 Diagnosis and marking of the part in trouble.

Please check the air conditioner operation status and write the check result in the chart in the room.

Description	LAMP		
	OPERATION	TIMER	TURBO
			
Indoor unit room temperature sensor error (open or short)	○	◐	○
Indoor unit heat exchanger temperature sensor error (open or short)	◐	◐	○
Indoor fan motor mal function	◐	○	◐
EEPROM error	○	◐	◐
Option error (option wasn't set up or option data error)	◐	◐	◐

○ : Lamp off ◐ : Lamp flickering

5-2-2 Operation with abnormal motion

No	Abnormal condition	Inspection		Initial Diagnosis
1	No response from the remote control operation signal.	<ul style="list-style-type: none"> Plug out and plug in 5 seconds later. 	Able to operate the remote control.	OK
			Unable to operate the remote control.	Press the  button in the indoor unit. <ul style="list-style-type: none"> If it operates, the remote control and indoor unit receiver are in trouble. If not, the indoor unit is in trouble.
2	Unable to operate the outdoor unit	<ul style="list-style-type: none"> Press the TURBO button with the remote control. In 3 minutes, check the voltage between the indoor unit terminal block N(1) and 1. 	AC200V ~ AC240V	Problem with the outdoor unit or PCB
			No power source displayed.	Problem with the relay (RY71) or PCB


5-3 Breakdown diagnosis by symptoms

5-3-1 No Power (completely dead)-Initial diagnosis

1. Checklist :

- 1) Is input voltage normal?
- 2) Is AC power linked correctly?
- 3) Is input voltage of DC regulator IC KA7805 (IC02) normal? (11VDC-12.5VDC)
- 4) Is output voltage of DC regulator IC KA7805 (IC02) normal? (4.5VDC-5.5VDC)

2. Troubleshooting procedure

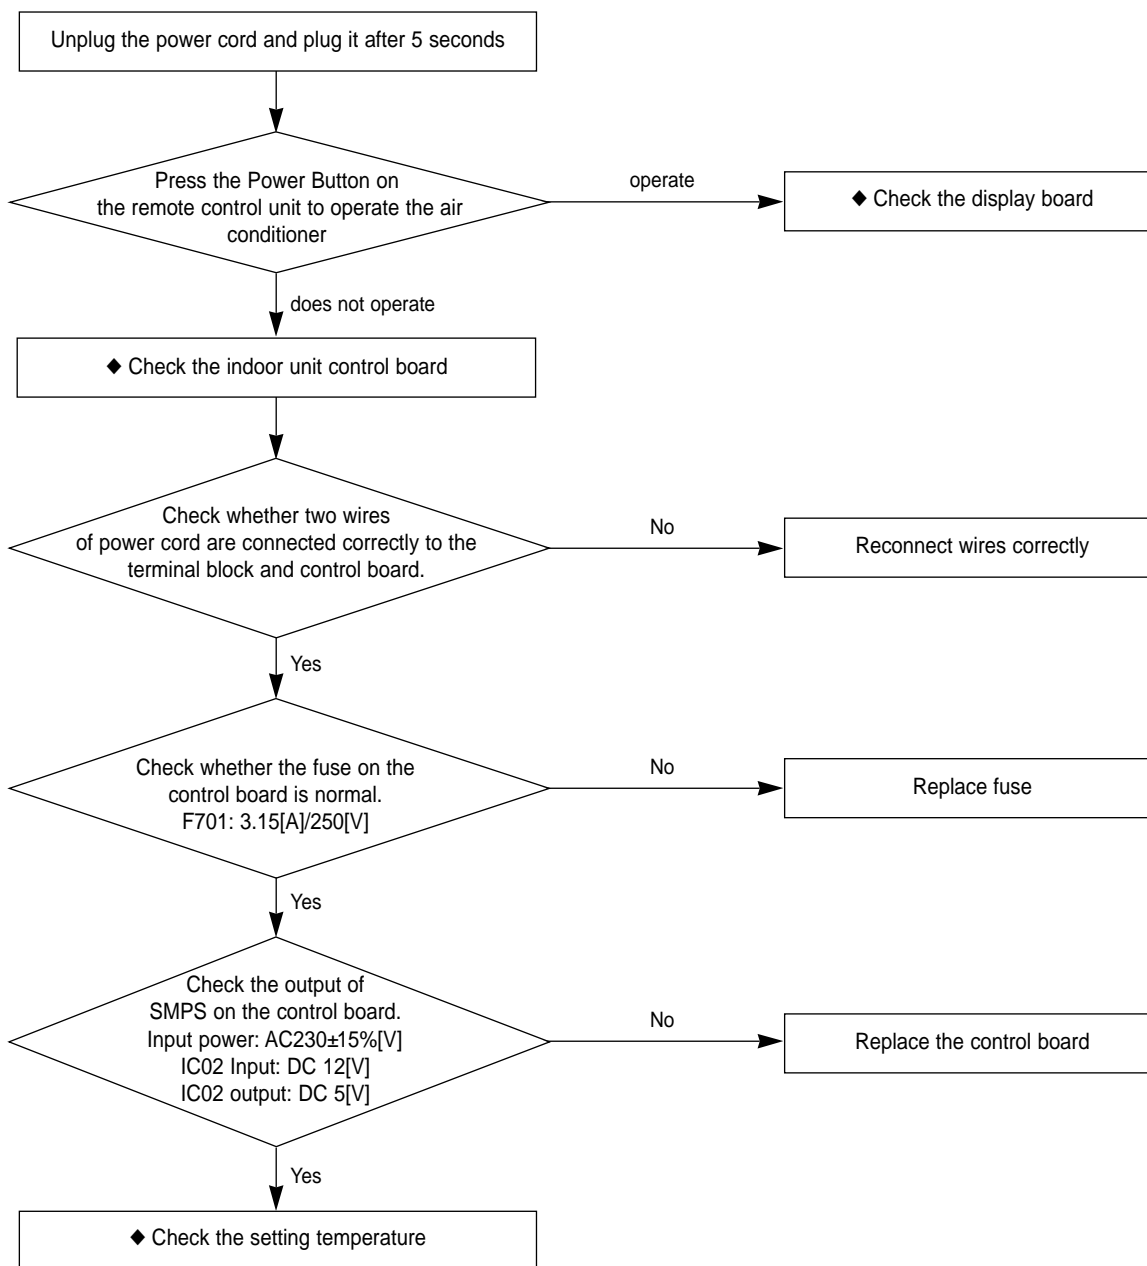


5-3-2 When the Indoor Unit Fan Does Not Operate. (Initial Diagnosis)

1. Checklist :

- 1) Is the indoor unit fan motor properly connected with the connector (CN72)?
- 2) Is the AC voltage correct?
- 3) Is HALL IC in indoor fan motor properly connected with the connector (CN44)?
- 4) Is the running capacitor (CR71) properly connected with PCB board?

2. Troubleshooting procedure

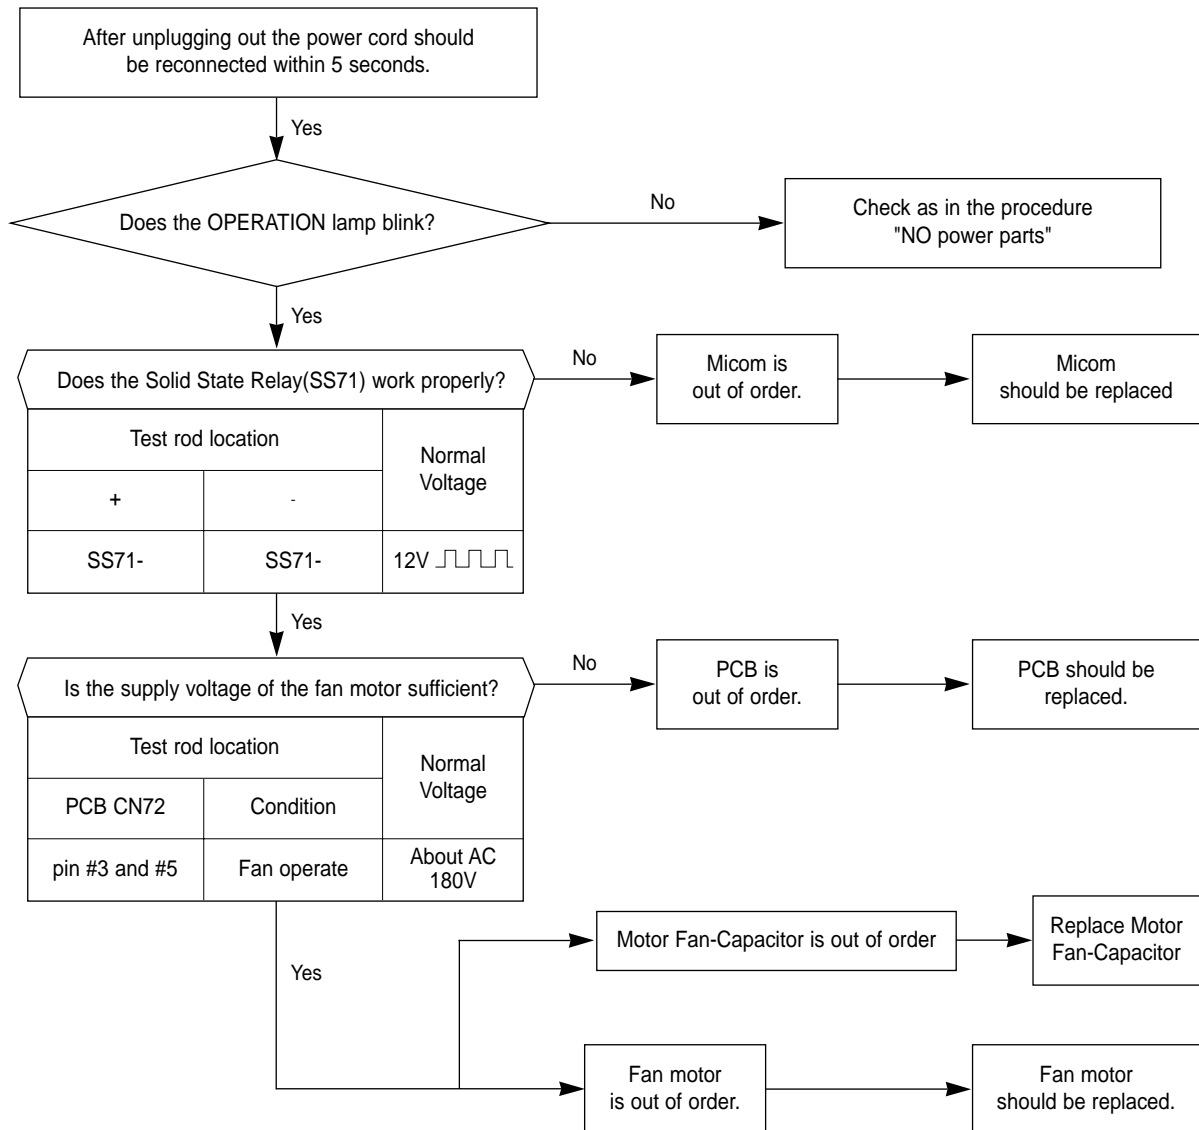


5-3-3 When the Outdoor Unit Does Not Operate. (Initial Diagnosis)

1. Checklist :

- 1) Is input voltage normal?
- 2) Is the set temperature of the remote control higher than room temperature in COOL mode?
- 3) Is the set temperature of the remote control lower than room temperature in HEAT mode?
- 4) Is the POWER IN connector (CN71) linked correctly?
- 5) Is the outdoor unit properly connected with the TERMINAL BLOCK connector(N(1), 1, 2, 3)?

2. Troubleshooting procedure

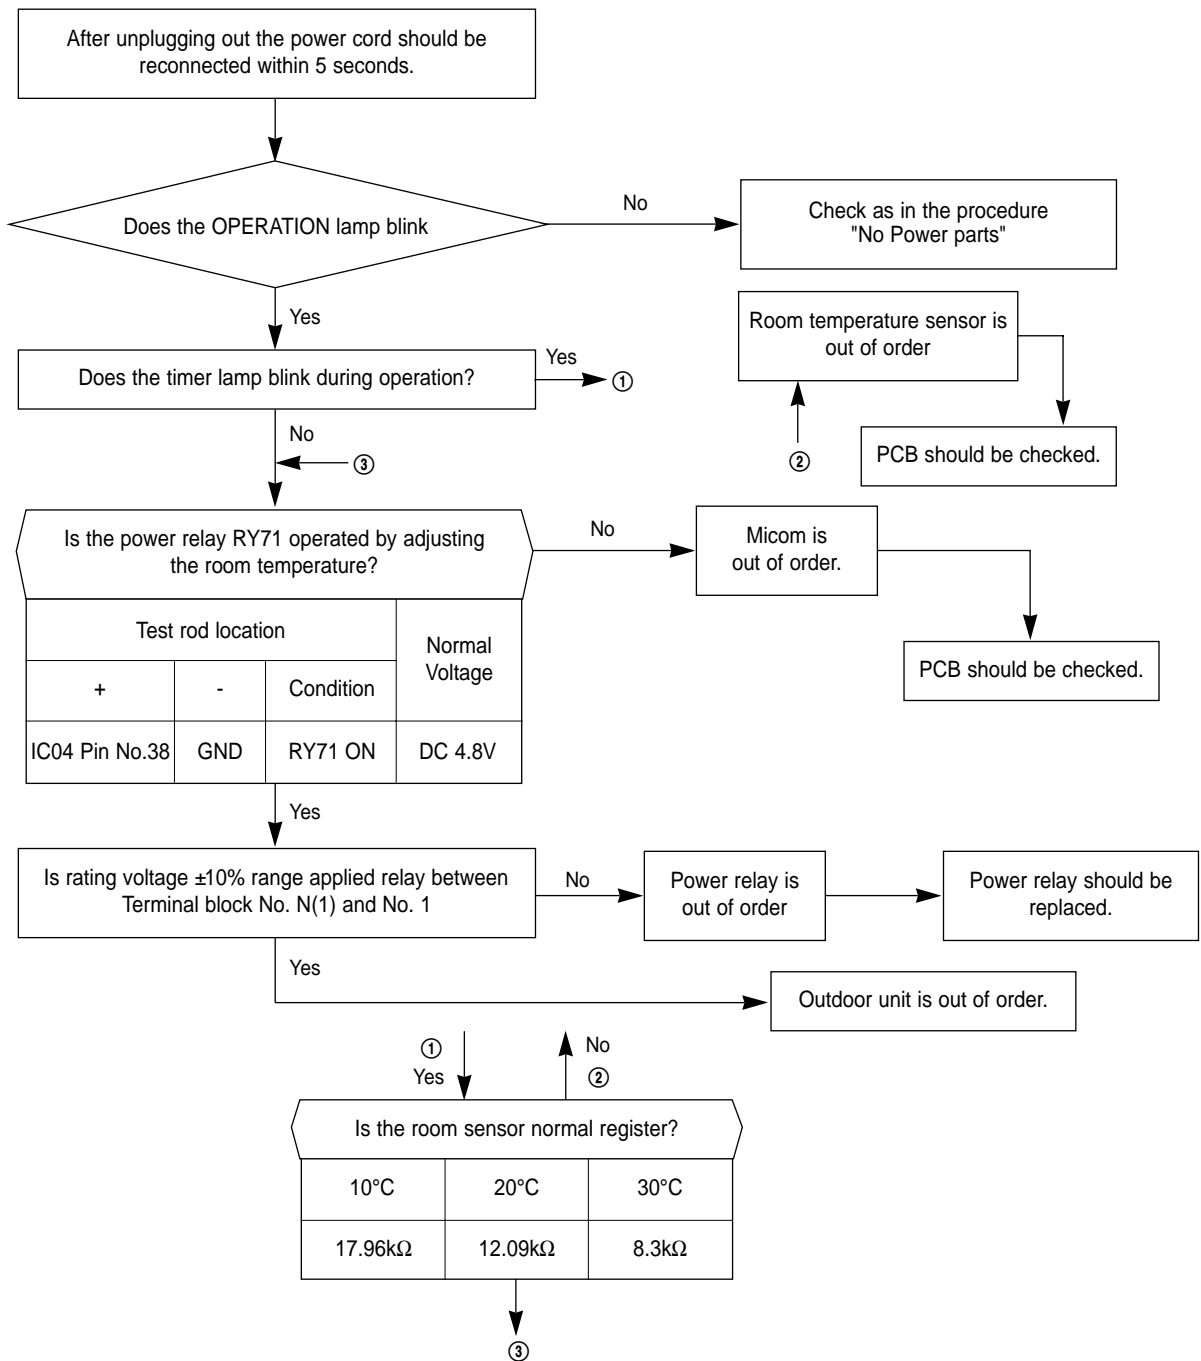


5-3-4 When the UP/DOWN Louver Motor Does Not Operate. (Initial Diagnosis)

1. Checklist :

- 1) Is input voltage normal?
- 2) Is the UP/DOWN louver motor properly connected with the connector (CN61)?

2. Troubleshooting procedure

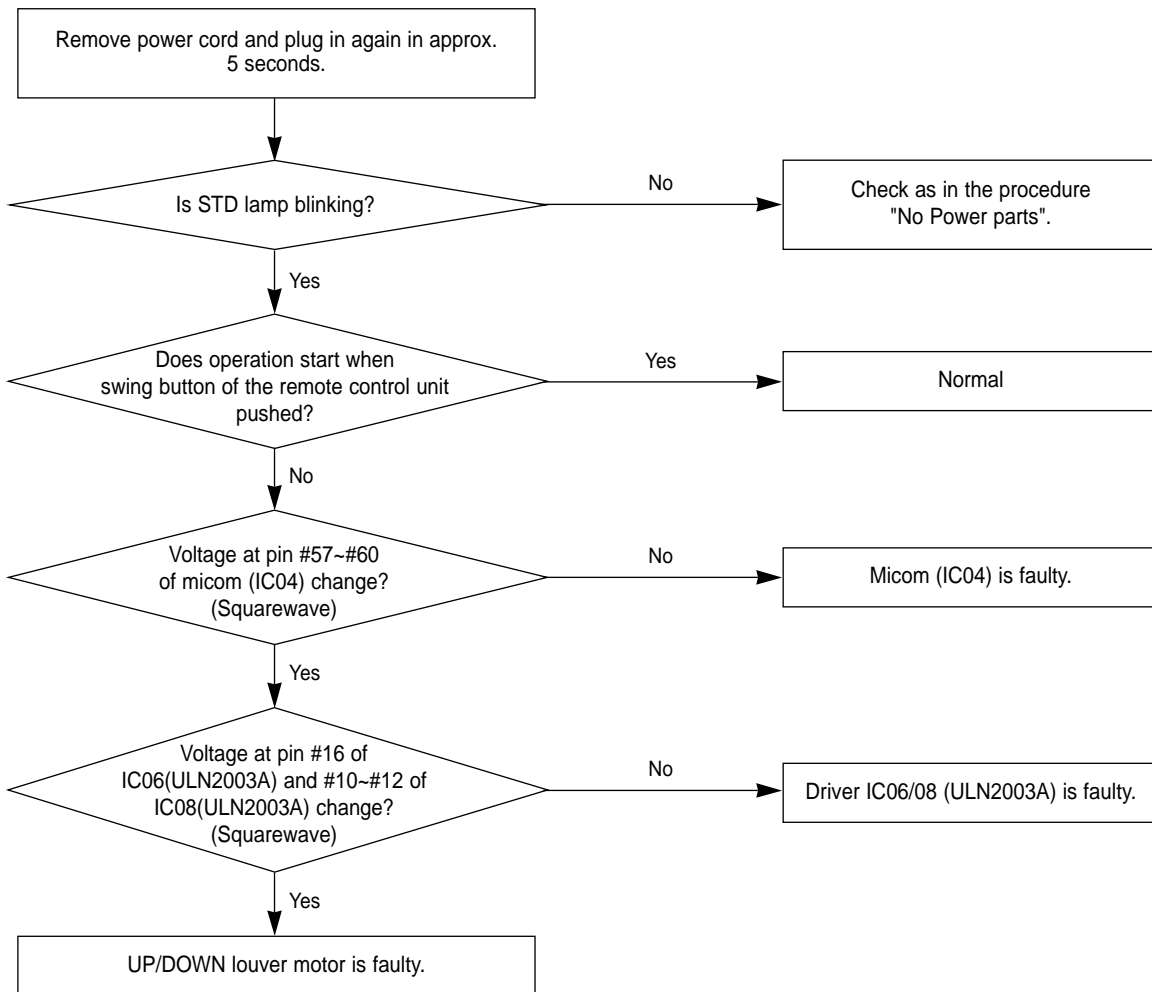


5-3-5 In the HEAT mode, When there is no warm air current. Check this fist;




1. Checklist :

- 1) Is the set temperature of Remote Control lower than room temperature in Heat mode?
- 2) Is the Indoor PCB properly connected with the CN71 connector?

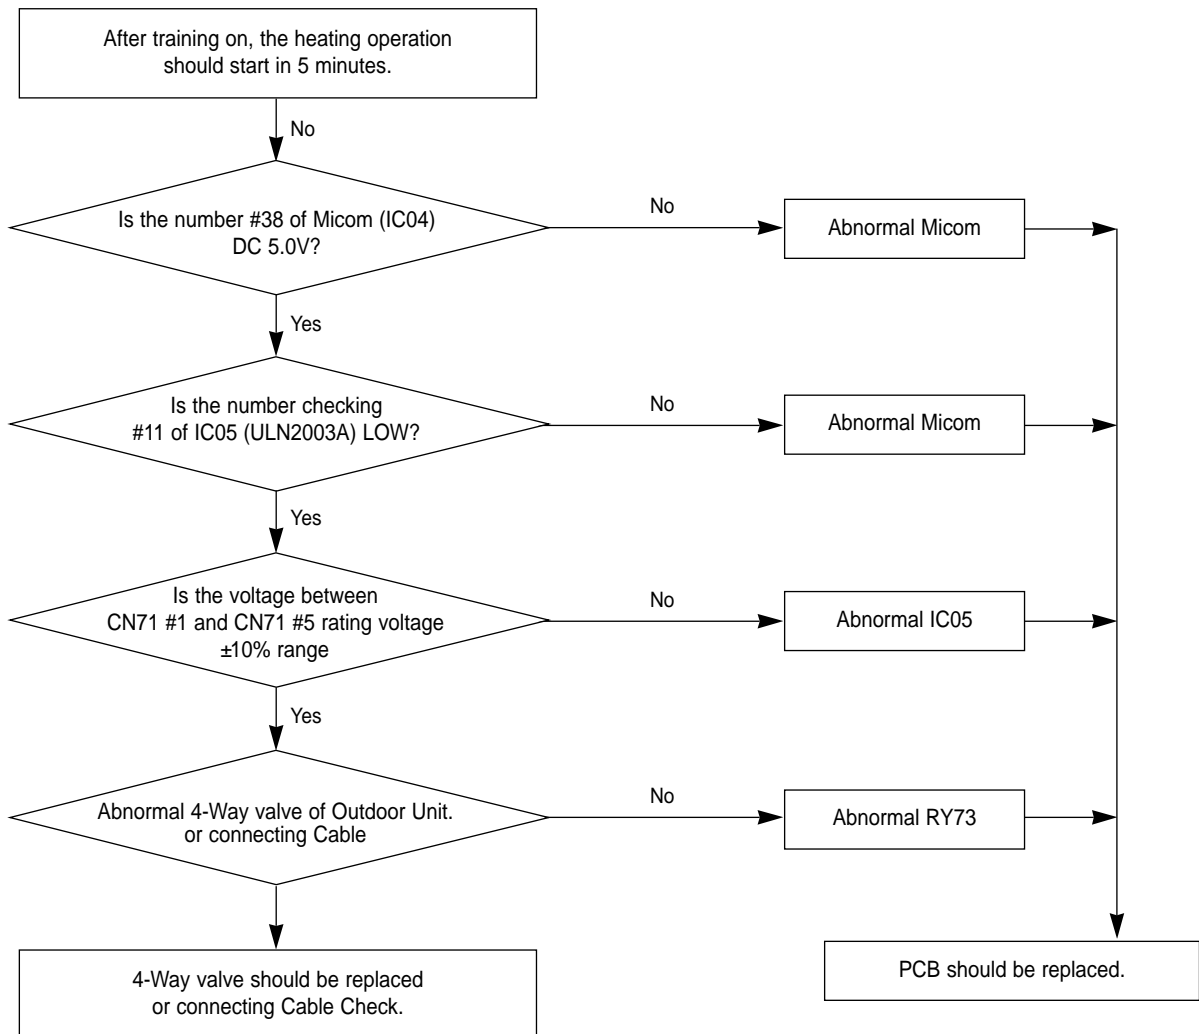
2. Troubleshooting procedure







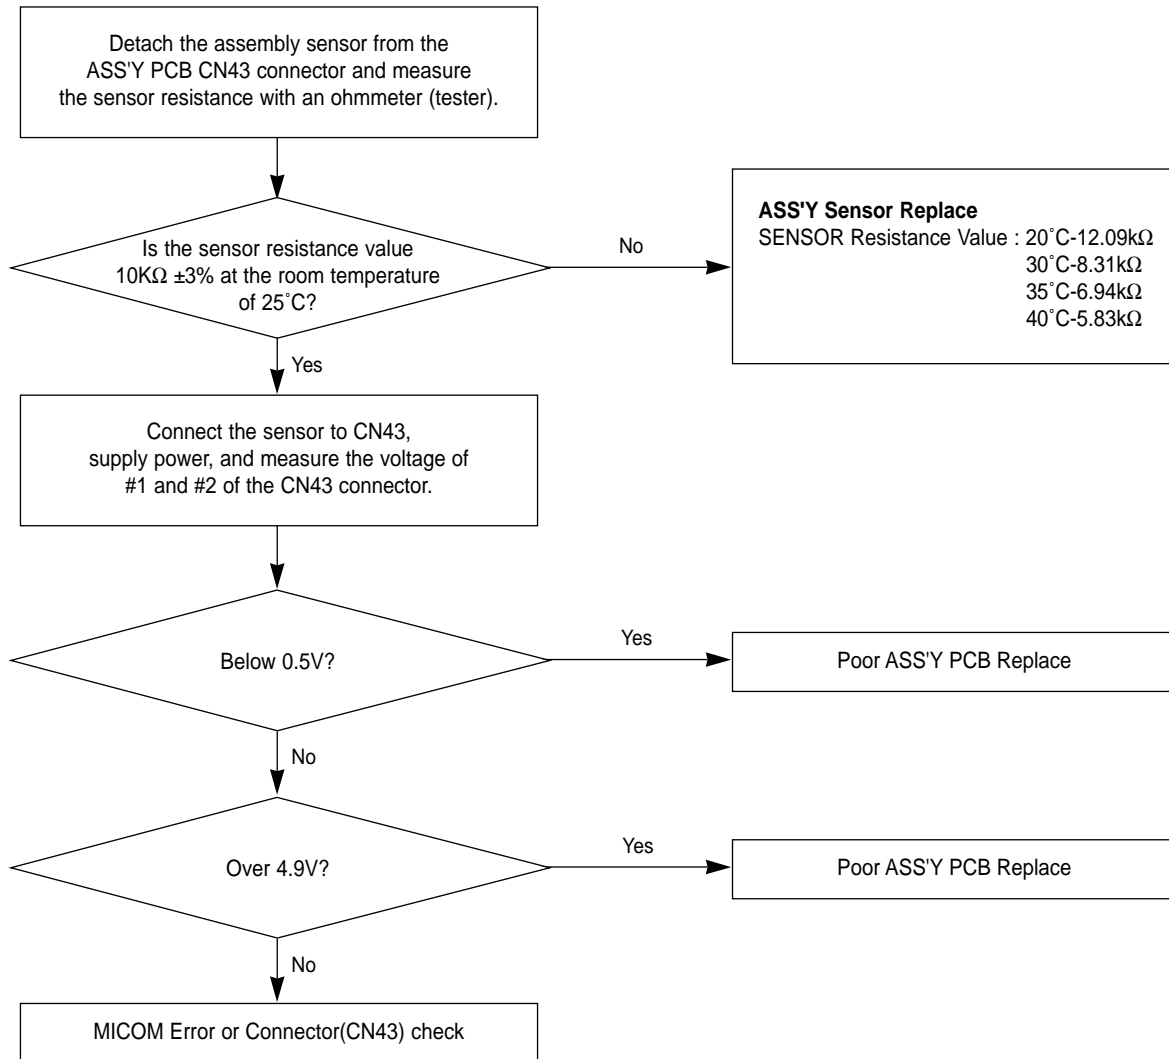

5-3-6 Room temperature sensor failure

Description	LAMP		
	OPERATION	TIMER	TURBO
			
Indoor unit room temperature sensor error(open or short)	○	◐	○

○ : Lamp off ◐ : Lamp flickering



5-3-7 Room Pipe sensor failure

Description	LAMP		
	OPERATION	TIMER	TURBO
			
Indoor unit heat exchanger temperature sensor error (open or short)			

○ : Lamp off ◐ : Lamp flickering

1. Check the assembly condition of the sensor connector(CN43) on the indoor unit Main PCB and if not assembled, reassemble the connector accurately.
2. Detach the room pipe sensor connector(CN43) and check the resistance between connector 3 and 4.

Temperature(°C)	Resistance Value(Kohm)	Temperature(°C)	Resistance Value(Kohm)	Others
15	14.68	30	8.31	The data tolerance is ±3%.
20	12.09	35	6.94	
25	10	40	5.83	

If the above data is not met, replace the room pipe sensor.


3. Assemble the room pipe sensor to PCB, plug in, and check the voltage of connector 3 and 4. If the resistance is below 0.5V or over 4.9V, replace the indoor Main PCB. (short or disconnected in the PCB board)

5-3-8 When the remote control is not receiving.

1. Check if the connector was normally assembled.
2. Put the set in operation and check the voltage of No. 3(+) and No. 2(-) of the main PCB CN91 while operating the remote control. When the voltage descends below 3V, the assembly module PCB is normal and the main PCB is poor. Then replace the main PCB.
3. Replace the assembly display PCB because the module PCB is poor if the voltage between No. 2~3 of CN91 maintains 5V after the remote control starts operation.

6. Exploded Views and Parts List

6-1 Indoor Unit

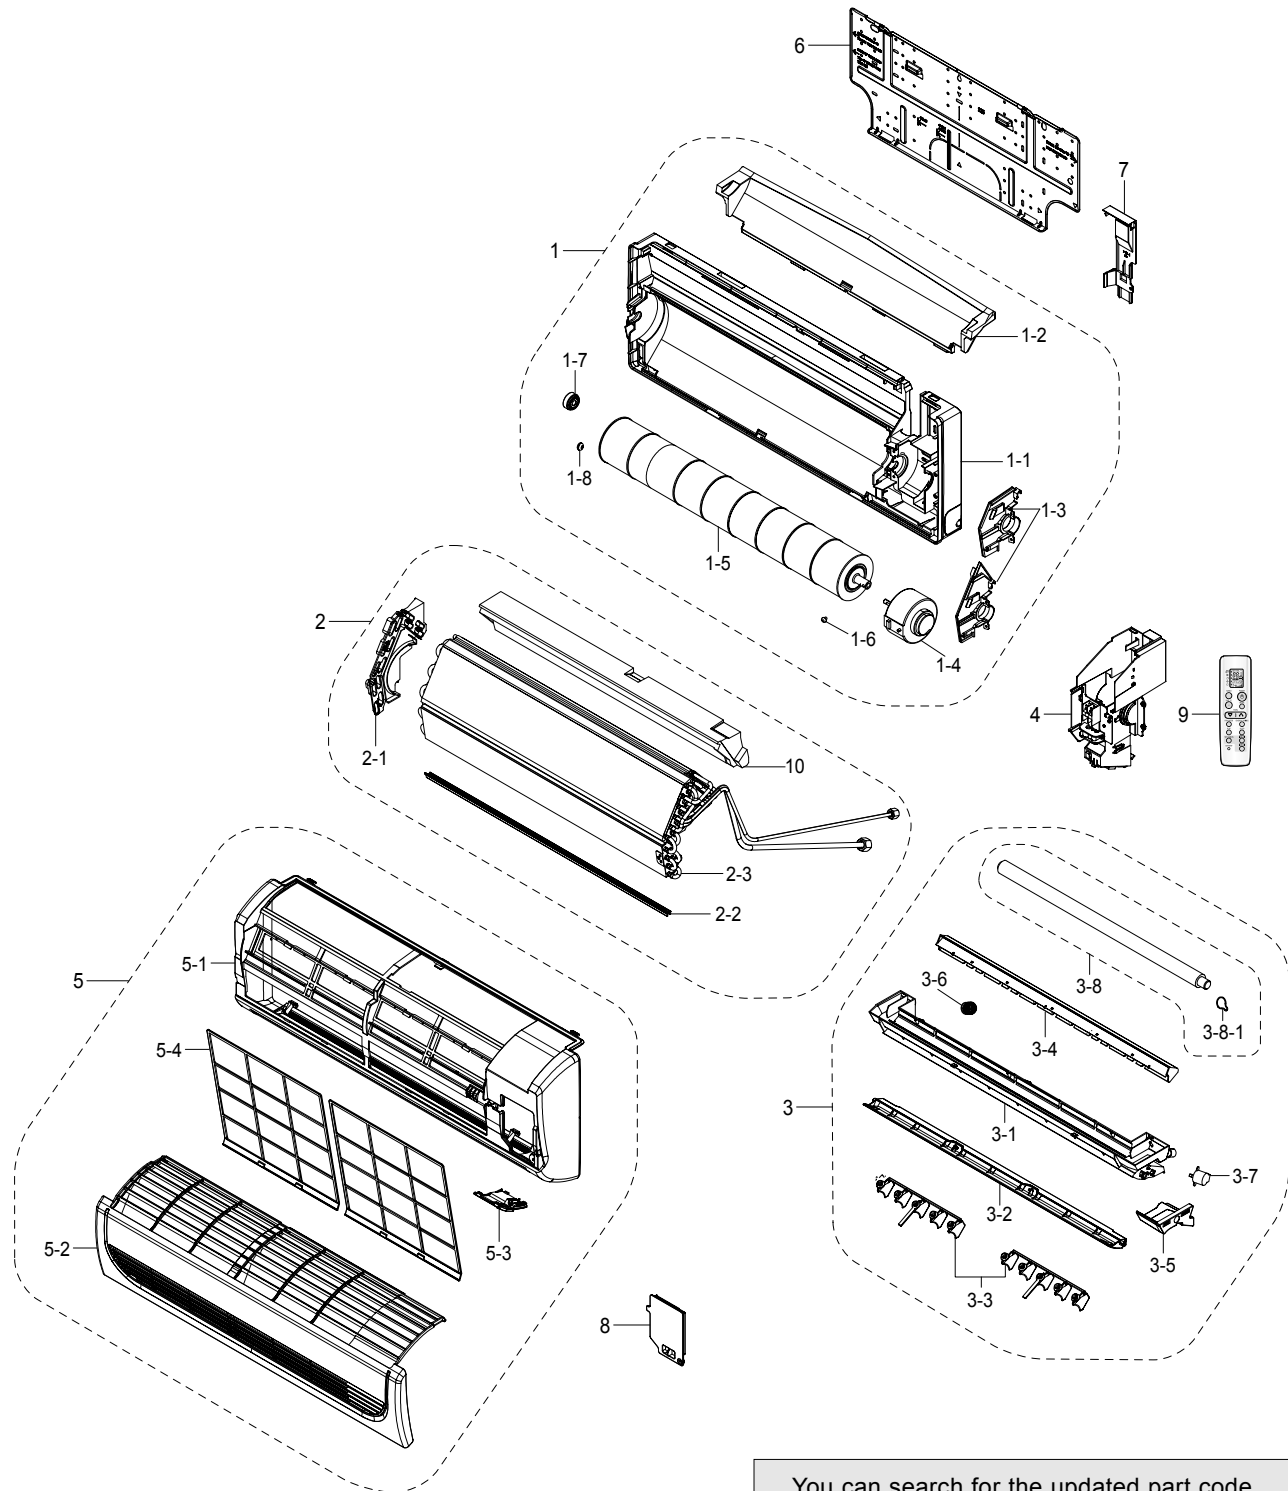

You can search for the updated part code number through the ITSELF.
URL : <http://itself.sec.samsung.co.kr>

■ Parts List

No.	Code No.	Description	Specification	Q'TY		Remark
				AQ12WHWE[D]	SH12ZWHD	
1	DB94-00454B	ASS'Y-BACK BODY	ASS'Y	1	1	
1-1	DB61-01632A	BACK-BODY	HIPS	1	1	
1-2	DB69-00834A	CUSHION-BACK BODY	EPS	1	1	
1-3	DB61-01634A	SUPPORTER-EVAP RH	HIPS	1	1	
	DB61-01633A	SUPPORTER-EVAP RH	HIPS	-	-	
1-4	DB31-00219A	MOTOR-IN	YDK-016S1408-01	1	1	
1-5	DB94-00456A	ASS'Y-CROSS FAN	OD92x635	1	1	
1-6	DB97-02075A	ASS'Y BOLT-SPECIAL	ASS'Y	1	1	
1-7	DB73-00181A	RUBBER-BEARING	RUBBER	1	1	
1-8	DB94-40007A	MOLD-BEARING	BEARING	1	1	
2	DB96-03112C	ASS'Y CYCLE IN	ASS'Y	1	1	
	DB96-02361E	ASS'Y CYCLE IN	ASS'Y	-	-	
2-1	DB63-00850A	COVER BEARING	ABS	1	1	
2-2	DB60-00118A	SPACE-EVAP-LOW	PVC	1	1	
2-3	DB96-03060A	ASS'Y-EVAP	SS-PJT,SSEC,12K	1	1	
	DB96-03171A	ASS'Y-EVAP	SS-PJT,SSEC,9K	-	-	
3	DB94-00457D	ASS'Y-TRAY DRAIN	ASS'Y	1	1	
3-1	DB63-00848A	TRAY-DRAIN	ABS	1	1	
3-2	DB61-01635A	BLADE-H	HIPS	1	1	
3-3	DB61-01636A	BLADE-V	PP	2	2	
3-4	DB63-00849A	TRAY-STABILIZER	ABS	1	1	
3-5	DB69-00839A	CUSHION EPS-TRAY RH	EPS30	1	1	
3-6	DB73-00180A	RUBBER-CAP	GUM-EPM	1	1	
3-7	DB95-20138A	ASS'Y-STEPPING-MOTOR	PM24-600g, 24BYJ48	1	1	
3-8	DB94-00458B	ASS'Y DRAIN HOSE	ASS'Y	1	1	
3-8-1	DB61-01715A	CLIP TERMINAL HOSE	STS, PI1.0	1	1	
4	DB93-02481S	ASS'Y-CONTROL IN	ASS'Y	1	1	
5	DB92-00536D	ASS'Y-PANEL FRONT	ASS'Y	1	1	Except Europe
5-1	DB64-00989A	PANEL-FRONT	PS	1	1	
5-2	DB64-00990A	GRILLE-AIR INLET	HIPS	1	1	
5-3	DB97-02064A	ASS'Y-COVER DISPLAY	ASS'Y	1	1	
5-4	DB63-00846B	GUARD-AIR FILTER	PP	2	2	
6	DB70-00406A	PLATE-HANGER	SGCC-M T0.6x320x650	1	1	
7	DB61-01638A	HOLDER-PIPE	PS	1	1	
8	DB63-00844A	COVER TERMINAL	ABS-V0	1	1	
9	DB93-03012B	ASS'Y-REMOCON	ARH-1403	1	1	
10	DB69-00833A	CUSHION-EVAP UP	EPS,30 ; SSEC	-	-	

■ Parts List

No.	Code No.	Description	Specification	Q'TY		Remark
				AQ09W8WE	SH09ZW8	
1	DB94-00454B	ASS'Y-BACK BODY	ASS'Y	1	1	
1-1	DB61-01632A	BACK-BODY	HIPS	1	1	
1-2	DB69-00834A	CUSHION-BACK BODY	EPS	1	1	
1-3	DB61-01634A	SUPPORTER-EVAP RH	HIPS	-	-	
	DB61-01633A	SUPPORTER-EVAP RH	HIPS	1	1	
1-4	DB31-00219A	MOTOR-IN	YDK-016S1408-01	1	1	
1-5	DB94-00456A	ASS'Y-CROSS FAN	OD92x635	1	1	
1-6	DB97-02075A	ASS'Y BOLT-SPECIAL	ASS'Y	1	1	
1-7	DB73-00181A	RUBBER-BEARING	RUBBER	1	1	
1-8	DB94-40007A	MOLD-BEARING	BEARING	1	1	
2	DB96-03112C	ASS'Y CYCLE IN	ASS'Y	-	-	
	DB96-02361E	ASS'Y CYCLE IN	ASS'Y	1	1	
2-1	DB63-00850A	COVER BEARING	ABS	1	1	
2-2	DB60-00118A	SPACE-EVAP-LOW	PVC	1	1	
2-3	DB96-03060A	ASS'Y-EVAP	SS-PJT,SSEC,12K	-	-	
	DB96-03171A	ASS'Y-EVAP	SS-PJT,SSEC,9K	1	1	
3	DB94-00457D	ASS'Y-TRAY DRAIN	ASS'Y	1	1	
3-1	DB63-00848A	TRAY-DRAIN	ABS	1	1	
3-2	DB61-01635A	BLADE-H	HIPS	1	1	
3-3	DB61-01636A	BLADE-V	PP	2	2	
3-4	DB63-00849A	TRAY-STABILIZER	ABS	1	1	
3-5	DB69-00839A	CUSHION EPS-TRAY RH	EPS30	1	1	
3-6	DB73-00180A	RUBBER-CAP	GUM-EPM	1	1	
3-7	DB95-20138A	ASS'Y-STEPPING-MOTOR	PM24-600g, 24BYJ48	1	1	
3-8	DB94-00458B	ASS'Y DRAIN HOSE	ASS'Y	1	1	
3-8-1	DB61-01715A	CLIP TERMINAL HOSE	STS, PI1.0	1	1	
4	DB93-02481S	ASS'Y-CONTROL IN	ASS'Y	1	1	
5	DB92-00536D	ASS'Y-PANEL FRONT	ASS'Y	1	1	Except Europe
5-1	DB64-00989A	PANEL-FRONT	PS	1	1	
5-2	DB64-00990A	GRILLE-AIR INLET	HIPS	1	1	
5-3	DB97-02064A	ASS'Y-COVER DISPLAY	ASS'Y	1	1	
5-4	DB63-00846B	GUARD-AIR FILTER	PP	2	2	
6	DB70-00406A	PLATE-HANGER	SGCC-M T0.6x320x650	1	1	
7	DB61-01638A	HOLDER-PIPE	PS	1	1	
8	DB63-00844A	COVER TERMINAL	ABS-V0	1	1	
9	DB93-03012B	ASS'Y-REMOCON	ARH-1403	1	1	
10	DB69-00833A	CUSHION-EVAP UP	EPS,30 ; SSEC	1	1	


■ Parts List

No.	Code No.	Description	Specification	Q'TY		Remark
				SH12ZWHD		
1	DB94-00454B	ASS'Y-BACK BODY	ASS'Y	1		
1-1	DB61-01632A	BACK-BODY	HIPS	1		
1-2	DB69-00834A	CUSHION-BACK BODY	EPS	1		
1-3	DB61-01634A	SUPPORTER-EVAP RH	HIPS	1		
	DB61-01633A	SUPPORTER-EVAP RH	HIPS	-		
1-4	DB31-00219A	MOTOR-IN	YDK-016S1408-01	1		
1-5	DB94-00456A	ASS'Y-CROSS FAN	OD92x635	1		
1-6	DB97-02075A	ASS'Y BOLT-SPECIAL	ASS'Y	1		
1-7	DB73-00181A	RUBBER-BEARING	RUBBER	1		
1-8	DB94-40007A	MOLD-BEARING	BEARING	1		
2	DB96-03112C	ASS'Y CYCLE IN	ASS'Y	1		
	DB96-02361E	ASS'Y CYCLE IN	ASS'Y	-		
2-1	DB63-00850A	COVER BEARING	ABS	1		
2-2	DB60-00118A	SPACE-EVAP-LOW	PVC	1		
2-3	DB96-03060A	ASS'Y-EVAP	SS-PJT,SSEC,12K	1		
	DB96-03171A	ASS'Y-EVAP	SS-PJT,SSEC,9K	-		
3	DB94-00457D	ASS'Y-TRAY DRAIN	ASS'Y	1		
3-1	DB63-00848A	TRAY-DRAIN	ABS	1		
3-2	DB61-01635A	BLADE-H	HIPS	1		
3-3	DB61-01636A	BLADE-V	PP	2		
3-4	DB63-00849A	TRAY-STABILIZER	ABS	1		
3-5	DB69-00839A	CUSHION EPS-TRAY RH	EPS30	1		
3-6	DB73-00180A	RUBBER-CAP	GUM-EPM	1		
3-7	DB95-20138A	ASS'Y-STEPPING-MOTOR	PM24-600g, 24BYJ48	1		
3-8	DB94-00458B	ASS'Y DRAIN HOSE	ASS'Y	1		
3-8-1	DB61-01715A	CLIP TERMINAL HOSE	STS, P11.0	1		
4	DB93-02481S	ASS'Y-CONTROL IN	ASS'Y	1		
5	DB92-00536B	ASS'Y-PANEL FRONT	ASS'Y	1		For Europe
5-1	DB64-00989A	PANEL-FRONT	PS	1		
5-2	DB64-00990A	GRILLE-AIR INLET	HIPS	1		
5-3	DB97-02064A	ASS'Y-COVER DISPLAY	ASS'Y	1		
5-4	DB63-00846B	GUARD-AIR FILTER	PP	2		
6	DB70-00406A	PLATE-HANGER	SGCC-M T0.6x320x650	1		
7	DB61-01638A	HOLDER-PIPE	PS	1		
8	DB63-00844A	COVER TERMINAL	ABS-V0	1		
9	DB93-03012B	ASS'Y-REMOCON	ARH-1403	1		
10	DB69-00833A	CUSHION-EVAP UP	EPS,30 ; SSEC	-		

■ Parts List

No.	Code No.	Description	Specification	Q'TY		Remark
				SH09ZW8		
1	DB94-00454B	ASS'Y-BACK BODY	ASS'Y	1		
1-1	DB61-01632A	BACK-BODY	HIPS	1		
1-2	DB69-00834A	CUSHION-BACK BODY	EPS	1		
1-3	DB61-01634A	SUPPORTER-EVAP RH	HIPS	-		
	DB61-01633A	SUPPORTER-EVAP RH	HIPS	1		
1-4	DB31-00219A	MOTOR-IN	YDK-016S1408-01	1		
1-5	DB94-00456A	ASS'Y-CROSS FAN	OD92x635	1		
1-6	DB97-02075A	ASS'Y BOLT-SPECIAL	ASS'Y	1		
1-7	DB73-00181A	RUBBER-BEARING	RUBBER	1		
1-8	DB94-40007A	MOLD-BEARING	BEARING	1		
2	DB96-03112C	ASS'Y CYCLE IN	ASS'Y	-		
	DB96-02361E	ASS'Y CYCLE IN	ASS'Y	1		
2-1	DB63-00850A	COVER BEARING	ABS	1		
2-2	DB60-00118A	SPACE-EVAP-LOW	PVC	1		
2-3	DB96-03060A	ASS'Y-EVAP	SS-PJT,SSEC,12K	-		
	DB96-03171A	ASS'Y-EVAP	SS-PJT,SSEC,9K	1		
3	DB94-00457D	ASS'Y-TRAY DRAIN	ASS'Y	1		
3-1	DB63-00848A	TRAY-DRAIN	ABS	1		
3-2	DB61-01635A	BLADE-H	HIPS	1		
3-3	DB61-01636A	BLADE-V	PP	2		
3-4	DB63-00849A	TRAY-STABILIZER	ABS	1		
3-5	DB69-00839A	CUSHION EPS-TRAY RH	EPS30	1		
3-6	DB73-00180A	RUBBER-CAP	GUM-EPM	1		
3-7	DB95-20138A	ASS'Y-STEPPING-MOTOR	PM24-600g, 24BYJ48	1		
3-8	DB94-00458B	ASS'Y DRAIN HOSE	ASS'Y	1		
3-8-1	DB61-01715A	CLIP TERMINAL HOSE	STS, PI1.0	1		
4	DB93-02481S	ASS'Y-CONTROL IN	ASS'Y	1		
5	DB92-00536B	ASS'Y-PANEL FRONT	ASS'Y	1		For Europe
5-1	DB64-00989A	PANEL-FRONT	PS	1		
5-2	DB64-00990A	GRILLE-AIR INLET	HIPS	1		
5-3	DB97-02064A	ASS'Y-COVER DISPLAY	ASS'Y	1		
5-4	DB63-00846B	GUARD-AIR FILTER	PP	2		
6	DB70-00406A	PLATE-HANGER	SGCC-M T0.6x320x650	1		
7	DB61-01638A	HOLDER-PIPE	PS	1		
8	DB63-00844A	COVER TERMINAL	ABS-V0	1		
9	DB93-03012B	ASS'Y-REMOCON	ARH-1403	1		
10	DB69-00833A	CUSHION-EVAP UP	EPS,30 ; SSEC	1		


6-2 Outdoor Unit

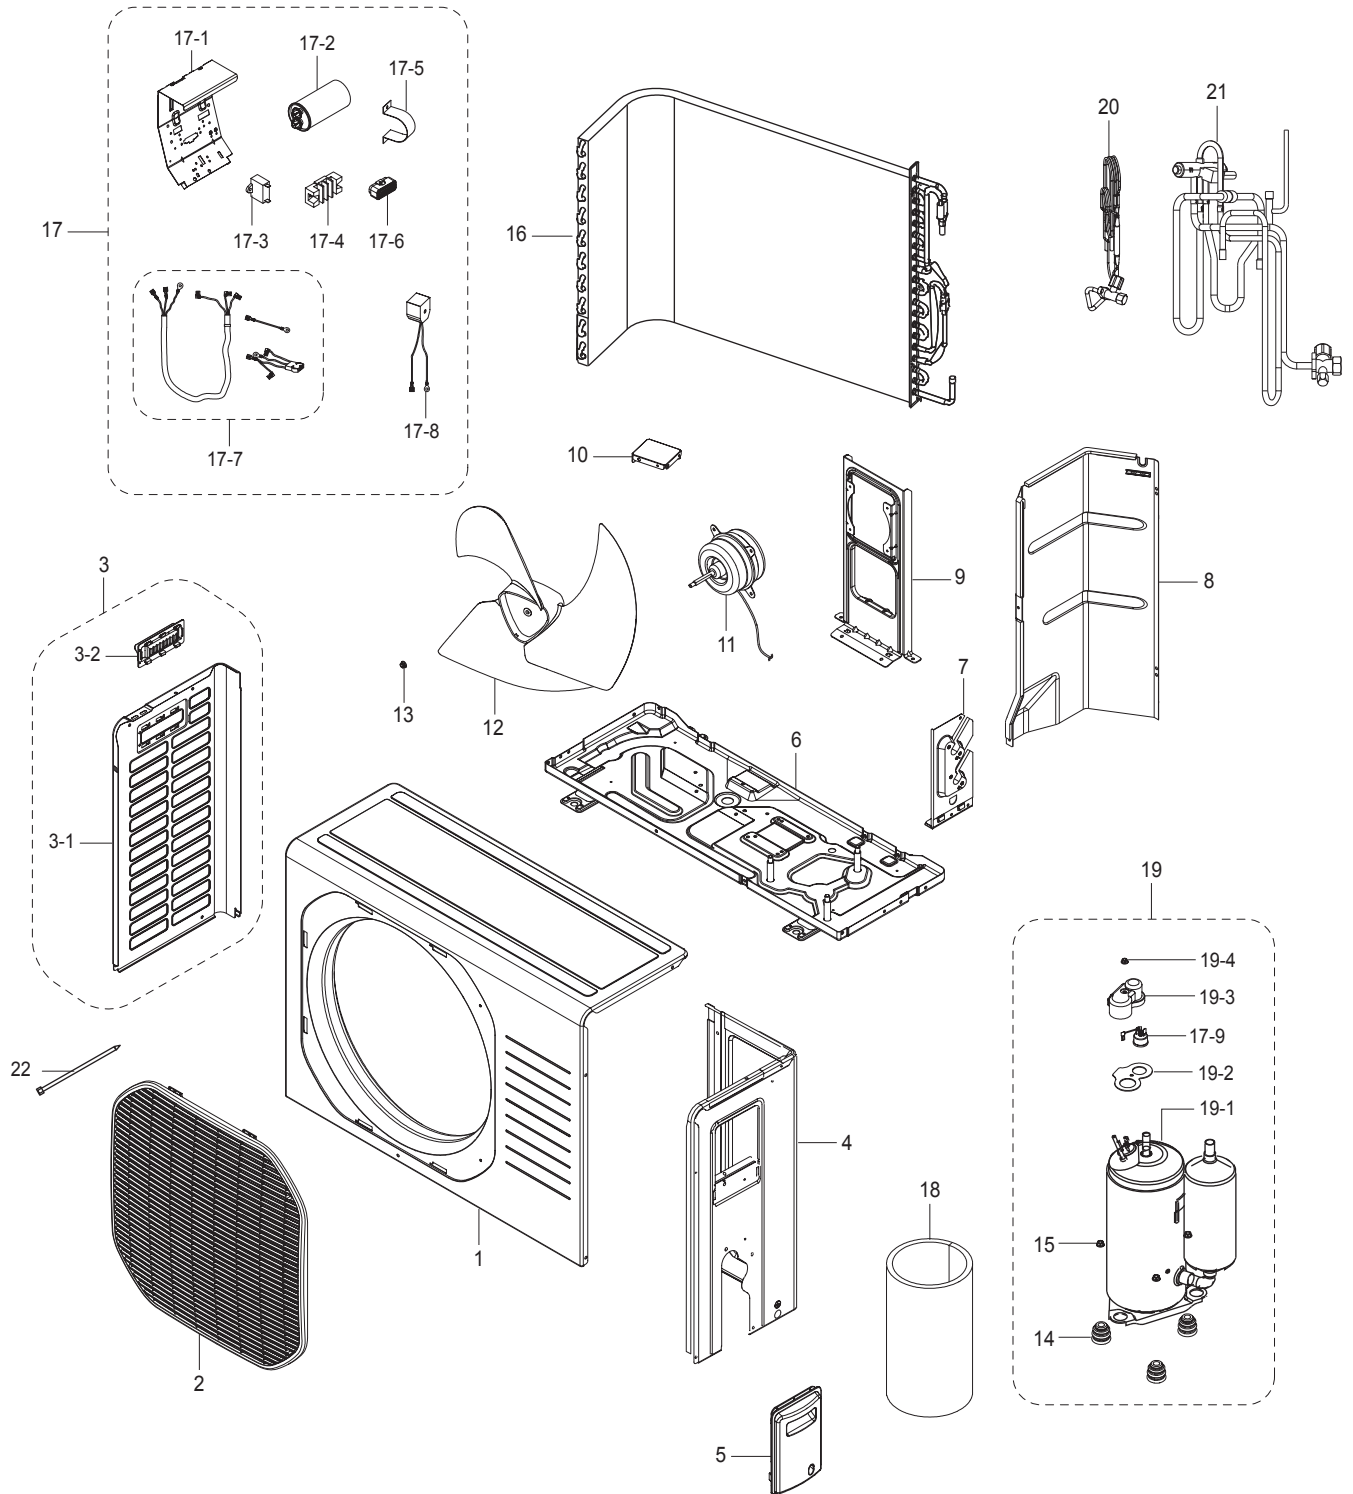

Parts List

No.	Code No.	Description	Specification	Q'TY	
				UQ12WHWE[D]	SH12ZWHDX
1	DB90-01341A	ASS'Y-CABI FRONT	T0.7, SECC-P	1	1
2	DB63-00847A	GUARD-FAN	PP, 378g	1	1
3	DB90-01332A	ASS'Y CABI SIDE LF	ASS'Y	1	1
3-1	DB64-01094A	CABI SIDE LF(COATING)	T0.6, SECC-P	1	1
3-2	DB64-00992A	HANDLE LF	PP, 30g	1	1
4	DB90-01546B	ASS'Y CABI SIDE RH	T0.6, SECC-P	1	1
5	DB63-00853A	COVER-CONTROL	ABS-V0, 66g	1	1
6	DB90-01330E	ASS'Y-BASE	T1.0, SECC-P	1	1
7	DB99-00401A	ASS'Y BRACKET VALVE	SECC-P, T1.0x95x235	1	1
8	DB94-00668A	ASS'Y-PARTITION	ASS'Y, SGCC-M, T0.6	1	1
9	DB61-01644A	BRACKET-MOTOR	SGCC-M T0.6x370x490	1	1
10	DB97-02225A	ASS'Y PLATE SUPPORT B/M	ASS'Y	1	1
11	DB31-00220A	MOTOR-OUT	YDK-25F6M13E-1	1	1
12	DB67-00397A	PROPELLER-FAN	AS+G/F 20%, 422g	1	1
13	DB60-30004A	NUT FLANGE		1	1
14	DB63-00815A	GROMMET	NR	3	3
15	DB60-30028A	NUT WASHER		3	3
16	DB96-03861A	ASS'Y-COND	2x24, FP1.5, LOUVER	1	1
17	DB93-02748G	ASS'Y-CONTROL OUT	ASS'Y	1	1
17-1	DB61-01642A	CASE-CONTROL OUT	SGCC-M T0.6x150x250	1	1
17-2	2501-001236	CAPACITOR-COMP	30µFx450V	1	1
17-3	2301-001375	CAPACITOR-MOTOR	1.5µFx450V	1	1
17-4	DB65-40049E	TERMINAL-BLOCK		1	1
17-5	DB65-10046A	CLIP-CAPACITOR		1	1
17-6	DB61-00250A	HOLDER-WIRE		1	1
17-7	DB93-00481H	ASS'Y LEAD WIRE		1	1
17-8	DB33-00050A	SOLENOID-ASS'Y	WIRE, ASS'Y	1	1
17-9	DB35-00036M	OLP	RBC12074-12500	1	1
18	DB72-00726E	SPONGE-FELT COMP CLOTH	FELT+PVC	1	1
19	DB95-00610C	ASS'Y-COMP		1	1
19-1	48D129JUAEL	COMP		1	1
19-2	DB63-00765A	GASKET		1	1
19-3	DB63-00762A	COVER-TERMINAL		1	1
19-4	DB60-30001A	NUT FLANGE	M5	1	1
20	DB96-03858A	ASS'Y CHECK VALVE	ASS'Y ; AQ12WHWE/AFR	1	1
21	DB99-00562B	ASS'Y 4WAY VALVE	ASS'Y	1	1
22	DB65-10088C	CABLE-TIE		1	1


6-3 Outdoor Unit

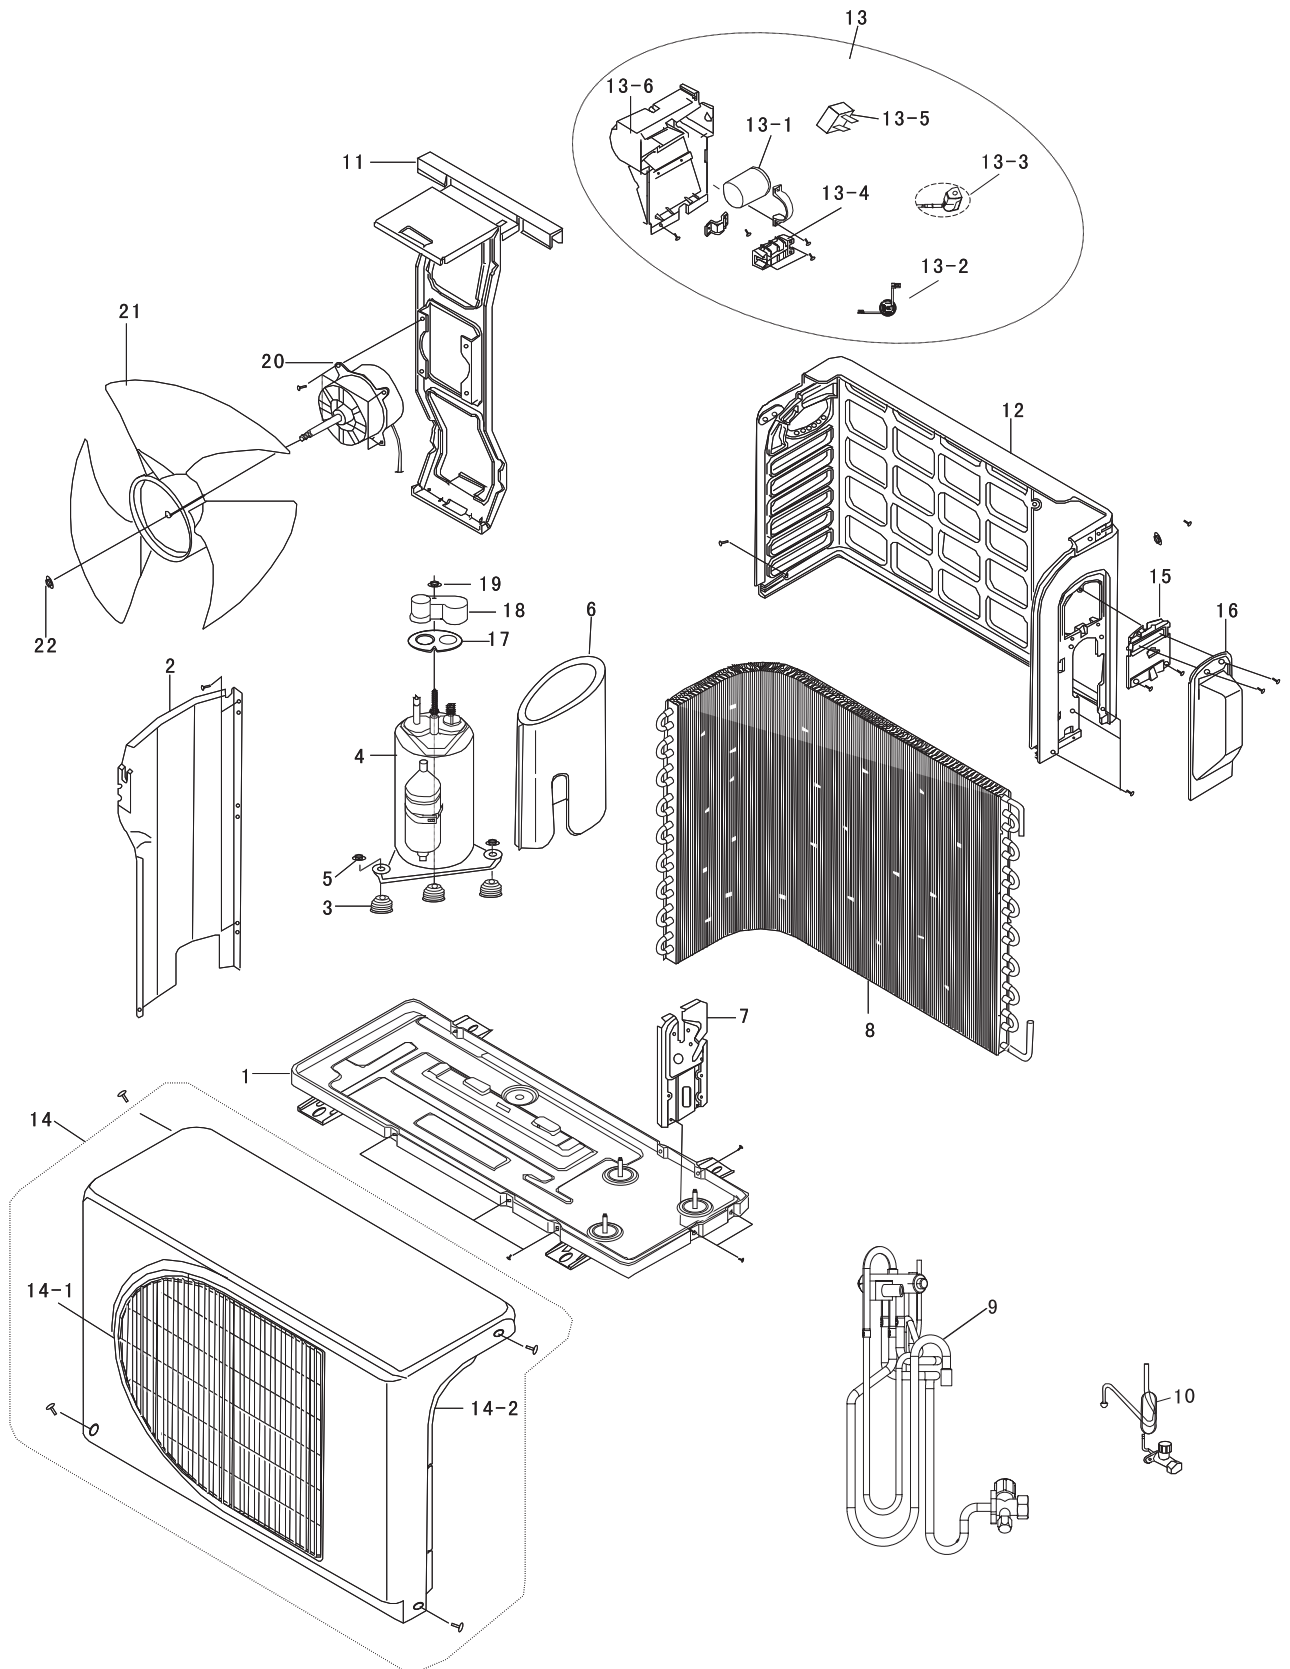

■ Parts List

No.	Code No.	Description	Specification	Q'TY	
				UQ09W8WE	SH09ZW8X
1	DB90-01281A	ASSY BASE-OUTDOOR	ASSY	1	1
2	DB94-00431B	ASSY PARTITION	ASSY	1	1
3	DB63-00763A	ISOLATOR GROMMET	44A ; NR35	3	3
4	44B102JXAEL	R/COMP , SSEC	ROTARY ; SSEC	1	1
5	DB60-30028A	SCREW-MACHINE		3	3
6	DB72-00720A	SPONGE-COMP SIDE	T10.0 ; ACTIVE P/J 9K	1	1
7	DB61-01651A	BRACKET-VALVE	T1.6 ; SGCC-M	1	1
8	DB96-02973A	ASSY COND	ASSY	1	1
9	DB99-00596A	ASSY VALVE 4 WAY	ASSY	1	1
10	DB96-04375B	ASSY TUBE CAPILLARY	ASSY	1	1
11	DB90-01279A	ASSY BRACKET MOTOR	ASSY ; SGCC-M,T1.2	1	1
12	DB90-01278B	ASSY CABINET SIDE	ASSY ; PP,T2.5	1	1
13	DB93-02505F	ASSY CONTROL OUT	ASSY	1	1
13-1	2501-001237	C-OIL	35uF,450V,BK,53x95mm,20.6	1	1
13-2	DB35-00036H	O.L.P , RBC12188-12500	ST17.0A/150,UT7.5A/69	1	1
13-3	DB33-00050A	SOLENOID COIL	220-240V ; 50/60HZ ; SSEC	3	3
13-4	DB65-40049E	TERMINAL BLOCK	(N1),1,2,3,AWG16,6	3	3
13-5	2301-001375	C-FILM	1500nF,+10-5%,450V	1	1
13-6	DB61-01196A	CASE CONTROL OUT	PP , V0 , BLK	1	1
14	DB90-01277A	ASSY CABI-FRONT	ASSY	1	1
14-1	DB63-00099A	GUARD FAN-WIRE	HSWR,T2.5,SC-99445	1	1
14-2	DB64-00086A	CABINET-FRONT	PP,T2.5	1	1
15	DB90-01280A	ASSY COVER CONTROL	ASSY ; HIPS,T2.0,	1	1
16	DB94-00430B	ASSY COVER VALVE	ASSY ; -,PP,T2.0	1	1
17	DB63-00765A	GASKET		1	1
18	DB63-00762A	COVER TERMIALN		1	1
19	DB60-30020A	NUT FLANGE		1	1
20	DB31-00034A	MOTOR FAN OUT	ASS025WTVA,AC,220V/240V	1	1
21	DB67-00036A	FAN-PROPELLER	AS+GF 20%,BLK	1	1
22	DB60-30020A	NUT FLANGE	FELT+PVC	1	1


6-4 Ass'y-Control In(Code No : DB93-02481S)

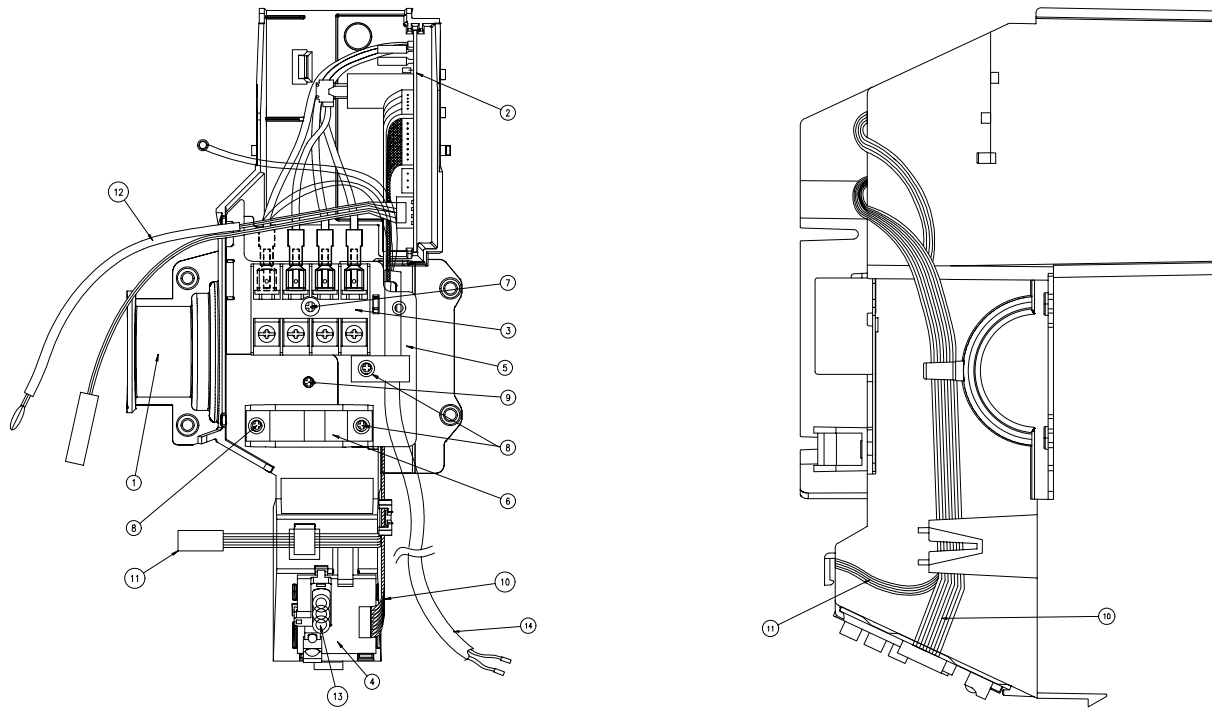

■ Parts List


No.	Code No.	Description	Specification	Q'TY	Remark
1	DB61-01637A	CASE-CONTROL	ABS	1	
2	DB93-02482A	ASS'Y PCB MAIN	FR-4, 120x90	1	
3	DB65-00140A	ASS'Y TERMINAL BLOCK	4P	1	
4	DB93-02483A	ASS'Y S/W & MODULE & DISPLAY PCB	FR-1, 30x70	1	
5	DB61-01639A	PLATE-CONTROL	SGCC-M, T1-2	1	
6	DB61-00171A	HOLDER-WIRE CLAMP	ABS	1	
7	6001-000929	SCREW-MACHINE	PH M3xL22	1	SNA
8	6001-000725	SCREW-MACHINE	TH M4xL16	2	SNA
9	6001-001054	SCREW-MACHINE	TH M4xL10	1	SNA
10	DB39-00949A	CONNECTOR WIRE S/W & MODULE & DISPLAY	8P	1	
11	DB39-00147A	CONNECTOR WIRE STEP MOTOR UP/DOWN	5P	1	
12	DB32-00020D	ASS'Y THERMISTOR WIRE	4P(103AT)	1	
13	DB63-00851A	COVER CLAMP	HIPS	1	
14	DB93-01549F	POWER CORD	3P	1	

7. Block Diagram

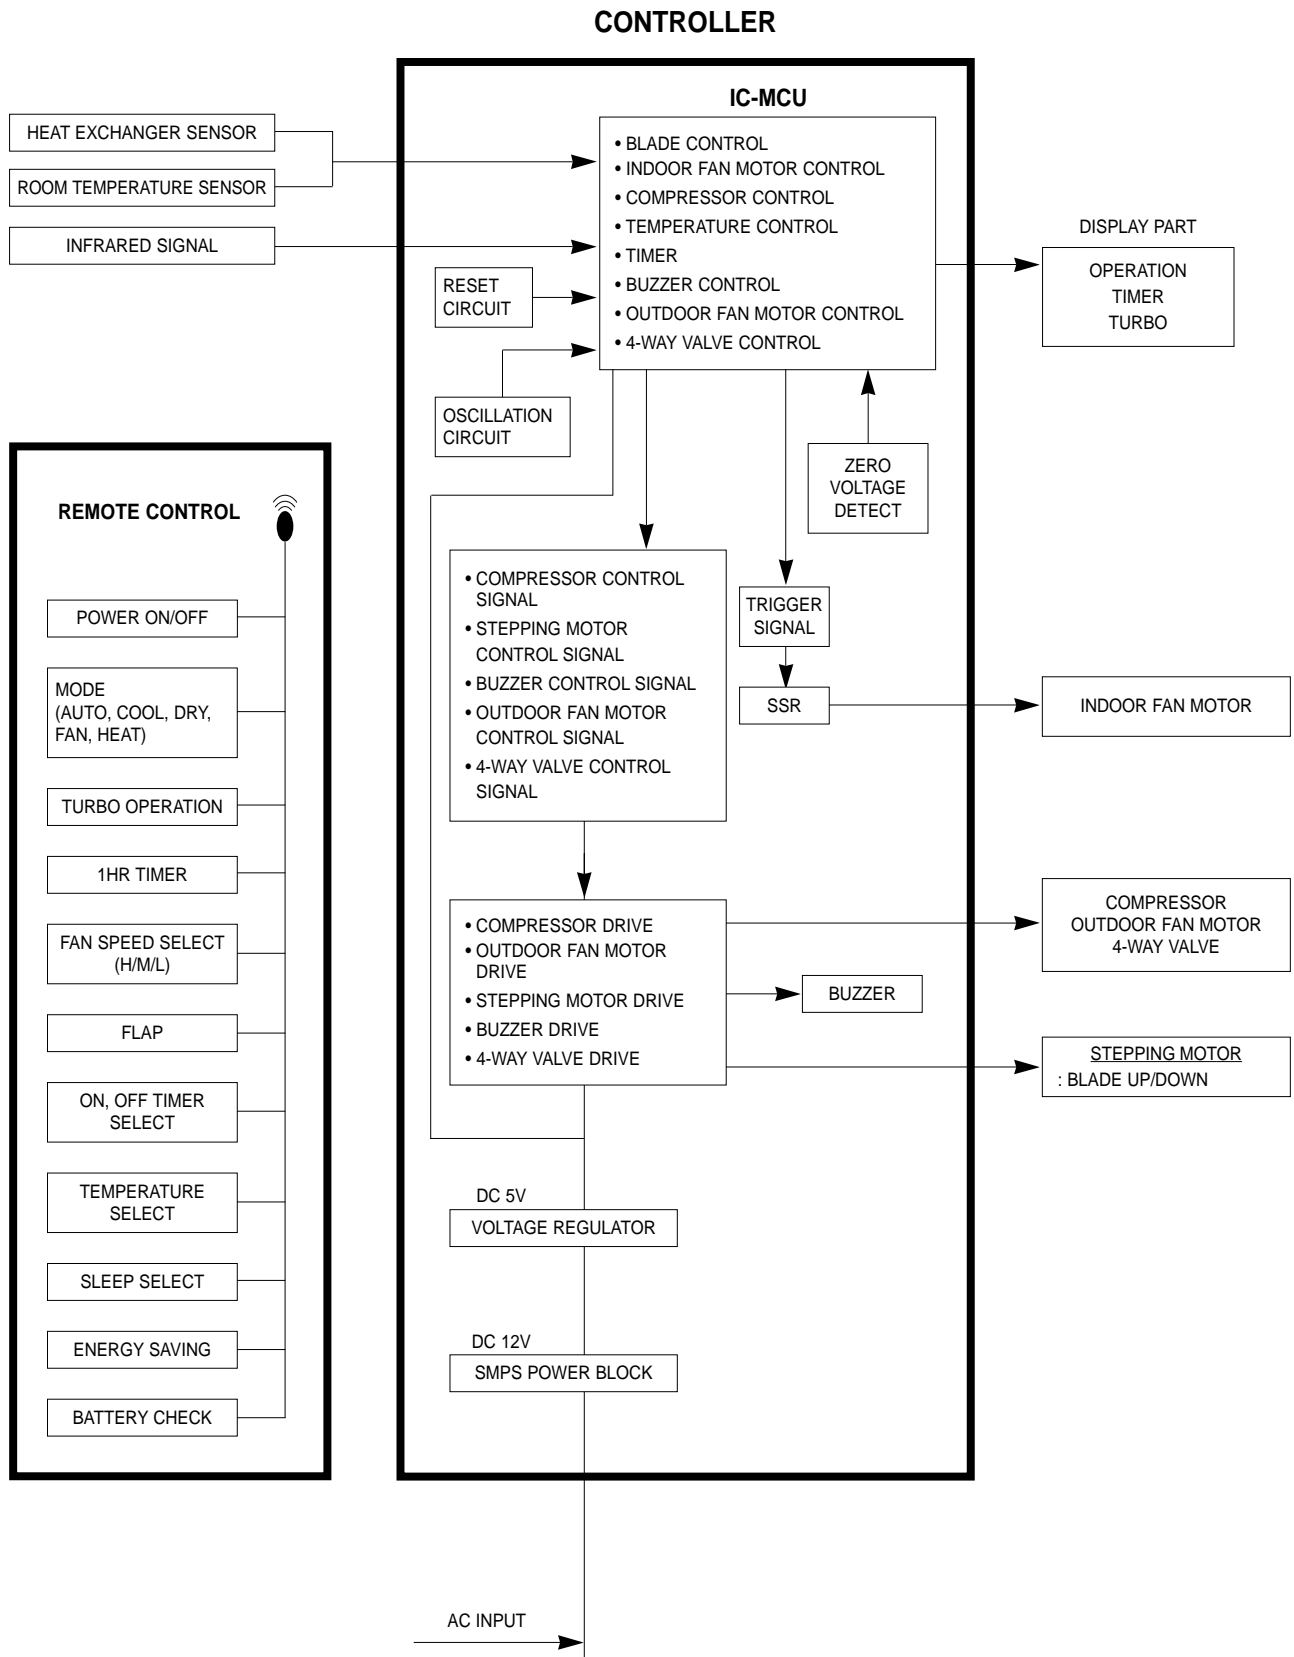


8. Wiring Diagram

8-1 Indoor Unit

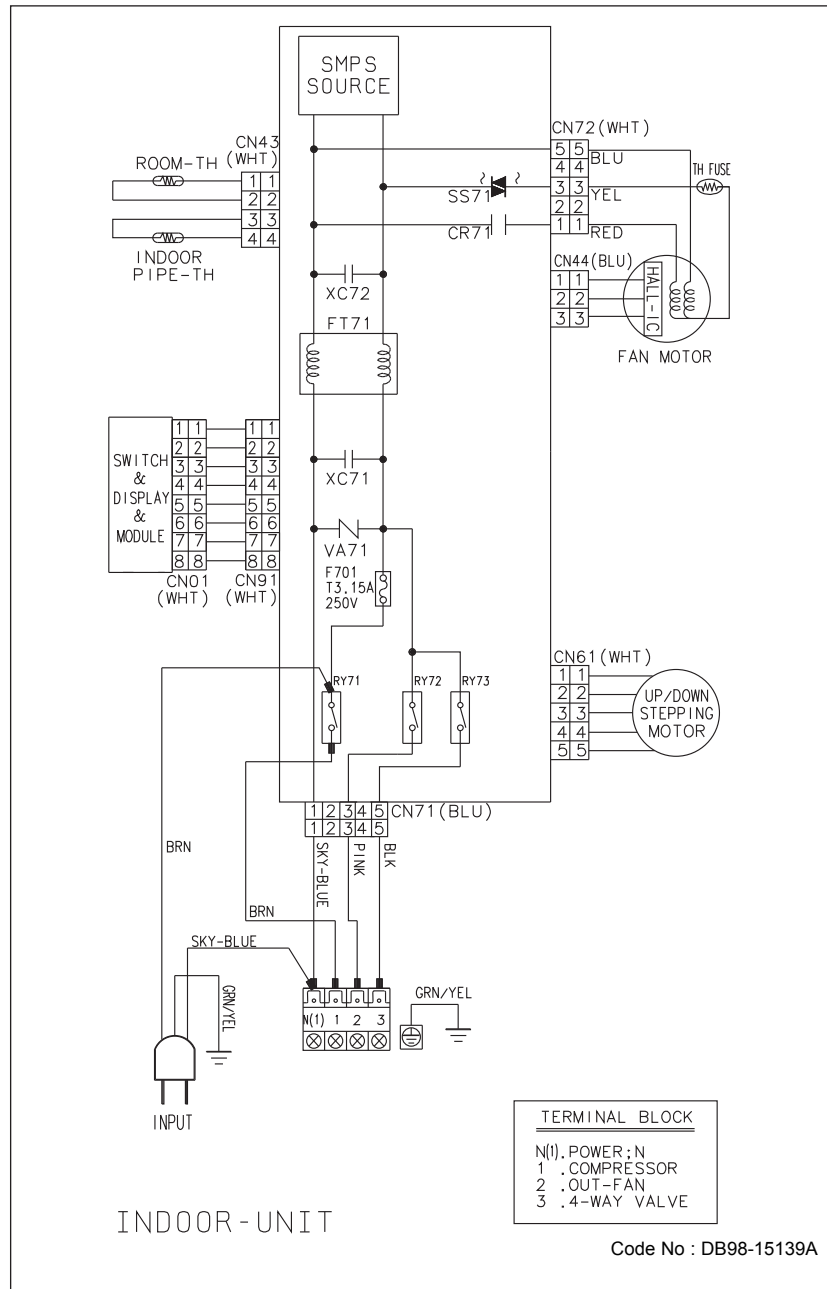

This Document can not be used without Samsung's authorization.

8-2 Outdoor Unit

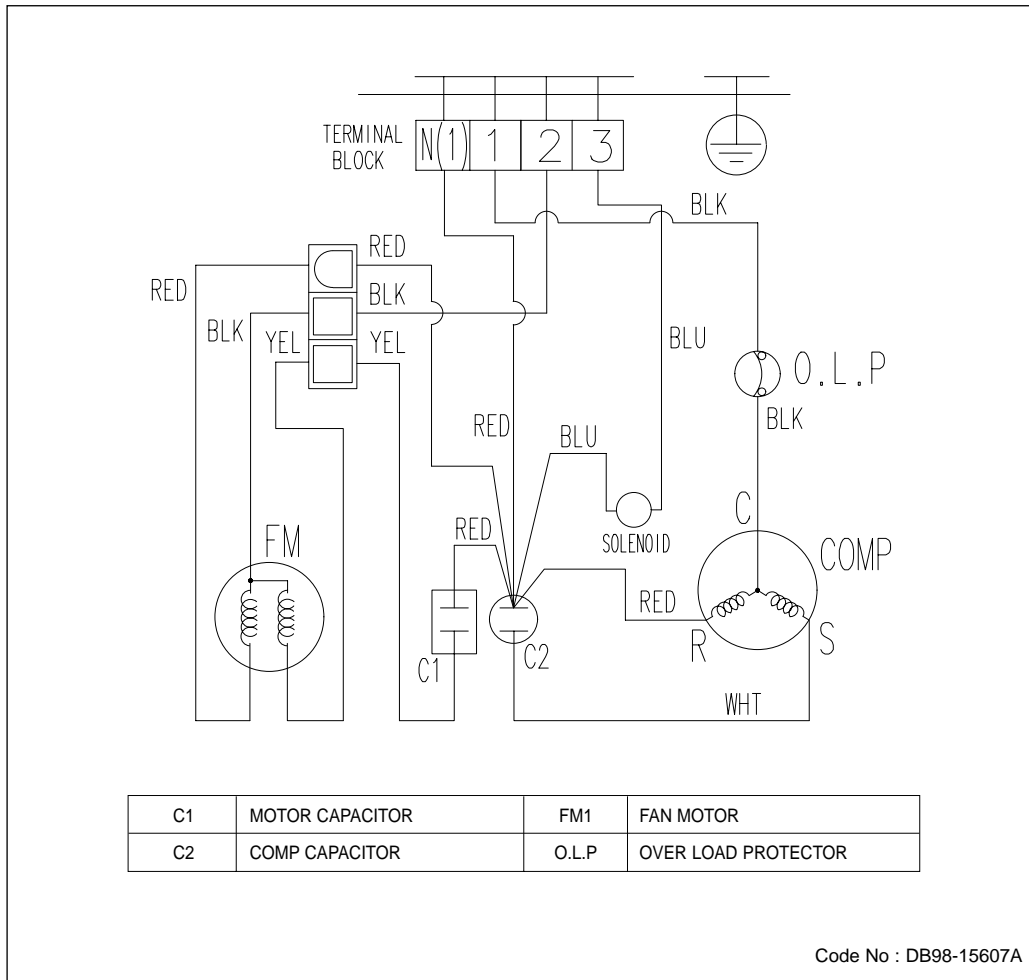

This Document can not be used without Samsung's authorization.



This Service Manual is a property of Samsung Electronics Co., Ltd.
Any unauthorized use of Manual can be punished under applicable
International and/or domestic law.

© Samsung Electronics Co., Ltd. Apr. 2004.
Code No. DB98-21594A(1)
Made in China