

# Service Manual

FM/AM STEREO RECEIVER

## SA-5270

(XA), (XAL), (XE), (XGF),  
(XSW), (XG), (XGH), (XSD)

## SA-5270K

(XSW), (XG), (XGH), (XSD)  
(XGF)

↑  
\* This photo shows only the products for [XA] and [XAL]



↑  
\* This photo shows the products for other destinations except (XA) and (XAL).

\* SA-5270K is different in appearance and colour-tone.

\* Cabinet colour differs according to area.

- \* The model SA-5270 (XA) is available in Asia, Latin America, Middle East and Africa only.
- \* The model SA-5270 (XAL) is available in Australia only.
- \* The model SA-5270 (XE) is available in England only.
- \* The model SA-5270/K (XGF) is available in France only.
- \* The model SA-5270/K (XSW) is available in Switzerland only.
- \* The model SA-5270/K (XG) is available in European only.
- \* The model SA-5270/K (XGH) is available in Holland only.
- \* The model SA-5270/K (XSD) is available in Scandinavia only.

### TECHNICAL SPECIFICATIONS Specifications are subject to change without notice for further improvement.

[DIN 45 500]

#### AMPLIFIER SECTION

|  |                              |
|--|------------------------------|
| 1 kHz continuous power<br>both channels driven                       | 2 x 44 W (4Ω), 2 x 38 W (8Ω) |
| 20 Hz~20 kHz continuous power<br>both channels driven                | 2 x 39 W (4Ω), 2 x 35 W (8Ω) |
| 40 Hz~16 kHz continuous power<br>both channels driven                | 2 x 39 W (4Ω), 2 x 35 W (8Ω) |
| Power bandwidth<br>both channels driven at 4Ω, 8Ω                    | 7 Hz~50 kHz, -3 dB           |
| Total harmonic distortion<br>rated power at 1 kHz                    | 0.3% (4Ω, 8Ω)                |
| rated power at 20 Hz~20 kHz  | 0.3% (4Ω, 8Ω)                |
| rated power at 40 Hz~16 kHz  | 0.3% (4Ω, 8Ω)                |
| -26 dB rated power at 1 kHz  | 0.2% (4Ω)                    |
| 50 mW power at 1 kHz   | 0.2% (4Ω)                    |
| Intermodulation distortion<br>rated power at 250 Hz: 8000 Hz=4:1, 4Ω | 0.3%                         |
| rated power at 60 Hz: 7 kHz=4:1, SMPTE, 8Ω                           | 0.3%                         |
| Damping factor   | 16 (4Ω), 32 (8Ω)             |
| Input sensitivity and impedance                                      |                              |
| PHONO  | 2.5 mV/47 kΩ                 |
| AUX, TAPE 2 PLAYBACK   | 150 mV/33 kΩ                 |
| TAPE 1 PLAYBACK, REC/PLAY input                                      | 180 mV/39 kΩ                 |

|   |                             |
|---|-----------------------------|
| PHONO maximum input voltage (1 kHz, RMS)<br>S/N | 130 mV                      |
| rated power PHONO                               | 65 dB (IHF, A: 78 dB)       |
| AUX   | 80 dB (IHF, A: 95 dB)       |
| -26 dB rated power PHONO                        | 55 dB, AUX 55 dB            |
| 50 mW power output PHONO                        | 55 dB, AUX 55 dB            |
| Frequency response PHONO                        | RIAA standard curve ±0.5 dB |
| AUX   | 20 Hz~20 kHz, ±0.5 dB       |
|   | 10 Hz~45 kHz, -1 dB         |
| Tone controls BASS                              | 50 Hz, + 10 dB~- 10 dB      |
| TREBLE  | 10 kHz, + 10 dB~- 10 dB     |
| Loudness control (volume at -30 dB)             | 50 Hz, + 10 dB              |
| Output voltage TAPE 1, 2 REC OUT                | 150mV                       |
| TAPE 1 REC/PLAY output                          | 30mV                        |
| Channel balance (250 Hz~6300 Hz)                | ±2.0 dB                     |
| Channel separation at 1 kHz                     | 55 dB                       |
| Headphones level and output impedance           | 400 mV/330Ω                 |
| Load impedance MAIN or REMOTE                   | ±16 Ω                       |
| MAIN + REMOTE                                   | ±16 Ω                       |

## FM TUNER SECTION (DIN 45 500)

|   |                                     |
|---|-------------------------------------|
| Frequency range                         | 88~108 MHz                          |
| Antenna impedance                       | 300Ω (balanced), 75Ω (unbalanced)   |
| Sensitivity (±40 kHz deviation)         | 1.9 μV (IHF: usable)                |
|   | 20 μV (IHF, S/N 46 dB, 75Ω, STEREO) |
|   | 1.9 μV (S/N 30 dB, 300Ω)            |
|   | 1.7 μV (S/N 26 dB, 300Ω)            |
|   | 1.5 μV (S/N 20 dB, 300Ω)            |
|   | 1.3 μV (S/N 30 dB, 75Ω)             |
|   | 1.2 μV (S/N 26 dB, 75Ω)             |
|   | 0.9 μV (S/N 20 dB, 75Ω)             |
| Total harmonic distortion               | MONO 0.15%                          |
|   | STEREO 0.3%                         |
| S/N (±40 kHz deviation)                 | MONO 58 dB (IHF: 75 dB)             |
|   | STEREO 55 dB (IHF: 70 dB)           |
| Frequency response                      | 20 Hz~14 kHz, ±1.5 dB               |
| Alternate channel selectivity (400 kHz) | 70 dB                               |
| Capture ratio                           | 1.5 dB                              |
| Image rejection at 98 MHz               | 65 dB                               |
| IF rejection at 98 MHz                  | 80 dB                               |
| Spurious response rejection at 98 MHz   | 80 dB                               |
| AM suppression                          | 55 dB                               |
| Stereo separation                       | 1 kHz 45 dB, 10 kHz 35 dB           |
| Leak carrier                            | 19 kHz -35 dB, 38 kHz -45 dB        |

|                                  |                         |
|----------------------------------|-------------------------|
| Limiting point                   | 1.2 μV                  |
| Bandwidth IF amplifier           | 250 kHz                 |
|                                  | FM demodulator 1000 kHz |
| Channel balance (250 Hz~6300 Hz) | ±1.5 dB                 |

## AM TUNER SECTION

|                             |                 |
|-----------------------------|-----------------|
| Frequency range             | 525~1605 kHz    |
| Sensitivity                 | 30 μV: 300 μV/m |
| Selectivity                 | 30 dB           |
| Image rejection at 1000 kHz | 45 dB           |
| IF rejection at 1000 kHz    | 40 dB           |

## GENERAL

|   |   |
|---|---|
| Power consumption                           | 400 W   |
| Power supply (50 Hz/60 Hz)                  | 110 V/120 V/220 V/240 V                         |
|   | 220V/240V (For United Kingdom)                  |
|   | 240 V only (For Australia)                      |
| Dimensions (W x H x D) for [XA, XAL]        | 458 x 147 x 295 mm (18 1/2" x 5 7/8" x 11 5/8") |
| Dimensions (W x H x D) Except for [XA, XAL] | 420 x 142 x 295 mm (16 1/2" x 5 5/8" x 11 5/8") |
| Weight, for [XA, XAL]                       | 9.0 kg (19.8 lb.)                               |
| Weight, Except for [XA, XAL]                | 8.0 kg (17.6 lb.)                               |

## TECHNISCHE DATEN (DIN 45 500)

Spezifikationen können infolge von Verbesserungen ohne Ankündigung geändert werden.

### VERSTÄRKERTEIL

|   |  |
|---|--|
| RMS-Dauerleistung bei 1 kHz                               | 2 x 44 W (4Ω)  |
| beide Kanäle zusammen angesteuert                         | 2 x 38 W (8Ω)  |
| RMS-Dauerleistung bei 20 Hz ~ 20 kHz                      | 2 x 39 W (4Ω)  |
| beide Kanäle zusammen angesteuert                         | 2 x 35 W (8Ω)  |
| RMS-Dauerleistung bei 40 Hz ~ 16 kHz                      | 2 x 39 W (4Ω)  |
| beide Kanäle zusammen angesteuert                         | 2 x 35 W (8Ω)  |
| Leistungsbandbreite                                       | beide Kanäle angesteuert bei 4Ω, 8Ω 7 Hz ~ 50 kHz, -3 dB |
| Harmonische Verzerrungen                                  |  |
| Nennleistung bei 1 kHz                                    | 0.3% (4Ω, 8Ω)  |
| Nennleistung bei 20 Hz ~ 20 kHz                           | 0.3% (4Ω, 8Ω)  |
| Nennleistung bei 40 Hz ~ 16 kHz                           | 0.3% (4Ω, 8Ω)  |
| -26 dB Ausgangsleistung bei 1 kHz                         | 0.2% (4Ω)  |
| 50 mW Ausgangsleistung bei 1 kHz                          | 0.2% (4Ω)  |
| Intermodulationsverzerrung                                |  |
| Nennleistung bei 250 Hz: 8000 Hz=4: 1, 4Ω                 | 0.3%   |
| Nennleistung bei 60 Hz: 7 kHz=4: 1, 8Ω                    | 0.3%   |
| Dämpfungsfaktor   | 16 (4Ω), 32 (8Ω)   |
| Eingangsempfindlichkeit & Impedanz                        |  |
| PHONO   | 2.5 mV/47 kΩ   |
| AUX, TAPE 2 PLAYBACK                                      | 150 mV/33 kΩ   |
| TAPE 1 PLAYBACK, REC/PLAY Eingang                         | 180 mV/39 kΩ   |
| PHONO Maximale Eingangsspannungen (1 kHz RMS)             | 130 mV   |
| Fremdspannungsabstand                                     |  |
| Nennleistung PHONO  | 65 dB (IHF, A: 78 dB)                                    |
| AUX   | 80 dB (IHF, A: 95 dB)                                    |
| -26 dB Ausgangsleistung                                   | PHONO, AUX 55 dB   |
| 50 mW Ausgangsleistung                                    | PHONO, AUX 55 dB   |
| Frequenzgang  | PHONO RIAA Standardkurve ±0.5 dB                         |
| AUX   | 20 Hz ~ 20 kHz, ±0.5 dB                                  |
|   | 10 Hz ~ 45 kHz -1 dB                                     |
| Klangregler   | BÄSSE 50 Hz, +10 dB ~ -10 dB                             |
|   | HÖHEN 10 kHz, +10 dB ~ -10 dB                            |
| Gehörgerechte Lautstärkekorrektur (Lautstärke bei -30 dB) | 50 Hz, +10 dB  |
| Ausgangsspannungen  | TAPE 1, 2 REC OUT 150 mV                                 |
|   | TAPE 1 REC/PLAY Aufnahme 30 mV                           |
| Kanalabweichung (250 Hz ~ 6300 Hz)                        | ±2.0 dB  |
| Kanaltrennung bei 1 kHz                                   | 55 dB  |
| Kopfhörerpegel und Ausgangsimpedanz                       | 400mV/330Ω   |
| Endimpedanz   | MAIN oder REMOTE 4 ~ 16Ω                                 |
|   | MAIN und REMOTE 8 ~ 16Ω                                  |

### UKW-TUNERTEIL

|                                      |   |
|--------------------------------------|---|
| Empfangsbereich                      | 88 ~ 108 MHz  |
| Antennenanschluss                    | 300Ω (symmetrisch), 75Ω (asymmetrisch)                |
| Empfindlichkeit (±40 kHz Hub)        | 1.9 μV (IHF)  |
|                                      | 20 μV (IHF, 46 dB Fremdspannungsabstand, 75Ω, STEREO) |
|                                      | 1.9 μV (30 dB Fremdspannungsabstand, 300Ω)            |
|                                      | 1.7 μV (26 dB Fremdspannungsabstand, 300Ω)            |
|                                      | 1.5 μV (20 dB Fremdspannungsabstand, 300Ω)            |
|                                      | 1.3 μV (30 dB Fremdspannungsabstand, 75Ω)             |
|                                      | 1.2 μV (26 dB Fremdspannungsabstand, 75Ω)             |
|                                      | 0.9 μV (20 dB Fremdspannungsabstand, 75Ω)             |
| Harmonische Verzerrung               | MONO 0.15%  |
|                                      | STEREO 0.3%   |
| Fremdspannungsabstand (±40 kHz Hub)  |   |
| MONO                                 | 58 dB (IHF: 75 dB)                                    |
| STEREO                               | 55 dB (IHF: 70 dB)                                    |
| Frequenzgang                         | 20 Hz ~ 14 kHz, ±1.5 dB                               |
| Selektivität (400 kHz)               | 70 dB   |
| Gleichwellen Selektion               | 1.5 dB  |
| Spiegelselektion bei 98 MHz          | 65 dB   |
| ZF-Festigkeit bei 98 MHz             | 80 dB   |
| Unselektivitätsfestigkeit bei 98 MHz | 80 dB   |
| AM-Unterdrückung                     | 55 dB   |
| Stereo Übersprechdämpfung            | 1 kHz 45 dB, 10 kHz 35 dB                             |
| Trägerrest                           | 19 kHz -35 dB, 38 kHz -45 dB                          |
| Begrenzung, Einsatzpunkt             | 1.2 μV  |
| Bandbreite                           | ZF-Verstärker 250 kHz                                 |
|                                      | UKW-Demodulator 1000 kHz                              |
| Kanalabweichung (250 Hz ~ 6300 Hz)   | ±1.5 dB   |

### MW-TUNERTEIL

|                               |                 |
|-------------------------------|-----------------|
| Empfangsbereich               | 525 ~ 1605 kHz  |
| Empfindlichkeit               | 30 μV, 300 μV/m |
| Selektivität                  | 30 dB           |
| Spiegelselektion bei 1000 kHz | 45 dB           |
| ZF-Festigkeit bei 1000 kHz    | 40 dB           |

### ALLGEMEINE DATEN

|  |                         |
|--|-------------------------|
| Leistungsaufnahme                      | 400 W                   |
| Netzspannung umschaltbar (50 Hz/60 Hz) | 110 V/120 V/220 V/240 V |
| Abmessungen (B x H x T)                | 420 x 142 x 295 mm      |
| Gewicht                                | 8.0 kg                  |

## CARACTERISTICS TECHIQUES (DIN 45 500)

Sujet à changement sans préavis.

### SECTION AMPLIFICATEUR

|  |                      |
|--|----------------------|
| Puissance RMS (continue) de 1 kHz          | 2 x 44 W (4Ω)        |
| pour l'ensemble des canaux excités         | 2 x 38 W (8Ω)        |
| Puissance RMS (continue) de 20 Hz à 20 kHz | 2 x 39 W (4Ω)        |
| pour l'ensemble des canaux excités         | 2 x 35 W (8Ω)        |
| Puissance RMS (continue) de 40 Hz à 16 kHz | 2 x 39 W (4Ω)        |
| pour l'ensemble des canaux excités         | 2 x 35 W (8Ω)        |
| Largueur de bande de puissance             | 7 Hz ~ 50 kHz, -3 dB |

|   |                  |
|---|------------------|
| Distorsion harmonique totale                        |                  |
| pour la puissance mesurée à 1 kHz                   | 0.3% (4Ω, 8Ω)    |
| pour la puissance mesurée à 20 Hz ~ 20 kHz          | 0.3% (4Ω, 8Ω)    |
| pour la puissance mesurée à 40 Hz ~ 16 kHz          | 0.3% (4Ω, 8Ω)    |
| pour une puissance mesurée de -26 dB, 1 kHz         | 0.2% (4Ω)        |
| pour une puissance mesurée de 50 mW, 1 kHz          | 0.2% (4Ω)        |
| Distorsion d'intermodulation                        |                  |
| pour la puissance mesurée à 250 Hz : 8 kHz=4: 1, 4Ω | 0.3%             |
| pour la puissance mesurée à 60 Hz: 7 kHz=4: 1, 8Ω   | 0.3%             |
| Facteur d'amortissement                             | 16 (4Ω), 32 (8Ω) |
| Sensibilité & impédance d'entrée                    |                  |
| PHONO   | 2.5 mV/47 kΩ     |
| AUX, TAPE 2 PLAYBACK                                | 150 mV/33 kΩ     |
| TAPE 1 PLAYBACK, REC/PLAY entrée                    | 180 mV/39 kΩ     |
| Voltage d'entrée maximum (PHONO, 1 kHz RMS)         | 130 mV           |

**CARACTERISTICS TECHIQUES** (DIN 45 500) Sujet à changement sans préavis.

|  |  |
|--|--|
| <b>Signal/bruit</b><br>pour la puissance nominale  | <b>PHONO</b> 65 dB (IHF, A: 78 dB)<br><b>AUX</b> 80 dB (IHF, A: 95 dB)         |
| pour une sortie de -26 dB  | <b>PHONO, AUX</b> 55 dB  |
| pour une sortie de 50 mW   | <b>PHONO, AUX</b> 55 dB  |
| <b>Réponse de fréquence</b><br><b>PHONO</b><br><b>AUX</b>                                | Courbe standard RIAA ±0.5 dB<br>20 Hz ~ 20 kHz 0.5 dB<br>10 Hz ~ 45 kHz, -1 dB |
| <b>Réglage de la tonalité</b><br><b>BASS</b> (graves)<br><b>TREBLE</b> (aigus)           | 50 Hz, +10 dB ~ -10 dB<br>10 kHz, +10 dB ~ -10 dB                              |
| <b>Contrôle d'intensité sonore (volume à -30 dB)</b>                                     | 50 Hz, +10 dB  |
| <b>Tension de sortie</b> <b>TAPE 1, 2 REC OUT</b><br><b>TAPE 1 REC/PLAY (sortie)</b>     | 150 mV<br>30 mV  |
| <b>Equilibrage de canaux (250 Hz ~ 6300 Hz)</b>  | ±2.0 dB  |
| <b>Ecart canaux à 1 kHz</b>  | 55 dB  |
| <b>Niveau des écouteurs et impédance de sortie</b>                                       | 400mV/330Ω   |
| <b>Impédance de charge</b> <b>PRINCIPALE ou ELOIGNEE</b><br><b>PRINCIPALE + ELOIGNEE</b> | 4 ~ 16Ω<br>8 ~ 16Ω   |

|   |                                |                                  |
|---|--------------------------------|----------------------------------|
| <b>Distorsion harmonique totale</b>             | <b>MONO</b> 0.15%              | <b>STEREO</b> 0.3%               |
| <b>Signal/bruit (±40 kHz déviation)</b>         | <b>MONO</b> 58 dB (IHF: 75 dB) | <b>STEREO</b> 55 dB (IHF: 70 dB) |
| <b>Réponse de fréquence</b>                     | 20 Hz ~ 14 kHz, ±1.5 dB        |                                  |
| <b>Sélectivité alternée par canal (400 kHz)</b> | 70 dB                          |                                  |
| <b>Taux de capture</b>                          | 1.5 dB                         |                                  |
| <b>Rejet d'image (à 98 MHz)</b>                 | 65 dB                          |                                  |
| <b>Rejet FI (a 98 MHz)</b>                      | 80 dB                          |                                  |
| <b>Rejet de réponse parasite (a 98 MHz)</b>     | 80 dB                          |                                  |
| <b>Suppression AM</b>                           | 55 dB                          |                                  |
| <b>Séparation stéréophonique</b>                | 1 kHz 45 dB, 10 kHz            | 35 dB                            |
| <b>Courant porteur de dispersion</b>            | 19 kHz -35 dB, 38 kHz          | -45 dB                           |
| <b>Point limite</b>                             | 1.2μV                          |                                  |
| <b>Largeur de bande</b> <b>Amplificateur FI</b> | 250 kHz                        |                                  |
| <b>Démodulateur FM</b>                          | 1000 kHz                       |                                  |
| <b>Equilibrage de canaux (250 Hz ~ 6300 Hz)</b> | ±1.5 dB                        |                                  |

**SECTION TUNER FM**

|  |   |
|--|---|
| <b>Gamme de fréquences</b>             | 88 ~ 108 MHz                                |
| <b>Impédance d'antenne</b>             | 300Ω (symétrique) 75Ω (asymétrique)         |
| <b>Sensibilité (±40 kHz déviation)</b> | 1.9μV (IHF, utilisable)                     |
|  | 20μV (IHF, signal/bruit 46 dB, 75Ω, STEREO) |
|  | 1.9μV (Signal/bruit 30 dB, 300Ω)            |
|  | 1.7μV (Signal/bruit 26 dB, 300Ω)            |
|  | 1.5μV (Signal/bruit 20 dB, 300Ω)            |
|  | 1.3μV (Signal/bruit 30 dB, 75Ω)             |
|  | 1.2μV (Signal/bruit 26 dB, 75Ω)             |
|  | 0.9μV (Signal/bruit 20 dB, 75Ω)             |


**SECTION TUNER AM**

|                                   |                |
|-----------------------------------|----------------|
| <b>Gamme de fréquence</b>         | 525 ~ 1605 kHz |
| <b>Sensibilité</b>                | 30μV, 300μV/m  |
| <b>Selectivité</b>                | 30 dB          |
| <b>Rejet d'image (à 1000 kHz)</b> | 45 dB          |
| <b>Rejet FI (a 1000 kHz)</b>      | 40 dB          |


**GENERALITES**

|                                  |                         |
|----------------------------------|-------------------------|
| <b>Consommation</b>              | 400 W                   |
| <b>Alimentation (50 Hz/60Hz)</b> | 110 V/120 V/220 V/240 V |
| <b>Dimensions (L x H x Pr)</b>   | 420 x 142 x 295 x mm    |
| <b>Poids</b>                     | 8.0 kg                  |

**LOCATAION OF CONTROLS**

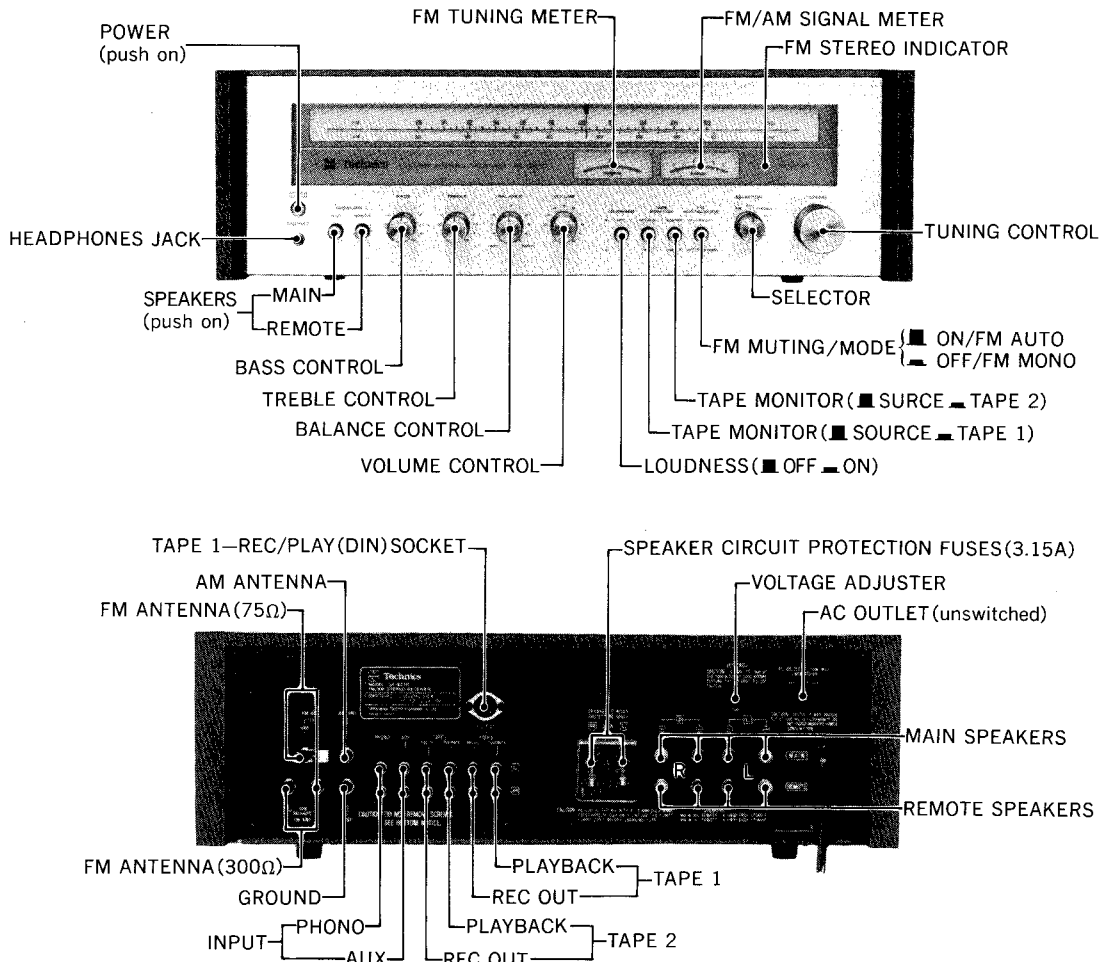

- This photo shows only the products for [XA]
- The products for other desintations except [XA] are not equipped with AC outlet.
- For further remark, the products for [XAL] are not provided with voltage adjuster and AC outlet.

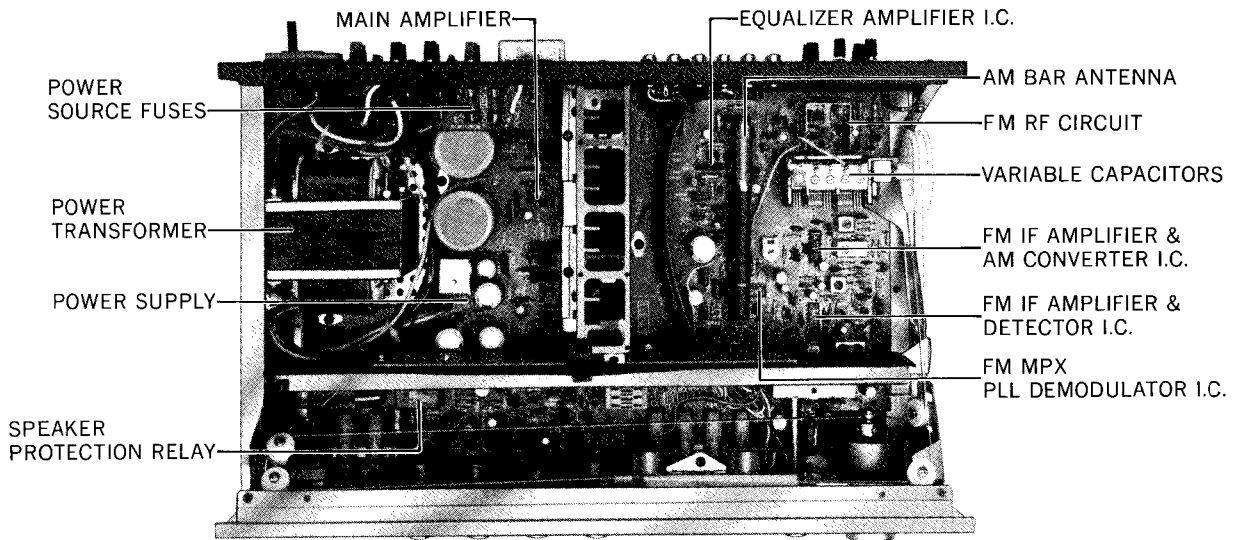

**NOTE**

The unit is provided with the speaker circuit protection fuses at the right and left channels respectively. The fuse is to prevent the power transistor from destruction, should the speaker terminals be short-circuited. Accordingly, if the unit fails to function upon completion of the speaker connections, check the speaker protection fuses first of all for possible blowing.

**ALIGNMENT POINTS**

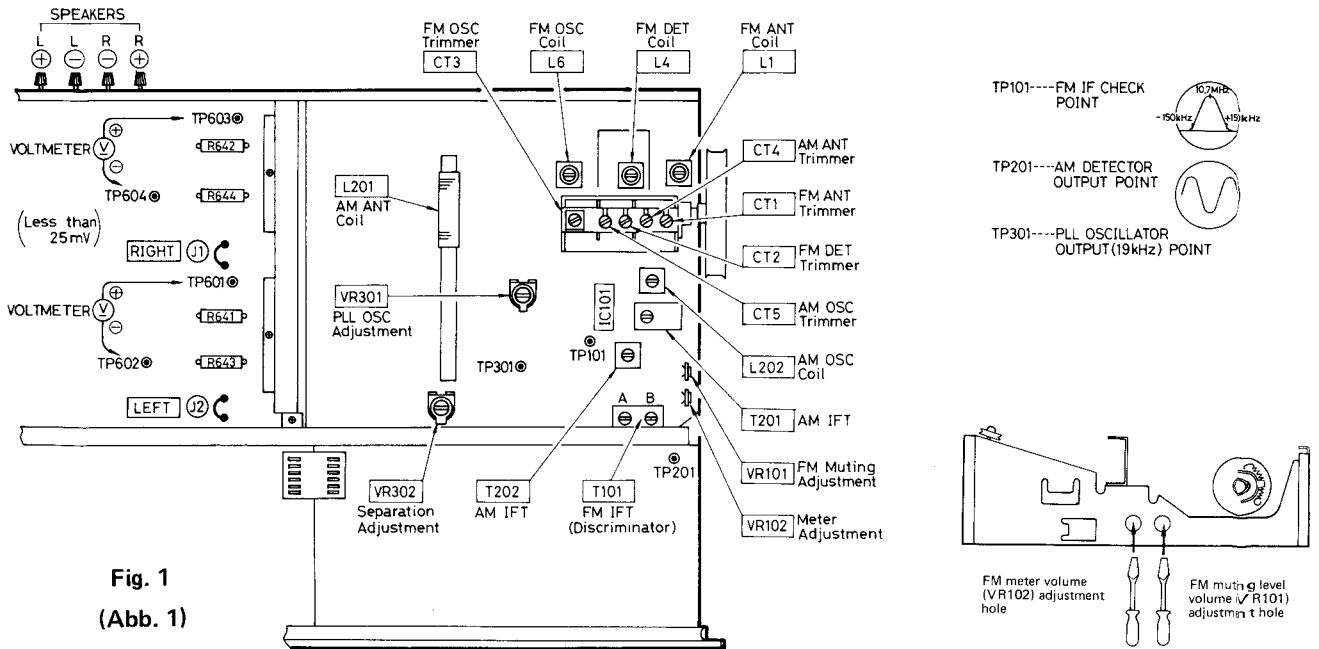


Fig. 1 (Abb. 1)

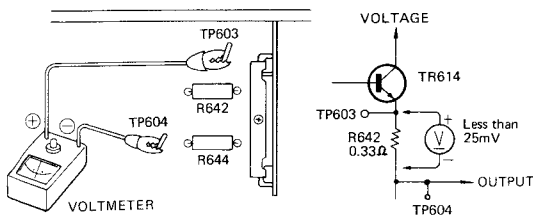


Fig. 2 (Abb. 2) Voltage check method (Stromspannung-prüfmethode) Méthode de vérification de tension

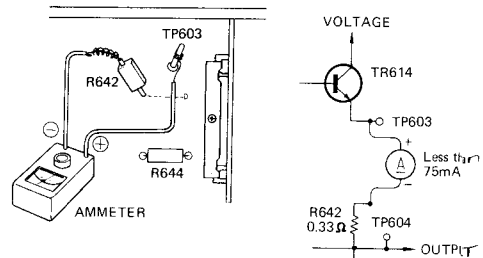


Fig. 3 (Abb. 3) Current check method (Stromstärke-Prüfmethode) Méthode de vérification de courant

## ■ TO REMOVE CABINET

(Products for [XA] and [XAL] only)

1. Remove four (4) cabinet-mounting screws (① ~ ④), as shown in fig. 4.
2. Remove cabinet from chassis.
3. When installing the front panel, insert the cabinet edge into groove of front panel as shown in fig. 5.

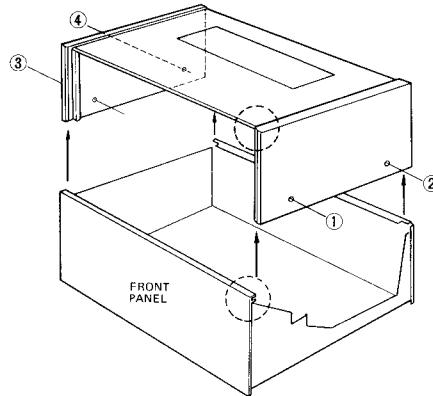


Fig. 4

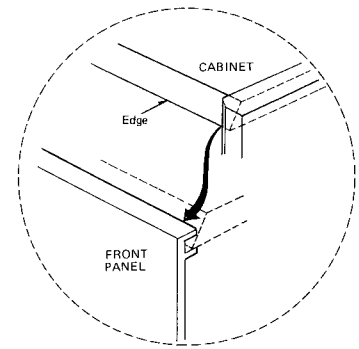


Fig. 5

## ■ TO REMOVE BOTTOM BOARD

1. Remove eight (8) bottom board-mounting screws (① ~ ⑧), as shown in fig. 6.
2. When the bottom board is to be removed for repair, never remove any screws other than set screws for the bottom board. Energization of the unit with screws other than the bottom board set screws removed may result in troubles in the circuit.

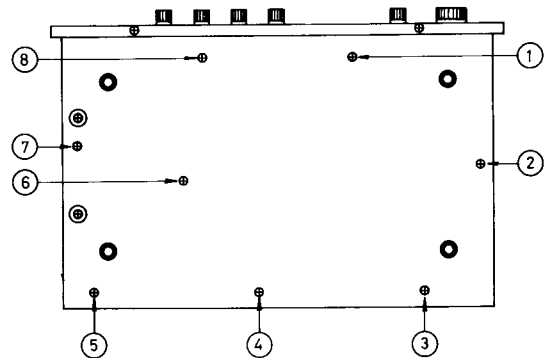


Fig. 6

## ■ ALIGNMENT INSTRUCTIONS... MAIN AMPLIFIER CIRCUIT

- When the power transistor is replaced, be sure to apply silicone compound (or equivalent thermal diffusion agent) onto the mica plate, and at the same time confirm the idling current of the power transistor. (measure voltage across the emitter resistance)

### Ⓐ For adjustment with DC voltmeter

1. Turn the speaker switch "OFF".
2. Connect the DC voltmeter as shown in "Alignment Points". (Fig. 1)
3. If the reading is under 25mV approximately several minutes after turning ON the power supply, the circuit is "OK".  
On the other hand, if the reading is over 25mV, cut off the lead wire for (J2) in the case of left channel (The lead wire for (J1) in the case of right channel).
4. Should the reading not fall under 25mV even when the lead wire has been cut off, there is something wrong with the circuit, and therefore, check the power source circuit or main amplifier circuit.

NOTE: When cutting off the lead wire, cut off the same at the root.

### Ⓑ Current should be checked only when adjustment is made with a tester. (measuring instrument incapable of measuring voltage in mV unit.)

1. Turn OFF the power supply for the set.
2. Connect the ammeter as shown in Fig. 3 (Case of right channel).
3. After ensuring that the ammeter will not come off, turn ON the power supply.
4. If the reading is under 75mA after several minutes (But, when nothing resistance of internal resistor by ammeter) the circuit is "OK". If over 75mA, cut off the lead wire for (J2) in the case of left channel (The lead wire for (J1) in the case of right channel).
5. If the reading does not fall under 75mA, there is something wrong with the circuit.

NOTE: The adjustment may be made either by Ⓐ or by Ⓑ method. (We recommend the method Ⓐ where possible).  
Figs. 2 and 3 are related to the case of right channel.

# ■ ALIGNMENT INSTRUCTIONS ... FM AND AM TUNER CIRCUIT

**NOTE** For adjustment, proceed with the bottom board attached as it is.

| Notes:   |  |   |   |   |  |           |
|--|--|---|---|---|--|-----------|
| 1. Selector switch   | ..... (AM (AM Alignment)<br>FM (FM Alignment))           | 5. Speakers switch  | ..... MAIN and REMOTE to ON   |   |  |           |
| 2. FM Muting/mode switch   | ..... on/FM auto   | 6. Volume control   | ..... Variable  |   |  |           |
| 3. Maintain line voltage at rated voltage.   |  | 7. Output of signal generator should be no higher than necessary to obtain an output reading. |   |   |  |           |
| 4. Tape monitor switch   | ..... Source   | 8. 300Ω FM dummy antenna  | ..... Refer to fig. 7.  |   |  |           |
| AM/FM SIGNAL GENERATOR   |  | DIAL SETTING  | INDICATOR (VTVM or SCOPE) (DISTORTION METER)                        | ADJUSTMENT POINTS   | REMARKS  |           |
| CONNECTION   | FREQUENCY  | <b>AM ALIGNMENT</b>   |   |   |  |           |
| 1. AM signal generator high side through 0.001μF to AM antenna trimmer terminal.   | 455kHz (30% Mod. with 400Hz) [Set for England to 470kHz] | Point of non-interference   | Connect VTVM or scope to speaker terminal(L or R) or TP201 of set.  | T201 (1st IFT)<br>T202 (2nd IFT)  | Adjust for maximum output.   |           |
| 2. Fashion loop of several turns of wire and radiate signal into loop of receiver  | 600kHz (30% Mod. with 400Hz)                             | 600kHz  | Connect VTVM or scope to speaker terminal(L or R) or TP201 of set.  | L202 (OSC Coil)<br>L201 (ANT Coil)  | Adjust for maximum output. Adjust L201 by moving coil bobbin along ferrite core.           |           |
| 3. Fashion loop of several turns of wire and radiate signal into loop of receiver.   | 1500kHz (30% Mod. with 400Hz)                            | 1500kHz   | Connect VTVM or scope to speaker terminal (L or R) or TP201 of set. | CT5 (OSC Trimmer)<br>CT4 (ANT Trimmer)  | Adjust for maximum output. Repeat steps (2) and (3).                                       |           |
| <b>FM IF ALIGNMENT</b>   |  |   |   |   |  |           |
| 4. /   | No signal  | Point of non-interference   | FM Tuning meter of set  | T101 (Discri IFT) Primary [A]   | Adjust for center of tuning meter indication.  |           |
| <b>FM RF ALIGNMENT</b>   |  |   |   |   |  |           |
| 5. Connect FM signal generator to 300Ω FM antenna terminals through FM dummy antenna.  | 90MHz (100% Mod. with 400Hz)                             | 90MHz   | Connect VTVM or scope to speaker terminal(L or R) or TP101 of set.  | L6 (OSC Coil)<br>L4 (DET Coil)<br>L1 (ANT Coil)   | Adjust for maximum output.   |           |
| 6. Connect FM signal generator to 300Ω FM antenna terminals through FM dummy antenna.  | 106MHz (100% Mod. with 400Hz)                            | 106MHz  | Connect VTVM or scope to speaker terminal(L or R) or TP101 of set.  | CT3 (OSC Trimmer)<br>CT2 (DET Trimmer)<br>CT1 (ANT Trimmer)   | Adjust for maximum output. Repeat steps (5) and (6).                                       |           |
| <b>FM MONO DISTORTION ALIGNMENT</b>  |  |   |   |   |  |           |
| 7. Connect FM signal generator to 300Ω FM antenna terminals through FM dummy antenna.  | 100MHz (100% Mod. with 400Hz)                            | 100MHz  | Connect distortion meter to left channel speaker terminal of set.   | T101 (Discri IFT) Secondary [B]   | Tuning at 100MHz and adjust for minimum distortion. Repeat steps (4) and (7).              |           |
| <b>FM SIGNAL METER ALIGNMENT</b>   |  |   |   |   |  |           |
| 8. Connect FM signal generator to 300Ω FM antenna terminals through FM dummy antenna. Apply about 100dB (100mV)  | 100MHz (100% Mod. with 400Hz)                            | 100MHz  | Signal meter of set.  | VR102   | FM Muting/Mode switch to "off/FM mono". Adjust VR102 to about "4.7" on signal meter scale. |           |
| <b>FM MUTING LEVEL ALIGNMENT</b>   |  |   |   |   |  |           |
| 9. Connect FM signal generator to 300Ω FM antenna terminals through FM dummy antenna. Apply 16dB (6.3μV) to set. SG indication are 28dB (IHF)  | 100MHz (100% Mod. with 400Hz)                            | 100MHz  | Connect VTVM or scope to speaker (L or R) terminal of set.          | VR101   | FM Muting/Mode switch to "on/FM auto". Adjust so that output can be obtained.              |           |
| <b>FM MPX PILOT ALIGNMENT</b>  |  |   |   |   |  |           |
| Using a frequency counter  |  |   | Using alternate system  |   |  |           |
| 10. 1. 98MHz Non-modulated mono signal applied to set.<br>2. FM Muting/Mode switch to "on/FM auto".<br>3. Connect frequency counter to TP301 through resistor (100 kΩ).<br>4. Adjust VR301 to 19kHz ±30Hz. |  |   |   | 1. Apply stereo signal from generator or stereo station to receiver.<br>2. Adjust VR301 until stereo indicator lights up. Cement arm of VR301 as shown in fig. 8. |  |           |
| <b>STEREO SEPARATION ALIGNMENT</b>   |  |   |   |   |  |           |
| Notes:   |  |   |   |   |  |           |
| 1. Stereo modulator  | .....  | • Connect stereo modulator output to EXT. MOD. terminal of signal generator.                  | • Internal OSC  | ..... 1kHz  | • Pilot signal modulation  | ..... 10% |
| 2. FM signal generator   | .....  | • Frequency approximately 100MHz.   | • Modulation mode to FM   | • Output level to 72dB (IHF)  |  |           |
| 3. Band selector switch  | ..... FM   | 4. FM Muting/mode switch  |   |   |  |           |
| on/FM auto   |  |   |   |   |  |           |
| FM SIGNAL GENERATOR CONNECTION   | STEREO MODULATOR MODE AND MOD. RATE                      | INDICATOR (VTVM or SCOPE)   | ADJUSTMENT POINT  | REMARK  |  |           |
| 11. 300Ω FM antenna terminals through FM dummy antenna   | L (and R) 30% Modulation                                 | Connect VTVM or scope to output terminals through low pass filter. Refer to fig. 9.           | VR302   | Adjust for minimum right (and left) output  |  |           |



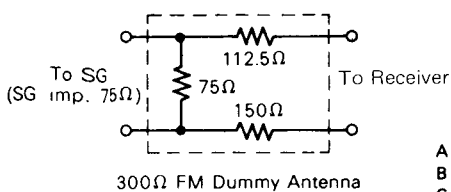


Fig. 7 (Abb. 7)

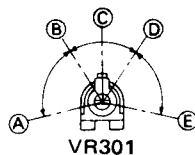

A - B, D - E: Stereo OFF Position.  
B - D: Stereo ON Position (Indicator Lighting).  
C: Adjust Point of Pilot Circuit.

Fig. 8 (Abb. 8)

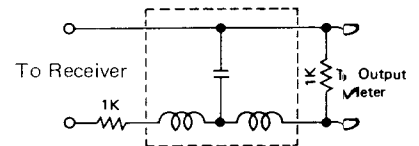

**LOW PASS FILTER**  
( $f_c = 15\text{kHz} \sim 19\text{kHz}$ )

Fig. 9 (Abb. 9)

## ■ ABGLEICHANWEISUNGEN (Verstärkerteil)

- Wenn der Netztransistor ersetzt wird, ist zu beachten, daß eine Siliziumverbindung (oder ähnliches Thermomodifikationsmittel) auf die Glimmerplatte gegeben wird, und zur gleichen Zeit der Blindstrom des Netztransistors festgestellt wird. (Die Spannung über den Emitterwiderstand messen.)

### Ⓐ Zum Justieren mit dem Gleichstrom-Voltmeter

1. Drehen Sie den Lautsprecherschalter auf "OFF".
2. Schließen Sie den Gleichstrom-Voltmeter an, wie in Abb. 1 des Justierpunkte-Diagramms gezeigt.
3. Falls die Anzeige weniger als ca. 25 mV beträgt, so ist die Schaltung in Ordnung. Falls aber die Anzeige mehr als 25 mV beträgt, schneiden Sie den Leitungsdraht für **J2** im Falle des linken Kanals weg (oder den Leitungsdraht für **J1** im Falle des rechten Kanals).
4. Falls die Anzeige auch nach Unterbrechen des Leitungsdrahtes nicht unter 25 mV fällt, so ist die Schaltung nicht in Ordnung, und die Stromquellenschaltung und die Hauptverstärkerschaltung müssen überprüft werden.

ANMERKUNG: Falls das Wegschneiden des Leitungsdrahtes nötig ist, schneiden Sie diesen nahe am Anschlußpunkt weg.

### Ⓑ Die Stromstärke sollte nur geprüft werden, wenn die Justierung mit einem Prüfgerät vorgenommen wird. (Mit dem Meßinstrument kann die Spannung nicht in mV gemessen werden.)

1. Schalten Sie die Stromzufuhr zum Gerät aus.
2. Schließen Sie das Ammeter an, wie in Abb. 3 gezeigt.
3. Nachdem Sie sich vergewissert haben, daß das Ammeter solide befestigt ist, schalten Sie die Stromzufuhr ein.
4. Falls die Anzeige einige Minuten nach dem Einschalten weniger als 75 mA beträgt, so ist die Schaltung in Ordnung. Liegt die Anzeige über 75 mA, schneiden Sie den Leitungsdraht für **J2** im Falle des linken Kanals weg. (oder den Leitungsdraht für **J1** im Falle des rechten Kanals).
5. Falls die Anzeige auch dann nicht unter 75 mA fällt, so ist die Schaltung defekt.

ANMERKUNG: Die Justierung kann entweder nach Methode Ⓐ oder Ⓑ vorgenommen werden. (Wo möglich, empfehlen wir Methode Ⓐ. Die Abbildungen 2 und 3 beziehen sich auf den linken Kanal.)

## ■ INSTRUCTIONS D'ALIGNEMENT (Partie amplificateur)

- Lorsque le transistor de puissance est remplacé, s'assurer d'appliquer le composé de silicone (ou un agent de diffusion thermique équivalent) sur la plaque de mica et confirmer en même temps le courant déwatté du transistor de puissance. (Mesurer la tension à travers la résistance de l'émetteur.)

### Ⓐ Pour la mise au point avec un voltmètre C.C.

1. Tourner le commutateur de haut-parleur sur "OFF".
2. Connecter le voltmètre C.C. comme dans la Fig. 1 du schéma des endroits de vérification.
3. Si la lecture est approximativement inférieure à 25 mV plusieurs minutes après la mise en marche de l'alimentation, le circuit fonctionne correctement. Par contre, si la lecture est au-delà de 25 mV, couper le fil de jonction pour **J2** dans le cas du canal Gauche [L], (le fil de jonction pour **J1**, dans le cas du canal Droite [R]).
4. Si la lecture ne descend pas au-dessous de 25 mV même lorsque le fil de jonction a été coupé, cela signifie qu'il y a quelque chose d'incorrect dans le circuit et par conséquent, il sera nécessaire de vérifier le circuit d'alimentation ou le circuit d'amplification principal.

REMARQUE: Lorsqu'on coupe le fil de jonction, le couper à l'extrémité de sa racine.

### Ⓑ Le courant ne devra être vérifié seulement que lorsque la mise au point est faite avec un appareil contrôleur. (Appareil de mesure incapable d'une tension de mesure dans un appareillage de mV).

1. Couper l'alimentation de l'appareillage.
2. Brancher l'ampèremètre, comme il est montré à la Fig. 3.
3. Après s'être assuré que l'ampèremètre n'est pas débranché, mettre en marche l'alimentation.
4. Si la lecture est inférieure à 75 mA après plusieurs minutes, le circuit fonctionne correctement. Si par contre la lecture va au-delà de 75 mA, couper le fil de jonction pour **J2** dans le cas du canal Gauche [L], (le fil de jonction pour **J1**, dans le cas du canal Droite [R]).
5. Si la lecture ne descend pas au-dessous de 75 mA, cela signifie qu'il y a quelque chose de défectueux dans le circuit.

REMARQUE: La mise au point doit être faite soit avec la méthode Ⓐ, soit avec la méthode Ⓑ. (Si c'est possible, nous recommandons la méthode Ⓐ. Les Figures 2 et 3 se rapportent au cas du canal Gauche [L].)

## ■ ABGLEICHANWEISUNGEN (FM/AM Tunerteil)

### (Für Deutschland)

| ANMERKUNGEN:  |  | ANZEIGE   |                         | ABGLEICHSPUNKTE   |  | BEMERKUNGEN  |  |
|---|--|---|-------------------------|---|--|--|--|
| 1. Bereichsschalter . . . . . AM (AM Abgleich) FM (FM Abgleich) |  | 4. Tape/Monitor-Umschalter . . . . . SOURCE   |                         | 5. Der Ausgang des Meßsenders darf nicht höher sein als unbedingt notwendig für eine gute Ablesung. |  | 6. UKW-Kunstantenne, 300 ohm . . . . . Vgl. Abb. 7.  |  |
| 2. FM Muting/ mode-Schalter . . . . . on/ FM auto               |  | 5. Der Ausgang des Meßsenders darf nicht höher sein als unbedingt notwendig für eine gute Ablesung. |                         | 6. UKW-Kunstantenne, 300 ohm . . . . . Vgl. Abb. 7.   |  | 7. Lautsprecher-Schalter . . . . . ON  |  |
| 3. Die Netzspannung auf ihren Sollwert einstellen.              |  | 6. UKW-Kunstantenne, 300 ohm . . . . . Vgl. Abb. 7.   |                         | 7. Lautsprecher-Schalter . . . . . ON   |  |  |  |
| AM/UKW MESSENDER oder WOBELGENERATOR                            | SKALENEINSTELLUNG DES TUNER  | ANZEIGE (Röhrenvoltmeter oder Oszillograph oder Klirrfaktor-Meßgerät)                               | ABGLEICHSPUNKTE         | BEMERKUNGEN   |  |  |  |
| ANSCHLUSS   | FREQUENZ   |   |                         |   |  |  |  |
| <b>AM-ABGLEICH</b>  |  |   |                         |   |  |  |  |
| 1   | Heißes Ende des Meßsender über einen 0.001µF Kondensator an den AM Antenneneingang schließen. Kaltes Ende an Masse               | 455kHz (400Hz Modul., 100%)   | Kein Empfang            | Röhrenvoltmeter oder Oszillograph über den Lautsprecher schließen.                                  | T201 (1. IFT)<br>T202 (2. IFT)                                 | Auf max. Ausgang abgleichen.   |  |
| 2   | Das Meßsendersignal induktiv in den Tuner speisen. Hierzu behelfsmäßig eine Rahmenantenne fertigen und an den Eingang schließen. | 600kHz (400Hz Modul., 30%)  | 600kHz                  | Röhrenvoltmeter oder Oszillograph über den Lautsprecher schließen.                                  | L202 (Osc. Spule)<br>L201 (Ant. Spule)                         | Auf max. Ausgang abgleichen. L201 wird abgeglichen, indem die Spule am Ferritstab entlanggeschoben wird. |  |
| 3   | Das Meßsendersignal induktiv in den Tuner speisen. Hierzu behelfsmäßig eine Rahmenantenne fertigen und an den Eingang schließen. | 1500kHz (400Hz Modul., 30%)   | 1500kHz                 | Röhrenvoltmeter oder Oszillograph über den Lautsprecher schließen.                                  | CT5 (Osc. Trimmer)<br>CT4 (Ant. Trimmer)                       | Auf max. Ausgang abgleichen. Schritte (2) und (3) sind zu wiederholen.                                   |  |
| <b>UKW ZF-ABGLEICH</b>  |  |   |                         |   |  |  |  |
| 4   |  | Kein Signal   | Kein Empfang            | Abstimmanzeige.   | T101 (Diskriminator IFT) [A]                                   | Den Abstimmungsanzeiger auf den zentrum Wert einstellen.   |  |
| <b>UKW HF-ABGLEICH</b>  |  |   |                         |   |  |  |  |
| 5   | Meßsender über eine Kunstantenne an den UKW-Antenneneingang schließen.   | 87.5MHz (400Hz Modul., 100%)  | 87.5MHz (Frequenz min.) | Röhrenvoltmeter oder Oszillograph über den Lautsprecher schließen.                                  | L6 (Osc. Spule)  | Auf max. Ausgang abgleichen.   |  |
| 6   | Meßsender über eine Kunstantenne an den UKW-Antenneneingang schließen.   | 90MHz (400Hz Modul., 100%)  | 90MHz                   | Röhrenvoltmeter oder Oszillograph über den Lautsprecher schließen.                                  | L4 (Det. Spule)<br>L1 (Ant. Spule)                             | Auf max. Ausgang abgleichen.   |  |
| 7   | Meßsender über eine Kunstantenne an den UKW-Antenneneingang schließen.   | 106MHz (400Hz Modul., 100%)   | 106MHz                  | Röhrenvoltmeter oder Oszillograph über den Lautsprecher schließen.                                  | CT3 (Osc. Trimmer)<br>CT2 (Det. Trimmer)<br>CT1 (Ant. Trimmer) | Auf max. Ausgang abgleichen. Schritte (5), (6) und (7) sind zu wiederholen.                              |  |
| <b>ABGLEICH AUF MIN. VERZERRUNG IN STELLUNG UKW-MONO</b>        |  |   |                         |   |  |  |  |
| 8   | Meßsender über eine Kunstantenne an den UKW-Antenneneingang schließen.   | 100MHz (400Hz Modul., 100%)   | 100MHz                  | Klirrfaktor-Meßbrücke über den Lautsprecher schließen.  | T101 (Diskriminator IFT) [B]                                   | Auf min. Verzerrung auf der Klirrfaktor-Meßbrücke abgleichen. Schritt (4) und (8) sind zu wiederholen.   |  |
| <b>UKW-FELDSTÄRKEANZEIGE-ABGLEICH</b>                           |  |   |                         |   |  |  |  |
| 9   | Meßsender über eine Kunstantenne an den UKW-Antenneneingang schließen. Meßsender für 100dB (IHF) (ca. 100mV) einstellen.         | 100MHz (400Hz Modul., 30%)  | 100MHz                  | Feldstärkeanzeige   | VR102  | FM Muting-Schalter auf "on/ FM auto" VR102 auf ca. 4,7 der Feldstärkeanzeige einstellen.                 |  |
| <b>UKW-MUTING-ABGLEICH</b>                                      |  |   |                         |   |  |  |  |
| 10  | Meßsender über eine Kunstantenne an den UKW-Antenneneingang schließen. Meßsender auf 16 dB (6.3µV) einstellen.                   | 100 MHz (400 Hz Modul., 100%)   | 100 MHz                 | Röhrenvoltmeter oder Oszillograph über den Lautsprecher schließen.                                  | VR101  | FM Muting-Schalter auf "off/ FM mono" So einstellen, daß ein Ausgang zu vernehmen ist.                   |  |
| <b>UKW-STEREO-DEKODER-ABGLEICH</b>                              |  |   |                         |   |  |  |  |
| Unter Verwendung eines Zählers                                  |  |   |                         | Alternativ-Meßmethode   |  |  |  |
| 1. Unmoduliertes Mono-Signal 100 MHz in das Gerät speisen.      |  | 2. FM Muting-Schalter auf "on/ FM auto" stellen.  |                         | 1. Stereosignal entweder von einem Stereogenerator oder einem Sender einspeisen.                    |  | 2. VR301 so einstellen, bis die Stereolampe auf leuchtet.  |  |
| 3. Zähler über einen Widerstand 100K ohm an TP301 schließen.    |  | 4. VR301 auf 19kHz ±30Hz einstellen.  |                         | 2. VR301 so einstellen, bis die Stereolampe auf leuchtet.   |  | Schleifer von VR301 sichern, wie in Abb. 8 gezeigt.  |  |
| <b>KANALTRENNUNG-ABGLEICH</b>                                   |  |   |                         |   |  |  |  |
| <b>ANMERKUNGEN:</b>   |  |   |                         |   |  |  |  |
| 1. Stereo-Modulator . . . . .                                   |  | Ausgang des Stereo-Modulators an den Eingang EXT MOD des Meßsenders schließen.                      |                         | Eingebauter Oszillator . . . . . 1kHz / Pilotton-Modulation . . . . . 10%                           |  | Auf etwa 100MHz einstellen. Ausgangspegel 72dB (IHF). Modulation FM                                      |  |
| 2. UKW Meßsender . . . . .                                      |  | FM  |                         | 3. Bereichsschalter . . . . .   |  | on/FM auto   |  |
| 3. Muting/ Mode-Schalter . . . . .                              |  | on/FM auto  |                         | 4. Muting/ Mode-Schalter . . . . .  |  | on/FM auto   |  |
| ANSCHLUSS DES UKW MESSENDERS                                    | STEREO MODULATOR MODE oder MOD. RATE   | ANZEIGE (Röhrenvoltmeter oder Oszillograph)   | ABGLEICHSPUNKTE         | ANMERKUNGEN   |  |  |  |
| 12  | Meßsender über eine Kunstantenne an den UKW Antenneneingang schließen.   | L (und R) Modulation 30%  |                         | Röhrenvoltmeter oder Oszillograph über Tiefpassfilter an den Tuner-Ausgang schließen. Vgl. Abb. 9.  | VR302  | Auf min. Ausgang rechter (und linker) abgleichen.  |  |

**ABGLEICHANWEISUNGEN (FM/AM Tunerteil)**

**(Für Deutschland)**

| ANMERKUNGEN:   |  | 4. Tape/Monitor-Umschalter . . . . . SOURCE                           |                         | 5. Der Ausgang des Meßsenders darf nicht höher sein als unbedingt notwendig für eine gute Ablesung. |  | 6. UKW-Kunstantenne, 300 ohm . . . . . Vgl. Abb. 7.  |  | 7. Lautsprecher-Schalter . . . . . ON |  |  |
|--|--|---|-------------------------|---|--|--|--|---------------------------------------|--|--|
| AM/UKW MESSENDER oder WOBELGENERATOR   | SKALENZEIGEREIN-STELLUNG DES TUNER   | ANZEIGE (Röhrenvoltmeter oder Oszillograph bzw. Klirrfaktor-Meßgerät) | ABGLEICHSPUNKTE         | BEMERKUNGEN   |  |  |  |                                       |  |  |
| ANSCHLUSS  | FREQUENZ   |   |                         |   |  |  |  |                                       |  |  |
| <b>AM-ABGLEICH</b>   |  |   |                         |   |  |  |  |                                       |  |  |
| 1  | Heißes Ende des Meßsenders über einen 0.001µF Kondensator an den AM Antenneneingang schließen. Kaltes Ende an Masse              | 455kHz (400Hz Modul., 100%)   | Kein Empfang            | Röhrenvoltmeter oder Oszillograph über den Lautsprecher schließen.                                  | T201 (1. IFT)<br>T202 (2. IFT)   | Auf max. Ausgang abgleichen.   |  |                                       |  |  |
| 2  | Das Meßsendersignal induktiv in den Tuner speisen. Hierzu behelfsmäßig eine Rahmenantenne fertigen und an den Eingang schließen. | 600kHz (400Hz Modul., 30%)  | 600kHz                  | Röhrenvoltmeter oder Oszillograph über den Lautsprecher schließen.                                  | L202 (Osc. Spule)<br>L201 (Ant. Spule)   | Auf max. Ausgang abgleichen. L201 wird abgeglichen, indem die Spule am Ferritstab entlanggeschoben wird. |  |                                       |  |  |
| 3  | Das Meßsendersignal induktiv in den Tuner speisen. Hierzu behelfsmäßig eine Rahmenantenne fertigen und an den Eingang schließen. | 1500kHz (400Hz Modul., 30%)   | 1500kHz                 | Röhrenvoltmeter oder Oszillograph über den Lautsprecher schließen.                                  | CT5 (Osc. Trimmer)<br>CT4 (Ant. Trimmer)   | Auf max. Ausgang abgleichen. Schritte (2) und (3) sind zu wiederholen.                                   |  |                                       |  |  |
| <b>UKW ZF-ABGLEICH</b>   |  |   |                         |   |  |  |  |                                       |  |  |
| 4  |  | Kein Signal   | Kein Empfang            | Abstimmanzeige.   | T101 (Diskriminator IFT) [A]   | Den Abstimmungsanzeiger auf den zentrum Wert einstellen.   |  |                                       |  |  |
| <b>UKW HF-ABGLEICH</b>   |  |   |                         |   |  |  |  |                                       |  |  |
| 5  | Meßsender über eine Kunstantenne an den UKW-Antenneneingang schließen.   | 87.5MHz (400Hz Modul., 100%)  | 87.5MHz (Frequenz min.) | Röhrenvoltmeter oder Oszillograph über den Lautsprecher schließen.                                  | L6 (Osc. Spule)  | Auf max. Ausgang abgleichen.   |  |                                       |  |  |
| 6  | Meßsender über eine Kunstantenne an den UKW-Antenneneingang schließen.   | 90MHz (400Hz Modul., 100%)  | 90MHz                   | Röhrenvoltmeter oder Oszillograph über den Lautsprecher schließen.                                  | L4 (Det. Spule)<br>L1 (Ant. Spule)   | Auf max. Ausgang abgleichen.   |  |                                       |  |  |
| 7  | Meßsender über eine Kunstantenne an den UKW-Antenneneingang schließen.   | 106MHz (400Hz Modul., 100%)   | 106MHz                  | Röhrenvoltmeter oder Oszillograph über den Lautsprecher schließen.                                  | CT3 (Osc. Trimmer)<br>CT2 (Det. Trimmer)<br>CT1 (Ant. Trimmer)                   | Auf max. Ausgang abgleichen. Schritte(5), (6) und (7) sind zu wiederholen.                               |  |                                       |  |  |
| <b>ABGLEICH AUF MIN. VERZERRUNG IN STELLUNG UKW-MONO</b>   |  |   |                         |   |  |  |  |                                       |  |  |
| 8  | Meßsender über eine Kunstantenne an den UKW-Antenneneingang schließen.   | 100MHz (400Hz Modul., 100%)   | 100MHz                  | Klirrfaktor-Meßbrücke über den Lautsprecher schließen.  | T101 (Diskriminator IFT) [B]   | Auf min. Verzerrung auf der Klirrfaktor-Meßbrücke abgleichen. Schritt (4) und (8) sind zu wiederholen.   |  |                                       |  |  |
| <b>UKW-FELDSTÄRKEANZEIGE-ABGLEICH</b>  |  |   |                         |   |  |  |  |                                       |  |  |
| 9  | Meßsender über eine Kunstantenne an den UKW-Antenneneingang schließen. Meßsender für 100dB (IHF) (ca. 100mV) einstellen.         | 100MHz (400Hz Modul., 30%)  | 100MHz                  | Feldstärkeanzeige   | VR102  | FM Muting-Schalter auf "on/FM auto" VR102 auf ca. 4,7 der Feldstärkeanzeige einstellen.                  |  |                                       |  |  |
| <b>UKW-MUTING-ABGLEICH</b>   |  |   |                         |   |  |  |  |                                       |  |  |
| 10   | Meßsender über eine Kunstantenne an den UKW-Antenneneingang schließen. Meßsender auf 16 dB (6.3µV) einstellen.                   | 100 MHz (400 Hz Modul., 100%)   | 100 MHz                 | Röhrenvoltmeter oder Oszillograph über den Lautsprecher schließen.                                  | VR101  | FM Muting-Schalter auf "off/FM mono" So einstellen, daß ein Ausgang zu vernehmen ist.                    |  |                                       |  |  |
| <b>UKW-STEREO-DEKODER-ABGLEICH</b>   |  |   |                         |   |  |  |  |                                       |  |  |
| Unter Verwendung eines Zählers   |  |   |                         |   | Alternativ-Meßmethode  |  |  |                                       |  |  |
| 1. Unmoduliertes Mono-Signal 100 MHz in das Gerät speisen.   |  |   |                         |   | 1. Stereosignal entweder von einem Stereogenerator oder einem Sender einspeisen. |  |  |                                       |  |  |
| 2. FM Muting-Schalter auf "on/FM auto" stellen.  |  |   |                         |   | 2. VR301 so einstellen, bis die Stereolampe auf leuchtet.                        |  |  |                                       |  |  |
| 3. Zähler über einen Widerstand 100k ohm an TP301 schließen.   |  |   |                         |   | 3. Schleifer von VR301 sichern, wie in Abb. 8 gezeigt.                           |  |  |                                       |  |  |
| 4. VR301 auf 19kHz ±30Hz einstellen.   |  |   |                         |   |  |  |  |                                       |  |  |
| <b>KANALTRENNUNG-ABGLEICH</b>  |  |   |                         |   |  |  |  |                                       |  |  |
| Anmerkungen:   |  |   |                         |   |  |  |  |                                       |  |  |
| 1. Stereo-Modulator . . . . . Ausgang des Stereo Modulators an den Eingang EXT MOD des Meßsenders schließen. Eingebauter Oszillator . . . . . 1kHz / Pilotton-Modulation . . . . . 10% |  |   |                         |   |  |  |  |                                       |  |  |
| 2. UKW Meßsender . . . . . Auf etwa 100MHz einstellen. Ausgangspegel 72dB (IHF), Modulation FM   |  |   |                         |   |  |  |  |                                       |  |  |
| 3. Bereichsschalter . . . . . FM   |  |   |                         |   |  |  |  |                                       |  |  |
| 4. Muting/ Mode-Schalter . . . . . on/FM auto  |  |   |                         |   |  |  |  |                                       |  |  |
| ANSCHLUSS DES UKW MESSENDERS   | STEREO MODULATOR MODE oder MOD. RATE   | ANZEIGE (Röhrenvoltmeter oder Oszillograph)                           | ABGLEICHSPUNKTE         | ANMERKUNGEN   |  |  |  |                                       |  |  |
| 12   | Meßsender über eine Kunstantenne an den UKW-Antenneneingang schließen.   | L (und R) Modulation 30%  | VR302                   | Röhrenvoltmeter oder Oszillograph über Tiefpassfilter an den Tuner-Ausgang schließen. Vgl. Abb. 9.  | VR302  | Auf min. Ausgang rechter (und linker) abgleichen.  |  |                                       |  |  |

**INSTRUCTIONS D'ALIGNEMENT (Partie tuner FM/AM)**

| AM/FM GENERATEUR  |  | AIGUILLE SUR LE CADRAN                              | INDICATEUR (VOLTMETRE ELECTRONIQUE OSCILLOSCOPE OU DISTORSIONMETRE)                                    | POINTS DE REGLAGE   | OBSERVATIONS  |
|---|--|---|--|---|---|
| <b>ALIGNEMENT AM</b>  |  |   |  |   |   |
| 1   | Côté chaud, à travers 0.001µF, sur le trimmer de l'antenne AM, commutateur en shâssis                              | 455kHz (modulé à 30% par 400Hz)                     | Point sans signal  | T201 (1 transfo FI)<br>T202 (2 transfo FI)  | Réglez au maximum de signal de sortie.  |
| 2   | Faire une boucle de quelques tours et rayonner le signal dans le cadre de l'ampli-tuner.                           | 600kHz (modulé à 30% par 400Hz)                     | 600kHz   | L202 (bobine OSC)<br>L201 (bobine ANT)  | Réglez au maximum de signal de sortie. Réglez L201 en déplaçant la bobine le long du noyau de ferrite.                    |
| 3   | Faire une boucle de quelques tours et rayonner le signal dans le cadre de l'ampli-tuner.                           | 1500kHz (modulé à 30% par 400Hz)                    | 1500kHz  | CT5 (trimmer OSC)<br>CT4 (trimmer ANT)  | Réglez au maximum de signal de sortie. Recommencez les étapes (2) et (3).   |
| <b>ALIGNEMENT FI-FM</b>   |  |   |  |   |   |
| 4   |  | Sans signal   | point sans signal  | T101 (Transfo FI discri.) [A]   | Réglez pour atteindre position médiane sur l'indicateur d'accord.   |
| <b>ALIGNEMENT RF-FM</b>   |  |   |  |   |   |
| 5   | Branchez sur la prise d'antenne FM à travers une antenne fictive FM.   | 90MHz (modulé à 100% par 400Hz)                     | 90MHz  | L6 (bobine OSC)<br>L4 (bobine DET)<br>L1 (bobine ANT)   | Réglez au maximum de signal de sortie.  |
| 6   | Branchez sur la prise d'antenne FM à travers une antenne fictive FM.   | 106MHz (modulé à 100% par 400Hz)                    | 106MHz   | CT3 (trimmer OSC)<br>CT2 (trimmer DET)<br>CT1 (trimmer ANT)   | Réglez au maximum de signal de sortie. Recommencez les étapes (5) et (6).   |
| <b>REGLAGE DE LA DISTORSION FM EN MONO</b>  |  |   |  |   |   |
| 7   | Branchez sur la prise d'antenne FM à travers une antenne fictive FM.   | 100MHz (modulé à 100% par 400Hz)                    | 100MHz   | Distorsionmètre sur prise de sortie du tuner.   | T101 (Transfo FI discri.) [B] Réglez au minimum d'indication du distorsionmètre. Recommencez les étapes (4) et (7).       |
| <b>REGLAGE DE L'INDICATEUR D'ACCORD FM</b>  |  |   |  |   |   |
| 8   | Branchez sur la prise d'antenne FM à travers une antenne fictive FM. Niveau de sortie du générateur 100dB(0.1V)    | 100MHz (modulé à 100% par 400Hz)                    | 100MHz   | Indicateur d'intensité  | VR102 Commutateur de silencieux sur "off/FM mono". Réglez VR102 pour obtenir env. "4.7" points sur l'échelle d'intensité. |
| <b>REGLAGE DU SEUIL DU SILENCIEUX D'ACCORD</b>  |  |   |  |   |   |
| 9   | Branchez sur la prise d'antenne FM à travers une antenne fictive FM. Niveau de sortie du générateur 16 dB (6.3µV). | 100 MHz (modulé à 100% par 400Hz)                   | 100 MHz  | Branchez un voltmètre électronique ou un oscilloscope sur les bornes de haut-parleur de l'ampli-tuner.                    | VR101 Commutateur de silencieux sur "on/FM auto". Régler pour obtenir une lecture en sortie.                              |
| <b>ALIGNEMENT DU PILOTE MULTIPLEX FM</b>  |  |   |  |   |   |
| Avec un fréquencemètre  |  |   | Par un autre système   |   |   |
| 1. Signal mono 100MHz non modulé appliqué à l'appareil.   |  |   | 1. Appliquez à l'appareil un signal stéréo provenant d'un générateur ou de la réception d'un émetteur. |   |   |
| 2. Commutateur de silencieux sur "on/FM auto".  |  |   | 2. Réglez VR301 jusqu'à ce que l'indicateur de stéréophonie s'allume.                                  |   |   |
| 3. Branchez le fréquencemètre sur TP301 à travers une résistance de 100kΩ.  |  |   | 3. Collez le curseur de VR301 comme indiqué sur la fig. 11.  |   |   |
| 4. Réglez VR301 sur 19kHz ± 30Hz.   |  |   |  |   |   |
| <b>REGLAGE DE LA SEPARATION DES CANAUX</b>  |  |   |  |   |   |
| Notes:  |  |   |  |   |   |
| 1. Modulateur stéréo. . . . . Branchez sa sortie sur la prise EXT. MOD. du générateur.                            |  |   |  |   |   |
| 2. Générateur de signal . . . . . OSC interne . . . . . 1kHz Modulation du signal pilote . . . . . 10%            |  |   |  |   |   |
| 3. Commutateur de gamme . . . . . Fréquence env. 100MHz, niveau de sortie 72dB (IHF), genre de modulation sur FM. |  |   |  |   |   |
| 4. Commutateur de silencieux . . . . . on /FM auto  |  |   |  |   |   |
| BRANCHEMENT DU GENERATEUR DE SIGNAL   | MODE DU MODULATEUR STEREO ET TAUX DE MODULATION  | INDICATEUR (VOLTMETRE ELECTRONIQUE OU OSCILLOSCOPE) | POINTS DE REGLAGE  | OBSERVATIONS  |   |
| 11  | Borne d'antenne FM à travers antenne fictive.  | Gauche (et droite) à 30% de modulation.             | VR302  | Sur les bornes de haut-parleur à travers un filtre passe-bas, voir fig. 12. Réglez au minimum de sortie droite(et gauche) |   |

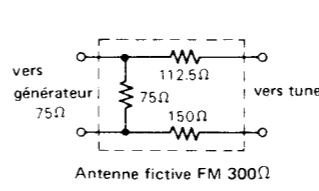


Fig. 10

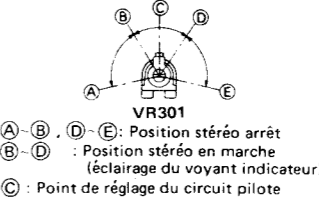


Fig. 11


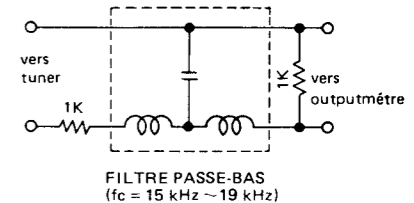


Fig. 12



■ FM/AM TUNER AND EQUALIZER CIRCUIT BOARD

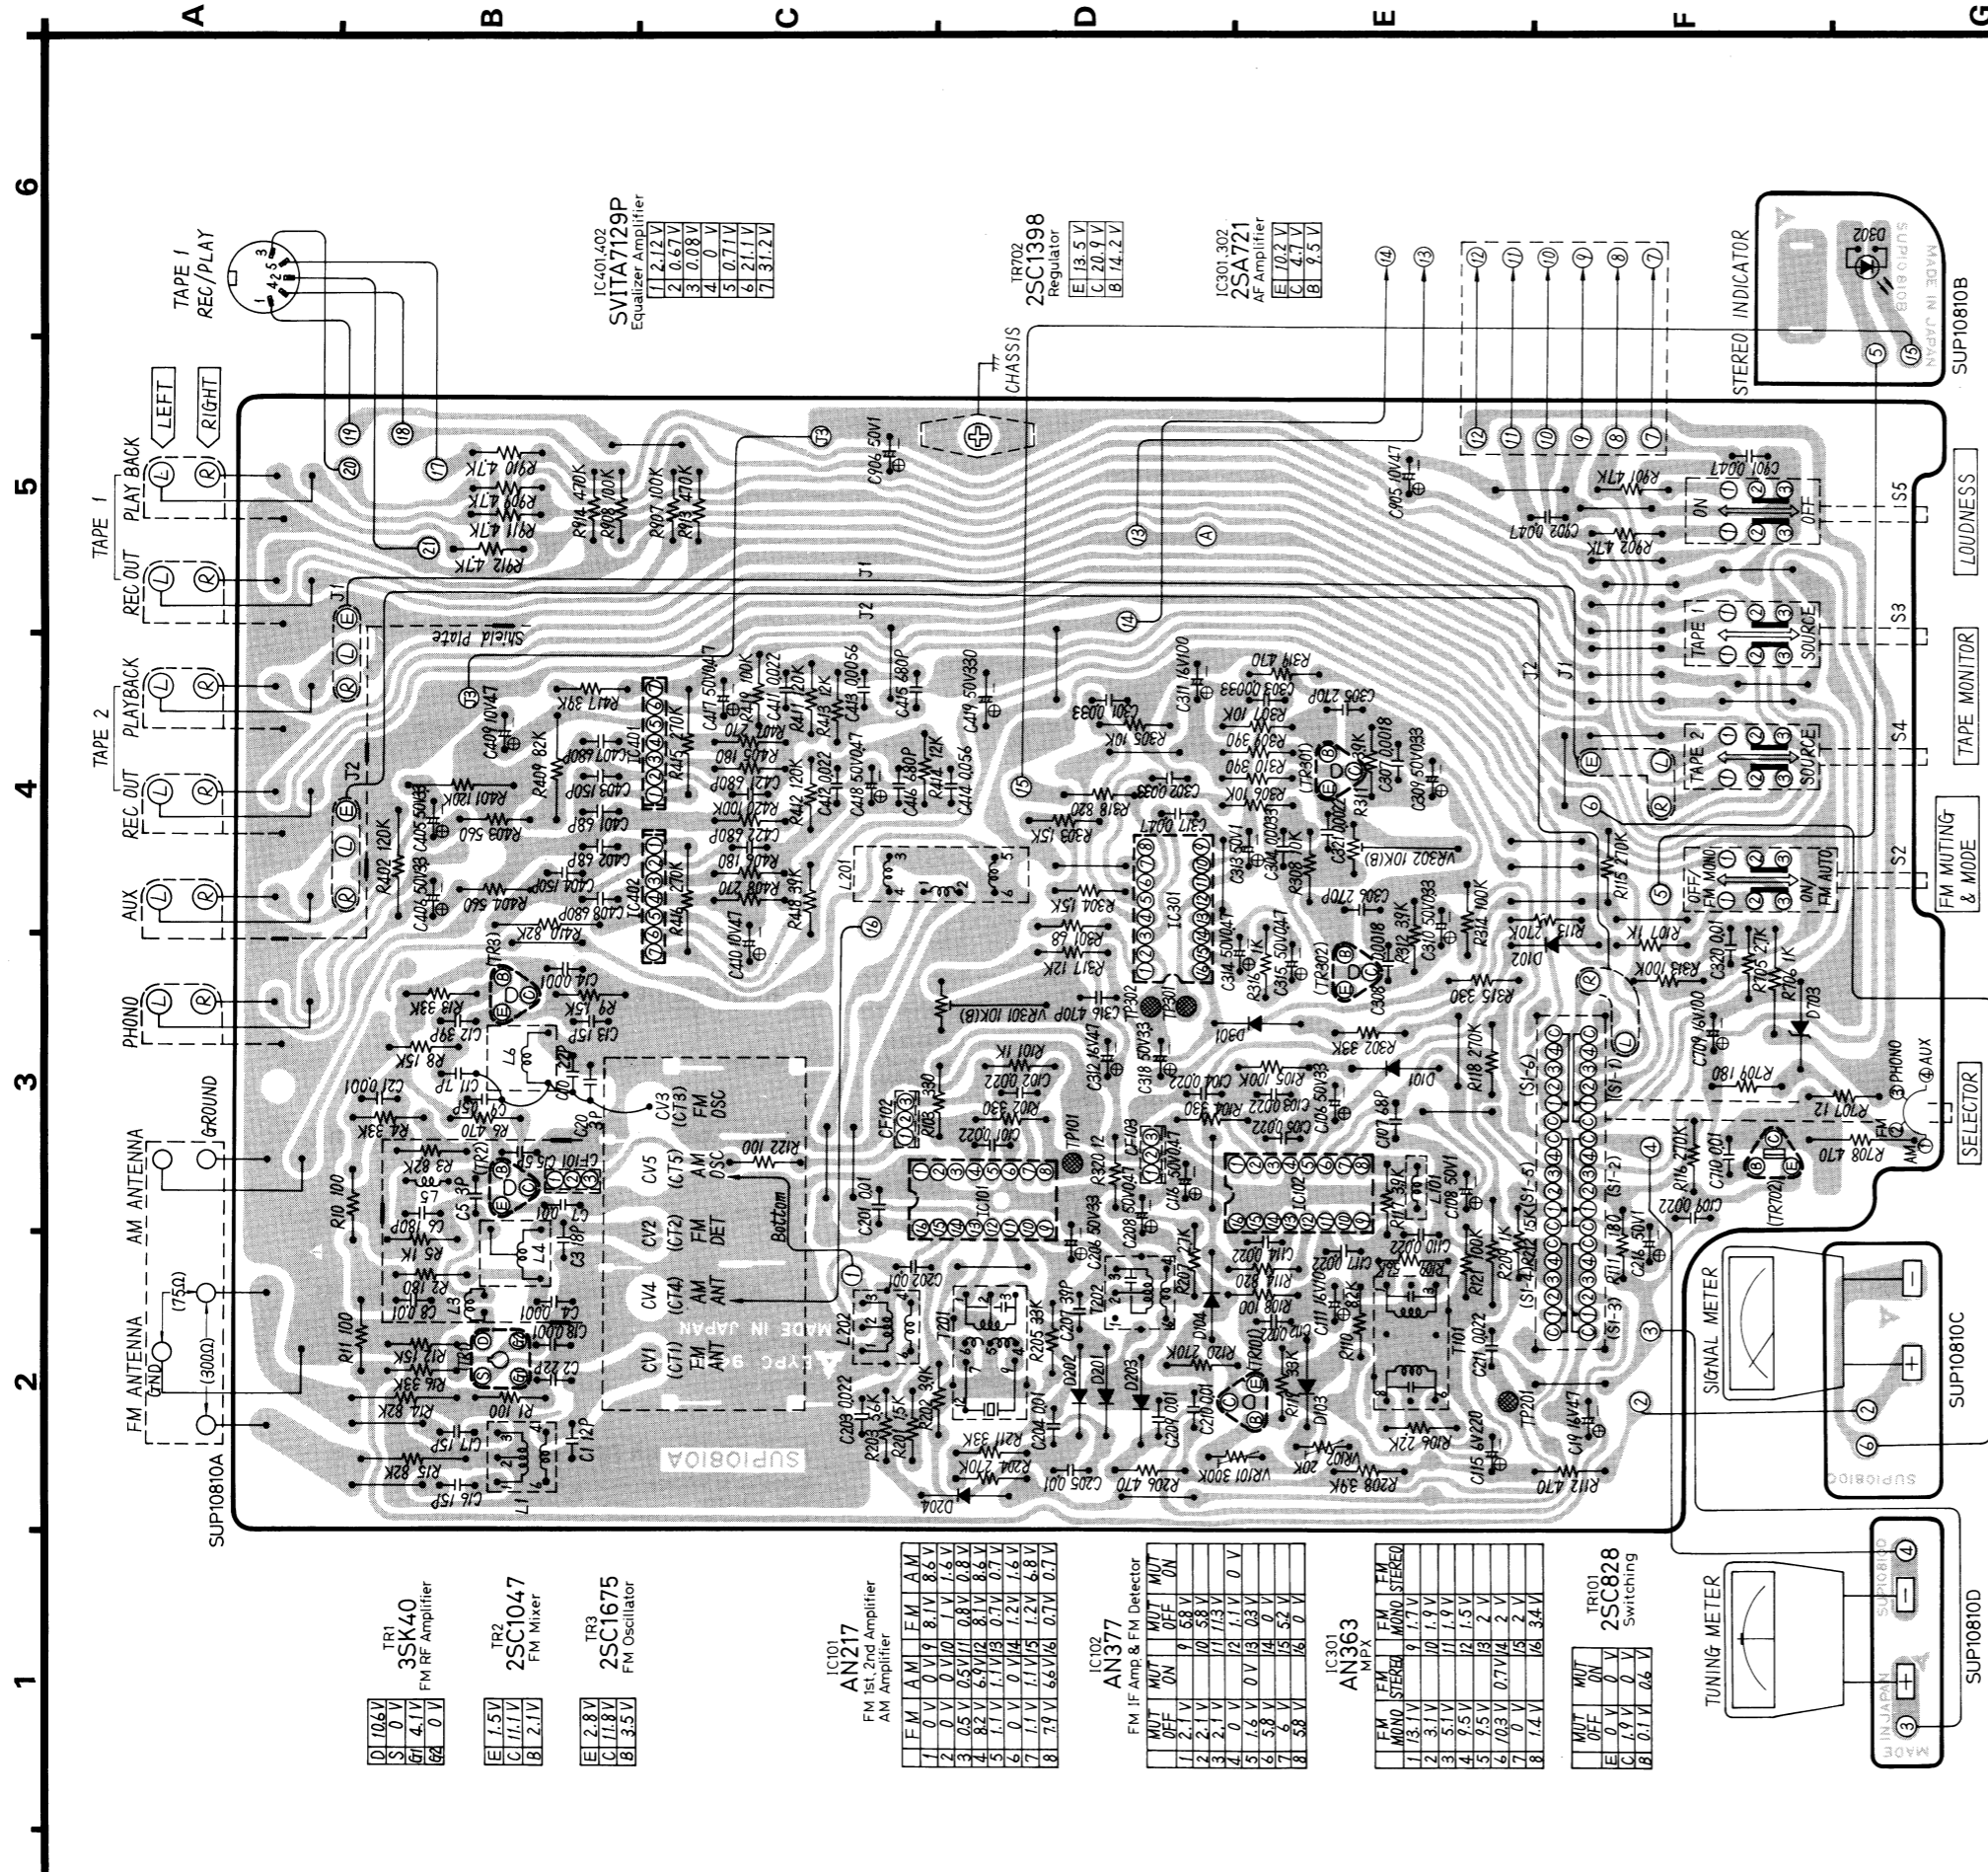

|   |       |
|---|-------|
| D | 10.6V |
| S | 0 V   |
| E | 4.1V  |
| G | 0 V   |

TR1  
3SK40  
FM RF Amplifier

|   |      |
|---|------|
| E | 1.5V |
| G | 1.1V |
| B | 2.1V |

TR2  
2SC1047  
FM Mixer

|   |      |
|---|------|
| E | 2.8V |
| G | 1.8V |
| B | 3.5V |

TR3  
2SC1675  
FM Oscillator

IC101  
AN217  
FM 1st, 2nd Amplifier  
AM Amplifier

|   |      |      |      |      |
|---|------|------|------|------|
| 1 | 0 V  | 0.1V | 8.1V | 8.5V |
| 2 | 0 V  | 0 V  | 1.1V | 0.8V |
| 3 | 0.5V | 0.5V | 0.8V | 0.8V |
| 4 | 8.2V | 6.9V | 8.1V | 8.6V |
| 5 | 1.1V | 1.1V | 0.7V | 0.7V |
| 6 | 0 V  | 0 V  | 1.4V | 1.6V |
| 7 | 1.1V | 1.1V | 1.2V | 0.8V |
| 8 | 7.9V | 6.6V | 0.7V | 0.7V |

IC102  
AN377  
FM IF Amp & FM Detector

|     |      |      |      |
|-----|------|------|------|
| MUT | MUT  | MUT  | MUT  |
| ON  | ON   | ON   | ON   |
| 1   | 2.1V | 0 V  | 5.8V |
| 2   | 2.1V | 0 V  | 7.5V |
| 3   | 0 V  | 0 V  | 1.1V |
| 4   | 1.4V | 0 V  | 0.3V |
| 5   | 5.8V | 0 V  | 5.2V |
| 6   | 5.8V | 0 V  | 5.2V |
| 7   | 0 V  | 0 V  | 2 V  |
| 8   | 7.4V | 1.6V | 3.4V |


IC301  
AN363  
MPX

|      |        |       |        |
|------|--------|-------|--------|
| FM   | FM     | FM    | FM     |
| MONO | STEREO | MONO  | STEREO |
| 1    | 13.1V  | 9.1V  | 1.7V   |
| 2    | 3.1V   | 10.1V | 1.9V   |
| 3    | 5.1V   | 11.1V | 1.9V   |
| 4    | 9.5V   | 12.1V | 1.5V   |
| 5    | 9.5V   | 13.1V | 2 V    |
| 6    | 10.3V  | 0.7V  | 1.4V   |
| 7    | 0 V    | 1.5V  | 2 V    |
| 8    | 7.4V   | 1.6V  | 3.4V   |

TR401  
2SC828  
Switching

|      |      |
|------|------|
| MUT  | MUT  |
| OFF  | ON   |
| 0 V  | 0 V  |
| 1.9V | 0 V  |
| 0.1V | 0.6V |

■ TONE CONTROL, MAIN AMPLIFIER, POWER SUPPLY AND PROTECTION CIRCUIT BOARD

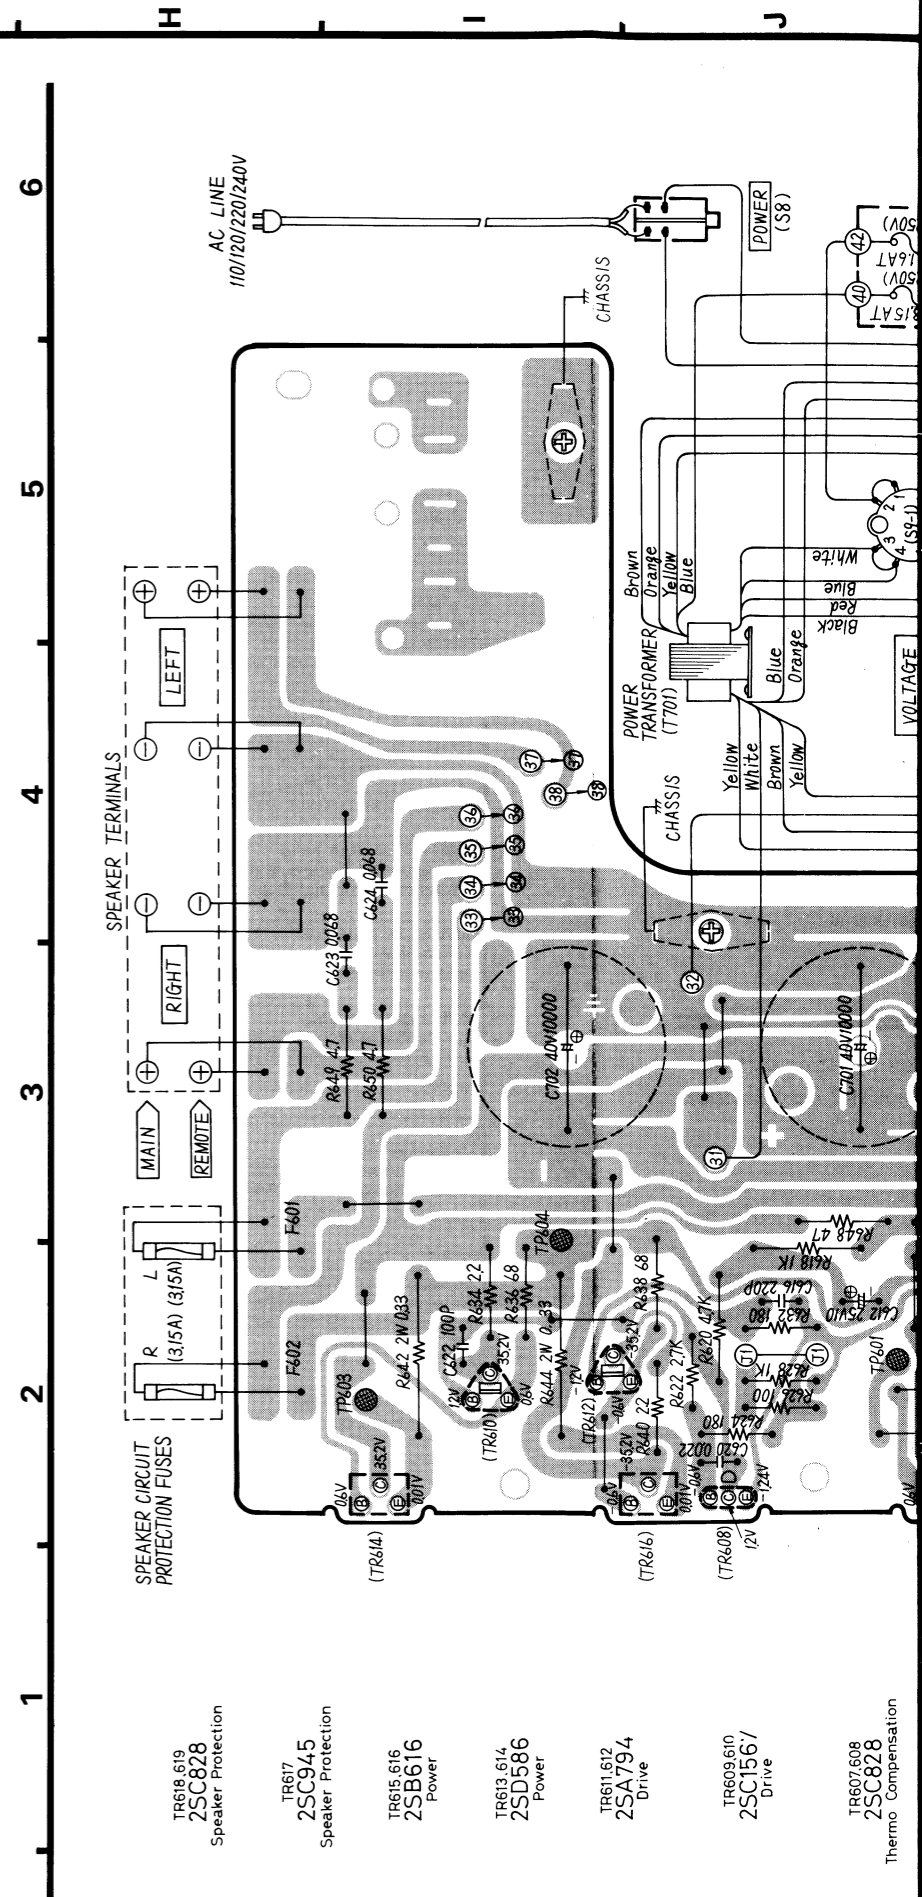

TR618.619  
2SC828  
Speaker Protection

TR617  
2SC945  
Speaker Protection

TR615.616  
2SB616  
Power

TR613.614  
2SD586  
Power


TR611.612  
2SA794  
Drive

TR609.610  
2SC1567  
Drive

TR607.608  
2SC828  
Thermo Compensation

C 20.0 V  
B 14.4 V

IC301.302  
2SA721  
AF Amplifier  
E 10.2 V  
F 4.1 V  
G 7.5 V

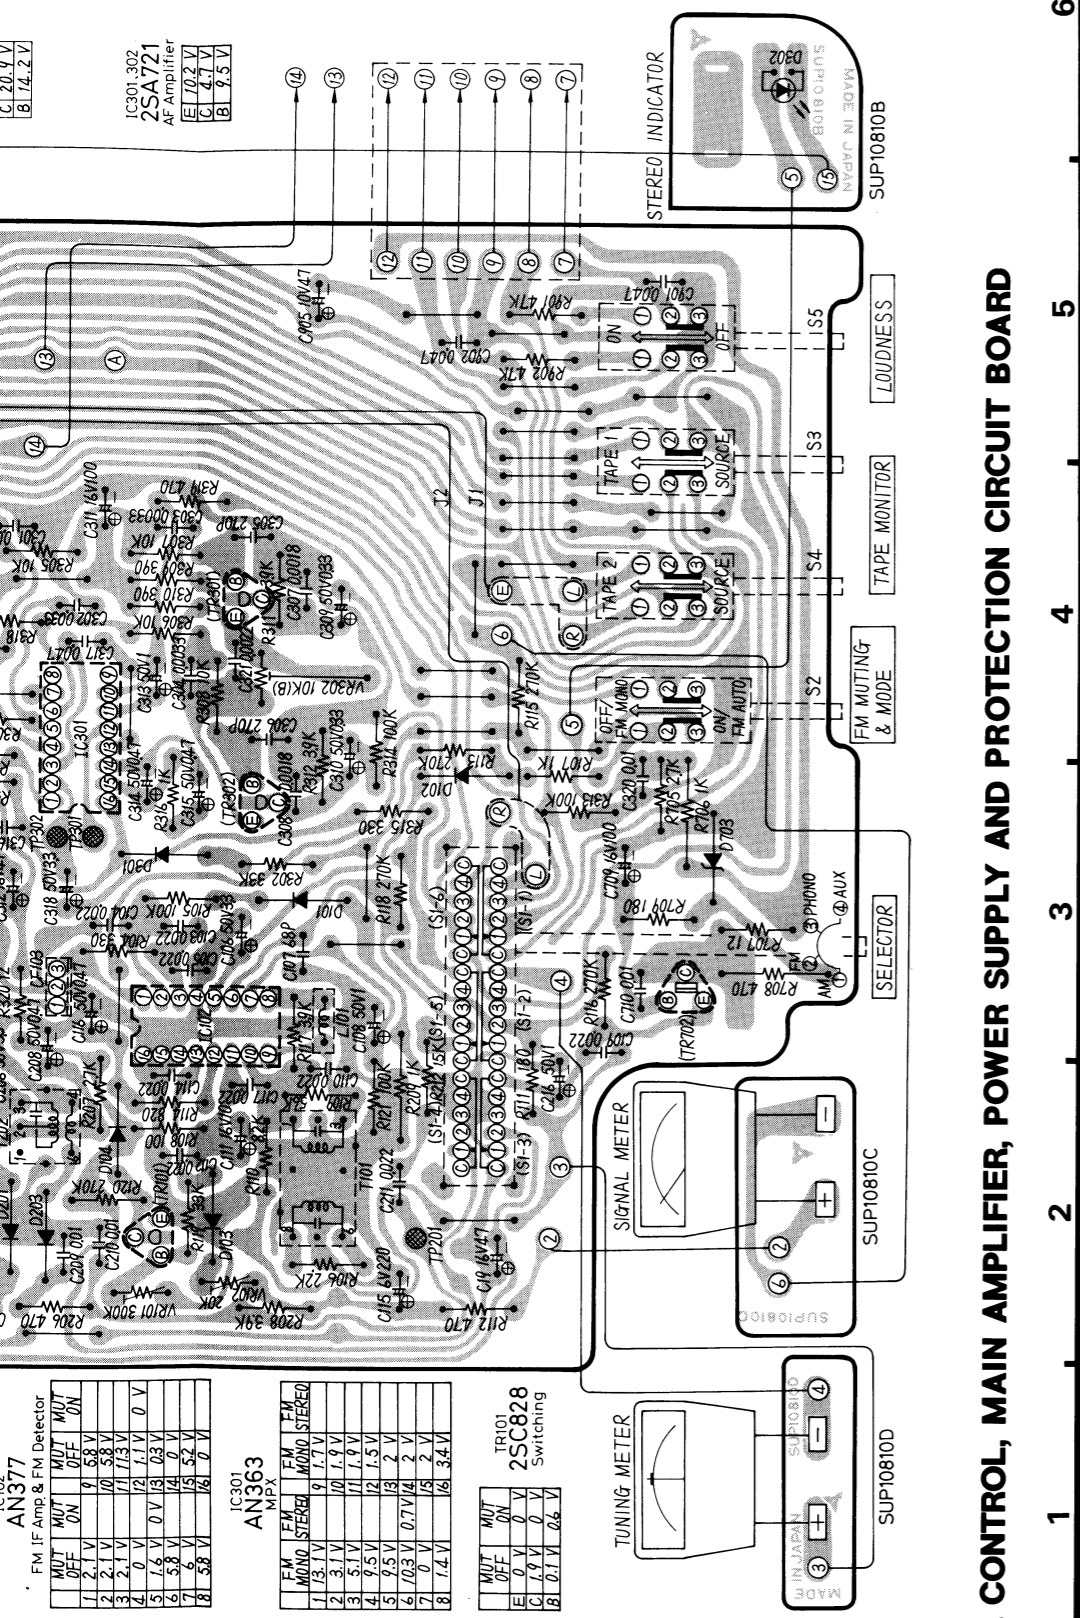

AN377  
FM IF Amp & FM Detector

| MUT     | MUT       |
|---------|-----------|
| OFF     | ON        |
| 1 1.1 V | 9 1.5 V   |
| 2 2.1 V | 10 5.8 V  |
| 3 3.1 V | 11 11.3 V |
| 4 4.1 V | 12 17.1 V |
| 5 5.1 V | 13 23.1 V |
| 6 6.1 V | 14 29.1 V |
| 7 7.1 V | 15 35.1 V |
| 8 8.1 V | 16 41.1 V |


IC301  
AN363  
MPX

| FM       | FM       |
|----------|----------|
| MONO     | STEREO   |
| 1 1.3 V  | 9 1.7 V  |
| 2 3.1 V  | 10 1.9 V |
| 3 5.1 V  | 11 1.9 V |
| 4 9.5 V  | 12 1.5 V |
| 5 9.5 V  | 13 2.0 V |
| 6 10.3 V | 14 0.7 V |
| 7 0 V    | 15 2.0 V |
| 8 1.4 V  | 16 3.4 V |

TR101  
2SC828  
Switching

| MUT     | MUT   |
|---------|-------|
| OFF     | ON    |
| E 0 V   | 0 V   |
| F 1.9 V | 0 V   |
| G 0.1 V | 0.6 V |


■ TONE CONTROL, MAIN AMPLIFIER, POWER SUPPLY AND PROTECTION CIRCUIT BOARD

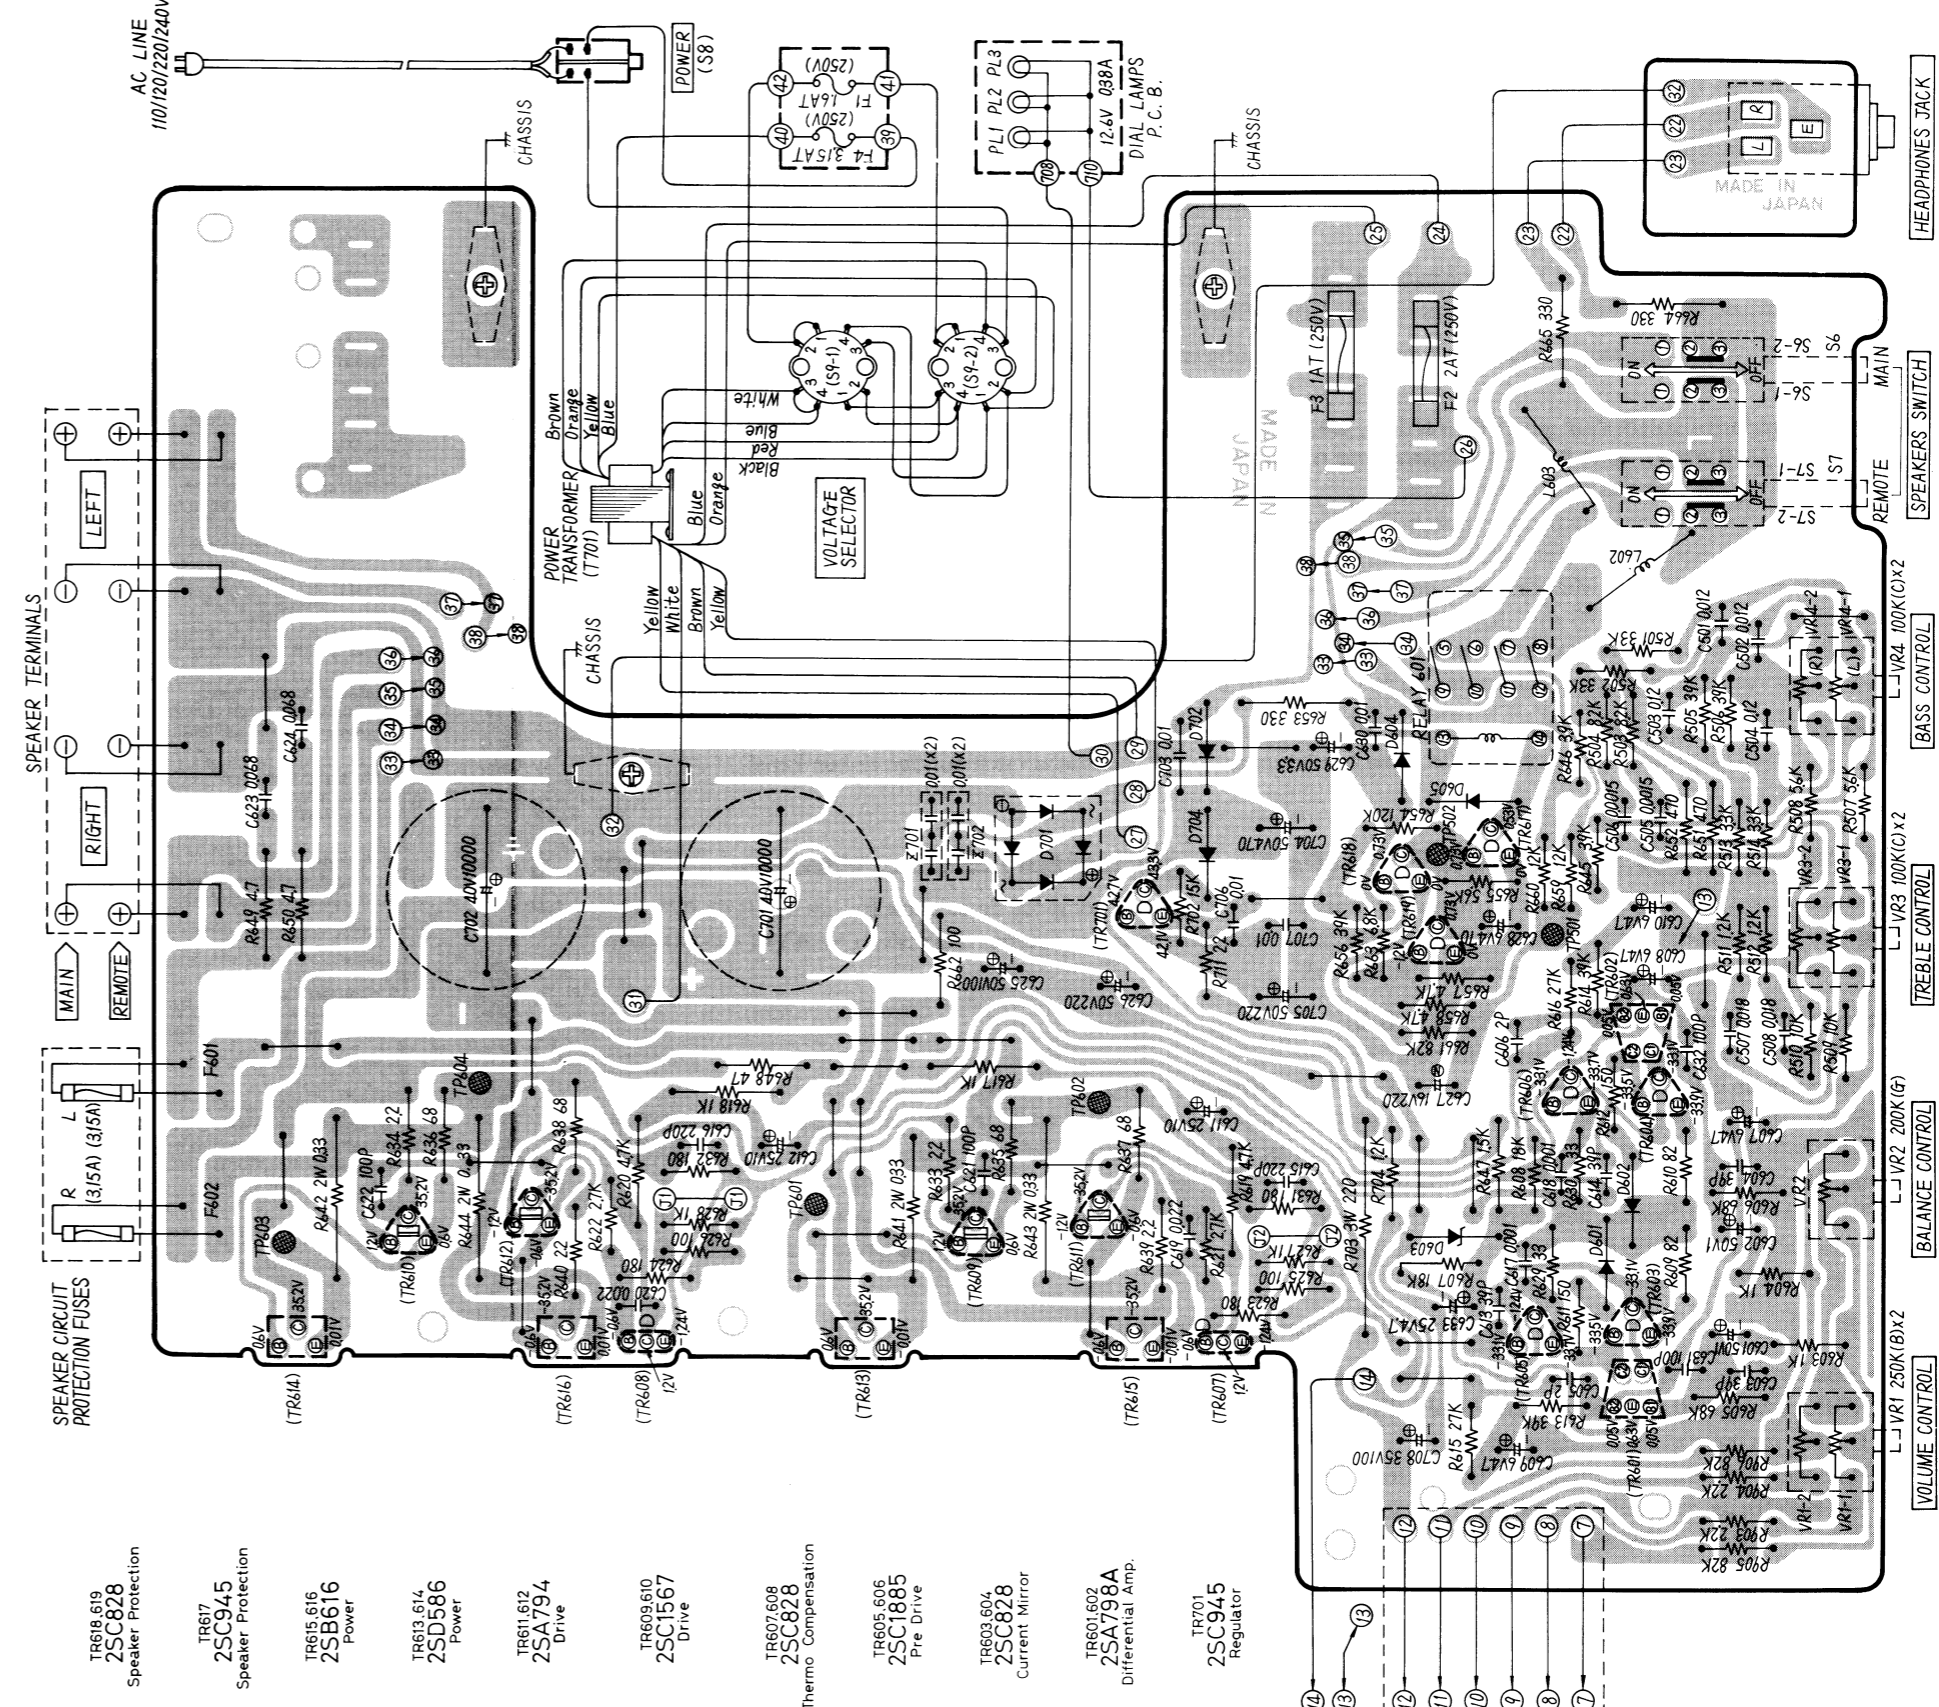


- TR618.619  
2SC828  
Speaker Protection
- TR617  
2SC945  
Speaker Protection
- TR615.616  
2SB616  
Power
- TR613.614  
2SD586  
Power
- TR611.612  
2SA794  
Drive
- TR609.610  
2SC1567  
Drive
- TR607.608  
2SC828  
Thermo Compensation
- TR605.606  
2SC1885  
Pre Drive
- TR603.604  
2SC828  
Current Mirror
- TR601.602  
2SA798A  
Differential Amp.
- TR001  
2SC945  
Regulator

## ■ POWER SOURCE SCHEMATIC DIAGRAM

• Products for Australia [XAL] only


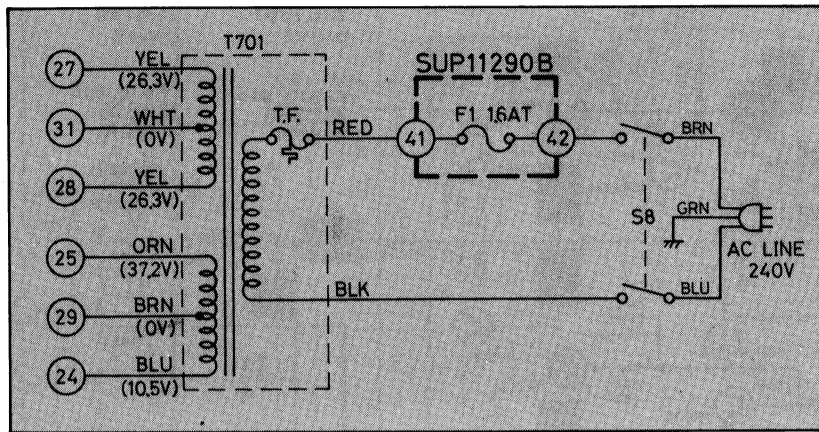


• Products for England [XE] only

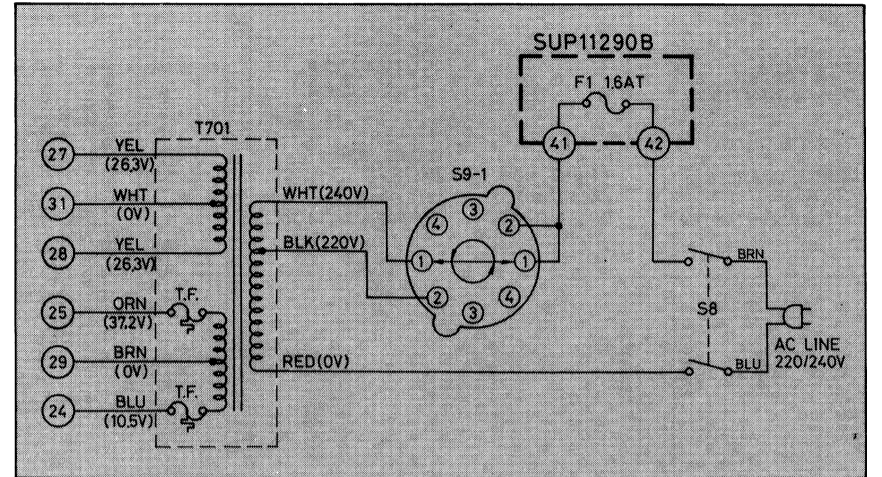


## ■ ANTENNA COUPLING CAPACITORS THE PRODUCTS FOR AUSTRALIA (XAL)

• Products for [XA] only

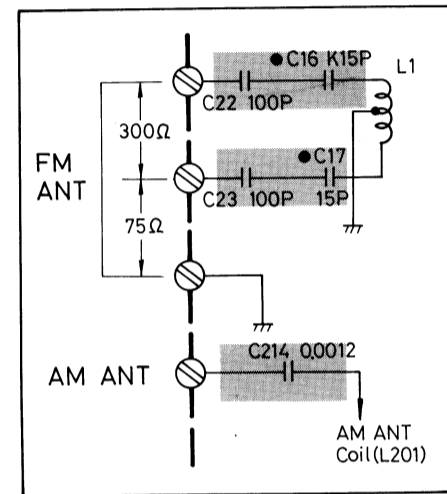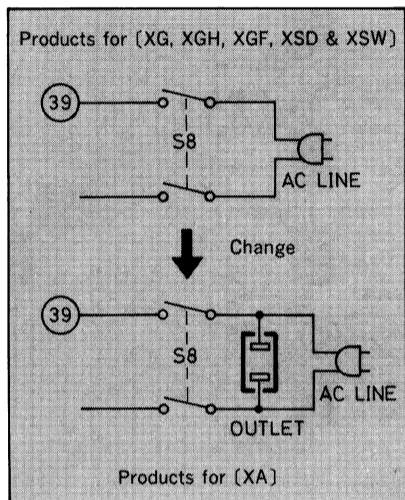


SA-5270 13


## ■ BLOCK DIAGRAM OF INTEGRATED CIRCUITS

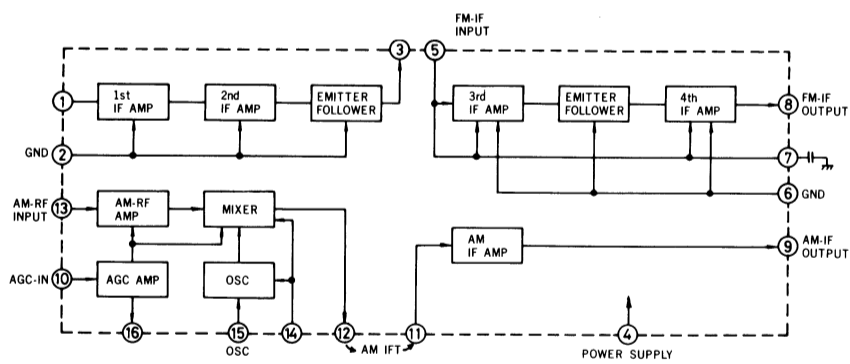


IC101 (AN217)  
FM 2 STEPS IF AMPLIFIER & AM CIRCUIT

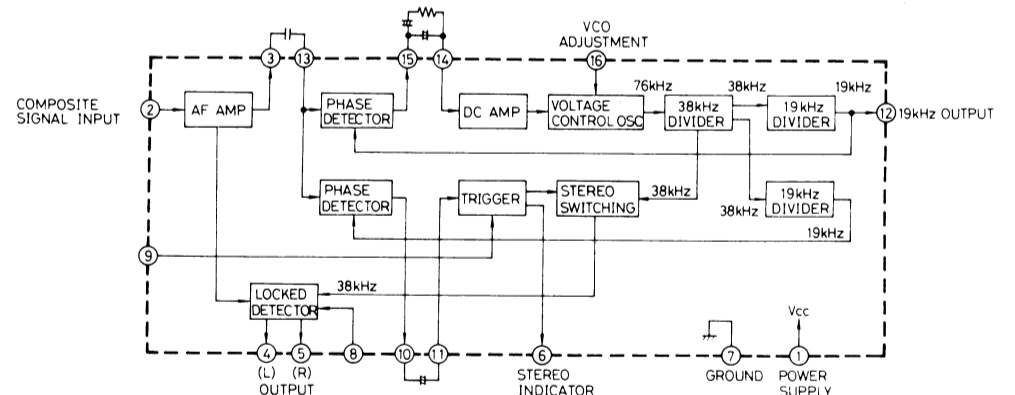

IC301 (AN363)  
PLL FM MULTIPLEX CIRCUIT

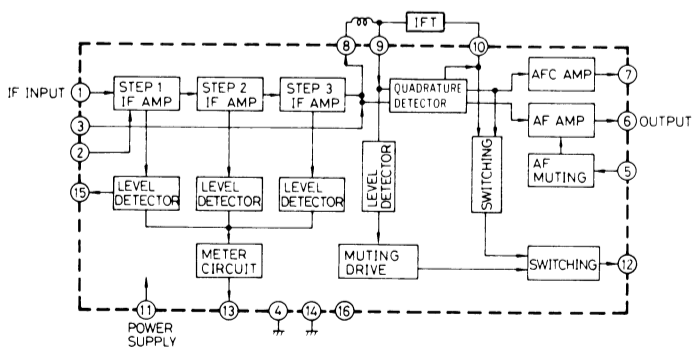


IC102 (AN377)  
FM IF AMPLIFIER & DETECTOR CIRCUIT

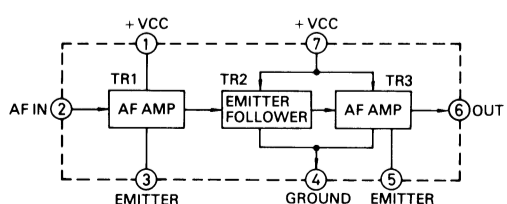

IC401, 402 (SVITA7129P)  
EQUALIZER AMPLIFIER CIRCUIT

## ■ DIAL CORD INSTALLATION GUIDE

1. Dial cord length is 180cm (70-15/16").
2. Tuning gang is positioned at maximum capacity. (Frequency is minimum)
3. Arrow marks (1 ~ 9) indicated correct order and direction of stringing dial cord.

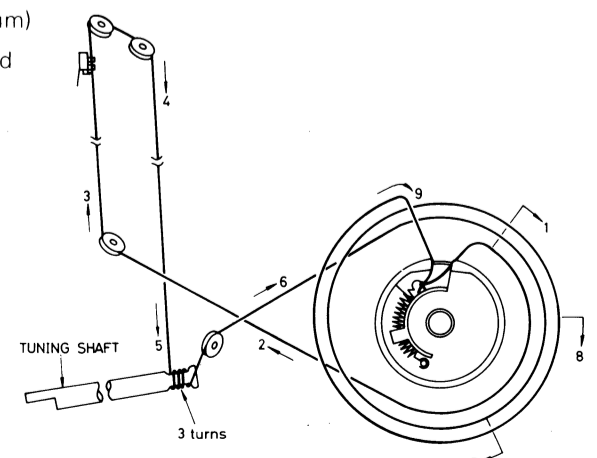


SA-5270 14

# Schematic Diagram ..... Model SA-5270 / SA-5270K



1 2 3 4 5 6 7

A  
B  
C  
D  
E  
F  
G  
H  
I

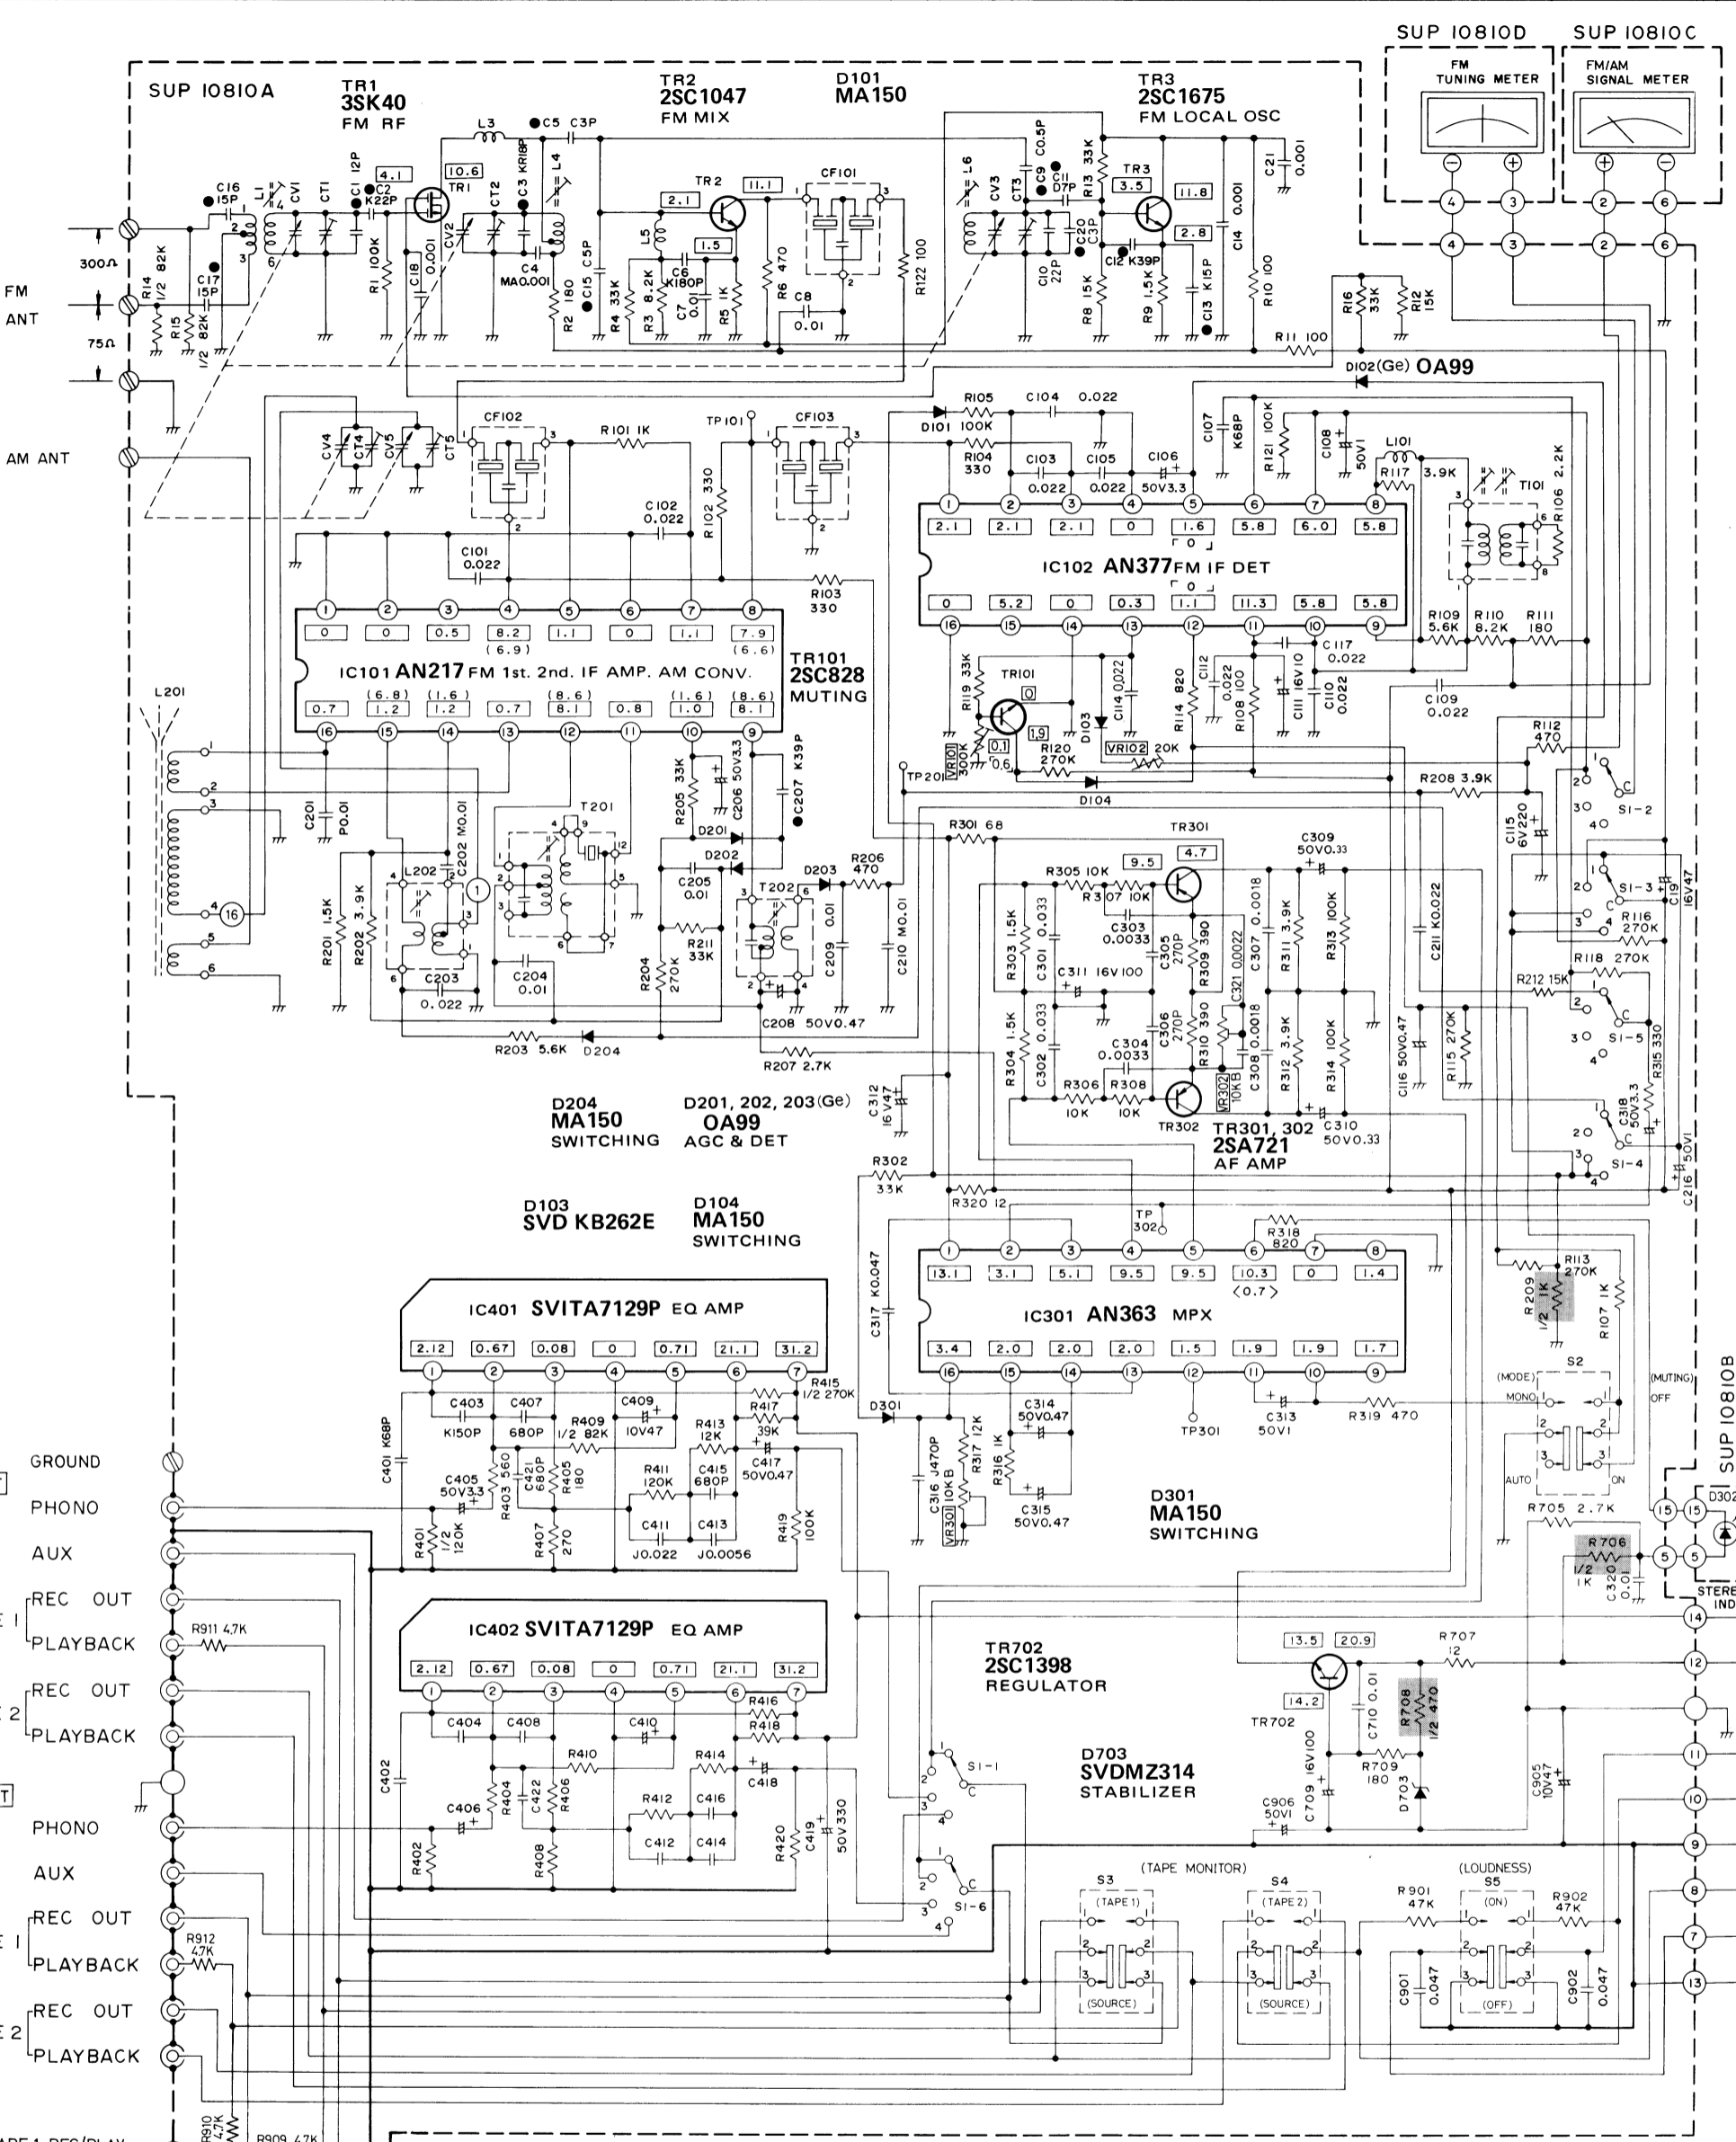


SA-5270 15

SA-5270 16

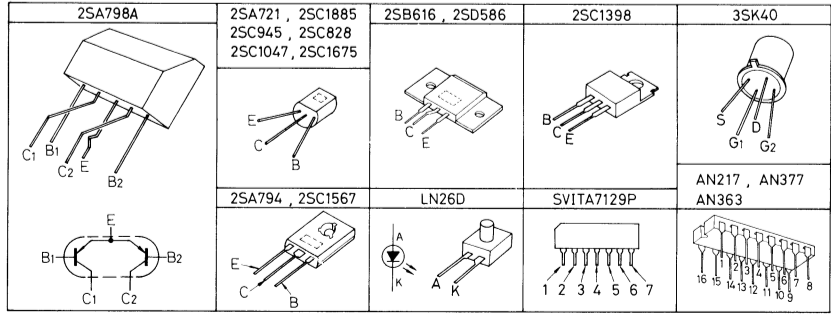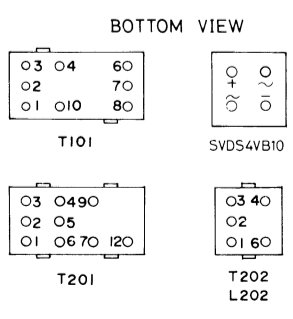

**IMPORTANT**  
THE SHADED AREA ON T-RATES SPECIAL FEATURE WHEN SERVICING IT IS ESSENTIAL THAT SPECIFIED PARTS BE USED IN THE SHADED AREAS ONLY.

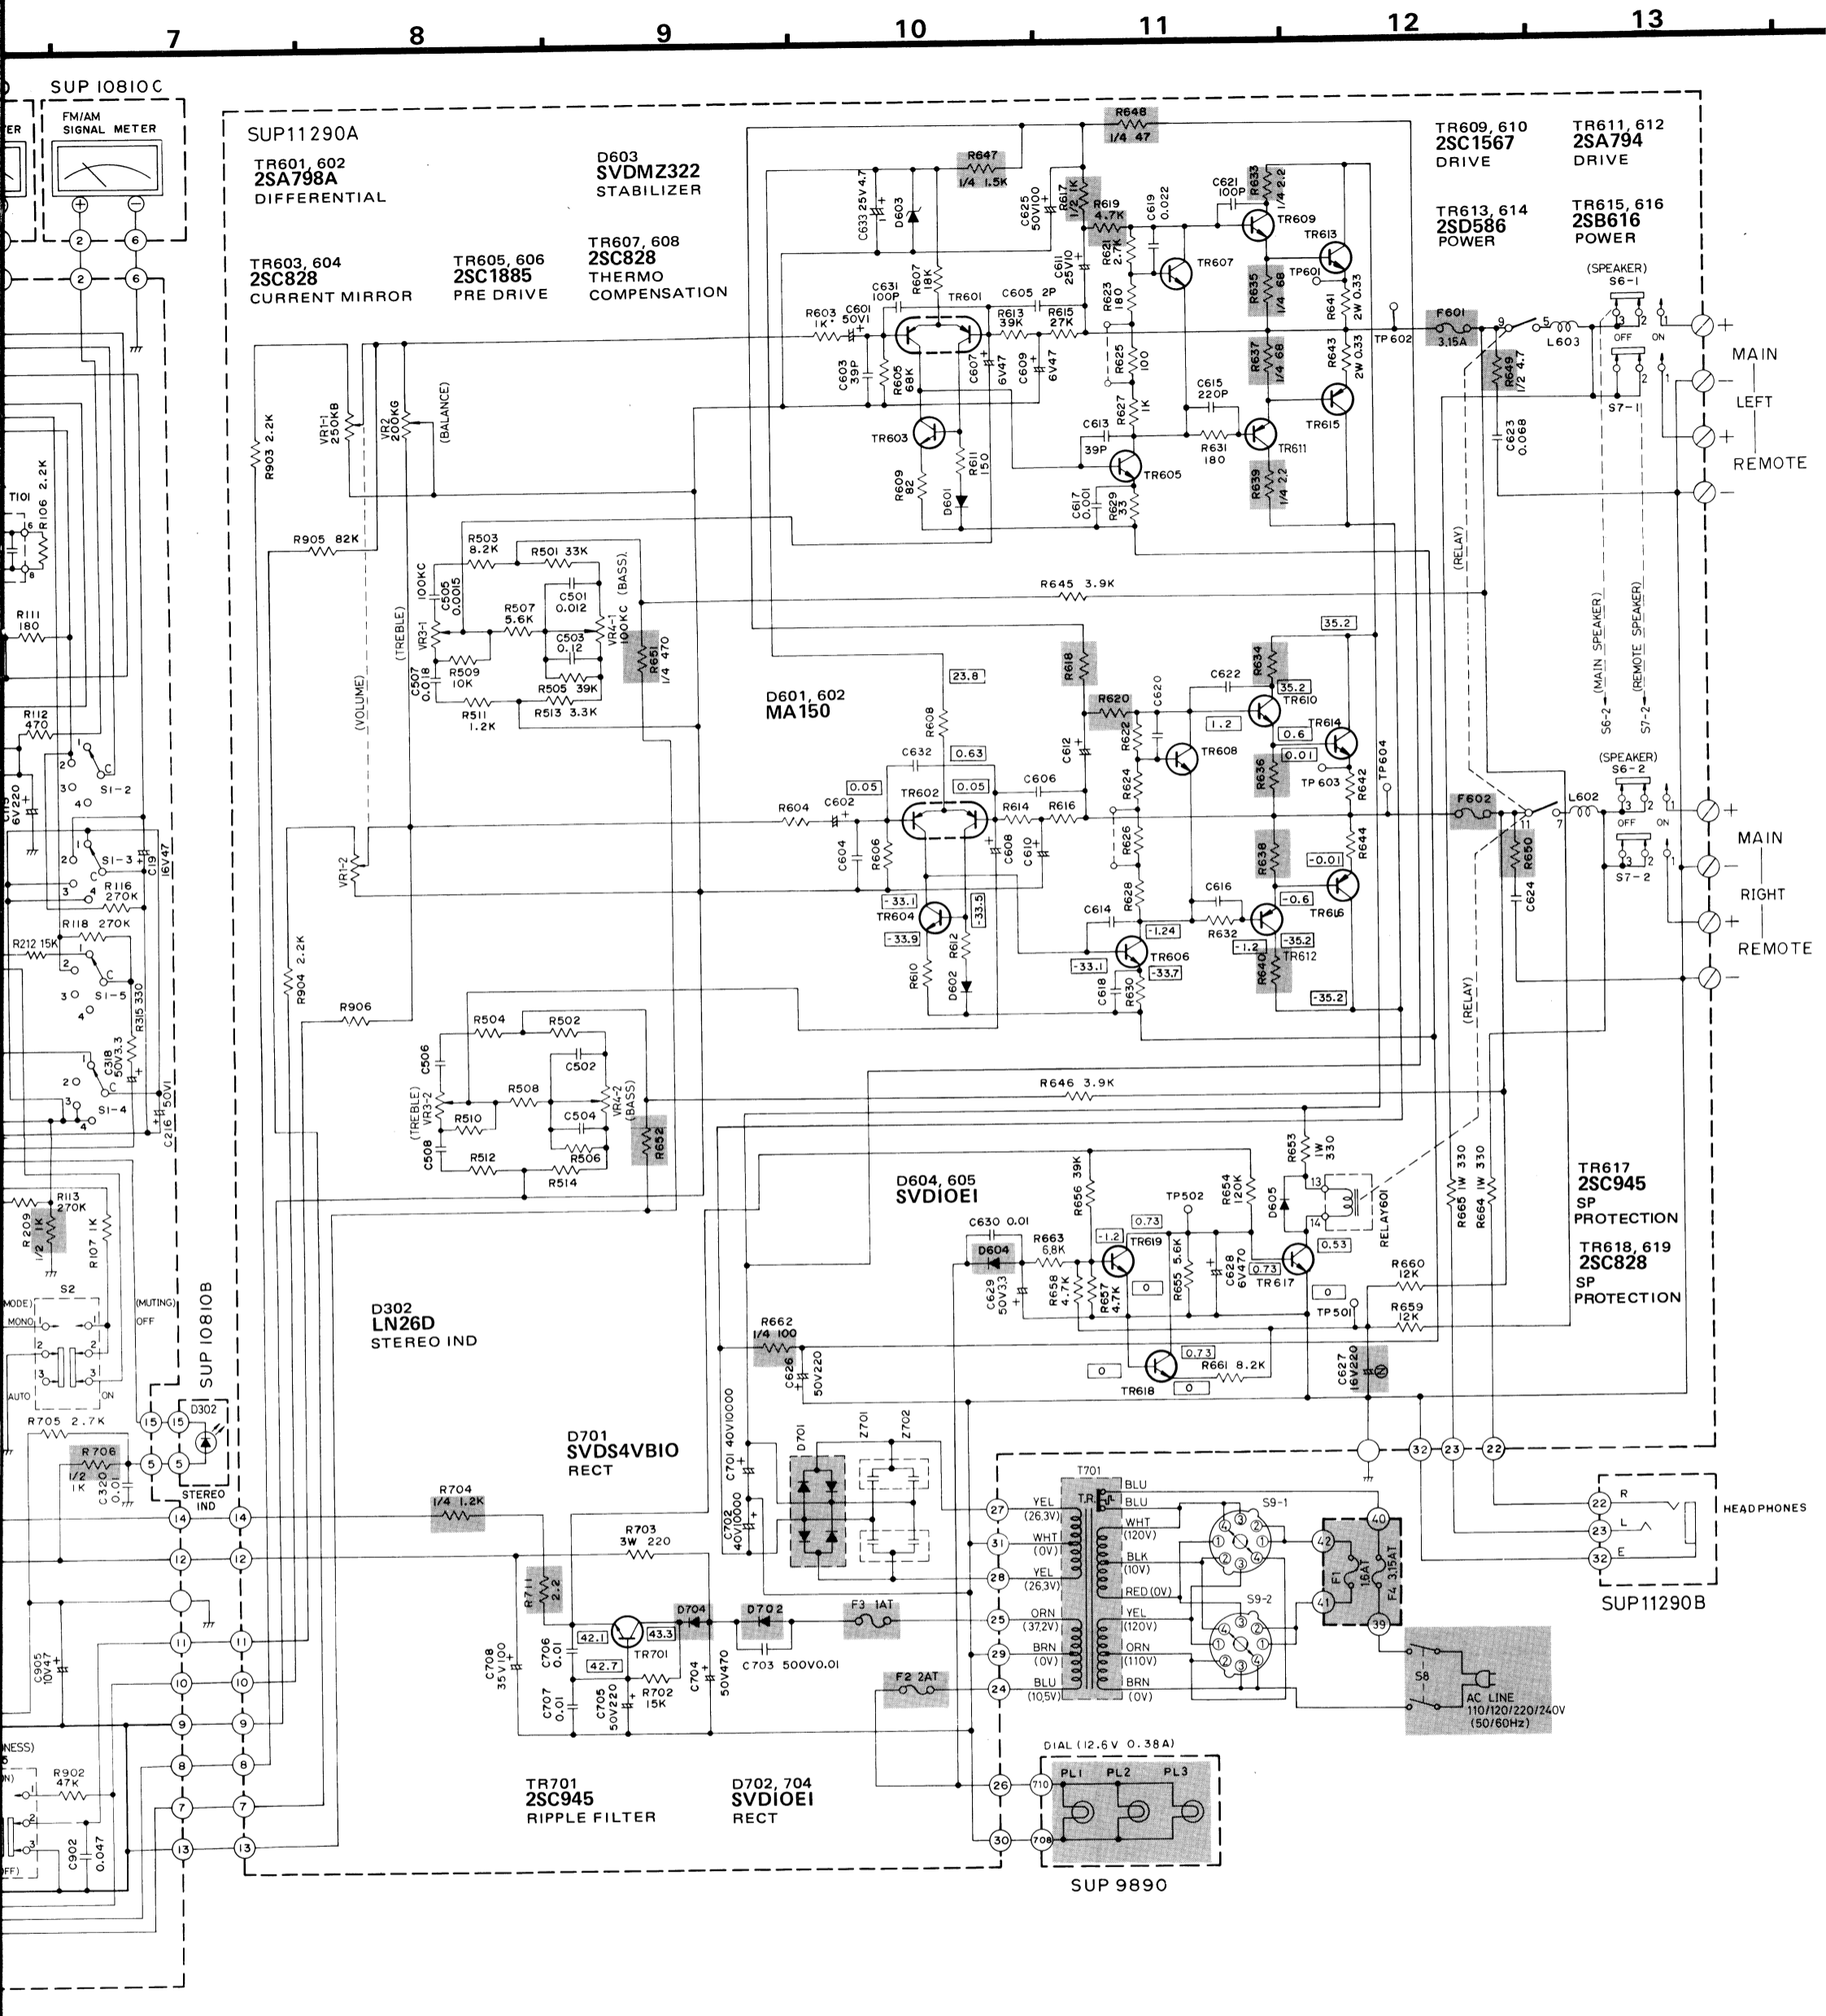


**IMPORTANT SAFETY NOTICE**  
 THE SHADED AREA ON THIS SCHEMATIC DIAGRAM INCORPORATES SPECIAL FEATURES IMPORTANT FOR SAFETY. WHEN SERVICING IT IS ESSENTIAL THAT ONLY MANUFACTURER'S SPECIFIED PARTS BE USED FOR THE CRITICAL COMPONENTS IN THE SHADED AREAS OF THE SCHEMATIC.

**NOTES:**

1. S1-1 ~ S1-6: Selector switch in "AM" position.  
 ① AM ↔ ② FM ↔ ③ PHONO ↔ ④ AUX
2. S2: FM muting/FM mode switch in "ON/FM AUTO" position.
3. S3: Tape monitor 1 switch in "SOURCE" position.
4. S4: Tape monitor 2 switch in "SOURCE" position.
5. S5: Loudness switch in "OFF" position.
6. S6-1, S6-2: Main speaker switch in "OFF" position.
7. S7-1, S7-2: Remote speaker switch in "OFF" position.
8. S8: Power source switch in "OFF" position.
9. S9: Voltage selector switch in "110V" position.  
 ④ 110V ↔ ③ 120V ↔ ② 220V ↔ ① 240V
10. Indicated voltage values are the standard values for the unit measured by the DC electronic circuit tester (high impedance) with the chassis taken as standard. Therefore, there may exist some errors in the voltage values, depending on the internal impedance of the DC circuit tester.  
 □ FM monoral signal reception.  
 ( ) AM position.  
 < > FM stereo signal reception.  
 ▭ FM muting circuit operating position.
11. This schematic diagram may be modified at any time with development of new technology.


## ■ BLOCK DIAGRAM

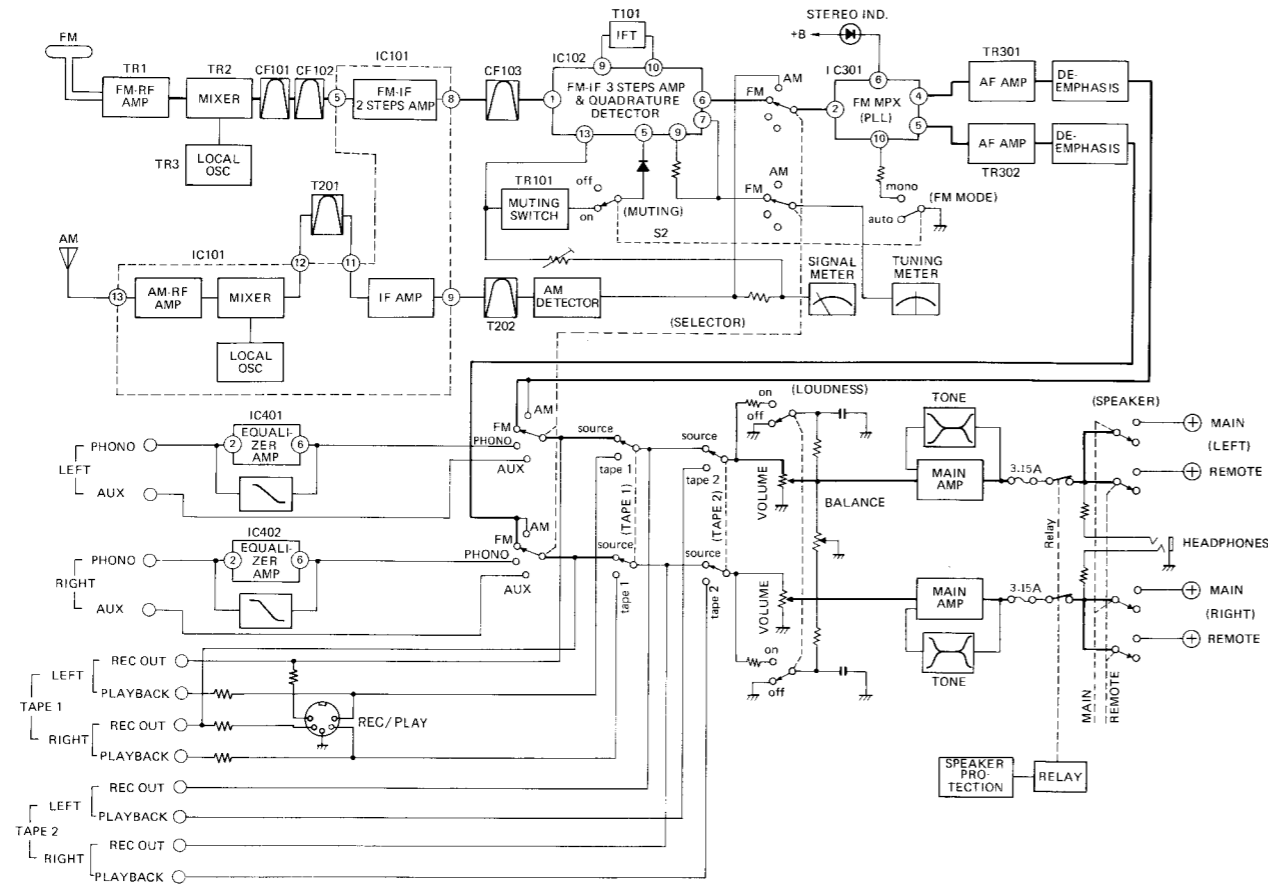

## ■ SERVICE AID

At the initial stage of the main amplifier of this unit, the differential amplifier of current mirror load is employed.

This is a circuit for obtaining the gain higher than that in the conventional circuits, with current in the differential amplifier stage kept constant. When  $I_{c1}$  is increased through variation of base voltage of the differential amplifier TR1,  $I_{c2}$  at TR2 is reduced with consequent decrease in the voltage drop at R2, this in turn reduces VEB of TR3, and thus  $I_{c1}$  gradually decreases. On the contrary, when  $I_{c1}$  of TR1 is reduced,  $I_{c2}$  of TR2 is increased with increase of voltage drop at R2, thus resulting in rise of VEB for TR3 and consequent increase of  $I_{c1}$ . As the characteristics of the differential amplifier,  $I_{c2}$  is reduced as  $I_{c1}$  is increased. In this way,  $I_{c1}$  and  $I_{c2}$  are kept constant at all times through functioning of TR3. Constant current means that high impedance is connected to the differential amplifier circuit, and thus large voltage gain can be obtained. Another cause for increasing the voltage gain is the push-pull circuit formed by TR1 and TR3. In the differential amplifier, signal of opposite phase is obtained at the collector of TR1 with respect to the input signal, while in the collector of TR2, signal of the phase as the input is obtained to be further applied to the base of TR3. Accordingly, signal of opposite phase to the input is developed at the collector of TR3, thus consequently forming the push-pull circuit of TR1 and TR3. In other words, since the amount of NF can be increased with the rise of the gain, improvements in the distortion factor and S/N ratio can be achieved.

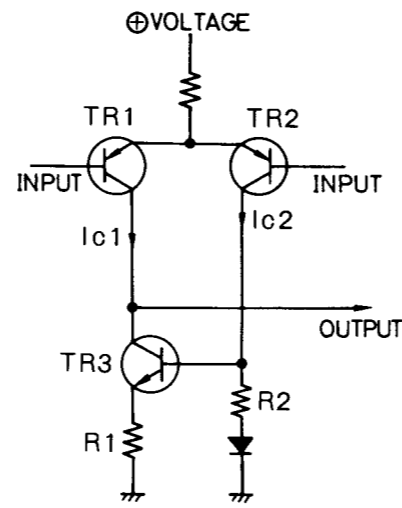

(CURRENT MIRROR CIRCUIT)

Fig. 1

SA-5270 17

## ■ REPLACEMENT PARTS LIST

**Important Safety Notice**  
Components identified by shaded area have special characteristics important for safety. When replacing any of these components use only manufacturer's specified parts.

NOTE: 1. Part numbers are indicated on most mechanical parts.  
Please use this part number for parts orders.

| Ref. No.                      | Part No.   | Part Name & Description   | Per Set | Remarks |
|-------------------------------|------------|---|---------|---------|
| <b>INTEGRATED CIRCUITS</b>    |            |   |         |         |
| IC101                         | AN217BB    | IC, FM IF Amplifier & AM Circuit                                | 1       |         |
| IC102                         | AN377      | IC, FM IF Amplifier & Detector                                  | 1       |         |
| IC301                         | AN363A     | IC, PLL Type FM Multiplex                                       | 1       |         |
| IC401, 402                    | SV1TA7129P | IC, Equalizer Amplifier   | 2       |         |
| <b>TRANSISTORS</b>            |            |   |         |         |
| TR1                           | 3SK40M     | Transistor (FET), FM RF Amplifier                               | 1       |         |
| TR2                           | 2SC1047-C  | Transistor, FM Mix (Use in ranks C or D)                        | 1       |         |
| TR3                           | 2SC1675-L1 | Transistor, FM Oscillator                                       | 1       |         |
| TR101                         | 2SC1328-T  | Transistor, Muting Switch (Use in ranks S, T or U)              | 2       |         |
| TR301, 302                    | 2SA902S-F  | Transistor, AF Amplifier (Use in ranks F or G)                  | 2       |         |
| TR601, 602                    | 2SA798A-G2 | Transistor, Differential Amplifier (Use in ranks F2 or G2)      | 2       |         |
| TR603, 604                    | 2SC1328-T  | Transistor, Current Mirror & Switching (Use in ranks S, T or U) | 4       |         |
| TR605, 606                    | 2SC1885-R  | Transistor, Pre Drive Amplifier (Use in ranks R, Q or S)        | 2       |         |
| TR607, 608                    | 2SC828A-R  | Transistor, Thermo Compensation                                 | 2       |         |
| TR609, 610                    | 2SC1567-Q  | Transistor, Drive Amplifier (Use in ranks P, Q or R)            | 2       |         |
| TR611, 612                    | 2SA794-Q   | Transistor, Drive Amplifier (Use in ranks P, Q or R)            | 2       |         |
| TR613, 614                    | 2SD586-R   | (Use pair ranks as same as TR609, 610, 611 and TR612)           | 2       |         |
| TR615, 616                    | 2SB616-Q   | Transistor, Power Amplifier (Use in ranks Q, R or S)            | 2       |         |
| TR617, 701                    | 2SC945-R   | Transistor, Relay Drive & Ripple Filter                         | 2       |         |
| TR702                         | 2SC1398-Q  | Transistor, Regulator (Use in ranks P, Q or R)                  | 1       |         |
| <b>DIODES</b>                 |            |   |         |         |
| D101, 104, 204, 301, 601, 602 | MA150      | Diode, AGC Detector & Current Mirror                            | 6       |         |
| D103                          | SVDKB262E  | Diode   | 1       |         |
| D102, 201, 202                | OA99       | Diode, Switching & Detector                                     | 4       |         |
| D302                          | LN26D      | Light Emitting Diode, Stereo Indicator                          | 1       |         |
| D603                          | SVDM2322   | Zener Diode, 22V  | 1       |         |
| D604, 605, 702, 704           | SYD10E1    | Rectifier   | 4       |         |
| D701                          | SVDS4V810  | Rectifier   | 1       |         |
| D703                          | SVDM2314   | Zener Diode, 14V  | 1       |         |

18 SA-5270

| Ref. No.                      | Part No.    | Part Name & Description                          | Per Set | Remarks |
|-------------------------------|-------------|--|---------|---------|
| <b>COILS and TRANSFORMERS</b> |             |  |         |         |
| L1                            | SLA4P25     | Antenna Coil, FM                                 | 1       |         |
| L3                            | RLQY25S2    | Coil, Choke                                      | 1       |         |
| L4                            | SLD4P13     | Coil, Collector (TR1)                            | 1       |         |
| L5                            | RLQY15G5    | Coil, Choke                                      | 1       |         |
| L6                            | SLO4P31     | Oscillator Coil, FM                              | 1       |         |
| L101                          | SLQX180-1   | Coil, Choke                                      | 1       |         |
| L201                          | SLF2D41     | Ferrite Antenna Coil, AM                         | 1       |         |
| L202                          | SLO2C3-P    | Oscillator Coil, AM                              | 1       |         |
| L601, 602                     | SLQY15G-3U  | Coil, Compensation                               | 2       |         |
| T101                          | SLI4D513    | IFT, FM Discriminator                            | 1       |         |
| T201                          | SLI7D101-M  | IFT, AM 1st (Except set for [XE])                | 1       |         |
| T201 [XE] only                | SLI7D103-M  | IFT, AM 1st                                      | 1       |         |
| T202                          | RLI2C450    | IFT, AM 2nd                                      | 1       |         |
| T701                          | SLTSQ61-W   | Power Transformer, (Except set for [XE] & [XAL]) | 1       |         |
| T701 [XE] only                | SLTSQ63-W   | Power Transformer                                | 1       |         |
| T701 [XAL] only               | SLTSQ65-W   | Power Transformer                                | 1       |         |
| <b>CERAMIC FILTERS</b>        |             |  |         |         |
| CF101, 102, 103               | SVFE107MA8A | FM IF Circuit, Red, 10.7MHz                      | each    |         |
|                               | SVFE107MA8B | FM IF Circuit, Blue, 10.7MHz                     | 3       |         |
|                               | SVFE107MA8C | FM IF Circuit, Orange, 10.7MHz                   |         |         |
|                               | SVFE107MA8D | FM IF Circuit, Black, 10.64MHz                   |         |         |
|                               | SVFE107MA8E | FM IF Circuit, White, 10.76MHz                   |         |         |
| <b>RESISTORS</b>              |             |  |         |         |
| R1                            | ERD25TJ104  | 100kΩ, 1/4W, ±5%                                 | 1       |         |
| R2                            | ERD25TJ181  | 180Ω, 1/4W, ±5%                                  | 1       |         |
| R3                            | ERD25TJ822  | 8.2kΩ, 1/4W, ±5%                                 | 1       |         |
| R4                            | ERD25TJ333  | 33kΩ, 1/4W, ±5%                                  | 1       |         |
| R5                            | ERD25TJ102  | 1kΩ, 1/4W, ±5%                                   | 1       |         |
| R6                            | ERD25TJ471  | 470Ω, 1/4W, ±5%                                  | 1       |         |
| R8                            | ERD25TJ153  | 15kΩ, 1/4W, ±5%                                  | 1       |         |
| R9                            | ERD25TJ152  | 1.5kΩ, 1/4W, ±5%                                 | 1       |         |
| R10                           | ERD25TJ101  | 100Ω, 1/4W, ±5%                                  | 1       |         |
| R11                           | ERD25TJ101  | 100Ω, 1/4W, ±5%                                  | 1       |         |
| R12                           | ERD25TJ153  | 15kΩ, 1/4W, ±5%                                  | 1       |         |
| R13                           | ERD25TJ333  | 33kΩ, 1/4W, ±5%                                  | 1       |         |
| R14                           | ERD12TSJ823 | 82kΩ, 1/2W, ±5% (Except set for [XAL])           | 1       |         |
| R15                           | ERD12TSJ823 | 82kΩ, 1/2W, ±5% (Except set for [XAL])           | 1       |         |
| R16                           | ERD25TJ333  | 33kΩ, 1/4W, ±5%                                  | 1       |         |
| R101                          | ERD25TJ102  | 1kΩ, 1/4W, ±5%                                   | 1       |         |
| R102                          | ERD25TJ331  | 330Ω, 1/4W, ±5%                                  | 1       |         |
| R103                          | ERD25TJ331  | 330Ω, 1/4W, ±5%                                  | 1       |         |
| R104                          | ERD25TJ331  | 330Ω, 1/4W, ±5%                                  | 1       |         |
| R105                          | ERD25TJ104  | 100kΩ, 1/4W, ±5%                                 | 1       |         |
| R106                          | ERD25TJ222  | 2.2kΩ, 1/4W, ±5%                                 | 1       |         |
| R107                          | ERD25TJ102  | 1kΩ, 1/4W, ±5%                                   | 1       |         |
| R108                          | ERD25TJ101  | 100Ω, 1/4W, ±5%                                  | 1       |         |
| R109                          | ERD25TJ562  | 56kΩ, 1/4W, ±5%                                  | 1       |         |
| R110                          | ERD25TJ822  | 8.2kΩ, 1/4W, ±5%                                 | 1       |         |
| R111                          | ERD25TJ181  | 180Ω, 1/4W, ±5%                                  | 1       |         |

| Ref. No. | Part No.    | Part Name & Description  | Per Set | Remarks |
|----------|-------------|--------------------------|---------|---------|
| R112     | ERD25TJ471  | Carbon, 470Ω, 1/4W, ±5%  | 1       |         |
| R113     | ERD25TJ274  | Carbon, 270kΩ, 1/4W, ±5% | 1       |         |
| R114     | ERD25TJ821  | Carbon, 820Ω, 1/4W, ±5%  | 1       |         |
| R115     | ERD25TJ274  | Carbon, 270kΩ, 1/4W, ±5% | 1       |         |
| R116     | ERD25TJ274  | Carbon, 270kΩ, 1/4W, ±5% | 1       |         |
| R117     | ERD25TJ392  | Carbon, 39kΩ, 1/4W, ±5%  | 1       |         |
| R118     | ERD25TJ274  | Carbon, 270kΩ, 1/4W, ±5% | 1       |         |
| R119     | ERD25TJ333  | Carbon, 33kΩ, 1/4W, ±5%  | 1       |         |
| R120     | ERD25TJ274  | Carbon, 270kΩ, 1/4W, ±5% | 1       |         |
| R121     | ERD25TJ104  | Carbon, 100kΩ, 1/4W, ±5% | 1       |         |
| R122     | ERD25TJ101  | Carbon, 100Ω, 1/4W, ±5%  | 1       |         |
| R201     | ERD25TJ101  | Carbon, 100Ω, 1/4W, ±5%  | 1       |         |
| R201     | ERD25TJ152  | Carbon, 1.5kΩ, 1/4W, ±5% | 1       |         |
| R202     | ERD25TJ392  | Carbon, 3.9kΩ, 1/4W, ±5% | 1       |         |
| R203     | ERD25TJ562  | Carbon, 5.6kΩ, 1/4W, ±5% | 1       |         |
| R204     | ERD25TJ274  | Carbon, 270kΩ, 1/4W, ±5% | 1       |         |
| R205     | ERD25TJ333  | Carbon, 33kΩ, 1/4W, ±5%  | 1       |         |
| R206     | ERD25TJ471  | Carbon, 470Ω, 1/4W, ±5%  | 1       |         |
| R207     | ERD25TJ272  | Carbon, 2.7kΩ, 1/4W, ±5% | 1       |         |
| R208     | ERD25TJ392  | Carbon, 3.9kΩ, 1/4W, ±5% | 1       |         |
| R209     | ERD12FJ102  | Carbon, 1kΩ, 1/2W, ±5%   | 1       |         |
| R211     | ERD25TJ333  | Carbon, 33kΩ, 1/4W, ±5%  | 1       |         |
| R212     | ERD25TJ153  | Carbon, 15kΩ, 1/4W, ±5%  | 1       |         |
| R301     | ERD25TJ680  | Carbon, 68Ω, 1/4W, ±5%   | 1       |         |
| R302     | ERD25TJ333  | Carbon, 33kΩ, 1/4W, ±5%  | 1       |         |
| R303     | ERD25TJ152  | Carbon, 1.5kΩ, 1/4W, ±5% | 1       |         |
| R304     | ERD25TJ152  | Carbon, 1.5kΩ, 1/4W, ±5% | 1       |         |
| R305     | ERD25TJ103  | Carbon, 10kΩ, 1/4W, ±5%  | 1       |         |
| R306     | ERD25TJ103  | Carbon, 10kΩ, 1/4W, ±5%  | 1       |         |
| R307     | ERD25TJ103  | Carbon, 10kΩ, 1/4W, ±5%  | 1       |         |
| R308     | ERD25TJ103  | Carbon, 10kΩ, 1/4W, ±5%  | 1       |         |
| R309     | ERD25TJ391  | Carbon, 390Ω, 1/4W, ±5%  | 1       |         |
| R310     | ERD25TJ391  | Carbon, 390Ω, 1/4W, ±5%  | 1       |         |
| R311     | ERD25TJ392  | Carbon, 3.9kΩ, 1/4W, ±5% | 1       |         |
| R312     | ERD25TJ392  | Carbon, 3.9kΩ, 1/4W, ±5% | 1       |         |
| R313     | ERD25TJ104  | Carbon, 100kΩ, 1/4W, ±5% | 1       |         |
| R314     | ERD25TJ104  | Carbon, 100kΩ, 1/4W, ±5% | 1       |         |
| R315     | ERD25TJ331  | Carbon, 330Ω, 1/4W, ±5%  | 1       |         |
| R316     | ERD25TJ102  | Carbon, 1kΩ, 1/4W, ±5%   | 1       |         |
| R317     | ERD25TJ123  | Carbon, 12kΩ, 1/4W, ±5%  | 1       |         |
| R318     | ERD25TJ821  | Carbon, 820Ω, 1/4W, ±5%  | 1       |         |
| R319     | ERD25TJ471  | Carbon, 470Ω, 1/4W, ±5%  | 1       |         |
| R320     | ERD25TJ120  | Carbon, 12Ω, 1/4W, ±5%   | 1       |         |
| R401     | ERD12TSJ124 | Carbon, 120kΩ, 1/2W, ±5% | 1       |         |
| R402     | ERD12TSJ124 | Carbon, 120kΩ, 1/2W, ±5% | 1       |         |
| R403     | ERD25TJ561  | Carbon, 560Ω, 1/4W, ±5%  | 1       |         |
| R404     | ERD25TJ561  | Carbon, 560Ω, 1/4W, ±5%  | 1       |         |
| R405     | ERD25TJ181  | Carbon, 180Ω, 1/4W, ±5%  | 1       |         |
| R406     | ERD25TJ181  | Carbon, 180Ω, 1/4W, ±5%  | 1       |         |
| R407     | ERD25TJ271  | Carbon, 270Ω, 1/4W, ±5%  | 1       |         |
| R408     | ERD25TJ271  | Carbon, 270Ω, 1/4W, ±5%  | 1       |         |
| R409     | ERD12TSJ823 | Carbon, 82kΩ, 1/2W, ±5%  | 1       |         |
| R410     | ERD12TSJ823 | Carbon, 82kΩ, 1/2W, ±5%  | 1       |         |
| R411     | ERD25TJ124  | Carbon, 120kΩ, 1/4W, ±5% | 1       |         |
| R412     | ERD25TJ124  | Carbon, 120kΩ, 1/4W, ±5% | 1       |         |
| R413     | ERD25TJ123  | Carbon, 12kΩ, 1/4W, ±5%  | 1       |         |
| R414     | ERD25TJ123  | Carbon, 12kΩ, 1/4W, ±5%  | 1       |         |
| R415     | ERD12TSJ274 | Carbon, 270kΩ, 1/2W, ±5% | 1       |         |
| R416     | ERD12TSJ274 | Carbon, 270kΩ, 1/2W, ±5% | 1       |         |
| R417     | ERD25TJ393  | Carbon, 39kΩ, 1/4W, ±5%  | 1       |         |
| R418     | ERD25TJ393  | Carbon, 39kΩ, 1/4W, ±5%  | 1       |         |
| R419     | ERD25TJ104  | Carbon, 100kΩ, 1/4W, ±5% | 1       |         |
| R420     | ERD25TJ104  | Carbon, 100kΩ, 1/4W, ±5% | 1       |         |
| R501     | ERD25TJ333  | Carbon, 33kΩ, 1/4W, ±5%  | 1       |         |
| R502     | ERD25TJ333  | Carbon, 33kΩ, 1/4W, ±5%  | 1       |         |
| R503     | ERD25TJ822  | Carbon, 8.2kΩ, 1/4W, ±5% | 1       |         |
| R504     | ERD25TJ822  | Carbon, 8.2kΩ, 1/4W, ±5% | 1       |         |
| R505     | ERD25TJ393  | Carbon, 39kΩ, 1/4W, ±5%  | 1       |         |
| R506     | ERD25TJ393  | Carbon, 39kΩ, 1/4W, ±5%  | 1       |         |
| R507     | ERD25TJ562  | Carbon, 5.6kΩ, 1/4W, ±5% | 1       |         |
| R508     | ERD25TJ562  | Carbon, 5.6kΩ, 1/4W, ±5% | 1       |         |
| R509     | ERD25TJ103  | Carbon, 10kΩ, 1/4W, ±5%  | 1       |         |
| R510     | ERD25TJ103  | Carbon, 10kΩ, 1/4W, ±5%  | 1       |         |
| R511     | ERD25TJ122  | Carbon, 1.2kΩ, 1/4W, ±5% | 1       |         |
| R512     | ERD25TJ122  | Carbon, 1.2kΩ, 1/4W, ±5% | 1       |         |
| R513     | ERD25TJ332  | Carbon, 3.3kΩ, 1/4W, ±5% | 1       |         |
| R514     | ERD25TJ332  | Carbon, 3.3kΩ, 1/4W, ±5% | 1       |         |
| R603     | ERD25TJ102  | Carbon, 1kΩ, 1/4W, ±5%   | 1       |         |
| R604     | ERD25TJ102  | Carbon, 1kΩ, 1/4W, ±5%   | 1       |         |
| R605     | ERD25TJ683  | Carbon, 68kΩ, 1/4W, ±5%  | 1       |         |
| R606     | ERD25TJ683  | Carbon, 68kΩ, 1/4W, ±5%  | 1       |         |
| R607     | ERD25TJ183  | Carbon, 18kΩ, 1/4W, ±5%  | 1       |         |
| R608     | ERD25TJ183  | Carbon, 18kΩ, 1/4W, ±5%  | 1       |         |
| R609     | ERD25TJ820  | Carbon, 82Ω, 1/4W, ±5%   | 1       |         |
| R610     | ERD25TJ820  | Carbon, 82Ω, 1/4W, ±5%   | 1       |         |
| R611     | ERD25TJ151  | Carbon, 150Ω, 1/4W, ±5%  | 1       |         |
| R612     | ERD25TJ151  | Carbon, 150Ω, 1/4W, ±5%  | 1       |         |
| R613     | ERD25TJ393  | Carbon, 39kΩ, 1/4W, ±5%  | 1       |         |
| R614     | ERD25TJ393  | Carbon, 39kΩ, 1/4W, ±5%  | 1       |         |
| R615     | ERD25TJ273  | Carbon, 27kΩ, 1/4W, ±5%  | 1       |         |
| R616     | ERD25TJ273  | Carbon, 27kΩ, 1/4W, ±5%  | 1       |         |
| R617     | ERD12FJ102  | Carbon, 1kΩ, 1/2W, ±5%   | 1       |         |
| R618     | ERD12FJ102  | Carbon, 1kΩ, 1/2W, ±5%   | 1       |         |
| R619     | ERD12FJ472  | Carbon, 4.7kΩ, 1/2W, ±5% | 1       |         |
| R620     | ERD12FJ472  | Carbon, 4.7kΩ, 1/2W, ±5% | 1       |         |
| R621     | ERD25TJ272  | Carbon, 2.7kΩ, 1/4W, ±5% | 1       |         |
| R622     | ERD25TJ272  | Carbon, 2.7kΩ, 1/4W, ±5% | 1       |         |
| R623     | ERD25TJ181  | Carbon, 180Ω, 1/4W, ±5%  | 1       |         |
| R624     | ERD25TJ181  | Carbon, 180Ω, 1/4W, ±5%  | 1       |         |
| R625     | ERD25TJ101  | Carbon, 100Ω, 1/4W, ±5%  | 1       |         |
| R626     | ERD25TJ101  | Carbon, 100Ω, 1/4W, ±5%  | 1       |         |
| R627     | ERD25TJ102  | Carbon, 1kΩ, 1/4W, ±5%   | 1       |         |
| R628     | ERD25TJ102  | Carbon, 1kΩ, 1/4W, ±5%   | 1       |         |
| R629     | ERD25TJ330  | Carbon, 33Ω, 1/4W, ±5%   | 1       |         |
| R630     | ERD25TJ330  | Carbon, 33Ω, 1/4W, ±5%   | 1       |         |
| R631     | ERD25TJ181  | Carbon, 180Ω, 1/4W, ±5%  | 1       |         |
| R632     | ERD25TJ181  | Carbon, 180Ω, 1/4W, ±5%  | 1       |         |
| R633     | ERD14FJ282  | Carbon, 2.2Ω, 1/4W, ±5%  | 1       |         |
| R634     | ERD14FJ282  | Carbon, 2.2Ω, 1/4W, ±5%  | 1       |         |
| R635     | ERD14FJ680  | Carbon, 68Ω, 1/4W, ±5%   | 1       |         |
| R636     | ERD14FJ680  | Carbon, 68Ω, 1/4W, ±5%   | 1       |         |

| Ref. No. | Part No.   | Part Name & Description    | Per Set | Remarks |
|----------|------------|----------------------------|---------|---------|
| R637     | ERD14FJ680 | Carbon, 680, 1/4W, ±5%     | 1       |         |
| R638     | ERD25TJ680 | Carbon, 680, 1/4W, ±5%     | 1       |         |
| R639     | ERD14FJR2  | Carbon, 2.20, 1/4W, ±5%    | 1       |         |
| R640     | ERD14FJR2  | Carbon, 2.20, 1/4W, ±5%    | 1       |         |
| R641     | ERX2ANJR33 | Metal Film, 0.330, 2W, ±5% | 1       |         |
| R642     | ERX2ANJR33 | Metal Film, 0.330, 2W, ±5% | 1       |         |
| R643     | ERX2ANJR33 | Metal Film, 0.330, 2W, ±5% | 1       |         |
| R644     | ERX2ANJR33 | Metal Film, 0.330, 2W, ±5% | 1       |         |
| R645     | ERD25TJ392 | Carbon, 3.9kΩ, 1/4W, ±5%   | 1       |         |
| R646     | ERD25TJ392 | Carbon, 3.9kΩ, 1/4W, ±5%   | 1       |         |
| R647     | ERD14FJ152 | Carbon, 1.5kΩ, 1/4W, ±5%   | 1       |         |
| R648     | ERD14FJ470 | Carbon, 470, 1/4W, ±5%     | 1       |         |
| R649     | ERD12FJ47  | Carbon, 4.70, 1/2W, ±5%    | 1       |         |
| R650     | ERD12FJ47  | Carbon, 4.70, 1/2W, ±5%    | 1       |         |
| R651     | ERD14FJ471 | Carbon, 4700, 1/4W, ±5%    | 1       |         |
| R652     | ERD14FJ471 | Carbon, 4700, 1/4W, ±5%    | 1       |         |
| R653     | ERG1ANJ331 | Metal Film, 3300, 1W, ±5%  | 1       |         |
| R654     | ERD25TJ124 | Carbon, 120kΩ, 1/4W, ±5%   | 1       |         |
| R655     | ERD25TJ562 | Carbon, 5.6kΩ, 1/4W, ±5%   | 1       |         |
| R656     | ERD25TJ393 | Carbon, 39kΩ, 1/4W, ±5%    | 1       |         |
| R657     | ERD25TJ472 | Carbon, 4.7kΩ, 1/4W, ±5%   | 1       |         |
| R658     | ERD25TJ472 | Carbon, 4.7kΩ, 1/4W, ±5%   | 1       |         |
| R659     | ERD25TJ123 | Carbon, 12kΩ, 1/4W, ±5%    | 1       |         |
| R660     | ERD25TJ123 | Carbon, 12kΩ, 1/4W, ±5%    | 1       |         |
| R661     | ERD25TJ822 | Carbon, 8.2kΩ, 1/4W, ±5%   | 1       |         |
| R662     | ERD14FJ101 | Carbon, 1000, 1/4W, ±5%    | 1       |         |
| R663     | ERD25TJ682 | Carbon, 6.8kΩ, 1/4W, ±5%   | 1       |         |
| R664     | ERG1ANJ331 | Metal Film, 3300, 1W, ±5%  | 1       |         |
| R665     | ERG1ANJ331 | Metal Film, 3300, 1W, ±5%  | 1       |         |
| R702     | ERD25TJ153 | Carbon, 15kΩ, 1/4W, ±5%    | 1       |         |
| R703     | ERG3ANJ221 | Metal Film, 2200, 3W, ±5%  | 1       |         |
| R704     | ERD14FJ122 | Carbon, 1.2kΩ, 1/4W, ±5%   | 1       |         |
| R705     | ERD25TJ272 | Carbon, 2.7kΩ, 1/4W, ±5%   | 1       |         |
| R706     | ERD12FJ102 | Carbon, 1kΩ, 1/2W, ±5%     | 1       |         |
| R707     | ERD25TJ120 | Carbon, 120, 1/4W, ±5%     | 1       |         |
| R708     | ERD12FJ471 | Carbon, 4700, 1/2W, ±5%    | 1       |         |
| R709     | ERD25TJ181 | Carbon, 1800, 1/4W, ±5%    | 1       |         |
| R711     | ERD18FJR2  | Carbon, 2.20, 1/8W, ±5%    | 1       |         |
| R901     | ERD25TJ473 | Carbon, 47kΩ, 1/4W, ±5%    | 1       |         |
| R902     | ERD25TJ473 | Carbon, 47kΩ, 1/4W, ±5%    | 1       |         |
| R903     | ERD25TJ222 | Carbon, 2.2kΩ, 1/4W, ±5%   | 1       |         |
| R904     | ERD25TJ222 | Carbon, 2.2kΩ, 1/4W, ±5%   | 1       |         |
| R905     | ERD25TJ823 | Carbon, 82kΩ, 1/4W, ±5%    | 1       |         |
| R906     | ERD25TJ823 | Carbon, 82kΩ, 1/4W, ±5%    | 1       |         |
| R907     | ERD25TJ104 | Carbon, 100kΩ, 1/4W, ±5%   | 1       |         |
| R908     | ERD25TJ104 | Carbon, 100kΩ, 1/4W, ±5%   | 1       |         |
| R909     | ERD25TJ472 | Carbon, 4.7kΩ, 1/4W, ±5%   | 1       |         |
| R910     | ERD25TJ472 | Carbon, 4.7kΩ, 1/4W, ±5%   | 1       |         |
| R911     | ERD25TJ472 | Carbon, 4.7kΩ, 1/4W, ±5%   | 1       |         |
| R912     | ERD25TJ472 | Carbon, 4.7kΩ, 1/4W, ±5%   | 1       |         |
| R913     | ERD25TJ474 | Carbon, 470kΩ, 1/4W, ±5%   | 1       |         |
| R914     | ERD25TJ474 | Carbon, 470kΩ, 1/4W, ±5%   | 1       |         |


| Ref. No.                  | Part No.     | Part Name & Description            | Per Set | Remarks |
|---------------------------|--------------|------------------------------------|---------|---------|
| <b>VARIABLE RESISTORS</b> |              |                                    |         |         |
| VR1                       | EWKBJAF25BF5 | Volume Control, 250kΩ (B)          | 1       |         |
| VR2                       | EVHGPAF25G25 | Balance Control, 200kΩ (G)         | 1       |         |
| VR3, 4                    | EWKB9AF25C15 | Bass & Treble Control, 100kΩ (C)   | 2       |         |
| VR101                     | EVLTOAA00B36 | Muting Level Adjustment, 300kΩ (B) | 1       |         |
| VR102                     | EVLT0AA00B24 | FM meter Adjustment, 20kΩ (B)      | 1       |         |
| VR301                     | EVTSSMA00B14 | PLL VCO Adjustment, 10kΩ (B)       | 1       |         |
| VR302                     | EVTSSMA00B14 | Separation Adjustment, 10kΩ (B)    | 1       |         |
| <b>CAPACITORS</b>         |              |                                    |         |         |
| C1                        | ECCD1H120KC  | Ceramic, 12pF, 50V, ±10%           | 1       |         |
| C2                        | ECCD1H220KC  | Ceramic, 22pF, 50V, ±10%           | 1       |         |
| C3                        | ECCD1H180KR  | Ceramic, 18pF, 50V, ±10%           | 1       |         |
| C4                        | ECCD1H102MDA | Ceramic, 0.001μF, 50V, ±20%        | 1       |         |
| C5                        | ECCD1H030CC  | Ceramic, 3pF, 50V, ±0.25pF         | 1       |         |
| C6                        | ECCD1H181K   | Ceramic, 180pF, 50V, ±10%          | 1       |         |
| C7                        | ECKD1H103PF  | Ceramic, 0.01μF, 50V, ±10%         | 1       |         |
| C8                        | ECKD1H103PF  | Ceramic, 0.01μF, 50V, ±10%         | 1       |         |
| C9                        | ECCD1H0R5CC  | Ceramic, 0.5pF, 50V, ±0.25pF       | 1       |         |
| C10                       | ECCD1H220KR  | Ceramic, 22pF, 50V, ±10%           | 1       |         |
| C11                       | ECCD1H070DC  | Ceramic, 7pF, 50V, ±0.5pF          | 1       |         |
| C12                       | ECCD1H390KC  | Ceramic, 39pF, 50V, ±10%           | 1       |         |
| C13                       | ECCD1H150KC  | Ceramic, 15pF, 50V, ±10%           | 1       |         |
| C14                       | ECKD1H102PF  | Ceramic, 0.001μF, 50V, ±10%        | 1       |         |
| C15                       | ECCD1H050CC  | Ceramic, 5pF, 50V, ±0.25pF         | 1       |         |
| C16                       | ECCD1H150KC  | Ceramic, 15pF, 50V, ±10%           | 1       |         |
| C17                       | ECCD1H150KC  | Ceramic, 15pF, 50V, ±10%           | 1       |         |
| C18                       | ECKD1H102PF  | Ceramic, 0.001μF, 50V, ±10%        | 1       |         |
| C19                       | ECEA16V47    | Electrolytic, 47μF, 16V, ±10%      | 1       |         |
| C20                       | ECCD1H030CC  | Ceramic, 3pF, 50V, ±0.25pF         | 1       |         |
| C21                       | ECKD1H102PF  | Ceramic, 0.001μF, 50V, ±10%        | 1       |         |
| C22 [XAL] only            | ECKDHS101MB  | Ceramic, 100pF, 400V, AC, ±20%     | 1       |         |
| C23 [XAL] only            | ECKDHS101MB  | Ceramic, 100pF, 400V, AC, ±20%     | 1       |         |
| C101                      | ECKD1H223PF  | Ceramic, 0.022μF, 50V, ±10%        | 1       |         |
| C102                      | ECKD1H223PF  | Ceramic, 0.022μF, 50V, ±10%        | 1       |         |
| C103                      | ECKD1H223PF  | Ceramic, 0.022μF, 50V, ±10%        | 1       |         |
| C104                      | ECKD1H223PF  | Ceramic, 0.022μF, 50V, ±10%        | 1       |         |
| C105                      | ECKD1H223PF  | Ceramic, 0.022μF, 50V, ±10%        | 1       |         |
| C106                      | ECEA50V3R3   | Electrolytic, 3.3μF, 50V, ±10%     | 1       |         |
| C107                      | ECCD1H680K   | Ceramic, 68pF, 50V, ±10%           | 1       |         |
| C108                      | ECEA50V1     | Electrolytic, 1μF, 50V, ±10%       | 1       |         |
| C109                      | ECKD1H223PF  | Ceramic, 0.022μF, 50V, ±10%        | 1       |         |
| C110                      | ECKD1H223PF  | Ceramic, 0.022μF, 50V, ±10%        | 1       |         |
| C111                      | ECEA16V10    | Electrolytic, 10μF, 16V, ±10%      | 1       |         |
| C112                      | ECKD1H223PF  | Ceramic, 0.022μF, 50V, ±10%        | 1       |         |
| C113                      | ECKD1H223PF  | Ceramic, 0.022μF, 50V, ±10%        | 1       |         |
| C114                      | ECKD1H223PF  | Ceramic, 0.022μF, 50V, ±10%        | 1       |         |
| C115                      | ECEA6V220V   | Electrolytic, 220μF, 6.3V, ±10%    | 1       |         |
| C116                      | ECEA50V4R7   | Electrolytic, 0.47μF, 50V, ±10%    | 1       |         |
| C117                      | ECCD1H223PF  | Ceramic, 0.022μF, 50V, ±10%        | 1       |         |
| C201                      | ECKD1H103PF  | Ceramic, 0.01μF, 50V, ±10%         | 1       |         |
| C202                      | ECKD1H103MD  | Ceramic, 0.01μF, 50V, ±20%         | 1       |         |
| C203                      | ECKD1H223PF  | Ceramic, 0.022μF, 50V, ±10%        | 1       |         |
| C204                      | ECKD1H103PF  | Ceramic, 0.01μF, 50V, ±10%         | 1       |         |



| Ref. No.                  | Part No.     | Part Name & Description                  | Per Set | Remarks |
|---------------------------|--------------|--|---------|---------|
| C205                      | ECKD1H103PF  | Ceramic, 0.01µF, 50V, ±10%               | 1       |         |
| C206                      | ECEA50V3R3   | Electrolytic, 3.3µF, 50V, ±10%           | 1       |         |
| C207                      | ECCD1H390KC  | Ceramic, 39pF, 50V, ±10%                 | 1       |         |
| C208                      | ECEA50V4R7   | Electrolytic, 0.47µF, 50V, ±10%          | 1       |         |
| C209                      | ECKD1H103PF  | Ceramic, 0.01µF, 50V, ±20%               | 1       |         |
| C210                      | ECKD1H103PMD | Ceramic, 0.01µF, 50V, ±10%               | 1       |         |
| C211                      | ECCM1H223KZ  | Polyester, 0.022µF, 50V, ±10%            | 1       |         |
| C212 (XAL) only           | ECKD1H103PMD | Ceramic, 0.001µF, 50V, AC, ±20%          | 1       |         |
| C216                      | ECEA50V1     | Electrolytic, 1µF, 50V, ±5%              | 1       |         |
| C301                      | ECCM1H333JZ  | Polyester, 0.033µF, 50V, ±5%             | 1       |         |
| C302                      | ECCM1H333JZ  | Polyester, 0.033µF, 50V, ±5%             | 1       |         |
| C303                      | ECCM1H332KZ  | Polyester, 0.0033µF, 50V, ±10%           | 1       |         |
| C304                      | ECCM1H332KZ  | Polyester, 0.0033µF, 50V, ±10%           | 1       |         |
| C305                      | ECKD1H271KB  | Ceramic, 270pF, 50V, ±10%                | 1       |         |
| C306                      | ECKD1H271KB  | Ceramic, 270pF, 50V, ±10%                | 1       |         |
| C307                      | ECCM1H182KZ  | Polyester, 0.0018µF, 50V, ±10%           | 1       |         |
| C308                      | ECCM1H182KZ  | Polyester, 0.0018µF, 50V, ±10%           | 1       |         |
| C309                      | ECEA50Z3R3   | Electrolytic, 0.33µF, 50V, ±10%          | 1       |         |
| C310                      | ECEA50Z3R3   | Electrolytic, 0.33µF, 50V, ±10%          | 1       |         |
| C311                      | ECEA16V100V  | Electrolytic, 100µF, 16V, ±10%           | 1       |         |
| C312                      | ECEA16V47    | Electrolytic, 47µF, 16V, ±10%            | 1       |         |
| C313                      | ECEA50M1R    | Electrolytic, 1µF, 50V, ±10%             | 1       |         |
| C314                      | ECEA50V4R7   | Electrolytic, 0.47µF, 50V, ±10%          | 1       |         |
| C315                      | ECEA50V4R7   | Electrolytic, 0.47µF, 50V, ±10%          | 1       |         |
| C316                      | ECCS05471JZ  | Polystyrene, 470pF, 50V, ±5%             | 1       |         |
| C317                      | ECCM1H473KZ  | Polyester, 0.047µF, 50V, ±10%            | 1       |         |
| C318                      | ECEA50V3R3   | Electrolytic, 3.3µF, 50V, ±10%           | 1       |         |
| C320                      | ECKD1H103PF  | Ceramic, 0.01µF, 50V, ±10%               | 1       |         |
| C321                      | ECKD1H222PF  | Ceramic, 0.0022µF, 50V, ±10%             | 1       |         |
| C401                      | ECCD1H680K   | Ceramic, 68pF, 50V, ±10%                 | 1       |         |
| C402                      | ECCD1H680K   | Ceramic, 68pF, 50V, ±10%                 | 1       |         |
| C403                      | ECCD1H151K   | Ceramic, 150pF, 50V, ±10%                | 1       |         |
| C404                      | ECCD1H151K   | Ceramic, 150pF, 50V, ±10%                | 1       |         |
| C405                      | ECEA50M3R3R  | Electrolytic, 3.3µF, 50V, ±10%           | 1       |         |
| C406                      | ECEA50M3R3R  | Electrolytic, 3.3µF, 50V, ±10%           | 1       |         |
| C407                      | ECKD1H681KB  | Ceramic, 680pF, 50V, ±10%                | 1       |         |
| C408                      | ECKD1H681KB  | Ceramic, 680pF, 50V, ±10%                | 1       |         |
| C409                      | ECEA10V47    | Electrolytic, 47µF, 10V, ±10%            | 1       |         |
| C410                      | ECEA10V47    | Electrolytic, 47µF, 10V, ±10%            | 1       |         |
| C411                      | ECCM1H223JZ  | Polyester, 0.022µF, 50V, ±5%             | 1       |         |
| C412                      | ECCM1H223JZ  | Polyester, 0.022µF, 50V, ±5%             | 1       |         |
| C413                      | ECCM1H562JZ  | Polyester, 0.0056µF, 50V, ±5%            | 1       |         |
| C414                      | ECCM1H562JZ  | Polyester, 0.0056µF, 50V, ±5%            | 1       |         |
| C415                      | ECKD1H681KB  | Ceramic, 680pF, 50V, ±10%                | 1       |         |
| C416                      | ECKD1H681KB  | Ceramic, 680pF, 50V, ±10%                | 1       |         |
| C417                      | ECEA50MR47R  | Electrolytic, 0.47µF, 50V, ±10%          | 1       |         |
| C418                      | ECEA50MR47R  | Electrolytic, 0.47µF, 50V, ±10%          | 1       |         |
| C419                      | ECEA50V330V  | Electrolytic, 330µF, 50V, ±10%           | 1       |         |
| C421                      | ECKD1H681KB  | Ceramic, 680pF, 50V, ±10%                | 1       |         |
| C422                      | ECKD1H681KB  | Ceramic, 680pF, 50V, ±10%                | 1       |         |
| C501                      | ECCM1H123KZ  | Polyester, 0.012µF, 50V, ±10%            | 1       |         |
| C502                      | ECCM1H123KZ  | Polyester, 0.012µF, 50V, ±10%            | 1       |         |
| C503                      | ECCM1H124KZ  | Polyester, 0.12µF, 50V, ±10%             | 1       |         |
| C504                      | ECCM1H124KZ  | Polyester, 0.12µF, 50V, ±10%             | 1       |         |
| C505                      | ECCM1H152KZ  | Polyester, 0.0015µF, 50V, ±10%           | 1       |         |
| Ref. No.                  | Part No.     | Part Name & Description                  | Per Set | Remarks |
| C506                      | ECCM1H152KZ  | Polyester, 0.0015µF, 50V, ±10%           | 1       |         |
| C507                      | ECCM1H183KZ  | Polyester, 0.018µF, 50V, ±10%            | 1       |         |
| C508                      | ECCM1H183KZ  | Polyester, 0.018µF, 50V, ±10%            | 1       |         |
| C601                      | ECEA50M1R    | Electrolytic, 1µF, 50V, ±10%             | 1       |         |
| C602                      | ECEA50M1R    | Electrolytic, 1µF, 50V, ±10%             | 1       |         |
| C603                      | ECCD1H390K   | Ceramic, 39pF, 50V, ±10%                 | 1       |         |
| C604                      | ECCD1H390K   | Ceramic, 39pF, 50V, ±10%                 | 1       |         |
| C605                      | ECCD1H020C   | Ceramic, 2pF, 50V, ±0.25pF               | 1       |         |
| C606                      | ECCD1H020C   | Ceramic, 2pF, 50V, ±0.25pF               | 1       |         |
| C607                      | ECEA6V47     | Electrolytic, 47µF, 6.3V, ±10%           | 1       |         |
| C608                      | ECEA6V47     | Electrolytic, 47µF, 6.3V, ±10%           | 1       |         |
| C609                      | ECEA6V47     | Electrolytic, 47µF, 6.3V, ±10%           | 1       |         |
| C610                      | ECEA6V47     | Electrolytic, 47µF, 6.3V, ±10%           | 1       |         |
| C611                      | ECEA25V10    | Electrolytic, 10µF, 25V, ±10%            | 1       |         |
| C612                      | ECEA25V10    | Electrolytic, 10µF, 25V, ±10%            | 1       |         |
| C613                      | ECCD2H390K   | Ceramic, 39pF, 500V, ±10%                | 1       |         |
| C614                      | ECCD2H390K   | Ceramic, 39pF, 500V, ±10%                | 1       |         |
| C615                      | ECKD1H221KB  | Ceramic, 220pF, 50V, ±10%                | 1       |         |
| C616                      | ECKD1H221KB  | Ceramic, 220pF, 50V, ±10%                | 1       |         |
| C617                      | ECKD1H102PF  | Ceramic, 0.001µF, 50V, ±10%              | 1       |         |
| C618                      | ECKD1H102PF  | Ceramic, 0.001µF, 50V, ±10%              | 1       |         |
| C619                      | ECKD1H223PF  | Ceramic, 0.022µF, 50V, ±10%              | 1       |         |
| C620                      | ECKD1H223PF  | Ceramic, 0.022µF, 50V, ±10%              | 1       |         |
| C621                      | ECCD2H101K   | Ceramic, 100pF, 500V, ±10%               | 1       |         |
| C622                      | ECCD2H101K   | Ceramic, 100pF, 500V, ±10%               | 1       |         |
| C623                      | ECCM1H683KZ  | Polyester, 0.068µF, 50V, ±10%            | 1       |         |
| C624                      | ECCM1H683KZ  | Polyester, 0.068µF, 50V, ±10%            | 1       |         |
| C625                      | ECEA50V100V  | Electrolytic, 100µF, 50V, ±10%           | 1       |         |
| C626                      | ECEA50V220V  | Electrolytic, 220µF, 50V, ±10%           | 1       |         |
| C627                      | ECEA16N220V  | Non-Polar Electrolytic, 220µF, 16V, ±10% | 1       |         |
| C628                      | ECEA6V470V   | Electrolytic, 470µF, 6.3V, ±10%          | 1       |         |
| C629                      | ECEA50Z3R3   | Electrolytic, 3.3µF, 50V, ±10%           | 1       |         |
| C630                      | ECKD1H103PF  | Ceramic, 0.01µF, 50V, ±10%               | 1       |         |
| C631                      | ECCD1H101K   | Ceramic, 100pF, 50V, ±10%                | 1       |         |
| C632                      | ECCD1H101K   | Ceramic, 100pF, 50V, ±10%                | 1       |         |
| C633                      | ECEA25V4R7   | Electrolytic, 4.7µF, 25V, ±10%           | 1       |         |
| C701                      | ECEA25V4R7   | Electrolytic, 4.7µF, 25V, ±10%           | 1       |         |
| C702                      | ECEA10R103Y  | Electrolytic, 10000µF, 40V, ±10%         | 1       |         |
| C703                      | ECEA10R103Y  | Electrolytic, 10000µF, 40V, ±10%         | 1       |         |
| C704                      | ECKD2H103PF  | Ceramic, 0.01µF, 500V, ±10%              | 1       |         |
| C705                      | ECEA50V470V  | Electrolytic, 470µF, 50V, ±10%           | 1       |         |
| C706                      | ECEA50V220V  | Electrolytic, 220µF, 50V, ±10%           | 1       |         |
| C707                      | ECKD1H103PF  | Ceramic, 0.01µF, 50V, ±10%               | 1       |         |
| C708                      | ECEA35V100V  | Electrolytic, 100µF, 35V, ±10%           | 1       |         |
| C709                      | ECEA16V100V  | Electrolytic, 100µF, 16V, ±10%           | 1       |         |
| C710                      | ECKD1H103PF  | Ceramic, 0.01µF, 50V, ±10%               | 1       |         |
| C901                      | ECCM1H473KZ  | Polyester, 0.047µF, 50V, ±10%            | 1       |         |
| C902                      | ECCM1H473KZ  | Polyester, 0.047µF, 50V, ±10%            | 1       |         |
| C905                      | ECEA10V47    | Electrolytic, 47µF, 10V, ±10%            | 1       |         |
| C906                      | ECEA50V1     | Electrolytic, 1µF, 50V, ±10%             | 1       |         |
| <b>VARIABLE CAPACITOR</b> |              |  |         |         |
|                           |              | Tuning Capacitor, w/Trimmer              |         |         |
| CV1 ~ 5<br>(CT1 ~ 5)      | EVCV751K144A |  | 1       | ○       |


■ EXPLODED VIEWS

22 SA-5270

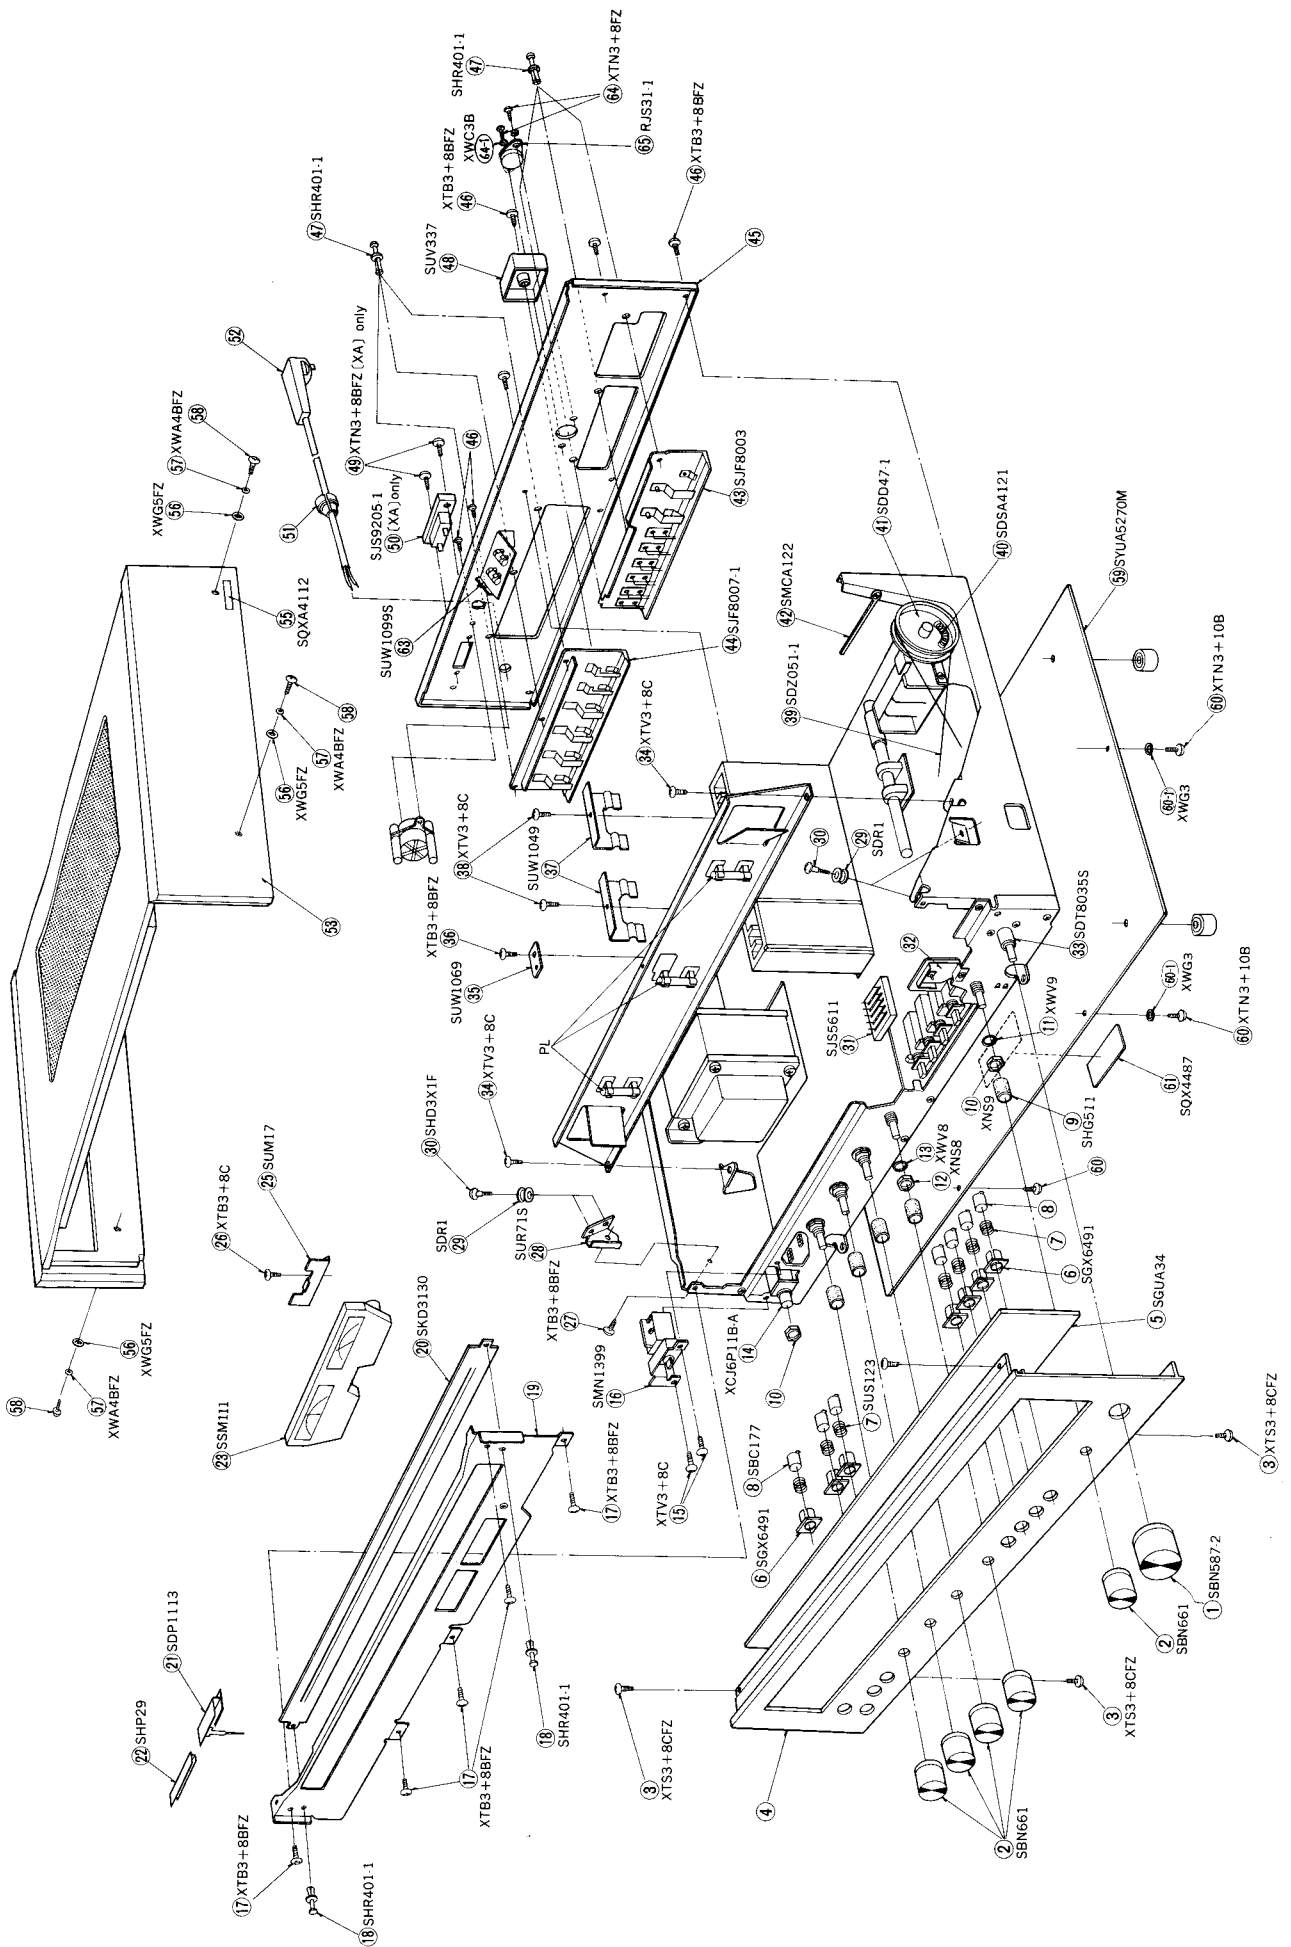

| Ref. No.                         | Part No.     | Part Name & Description   | Per Set | Remarks |
|----------------------------------|--------------|---|---------|---------|
| <b>LAMPS</b>                     |              |   |         |         |
| PL1, 2, 3                        | XAMR54T      | Lamp, Dial Light (12 BV, 0.38A)                                     | 3       |         |
| <b>FUSES</b>                     |              |   |         |         |
| F1                               | XBA2C16T1RO  | Fuse, 1.6AT (250V)  | 1       |         |
| F2                               | XBA2C20T1RO  | Fuse, 2AT (250V)  | 1       |         |
| F3                               | XBA2C10T1RO  | Fuse, 1AT (250V)  | 1       |         |
| F4                               | XBA2C31T1RO  | Fuse, 3.15AT (250V)   | 1       |         |
| F601, 602                        | XBA2C31SSO   | Fuse, 3.15A (250V) Circuit Protection (Except set for [XE] & [XAL]) | 2       |         |
| <b>SWITCHES</b>                  |              |   |         |         |
| S1                               | SSR67        | Switch, Selector  | 1       | ○       |
| S2, 3, 4, 5                      | SSH413S      | Switch, Muting, Tape 1,2, and Loudness                              | 1       | ○       |
| S6, 7                            | SSH223S      | Switch, Main & Remote Speaker                                       | 1       |         |
| S8                               | ESB7075      | Switch, Power Source (Except set for [XAL])                         | 1       |         |
| S8 [XAL] only                    | ESB7083      | Switch, Power Source (Except set for [XAL])                         | 1       |         |
| S9                               | SSR53S       | Switch, Voltage Adjuster (Except set for [XE] & [XAL])              | 1       |         |
| S9 [XE] only                     | SSR53-1S     | Switch, Voltage Adjuster (Except set for [XE] & [XAL])              | 1       |         |
| <b>RELAY</b>                     |              |   |         |         |
| RELAY 601                        | SSY19-2      | Relay, Speaker Protection   | 1       | ○       |
| <b>COMPONENT COMBINATIONS</b>    |              |   |         |         |
| Z701, 702                        | RXAF103P22HD | Component Combination, 0.01μF (X2)                                  | 2       |         |
| <b>CABINET and CHASSIS PARTS</b> |              |   |         |         |
| 1                                | SBN587-2     | Knob, Tuning Control  | 1       |         |
| 2                                | SBN661       | Knob, Bass, Treble, Balance, Volume Control & Selector Switch       | 5       |         |
| 3                                | XTS3+8CFZ    | Screw, Front Panel M'tg   | 4       |         |
| 4 [XA, XAL] only                 | SGW8190      | Panel, Front (Except set for [XA] & [XAL])                          | 1       | ○       |
| 4                                | SGW70A       | Panel, Front  | 1       | ○       |
| 5                                | SGUA34       | Glass Plate, Front Panel  | 1       |         |
| 6                                | SGX6491      | Escutcheon, Push Switch Button                                      | 7       |         |
| 7                                | SUS123       | Spring, Push Switch Button  | 7       |         |
| 8                                | SBC177       | Button, Push Switch   | 7       |         |
| 9                                | SHG511       | Bracket, Volume Shaft   | 5       |         |
| 10                               | XNS9         | Nut, Headphones Jack & Selector Switch                              | 2       |         |
| 11                               | XWV9         | Washer (Spring), Selector Switch                                    | 1       |         |
| 12                               | XNS8         | Nut, Tone, Balance, Volume Control                                  | 4       |         |
| 13                               | XWV8         | Washer (Spring), Tone, Balance & Volume Control                     | 4       |         |
| 14                               | XCJ6F11B-A   | Jack, Headphones  | 1       |         |
| 15                               | XTV3+8C      | Screw, Power Switch Bracket M'tg                                    | 2       | *       |
| 16                               | SMN1399      | Bracket, Power Switch   | 1       |         |
| 17                               | XTB3+8BFZ    | Screw, Dial Light Plate M'tg  | 5       |         |
| 18                               | SHR401-1     | Lock Pin, Dial Scale  | 2       |         |
| 19 [XA, XAL] only                | SDH389-3     | Plate, Dial Light (Except set for [XA] & [XAL])                     | 1       | * ○     |
| 19                               | SDH417-1     | Plate, Dial Light (Except set for [XA] & [XAL])                     | 1       | * ○     |

Available in [XG, XGH, XGF, XSD, XSW, XE]

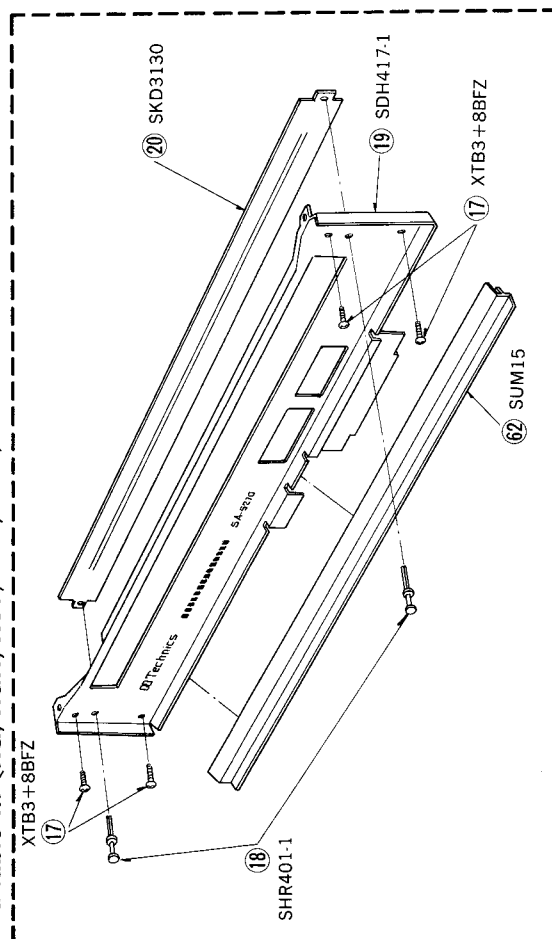

| Ref. No.             | Part No.   | Part Name & Description                                       | Per Set | Remarks |
|----------------------|------------|---|---------|---------|
| 20                   | SKD3130    | Scale, Dial   | 1       | *       |
| 21                   | SDP1113    | Pointer, Dial   | 1       | *       |
| 22                   | SHP29      | Paper, Pointer Slide  | 1       |         |
| 23                   | SSM111     | Meter, Tuning & Signal  | 1       |         |
| 25                   | SUM17      | Bracket, Meter  | 1       | * O     |
| 26                   | XTB3+6C    | Screw, Meter Bracket M'tg                                     | 1       |         |
| 27                   | XTB3+8BFZ  | Screw, Pulley Bracket M'tg                                    | 1       |         |
| 28                   | SUR71S     | Bracket, Pulley   | 1       |         |
| 29                   | SDR1       | Pulley, Dial  | 4       |         |
| 30                   | SHD3XIF    | Screw, Pulley M'tg  | 4       |         |
| 31                   | SJS5611    | Connector, 6 pin  | 4       |         |
| 32 [XA, XAL]         | SMN1401    | Bracket, Light Emitting Diode                                 | 1       | *       |
| 32 only              |            |   |         |         |
| 32                   | SMN1511    | Bracket, L.E.D.<br>(Except set for [XA] & [XAL])              | 1       | * O     |
| 33                   | SDT8035S   | Shaft, Tuning Control Ass'y                                   | 1       |         |
| 34                   | XTV3+8C    | Screw, Reflector Plate M'tg                                   | 2       | *       |
| 35                   | SUW1069    | Bracket, Reflector Plate                                      | 1       | *       |
| 36                   | XTB3+8BFZ  | Screw, Reflector Plate Bracket M'tg                           | 1       |         |
| 37                   | SUW1049    | Bracket, Power Transistor                                     | 2       |         |
| 38                   | XTV3+8C    | Screw, Power Transistor Bracket M'tg                          | 2       |         |
| 39                   | SDZ051-1   | Cord, Dial 70-15/16" (180cm)                                  | 1 roll  |         |
| 40                   | SDSA4121   | Spring, Dial Cord   | 1       |         |
| 41                   | SDD47-1    | Drum, Dial Cord   | 1       |         |
| 42                   | SMCA122    | Clamp, Lead Wire  | 1       |         |
| 43                   | SJF8003    | Terminal, Inputs & Antennas                                   | 1       |         |
| 44                   | SJF8007-1  | Terminal, Speaker   | 1       |         |
| 45 [XA]              | SGP590-1A  | Rear Panel  | 1       |         |
| 45 [XG, XGH, XGF]    | SGP790A    | Rear Panel  | 1       |         |
| 45 [XAL]             | SGPA5270L  | Rear Panel, SGP590-2A with Name Plate (SGT13970)              | 1       |         |
| 45 [XE]              | SGPA5270E  | Rear Panel, SGP790A with Name Plate (SGT13890)                | 1       |         |
| 45 [XSD, XSW]        | SGPA5270D  | Rear Panel, SGP790A with Name Plate (SGT13930)                | 1       |         |
| 46                   | XTB3+8BFZ  | Screw, Rear Panel, Fuse Cover<br>Voltage Adjuster Switch M'tg | 10      |         |
| 47                   | SHR401-1   | Lock pin, Input, Antenna & Speaker Terminal                   | 6       |         |
| 48                   | SUV337     | Cover, Circuit Protection Fuses                               | 1       | *       |
| 49 [XA] only         | XTN3+8BFZ  | Screw, AC Outlet Socket M'tg                                  | 2       |         |
| 50 [XA] only         | SJS9205-1  | Socket, AC Outlet   | 1       |         |
| 51                   | SHR127     | Bushing, AC Cord<br>(Except set for [XE] & [XAL])             | 1       |         |
| 51 [XE] only         | SHR129     | Bushing, AC Cord  | 1       |         |
| 51 [XAL] only        | SHR131     | Bushing, AC Cord  | 1       |         |
| 52 [XA, XG, XGF]     | SJA95      | AC Cord, with Plug  | 1       |         |
| 52 [XGH, XSD]        | SJA81      | AC Cord, with Plug  | 1       |         |
| 52 [XSW]             | SJA65      | AC Cord, with Plug  | 1       |         |
| 52 [XE]              | SJA99      | AC Cord   | 1       |         |
| 52 [XAL]             | SJA79      | AC Cord, with 3 pin Plug                                      | 1       |         |
| <b>ACCESSORIES</b>   |            |   |         |         |
| A1                   | SSA251     | Cord, FM Feeder, Antenna                                      | 1       |         |
| A2                   | XBA2C31SSO | Fuse, 315A (250V), Sp. Circuit Protection                     | 2       |         |
| A3                   | RJP5       | Pin Plug  | 4       |         |
| A4 [XA] only         | SJP5213    | Plug Adapter, AC Power  | 1       |         |
| <b>PACKING PARTS</b> |            |   |         |         |
| P1 [XA, XAL]         | SPP511     | Polyethylene Bag  | 1       |         |
| P1 only              |            |   |         |         |
| P1                   | SPP495     | Polyethylene Bag<br>(Except set for [XA] & [XAL])             | 1       |         |
| P2 [XA, XAL]         | SPS893     | Pad, Left Upper   | 1       |         |
| P2 only              |            |   |         |         |
| P2                   | SPS1039    | Pad, Left Upper<br>(Except set for [XA] & [XAL])              | 1       |         |
| P3 [XA, XAL]         | SPS891     | Pad, Left Lower   | 1       |         |
| P3 only              |            |   |         |         |
| P3 [XG, XE, XGF]     | SPS1045    | Pad, Left Lower   | 1       |         |
| P3 [XGH, XSD, XSW]   | SPS1037    | Pad, Left Lower   | 1       |         |
| P4 [XA, XAL]         | SPS897     | Pad, Right Upper  | 1       |         |
| P4                   | SPS1043    | Pad, Right Upper<br>(Except set for [XA] & [XAL])             | 1       |         |
| P5 [XA, XAL]         | SPS895     | Pad, Right Lower  | 1       |         |
| P5 [XG, XE, XGF]     | SPS1047    | Pad, Right Lower  | 1       |         |
| P5 [XGH, XSD, XSW]   | SPS1041    | Pad, Right Lower  | 1       |         |
| P6 [XAL] only        | SPS1049    | Pad, Bottom Side  | 1       |         |
| P7 [XA]              | SPG1115    | Carton Box  | 1       |         |
| P7 [XAL]             | SPG1117    | Carton Box  | 1       |         |
| P7 [XG]              | SPG1119    | Carton Box  | 1       |         |

# SA-5270K

(XG), (XGH), (XGF), (XSD), (XSW)

- \* This parts list includes only the changes of the SA-5270 (XG), (XGH), (XGF), (XSD), (XSW) parts list.
- \* When servicing model SA-5270K, this parts list and SA-5270 (XG), (XGH), (XGF), (XSD), (XSW) parts list should be used together.

## CHANGE OF PARTS FROM SA-5270 (XG, XGH, XGF, XSD and XSW)


| Ref. No.      | Part No. | Part Name & Description  | Per Set | Remarks |
|---------------|----------|--|---------|---------|
| P7 [XGF]      | SPG1121  | Carton Box   | 1       | ○       |
| P7 [XE]       | SPG1123  | Carton Box   | 1       | ○       |
| P7 [XGH]      | SPG1125  | Carton Box   | 1       | ○       |
| P7 [XSD, XSW] | SPG1127  | Carton Box   | 1       | ○       |
| P8 [XA]       | SQF1611  | Instructions Book, (Printed Matter)                                  | 1       | ○       |
| P8 [XAL]      | SQF1613  | Instructions Book, (Printed Matter)                                  | 1       | ○       |
| P8            | SQF1607  | Instructions Book, (Printed Matter)<br>(Except set for [XA] & [XAL]) | 1       | ○       |

**NOTE:**

- \* The model [XA] is available in Asia, Latin America, Middle East and Africa only.
- \* The model [XAL] is available in Australia only.
- \* The model [XE] is available in England only.
- \* The model [XGF] is available in France only.
- \* The model [XSW] is available in Switzerland only.
- \* The model [XGH] is available in European only.
- \* The model [XSD] is available in Scandinavia only.

| Ref. No.                         | Change of Part No.                  |                                     | Part Name & Description   | Per Set | Remarks |
|----------------------------------|-------------------------------------|-------------------------------------|---|---------|---------|
|                                  | SA-5270                             | SA-5270K                            |   |         |         |
| <b>Transformer</b>               |                                     |                                     |   |         |         |
| T701                             | SLT5Q61-W<br>SLT5Q63-W<br>SLT5Q65-W | [XE]<br>[XAL]                       | Power Transformer   | 1       |         |
| <b>Switches</b>                  |                                     |                                     |   |         |         |
| S8                               | ESB7075<br>ESB7083                  | [XAL]                               | Switch, Power Source  | 1       |         |
| S9                               | SSR53S<br>SSR53-1S                  | [XE]                                | Switch, Voltage Selector  | 1       |         |
| <b>Cabinet and Chassis Parts</b> |                                     |                                     |   |         |         |
| 1                                | SBN587-2                            |                                     | Knob, Tuning Control  | 1       |         |
| 2                                | SBN661                              |                                     | Knob, Bass, Treble, Balance, Volume & Selector                                      | 5       |         |
| 4                                | SGW70A<br>SGW8190                   | [XA, XAL]                           | Panel, Front (Black)  | 1       | ○       |
| 19                               | SDH417-1<br>SDH389-3                | [XA, XAL]                           | Plate, Dial Light (Model Name Printed Plate)  | 1       | *○      |
| 32                               | SMN1511<br>SMN1401                  | [XA, XAL]                           | Bracket, Light Emitting Diode   | 1       | *       |
| 45                               | SGP790A<br>SGP790A                  | [XA]                                | Rear Panel (Products for [XG], [XGH] and [XGF] only)                                | 1       | ○       |
|                                  | SGPA5270L<br>SGPA5270E              | [XAL]<br>[XE]                       | Rear Panel, SGP790B with Name Plate (SGT 14770) (Products for [XSD] and [XSW] only) | 1       | ○       |
|                                  | SGPA5270D<br>SGPA5270D              | [XSD, XSW]                          |   |         |         |
|                                  | SHR127<br>SHR129<br>SHR131          | [XE]<br>[XAL]                       | Bushing, AC Cord  | 1       |         |
| 52                               | SJA95<br>SJA81                      | [XA, XG, XGF]<br>[XGH, XSD]         | AC Cord, Power Source (Products for [XG] and [XGF] only)                            | 1       |         |
|                                  | SJA68<br>SJA99                      | [XSW]<br>[XE]                       | AC Cord, Power Source (Products for [XGH] and [XSD] only)                           | 1       |         |
|                                  | SJA79                               | [XAL]                               | AC Cord, Power Source (Product for [XSW] only)                                      | 1       |         |
|                                  | SJA9330W<br>SKA9050W<br>SKA9330W    | [XA, XAL]<br>[XG, XGH]<br>[XG, XGH] | Cabinet (Products for [XG], [XGH] and [XGF] only)                                   | 1       |         |
| 53                               | SKA9350W<br>SKA9351W                | [XSD, XSW]<br>[XE]                  | Cabinet (Products for [XSD] and [XSW] only)   | 1       |         |
|                                  | XTB4+12FFZ<br>XTB4+35FFZ            | [XA, XAL]                           | Screw, Cabinet M'tg   | 4       |         |

## ■ ACCESSORIES

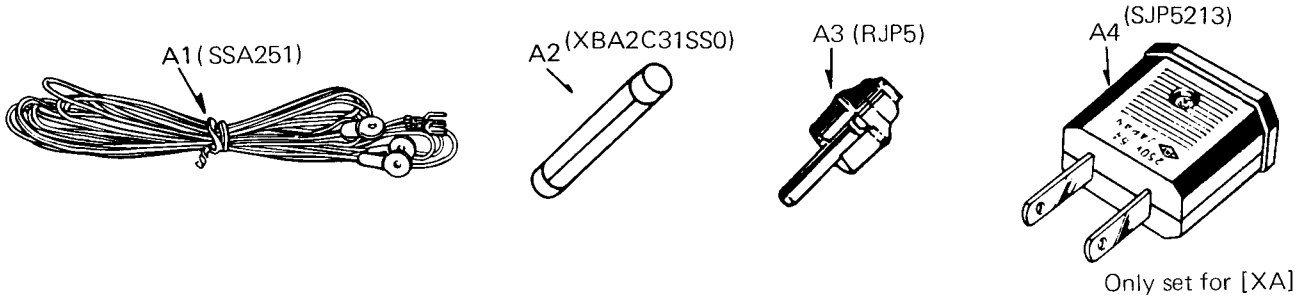

## ■ PACKINGS

